



The software from 5.7 for this version PCB 1.08 has autodetection of all four clock input modes !!  
If there is a LOW pulse signal on the DCF77 input pin, while powering up, it will go into DCF mode,  
else it will measure the input clock frequency and set right divider mode. Please read documentation for more information about how the different clock modes work