



BCM50 Networking Configuration Guide

Part No. N0027156 01
08 April 2005

Copyright © Nortel Networks Limited 2005

All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Trademarks

*Nortel, Nortel (Logo), the Globemark, and This is the way, This is Nortel (Design mark) are trademarks of Nortel Networks.

*Microsoft, MS, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

Task List

| | |
|---|------------|
| Module configuration: Trunk modules | 71 |
| To define the modules to the system..... | 73 |
| Managing modules | 77 |
| To enable or disable a bus | 77 |
| To turn a port channel on or off | 77 |
| Configuring lines | 117 |
| To add a DN record to a line record | 127 |
| Configuring lines: PRI | 133 |
| To configure Call-by-Call services and the PRI lines | 137 |
| Configuring lines: T1-Loop start | 145 |
| To configure digital loop start lines | 149 |
| Configuring lines: T1-Digital Ground Start | 151 |
| To configure digital Ground Start line features | 154 |
| Configuring lines: T1-DID | 157 |
| To configure DID line features | 160 |
| BRI ISDN: BRI T-loops | 175 |
| To configure BRI T-loop parameters | 177 |
| To configure provisioned BRI line features..... | 178 |
| Programming BRI S-loops, lines and ISDN devices | 181 |
| To set BRI properties for ISDN device connections | 182 |
| Process map..... | 182 |
| Configuring CLID on your system | 199 |
| To set up alpha tagging on your system..... | 201 |
| To program the Business Name..... | 202 |
| Dialing plan: Routing configurations | 243 |
| To build a route to allow local calls..... | 245 |
| To set up a route through a dedicated trunk..... | 246 |
| To build a route for a secondary carrier..... | 248 |
| To set up the multiple routing overflow feature..... | 249 |
| To program the PRI routing table | 251 |
| To program a long distance carrier access code into a destination code..... | 252 |
| Private networking: MCDN over PRI and VoIP | 285 |
| To set up the M1 in a BCM50 network | 299 |
| To enable MCDN functionality over PRI fallback lines | 299 |

| | |
|---|------------|
| Private networking: MCDN and ETSI network features | 307 |
| To configure ICCL | 308 |
| To enable TRO | 308 |
| To enable TAT | 308 |
| To enable MCID and network diversion | 309 |
| Private networking: PRI and VoIP tandem networks | 311 |
| To set up a network of BCM50s | 316 |
| Private networking: DPNSS network services (UK only) | 319 |
| To program IPL..... | 322 |
| To set Loop avoidance during hardware configuration..... | 323 |
| Guidelines for creating a private dialing plan with DPNSS..... | 326 |
| Customizing the DPNSS routing service | 326 |
| Configuring centralized voicemail | 339 |
| To configure the host system | 341 |
| To set up a satellite system for voicemail..... | 342 |
| To set up a PRI connection on the system..... | 344 |
| VoIP interoperability: Gatekeeper configuration | 377 |
| To add an H.323 endpoint in the Gatekeeper Admin tool | 378 |
| To set the dialing plan into the Gatekeeper Admin tool..... | 378 |
| To commit gatekeeper configuration changes..... | 379 |
| To set Codecs | 380 |
| Setting up VoIP trunks for fallback | 383 |
| To add the PSTN route to other system | 384 |
| To add the PSTN route to the local PSTN lines | 384 |
| To add the VoIP route | 384 |
| To assign PSTN line pool (to other system) | 384 |
| To assign PSTN line pool to local PSTN lines..... | 385 |
| To assign VoIP line pool..... | 385 |
| To create destination codes for your fallback route..... | 385 |
| To configure the VoIP schedule for all fallback destination codes | 386 |
| To set up the VoIP schedule for routing services | 387 |
| To activate the VoIP line from the control set..... | 388 |
| To deactivate a schedule..... | 388 |
| Port Ranges Panel | 395 |
| To add new port ranges in the RTP over UDP table | 396 |
| To delete port ranges from the RTP over UDP table..... | 396 |
| To modify an entry on the RTP over UDP table | 397 |
| To add new port ranges in the UDP table | 397 |
| To delete port ranges from the RTP over UDP table..... | 397 |
| To modify an entry on the UDP table | 398 |
| Call security: Restriction filters | 421 |
| To add a restriction filter | 423 |

| | |
|---|------------|
| Configuring CoS passwords for remote access | 431 |
| To add or modify a CoS password | 433 |
| To access the system over a public network..... | 435 |
| To bypass the restriction filters on a telephone | 435 |
| LAN configuration tasks | 439 |
| To configure the BCM50 with a DHCP address | 439 |
| IP settings | 443 |
| To modify an IP address..... | 444 |
| To modify a subnet | 447 |
| Router panel | 455 |
| To access your router..... | 455 |
| DHCP Server Settings panel | 463 |
| To add a new Included Address Range | 468 |
| To delete an Included Address Range | 468 |
| To add a Reserved Address | 468 |
| To delete a Reserved Address | 469 |
| DHCP configuration tasks | 471 |
| To configure the BCM50 with a DHCP address | 471 |
| To configure the BCM50 DHCP component..... | 471 |
| To disable the DHCP server | 473 |
| Modem screen | 489 |
| To add a new IP Route | 497 |
| To delete an existing IP Route | 497 |
| Modem configuration tasks | 499 |
| To configure the modem so that it receives incoming calls | 499 |
| To configure the modem so can make deliveries to an external PPP server | 499 |

Contents

| | |
|--|-----------|
| Chapter 1 | |
| Getting started | 23 |
| About this guide | 23 |
| Purpose | 23 |
| Audience | 23 |
| Organization | 24 |
| About BCM50 | 24 |
| BCM50 key elements | 24 |
| Symbols and conventions used in this guide | 26 |
| Related publications | 27 |
| How to get help | 29 |
| USA and Canada Authorized Distributors | 29 |
| EMEA (Europe, Middle East, Africa) | 30 |
| CALA (Caribbean and Latin America) | 30 |
| APAC (Asia Pacific) | 30 |
| | |
| Chapter 2 | |
| System telephony networking overview | 33 |
| Basic system configurations | 33 |
| PBX system | 33 |
| DID system | 34 |
| Basic telephony routing | 35 |
| Tandem calling to a remote PSTN | 36 |
| Private network parameters | 37 |
| Private networking protocols | 37 |
| Keycode requirements | 38 |
| Remote access to the network | 38 |
| Lines used for networking | 38 |
| Types of private networks | 39 |
| Routing-based networks using T1 E&M lines | 40 |
| PRI networking using Call-by-Call services | 41 |
| PRI SL-1/Q.Sig/DPNSS and VoIP trunk networking | 42 |
| System dialing plans | 43 |
| Creating tandem private networks | 43 |
| Understanding MCDN network features | 45 |
| Network Call Redirection Information | 45 |
| ISDN Call Connection Limitation | 46 |
| Trunk Route Optimization | 47 |

| | |
|--|-----------|
| Trunk Anti-tromboning | 47 |
| Networking with ETSI QSIG | 48 |
| ETSI Euro network services | 49 |
| DPNSS 1 services | 50 |
| DPNSS 1 capabilities | 51 |
| DPNSS 1 features | 51 |
| Private networking with DPNSS | 58 |
| | |
| Chapter 3 | |
| Telephony programming: Configuring call traffic | 61 |
| Incoming calls | 64 |
| Outgoing calls | 68 |
| | |
| Chapter 4 | |
| Module configuration: Trunk modules | 71 |
| Configuring the trunk module parameters | 73 |
| Module parameters list | 73 |
| Configuring digital and analog loop module parameters | 73 |
| Configuring DTM-T1/E1 module parameters | 73 |
| Configuring DTM-PRI module parameters | 74 |
| Configuring BRI Loop module parameters | 75 |
| Configuring DASS2 module parameters | 76 |
| Configuring European DTM/DPNSS line parameters | 76 |
| | |
| Chapter 5 | |
| Managing modules | 77 |
| Disabling/enabling a bus/module | 77 |
| Disabling or enabling a port channel setting | 77 |
| Trunk module metrics | 78 |
| | |
| Chapter 6 | |
| Configuring telephony resources | 79 |
| Telephony Resources table | 80 |
| Media bay module panels | 82 |
| Trunk Module Parameters | 82 |
| Call-by-Call Service Selection | 87 |
| Port details | 88 |
| Provisioning module lines/loops | 90 |
| IP telephones | 91 |
| IP Terminal Global Settings | 91 |
| IP telephone set details | 93 |
| Voice over IP trunks | 94 |
| Local Gateway | 94 |

| | |
|--|------------|
| Media Parameters | 98 |
| Remote Gateways | 102 |
| Chapter 7 | |
| Lines overview | 105 |
| Understanding how the system identifies lines | 106 |
| Determining which lines you need to program | 106 |
| Line record | 108 |
| Line characteristics | 109 |
| Line restrictions | 109 |
| Remote restrictions | 110 |
| Voice message center | 110 |
| Line Job Aids | 110 |
| Determining line numbers and destination codes | 111 |
| Line pool tips | 112 |
| Using loss packages | 113 |
| Turn Privacy on or off for a call | 113 |
| Programming line access | 114 |
| Making lines available | 114 |
| Incoming calls | 115 |
| Outgoing calls | 115 |
| Chapter 8 | |
| Configuring lines | 117 |
| Trunk/Line data, main panel | 118 |
| Properties | 120 |
| Preferences (lines) | 122 |
| Restrictions (Line and Remote) | 125 |
| Assigned DNs | 126 |
| Chapter 9 | |
| Configuring lines: Target lines | 129 |
| Configuring Target line settings | 132 |
| Chapter 10 | |
| Configuring lines: PRI | 133 |
| Configuring PRI line features | 135 |
| Configuring PRI Call-by-Call services | 136 |
| Chapter 11 | |
| Configuring lines: T1-E&M | 139 |
| Configuring E&M line features | 143 |

| | |
|--|------------|
| Chapter 12 | |
| Configuring lines: T1-Loop start | 145 |
| Configuring digital (T1/E1) loop start lines | 149 |
| Chapter 13 | |
| Configuring lines: T1-Digital Ground Start | 151 |
| Configuring digital ground start line features | 154 |
| Chapter 14 | |
| Configuring lines: T1-DID | 157 |
| Configuring DID line features | 160 |
| Chapter 15 | |
| Configuring lines: DASS2 lines | 163 |
| Configuring DASS2 line features | 165 |
| Chapter 16 | |
| Configuring lines: DPNSS lines | 169 |
| Configuring DPNSS line features | 171 |
| Chapter 17 | |
| BRI ISDN: BRI T-loops | 175 |
| Configuring BRI T-loop parameters | 177 |
| Configuring BRI lines | 177 |
| Chapter 18 | |
| Programming BRI S-loops, lines and ISDN devices | 181 |
| Setting BRI properties for ISDN device connections | 181 |
| DN records: ISDN devices | 182 |
| Configuring an ISDN telephone DN record | 184 |
| Chapter 19 | |
| BRI ISDN: BRI loop properties | 185 |
| Configure loop type and general parameters | 185 |
| T-loop general settings | 187 |
| T-loop SPIDS and network DNs | 188 |
| T-loops D-packet service | 190 |
| S-loops assigned DNs | 191 |
| Chapter 20 | |
| CLID: Name display | 193 |
| Name and number display | 193 |
| Business name display | 194 |
| Alpha tagging for name display | 194 |

| | |
|---|------------|
| Name display | 195 |
| Incoming and outgoing call display | 196 |
| Chapter 21 | |
| Configuring CLID on your system | 199 |
| Process map | 199 |
| Programming incoming CLID | 201 |
| Allowing CLID for telephones (incoming) | 201 |
| Using alpha tagging for name display (incoming) | 201 |
| Programming line name display (incoming) | 202 |
| Programming outgoing CLID | 202 |
| Programming Business name display (outgoing) | 202 |
| Internal name and extension display | 203 |
| Programming name display (outgoing) | 203 |
| Programming outgoing number display (OLI) | 203 |
| Blocking outgoing name display at the trunks | 204 |
| Blocking outgoing name display at the telephone | 204 |
| Chapter 22 | |
| Dialing plans | 205 |
| Creating dialing plans | 206 |
| Public and Private Received numbers | 209 |
| Private network dialing | 209 |
| Setting up public network dialing | 210 |
| Outgoing call routing | 210 |
| Incoming call routing | 212 |
| Defining DN length | 212 |
| Using the Received # length | 213 |
| Processing incoming calls | 213 |
| Determining line access dialing | 216 |
| Understanding access codes | 217 |
| Call Park codes | 218 |
| Creating Direct Dial sets | 219 |
| Tips about access codes | 219 |
| Using the MCDN access codes (tandem calls) | 220 |
| Line pool access codes | 221 |
| Using Carrier codes | 222 |
| About Carrier access codes | 222 |
| Configuring call routing | 222 |
| Configuring Call-by-Call services | 223 |
| Call-by-Call services | 224 |
| Switches supporting Call by Call limits | 224 |

| | |
|--|------------|
| Provisioning for Call by Call limits with PRI | 226 |
| Call by Call service routing | 226 |
| PRI routing protocols | 227 |
| Using destination codes | 227 |
| Why use destination codes? | 228 |
| Deciding on a code | 229 |
| Configuring Absorbed length | 230 |
| Adding Carrier access codes to destination codes | 230 |
| Routing schedules and alternate routes | 231 |
| Setting up VoIP trunks for fallback | 232 |
| | |
| Chapter 23 | |
| Dialing plan: Routing and destination codes | 235 |
| Routes | 236 |
| PRI route types | 238 |
| Destination codes | 238 |
| Alternate routes for routing schedules | 240 |
| | |
| Chapter 24 | |
| Dialing plan: Routing configurations | 243 |
| Destination code numbering in a network | 245 |
| Setting up a destination for local calling | 245 |
| Setting up a route through a dedicated trunk | 246 |
| Grouping destination codes using a wild card | 247 |
| Programming for least-cost routing | 248 |
| Using multiple routes and overflow routing | 249 |
| Dialing plan using public lines | 250 |
| Programming the PRI routing table | 251 |
| Adding Carrier access codes to destination codes | 252 |
| Using the MCDN access codes to tandem calls | 253 |
| | |
| Chapter 25 | |
| Dialing plan: System settings | 255 |
| Common dialing plan settings | 255 |
| Configuration notes and tips | 258 |
| DN length constraints | 258 |
| Received number notes | 259 |
| Tips about access codes | 259 |
| Call Park codes | 260 |
| | |
| Chapter 26 | |
| Dialing plan: Public network | 263 |
| Public dialing plan settings | 263 |

| | |
|---|------------|
| Public Network Settings | 264 |
| Public network DN lengths | 265 |
| Carrier Codes | 267 |
| Chapter 27 | |
| Dialing plan: Private network settings | 269 |
| Private Network dialing plan settings | 269 |
| Private Network Settings | 270 |
| Private Network - MCDN network (PRI SL-1, PRI ETSI, VoIP) | 271 |
| VoIP-specific private network dialing | 273 |
| ETSI-specific network features | 274 |
| Outgoing private calls routing | 274 |
| Chapter 28 | |
| Public networking: Setting up basic systems | 277 |
| Public networks: PBX system setup | 277 |
| Public network: DID system | 278 |
| Chapter 29 | |
| Public networking: Tandem calls from private node | 281 |
| Programming for tandem dialing | 281 |
| Caller access on a tandem network | 282 |
| Chapter 30 | |
| Private networking: MCDN over PRI and VoIP | 285 |
| Using MCDN to network with a Meridian system | 285 |
| Meridian system requirements | 285 |
| Meridian MCDN call features over PRI SL-1 lines | 287 |
| Message Waiting Indication | 287 |
| Camp-on | 288 |
| Break-in | 289 |
| MCDN networking checklist | 290 |
| UDP-specific programming | 292 |
| CDP-specific programming | 293 |
| VM programming with Meridian 1 | 294 |
| Meridian TRO programming | 295 |
| An example of a private network with Meridian 1 | 295 |
| Configuring fallback over a VoIP MCDN network | 298 |
| MCDN functionality on fallback PRI lines | 299 |
| Networking with ETSI QSIG | 300 |

| | |
|---|------------|
| Chapter 31 | |
| Private networking: Basic parameters | 303 |
| Private networking protocols | 303 |
| Keycode requirements | 303 |
| Remote access to the network | 304 |
| Other programming that affects private networking | 304 |
| Types of private networks | 304 |
| Chapter 32 | |
| Private networking: MCDN and ETSI network features | 307 |
| Configuring MCDN network features | 307 |
| Configuring Network Call Redirection Information | 307 |
| ISDN Call Connection Limitation | 308 |
| Trunk Route Optimization (TRO) | 308 |
| Trunk Anti-tromboning (TAT) | 308 |
| Configuring ETSI Euro network services | 309 |
| Chapter 33 | |
| Private networking: PRI and VoIP tandem networks | 311 |
| Routing for tandem networks | 311 |
| Routing calls through a tandem network | 313 |
| Calls originating from the public network | 313 |
| Calls originating in the private network | 314 |
| Using VoIP to tandem systems | 315 |
| Chapter 34 | |
| Private networking: DPNSS network services (UK only) | 319 |
| Using the diversion feature | 319 |
| Restrictions by telephone type | 320 |
| Setting Diversion | 320 |
| Using the Redirection feature | 321 |
| Restrictions by telephone type | 321 |
| Setting redirection | 321 |
| Executive intrusion, Intrusion protection level | 321 |
| Restrictions by telephone type | 321 |
| Programming IPL on a telephone | 322 |
| Call offer | 322 |
| Restrictions by telephone type | 322 |
| Route optimization | 323 |
| Loop avoidance | 323 |
| Private networking with DPNSS | 323 |

| | |
|--|------------|
| Chapter 35 | |
| Private networking: Using destination codes | 327 |
| | |
| Chapter 36 | |
| Private networking: PRI Call-by-Call services | 331 |
| | |
| Chapter 37 | |
| Configuring voice messaging | 335 |
| Centralized Voice Messaging (external voicemail) | 335 |
| Programming MWI and MWC strings | 336 |
| Local voice messaging access (CallPilot Manager) | 337 |
| | |
| Chapter 38 | |
| Configuring centralized voicemail | 339 |
| Local system as host | 339 |
| Meridian system as host | 340 |
| CallPilot compatibility | 340 |
| Meridian Mail compatibility issues | 340 |
| System set up for host system | 340 |
| System set up for satellite systems | 342 |
| Configuring the system for centralized voicemail | 344 |
| | |
| Chapter 39 | |
| Dialing plan: Line pools and line pool codes | 345 |
| Line pools (and access codes) | 345 |
| Line pool access code notes: | 347 |
| Line pools: DN's tab | 347 |
| Line pools: Call-by-Call Limits tab (PRI only) | 348 |
| | |
| Chapter 40 | |
| VoIP overview | 351 |
| IP telephones | 351 |
| VoIP trunks | 351 |
| Creating an IP telephony network | 351 |
| Networking with BCM50 | 351 |
| Telephones | 352 |
| Gatekeepers | 352 |
| IP Network | 352 |
| Key VoIP concepts | 353 |
| | |
| Chapter 41 | |
| VoIP trunk gateways | 355 |
| Pre-installation system requirements | 355 |
| Keycodes | 356 |

| | |
|--|------------|
| H.323 network applications considerations | 356 |
| How VoIP trunks make a network | 356 |
| Local gateway programming | 357 |
| Notes about NPI-TON aliases for H.323 trunks | 358 |
| Remote gateways | 358 |
| PSTN call to remote node | 359 |
| Fallback to PSTN from VoIP trunks | 361 |
| Describing a fallback network | 362 |
| How fallback routing works | 363 |
| Optional VoIP trunk configurations | 365 |
| Gatekeeper call scenarios | 366 |
| Operational notes and restrictions | 367 |
| | |
| Chapter 42 | |
| Configuring VoIP trunk gateways. | 369 |
| Configuring VoIP trunk media parameters | 370 |
| Setting up the local gateway | 371 |
| Setting up remote gateways | 373 |
| Configuring a remote gateway (H.323 trunks) | 373 |
| Configuring VoIP lines | 374 |
| Configuring VoIP line features | 374 |
| | |
| Chapter 43 | |
| VoIP interoperability: Gatekeeper configuration | 377 |
| Using CS 1000 as a gatekeeper | 377 |
| BCM50 requirements | 377 |
| CS 1000 configuration, adding an H.323 endpoint | 378 |
| Setting the H.323 Endpoint dialing plan | 378 |
| Committing gatekeeper configuration changes | 379 |
| Configuring Codec compatibility | 379 |
| Setting Codecs on the CS 1000 | 380 |
| | |
| Chapter 44 | |
| Setting up VoIP trunks for fallback | 383 |
| Configuring routes for fallback | 383 |
| Activating the VoIP schedule for fallback | 387 |
| Deactivating the VoIP schedule | 388 |
| Example: A private network configured for fallback | 388 |
| | |
| Chapter 45 | |
| Port ranges overview. | 393 |
| RTP over UDP | 393 |
| UDP | 393 |

| | |
|--|------------|
| Signaling Ports | 393 |
| Chapter 46 | |
| Port Ranges Panel | 395 |
| RTP over UDP Port Ranges | 395 |
| Adding new RTP over UDP Port Ranges | 396 |
| Deleting RTP over UDP Port Ranges | 396 |
| Modifying RTP over UDP Port Ranges | 397 |
| UDP Port Ranges | 397 |
| Adding new UDP Port Ranges | 397 |
| Deleting UDP Port Ranges | 397 |
| Modifying UDP Port Ranges | 398 |
| Signaling Port Ranges | 398 |
| Chapter 47 | |
| Media gateways overview | 399 |
| Chapter 48 | |
| Media Gateways panel | 401 |
| Chapter 49 | |
| Call security and remote access | 403 |
| Defining restriction filters | 403 |
| Notes about restriction filters | 404 |
| Restriction filter examples | 406 |
| Remote call-in programming | 408 |
| Creating Direct Inward System Access (DISA) | 408 |
| Remote access line settings | 408 |
| Remote access on loop start trunks | 409 |
| Remote access on T1 DID and PRI trunks | 409 |
| Remote access on DPNSS lines | 409 |
| Remote access on a private network | 410 |
| Defining remote access packages | 410 |
| Defining CoS passwords | 411 |
| Notes about CoS passwords | 411 |
| External access tones | 413 |
| Chapter 50 | |
| Call Security: Configuring Direct Inward System Access (DISA) | 415 |
| Remote access overview | 415 |
| Setting up remote access on lines | 418 |
| Remote access on loop start trunks | 418 |
| Remote access on T1 DID trunks | 418 |
| Remote access on PRI | 419 |

| | |
|--|------------|
| Remote access on DPNSS lines | 419 |
| Remote access on a private network | 420 |
| Other programming: | 420 |
| Chapter 51 | |
| Call security: Restriction filters | 421 |
| Restriction filters | 421 |
| Adding a restriction filter and exceptions | 423 |
| Default filters | 424 |
| Chapter 52 | |
| Call security: Remote access packages | 427 |
| Configuring remote access packages | 427 |
| Chapter 53 | |
| Configuring CoS passwords for remote access | 431 |
| Class of Service table | 431 |
| Adding or modifying a CoS password values | 433 |
| Notes about CoS passwords | 433 |
| CoS examples | 435 |
| External access tones | 435 |
| Chapter 54 | |
| LAN overview | 437 |
| What is a LAN? | 437 |
| LAN settings | 437 |
| DHCP configuration | 437 |
| Chapter 55 | |
| LAN configuration tasks | 439 |
| Configuring the BCM50 with a DHCP address | 439 |
| Chapter 56 | |
| Data networking overview | 441 |
| What is data networking? | 441 |
| About the BCM50 VoIP capability | 441 |
| Network routing | 441 |
| Configuring the BCM50 with data networks | 441 |
| Chapter 57 | |
| IP settings | 443 |
| Main panel tabs: General settings | 443 |
| IP settings options | 444 |
| Modifying IP address information | 444 |

| | |
|--|------------|
| DNS Settings options | 445 |
| MTU option | 445 |
| Main panel tabs: Internal subnets | 446 |
| Internal Subnet settings | 446 |
| Internal Subnet Details | 447 |
| Chapter 58 | |
| Data network prerequisites checklist. | 449 |
| Network diagram | 449 |
| Network devices | 449 |
| Network assessment | 450 |
| Keycodes | 451 |
| System configuration for IP telephony functions | 451 |
| VoIP trunks | 452 |
| IP telephone records | 452 |
| Chapter 59 | |
| Router overview. | 453 |
| ADSL and Ethernet configurations | 453 |
| Router features | 453 |
| Chapter 60 | |
| Router panel. | 455 |
| Accessing your router | 455 |
| Chapter 61 | |
| DHCP overview. | 457 |
| Understanding DHCP | 457 |
| DHCP on the BCM50 | 457 |
| Router DHCP Server | 457 |
| Main Module DHCP client | 458 |
| Main Module DHCP Server | 458 |
| DHCP network scenarios | 458 |
| No external DHCP server | 458 |
| With external DHCP server | 459 |
| BCM50 is unable to reach external DHCP server | 459 |
| BCM50 using a dynamic address is changed to a static address | 459 |
| DHCP server on BCM50a and BCM50e | 460 |
| Default configurations | 460 |
| Chapter 62 | |
| VLAN overview. | 461 |
| Choosing DHCP for VLAN | 461 |

| | |
|--|------------|
| Specifying the site-specific options for VLAN | 462 |
| Chapter 63 | |
| DHCP Server Settings panel | 463 |
| Main panel tabs: General Settings | 464 |
| Main panel tabs: IP phone settings | 465 |
| Main panel tabs: Address Ranges | 467 |
| DHCP subnets | 467 |
| Main panel tabs: Lease Info | 469 |
| Chapter 64 | |
| DHCP configuration tasks | 471 |
| DHCP configuration with router | 471 |
| Changing the default router DHCP configuration | 471 |
| Configuring the BCM50 with a DHCP address | 471 |
| Configuring the BCM50 to act as a DHCP server | 471 |
| Determining the status for the DHCP server | 472 |
| Using the BCM50 as a standalone DHCP server | 472 |
| DHCP for IP sets | 472 |
| Disabling the DHCP server | 473 |
| Chapter 65 | |
| Application Resources overview | 475 |
| Types of resources | 475 |
| Total and Reserved Resources | 475 |
| Setting values for application resources | 476 |
| Chapter 66 | |
| Application resources panel | 479 |
| Chapter 67 | |
| Firewall configuration resources | 483 |
| Chapter 68 | |
| Modem overview | 485 |
| Remote Access Service | 485 |
| Automatic Data Dial Out Service | 486 |
| Modem compatibility | 487 |
| Chapter 69 | |
| Modem screen | 489 |
| Main screen tabs: Dial-in panel | 489 |
| Main panel tabs: Dial-out panel | 493 |

| | |
|--|------------|
| Chapter 70 | |
| Modem configuration tasks | 499 |
| Configuring the modem to receive incoming calls | 499 |
| Configuring the modem for Automatic Dial-out Service | 499 |
| Appendix A | |
| VPN overview | 501 |
| IPSec tunnels | 501 |
| IPSec | 502 |
| Encryption | 502 |
| Appendix B | |
| Silence compression | 505 |
| Silence compression on half-duplex links | 505 |
| Silence compression on full-duplex links | 507 |
| Comfort noise | 509 |
| Appendix C | |
| ISDN overview | 511 |
| Welcome to ISDN | 511 |
| Analog versus ISDN | 512 |
| Types of ISDN service | 512 |
| ISDN layers | 512 |
| ISDN bearer capability | 513 |
| Services and features for ISDN BRI and PRI | 513 |
| PRI services and features | 514 |
| BRI services and features | 514 |
| Service provider features | 515 |
| Network name display | 515 |
| Name and number blocking (ONN) | 516 |
| Call by Call Service Selection for PRI | 516 |
| Emergency 911 dialing | 517 |
| 2-way DID | 517 |
| Dialing plan and PRI | 517 |
| ISDN hardware | 518 |
| PRI hardware | 518 |
| BRI hardware | 518 |
| S Reference Point | 519 |
| T Reference Points | 519 |
| Clock source for ISDN | 520 |
| ISDN BRI NT1 equipment | 520 |
| ISDN standards compatibility | 521 |
| Planning your ISDN network | 521 |

| | |
|---|------------|
| Ordering ISDN PRI | 521 |
| Ordering ISDN BRI | 521 |
| Ordering ISDN BRI service in Canada | 521 |
| Ordering ISDN BRI service in the United States | 522 |
| Ordering ISDN BRI service outside Canada or the United States | 522 |
| Supported ISDN protocols | 522 |
| Index | 523 |

Chapter 1

Getting started

This section contains information on the following topics:

- [“About this guide” on page 23](#)
- [“About BCM50” on page 24](#)
- [“Symbols and conventions used in this guide” on page 26](#)
- [“Related publications” on page 27](#)
- [“How to get help” on page 29](#)

About this guide

The *BCM50 Networking Configuration Guide* describes how to manage, maintain and sustain BCM50 network services.

Purpose

The concepts, operations, and tasks described in the guide relate to the FCAPS (fault, configuration, administration, performance, and security) management strategy for the BCM50 and BCM50 network. This guide provides task-based information on how to detect and correct faults through the interfaces and reporting system.

Use the Nortel Element Manager (EM) and Network Configuration Manager (NCM) applications to implement, monitor and administer the network level operations. Use this guide to perform equivalent network-level operations using an SNMP based network management system.

In brief, the information in this guide explains:

- Public and private networking
- Configuring trunks and lines
- Media gateways
- Loops
- IP settings
- Dialing plans

Audience

The *BCM50 Networking Configuration Guide* is directed to network administrators responsible for maintaining BCM50 networks. This guide is also useful for network operations center (NOC) personnel supporting a BCM50 managed services solution. To use this guide, you must:

- be an authorized BCM50 administrator within your organization
- know basic Nortel BCM50 terminology

- be knowledgeable about telephony and IP networking technology

Organization

This guide is organized for easy access to information that explains the concepts, operations and procedures associated with using the BCM50 network management applications.

About BCM50

The Business Communications Manager 50 (BCM50) system provides private network and telephony management capability to small and medium-sized businesses.

The BCM50 system:

- integrates voice and data capabilities, IP Telephony gateway functions, and data-routing features into a single telephony system
- enables you to create and provide telephony applications for use in a business environment

BCM50 key elements

BCM50 includes the following key elements:

BCM50 main units

Three types of main units are available:

- **BCM50 (with Telephony Only)**
The BCM50 main unit provides call processing and simple data networking functions. It also provides connections for telephones, Public Switched Telephone Network (PSTN) lines, and a LAN.
- **BCM50e (with Ethernet Router)**
The BCM50e main unit provides call processing and data routing features. It also provides connections for telephones, Public Switched Telephone Network (PSTN) lines, a LAN, and an ethernet router.
- **BCM50a (with ADSL Router)**
The BCM50a main unit provides call processing, data routing features and an integrated ADSL modem. It also provides connections for internal telephones, Public Switched Telephone Network lines, a LAN, and an ADSL router.

BCM50 hardware

In addition to the main platform configurations, the following hardware is available:

- **Expansion unit:** This unit is designed to accommodate a media bay module (MBM). The BCM50 main unit supports up to two expansion units.

- **Small system wallmount bracket:** A bracket designed for mounting the BCM50 main unit or expansion unit to a wall. An optional wiring field card (WFC) is available with the wallmount bracket, which provides RJ-45 connectors for all BCM50 main unit trunk and station interfaces, and a terminal block to connect the auxiliary equipment.
- **Small system rackmount shelf:** A shelf designed for mounting up to four BCM50 units into a standard 19 inch equipment rack. An optional patch field is available, which provides RJ-45 connectors for all BCM50 main unit trunk and station interfaces, and a terminal block to connect the auxiliary equipment.

BCM50 features

BCM50 supports the complete range of IP telephony features offered by existing BCM products.

You enable the following features by entering the appropriate keycodes (no additional hardware is required):

- VoIP Gateway (H.323): Up to 12 VoIP trunks
- VoIP Telephony Clients: Up to 32 VoIP Telephony clients, supporting the range of Nortel IP Phones.

BCM50 applications

BCM50 also supports many of the high-value applications provided on the existing BCM platforms.

You enable applications by entering the appropriate keycodes (no additional hardware is required). Some applications are:

- Voice Messaging for standard voicemail and autoattendant features
- Unified Messaging providing integrated voicemail management between voicemail and common email applications
- Fax Suite providing support for attached analog fax devices
- Voice Networking features
- LAN CTE

Symbols and conventions used in this guide

These symbols are used to highlight critical information for the BCM50 system:



Caution: Alerts you to conditions where you can damage the equipment.



Danger: Alerts you to conditions where you can get an electrical shock.



Warning: Alerts you to conditions where you can cause the system to fail or work improperly.



Note: Alerts you to important information.



Tip: Alerts you to additional information that can help you perform a task.



Security note: Indicates a point of system security where a default should be changed, or where the administrator needs to make a decision about the level of security required for the system.



Warning: Alerts you to ground yourself with an antistatic grounding strap before performing the maintenance procedure.



Warning: Alerts you to remove the BCM50 main unit and expansion unit power cords from the ac outlet before performing any maintenance procedure.

These conventions and symbols are used to represent the Business Series Terminal display.

| Convention | Example | Used for |
|---|--------------|---|
| Word in a special font (shown in the top line of the display) | P=wd: | Command line prompts on display telephones. |
| Underlined word in capital letters (shown in the bottom line of a two line display telephone) | <u>PLAY</u> | Display option. Available on two line display telephones. Press the button directly below the option on the display to proceed. |
| Dialpad buttons | # | Buttons you press on the dialpad to select a particular option. |

These text conventions are used in this guide to indicate the information described:

| Convention | Description |
|-------------------------------------|--|
| bold Courier text | Indicates command names and options and text that you need to enter. Example: Use the info command. Example: Enter show ip {alerts routes} . |
| <i>italic text</i> | Indicates book titles |
| plain Courier text | Indicates command syntax and system output (for example, prompts and system messages). Example: Set Trap Monitor Filters |
| FEATURE HOLD RELEASE | Indicates that you press the button with the coordinating icon on whichever set you are using. |

Related publications

Related publications are listed below. To locate specific information, you can refer to the *Master Index of BCM50 Library*.

BCM50 Core Guides

BCM50 Keycode Installation Guide (N0016865)

BCM50 Administration Guide (N0016868)

BCM50 Installation & Maintenance Guide (N0027152)

BCM50 ISDN Device Installation & Configuration Guide (N0027268)

BCM50 IP Telephone Installation and Configuration Guide (N0027269)

BCM50 Device Configuration Guide (N0027146)

BCM50 First Time Installation and Configuration Guide (N0027149)

BCM50 LAN CTE Configuration Guide (N0027154)
BCM50 Installation & Maintenance Guide (N0027152)
BCM50 System Overview (N0027157)
BCM50 Analog Device Installation and Configuration Guide (N0035159)
BCM50 Telset Administration Guide (N0027176)
BCM50 Unified Messaging Installation and Maintenance Guide (N0027179)
BCM50a Integrated Router Configuration Guide (N0027181)
BCM50e Integrated Router Configuration Guide (N0027182)
BCM50 Call Detail Recording Guide (N0027926)
BCM50 Digital Telephone Installation and Configuration Guide (N0027330)
BCM50 Telephone Features User Guide (N0027160)

CallPilot and Call Center Guides

Call Center Agent Guide (N0027187)
Call Center Set Up and Operation Guide (N0027203)
Call Center Supervisor Guide (N0027206)
CallPilot 2.5 Unified Messaging Addendum (N0027223)
CallPilot 2.5 Unified Messaging User Guide for Internet Clients
CallPilot 2.5 Unified Messaging User Guide for Lotus Notes
CallPilot 2.5 Unified Messaging User Guide for Microsoft Outlook
CallPilot 2.5 Unified Messaging User Guide for Novell GroupWise
CallPilot Call Center Telephone Administration Guide (N0025637)
CallPilot Fax Set Up & Operation Guide (P0606017)
CallPilot Fax User Guide (N0027227)
CallPilot Manager Set Up and Operation Guide (N0027247)
CallPilot Message Networking Set Up and Operation Guide (N0027249)
CallPilot Message Networking User Guide (N0027253)
CallPilot Programming Record (N0027404)
CallPilot Quick Reference Card - CP Interface (N0027401)
CallPilot Quick Reference Card - NVM Interface (N0027379)
CallPilot Quick Reference Card - Remote Users (CP Interface) (N0027359)
CallPilot Quick Reference Card - Remote Users (NVM Interface) (N0027346)
CallPilot Reference Guide (N0027332)

CallPilot Telephone Administration Guide (N0027331)
Central Answering Position (CAP) User Guide (P0603480)
Hospitality Features Card (N0027326)
i2050 Software Phone Installation Guide (N0022555)
IP Phone 2001 User Guide (N0027313)
IP Phone 2002 User Guide (N0027300)
IP Phone 2004 User Guide (N0027284)
NCM Release Notes & Installation Guide (N0027265)
Personal Call Manager User Guide (N0027256)
System-wide Call Appearance (SWCA) Features Card (N0027186)
T24 KIM Installation Card (P0603481)
T7000 Telephone User Card (P0912061)
T7100 Telephone User Card (P0609621)
T7208 Telephone User Card (P0609622)
T7316 Telephone User Card (P0935248)
T7316E Telephone User Card (P0609623)
T7406 Cordless Handset Installation Guide (P0606142)
T7406 Cordless Telephone User Card (P0942259)
Using NCM to Manage BCM50 (N0027151)

How to get help

If you do not see an appropriate number in this list, go to www.nortel.com/cs.

USA and Canada Authorized Distributors

Technical Support - GNTS/GNPS

Telephone:

1-800-4NORTEL (1-800-466-7835)

If you already have a PIN Code, you can enter Express Routing Code (ERC) 196#. If you do not yet have a PIN Code, or for general questions and first line support, you can enter ERC 338#.

Website:

<http://www.nortel.com/cs>

Presales Support (CSAN)

Telephone:

1-800-4NORTEL (1-800-466-7835)

Use Express Routing Code (ERC) 1063#

EMEA (Europe, Middle East, Africa)

Technical Support - CTAS

Telephone:

*European Free phone 00800 800 89009

European Alternative:

| | |
|----------------|---------------------|
| United Kingdom | +44 (0)870-907-9009 |
| Africa | +27-11-808-4000 |
| Israel | 800-945-9779 |

Calls are not free from all countries in Europe, Middle East, or Africa.

Fax:

44-191-555-7980

E-mail:

emeahelp@nortel.com

CALA (Caribbean and Latin America)

Technical Support - CTAS

Telephone:

1-954-858-7777

E-mail:

csrmtgt@nortel.com

APAC (Asia Pacific)

Service Business Centre & Pre-Sales Help Desk:

+61-2-8870-5511 (Sydney)

Technical Support - GNTS

Telephone:

+612 8870 8800

Fax:

+612 8870 5569

E-mail:

asia_support@nortel.com

| | |
|--|------------------------------|
| Australia | 1-800-NORTEL (1-800-667-835) |
| China | 010-6510-7770 |
| India | 011-5154-2210 |
| Indonesia | 0018-036-1004 |
| Japan | 0120-332-533 |
| Malaysia | 1800-805-380 |
| New Zealand | 0800-449-716 |
| Philippines | 1800-1611-0063 |
| Singapore | 800-616-2004 |
| South Korea | 0079-8611-2001 |
| Taiwan | 0800-810-500 |
| Thailand | 001-800-611-3007 |
| Service Business Centre & Pre-Sales Help Desk | +61-2-8870-5511 |

Chapter 2

System telephony networking overview

The system supports both public and private networking for telephony traffic.

- The public network is created by PSTN trunk connections from a Central Office terminating on a telephone system such as the BCM50.
- A private network is created when the system is connected through dedicated PSTN lines or VoIP trunks to other systems. This system may take several forms. At the simplest level, your system may be behind a private PBX, which connects directly to the Central Office. A more complicated system may be a node in a network of systems of various types, where calls not only terminate at the system, but calls may need to be passed through the system to other nodes unconnected to the originating node.

This section contains the following information:

- [“Basic system configurations” on page 33](#)
- [“Private network parameters” on page 37](#)

Basic system configurations

In the most basic application, your system can provide support for system telephones to make and receive calls over public network (PSTN) lines.


Two basic system telephony configurations

This section provides a broad overview of the telephony setup for two of the most common office telephone configurations.

PBX system

This setup is for a larger offices which have fewer CO lines than there are telephones. In this case the lines are pooled, and the line pool access is assigned to all DN's. There may also be a designated attendant with a telephone that has all lines individually assigned.

Figure 1 PBX system

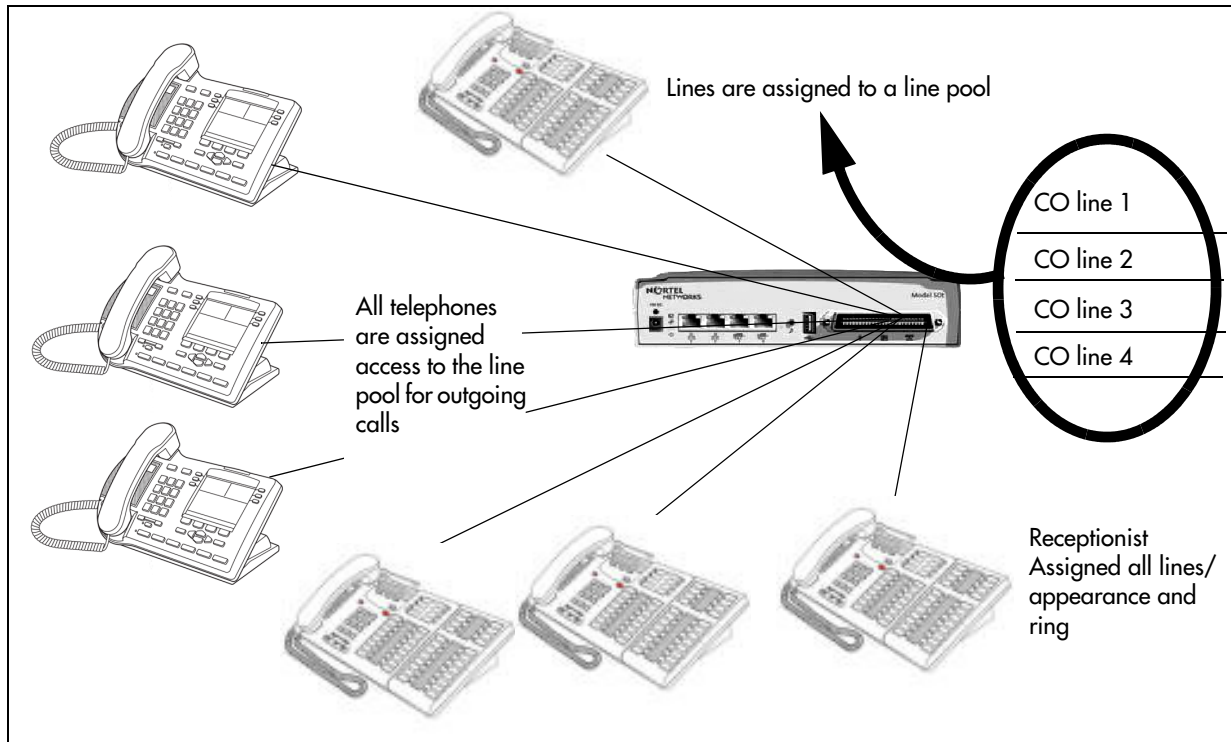

Incoming calls

- 1 A call comes in on a line.
- 2 The receptionist answers the call and finds out who the call is for.
- 3 The receptionist transfers the call to a specific telephone (DN).
- 4 The person can pick up the call at that DN only.

Outgoing calls

- 1 User selects the intercom button or dials a line pool access code, which selects a line in the line pool.
- 2 The user dials the outgoing telephone number.


DID system

This setup allows you to assign a dedicated phone number to each telephone. The CO assigns a list of available numbers for each DID (Direct Inward Dial) line. You can change your DN range to match these numbers, and you use target lines to match each number with a DN.



Note: DID requires T1 or PRI.

Figure 2 DID system

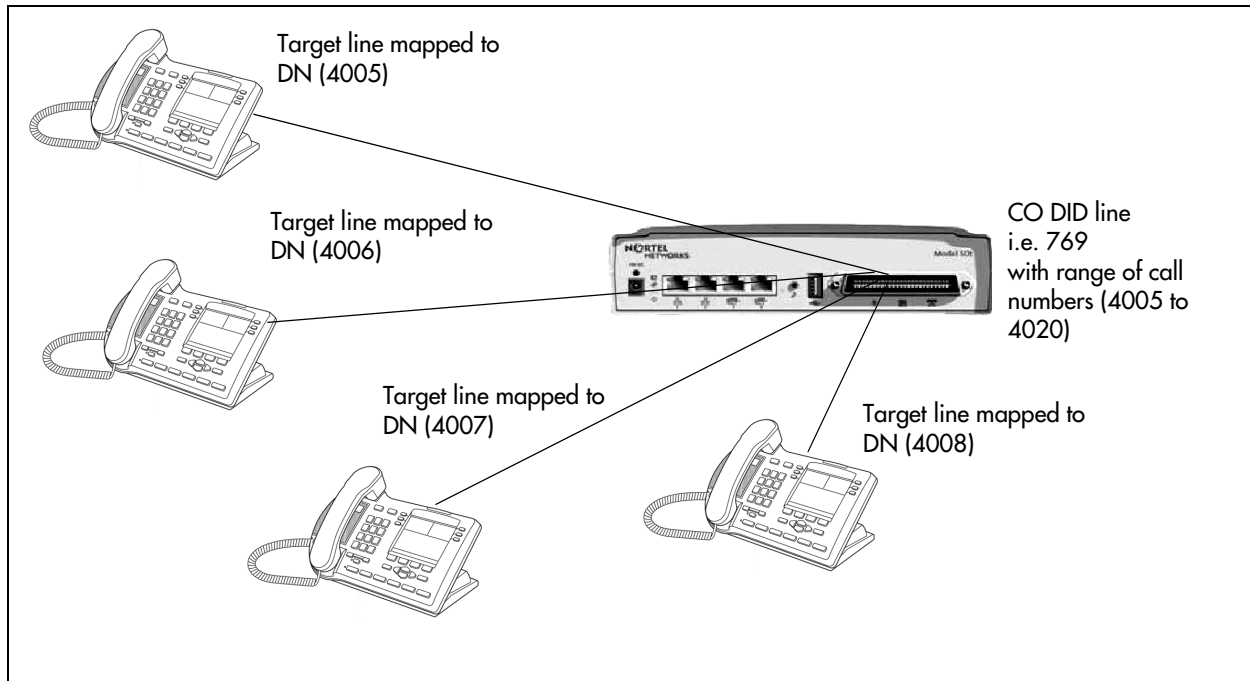

Incoming calls

- 1 DID trunks are assigned to be auto-answer.



Note: PRI lines are automatically set to auto-answer.

- 2 All DNs are assigned target lines.
- 3 A caller dials a system code and a DN. In the example shown above, it might be 769-4006.
- 4 The call comes into the trunk, which answers and maps the call on the target line assigned to the matching received digits.
- 5 The DN assigned to that target line rings.

You can assign unanswered or busy telephones to Call Forward to another DN, such as a designated attendant or a voicemail system.

Basic telephony routing

In a basic configuration, simple access codes (for example Line Pool Codes) are used to access the PSTN network.

In a more complex configuration, more advanced destination codes are required to access multiple PSTNs, private network resources, and remote nodes. Access to these resources enables advanced features, such as tandem routing.


Tandem calling to a remote PSTN

A system connected to a private network that uses dedicated circuits or VoIP circuits can allow a user to dial directly to many other users, on different nodes, using a coordinating dialing plan.

Using a private network saves on toll charges, and local charges, as fewer PSTN accesses are required for internal and external calling. Several nodes located on one site initiate their external local calls to a centralized BCM50 having a T1 termination to the PSTN. This type of configuration avoids multiple PSTN terminations at other local nodes.

The same tandeming concepts can be applied to inbound calls. DID numbers dialed from the PSTN can be processed and tandem routed out of the centralized system to the localized remote nodes. See other details on Tandem routing [“Creating tandem private networks” on page 43](#).

Figure 3 Tandem dialing through a BCM50 to/from a private network

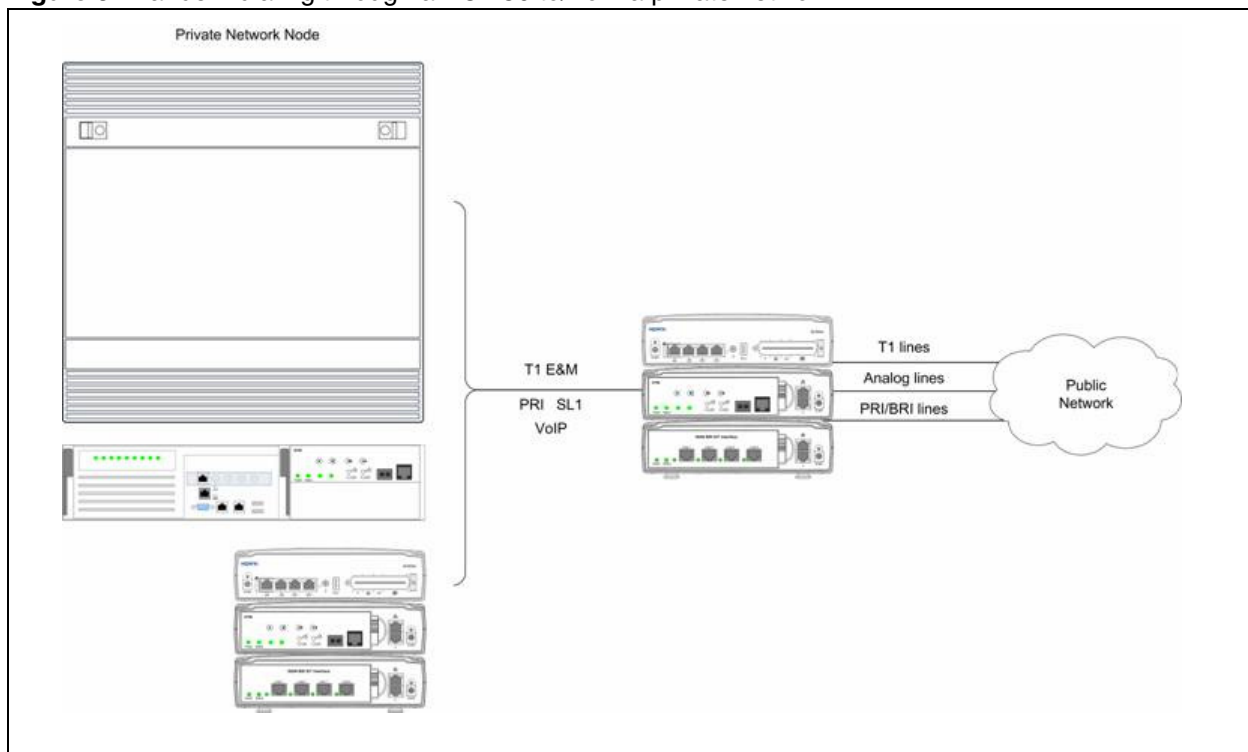

In the above example, there are three types of callers.

Each type of caller has a specific method of accessing the other two systems.

Callers using BCM50

These callers can:

- call directly to a specific telephone
- select an outgoing line to access a private network
- select an outgoing line to access features that are available on the private network

- select an outgoing central office line to access the public network
- use all of the BCM50 features

Callers in the public network

These callers use the public lines to:

- call directly to one or more BCM50 DNs
- call into BCM50 and select an outgoing TIE line to access a private network
- call into BCM50 and select an outgoing central office line to access the public network
- call into BCM50 and use remote features

Callers in the private network node

These callers use the private lines to:

- call directly to one or more BCM50 DNs
- call into BCM50 and select an outgoing TIE line to access other nodes in a private network
- call into BCM50 and select an outgoing central office line to access the public network
- call into BCM50 and use remote features

System numbering and dialing plans

All systems on a private network must coordinate dialing plans, to ensure that calls get directed to the correct network node. As well, routing becomes more complex, especially if the system is not an end node and must be configured to relay calls to nodes not directly connected to the system. The type of dialing plan supported by the network determines whether each node also requires unique DNs.

Private network parameters

This section provides an overview of the values in the system that affect private networking.

Private networking protocols

The BCM50 supports the following protocols for private networking:

- PRI: ETSI QSIG, MCDN
- DPNSS
- BRI: ETSI QSIG

- T1: E&M
- VoIP trunks (with optional MCDN)



Note: MCDN is referred to as SL-1 in Element Manager.

BCM50 systems can be networked together using T-1, PRI or VoIP trunks. PRI SL-1 lines and VoIP trunks also offer the opportunity to use the MCDN protocol, which provides enhanced trunking features and end-to-end user identification. If a Meridian 1 is part of the MCDN network, the network can also provide centralized voicemail and auto attendant off the Meridian.

MCDN note: MCDN networking requires all nodes on the network to use a common Universal Dialing Plan (UDP) or a Coordinated Dialing Plan (CDP).

Keycode requirements

Keycodes are required to activate the protocols that are used to create private networking, including:

- VoIP Gateway keycodes
- an MCDN, DPNSS, or Q. Sig keycode, if you want to use a networking protocol between the systems

You must purchase and install these keycodes before you can create any of the networks described in this chapter. Consult with your Nortel distributor to ensure you order the correct keycodes for the type of network you want to create.

Remote access to the network

Authorized users can access TIE lines, central office lines, and BCM50 features from outside the system. Remote users accessing a private network configured over a large geographical area can avoid toll charges.



Note: You cannot program a DISA DN or Auto DN to a VoIP trunk, as they act as auto-answer trunks from one private network to the next. However, you can configure VoIP line pools with remote access packages so that callers can access telephones or the local PSTN on remote nodes on a tandemed network that use VoIP trunks between systems.

Lines used for networking

External (trunk) lines provide the physical connection between BCM50 and other systems in a private or public network.

The BCM50 numbers physical lines from 061 to 124. Default numbering depends on the type and connection to the BCM50 (EXP1 - EXP2).

VoIP trunks: Although a VoIP gateway does not use physical lines, it is easier to think of them that way. Therefore, in the BCM50, lines 001 to 012 are used for VoIP trunk functionality.

BCM50 networking configurations that use PRI lines, require specific DTM modules.

- DTMs configured for PRI are used for incoming and outgoing calls (two-way DID). Incoming calls are routed directly to a BCM50 DN that has a properly configured and assigned target line. All outgoing calls made through PRI, are initiated using the destination codes.
- DTMs configured for T1 can have digital lines configured as Groundstart, E&M, Loop, or DID.

Target lines are virtual communication paths between trunks and telephones on the BCM50 system. They are incoming lines only, and cannot be selected for outgoing calls or networking applications. With target lines, you can concentrate incoming calls on fewer trunks. This type of concentration is an advantage of DID lines. BCM50 target lines allow you to direct each DID number to one or more telephones. VoIP trunks also require target lines to direct incoming traffic. Target lines are numbered 125 to 268.

Telephones can be configured to have an appearance of analog lines or multiple appearances of target lines.



Note: PRI B-channels cannot be assigned as line appearances. PRI B-channels, or “trunks”, can only be configured into PRI line pools for inbound routing through target lines with receive digits or outbound routing through destination codes.

Types of private networks

There are several ways you can create private networks. Configuration can be based on such things as cost of trunks, proximity of network nodes, size of the private network, and business requirements for communications.

VoIP-based networking also requires an understanding of IP features such as codecs, jitter buffers, Quality of Service (QoS) function, and silence compression. Refer to [“Silence compression” on page 505](#) for more information.

The services provided within networks is based on the type of trunks and the protocols assigned to the trunks. All trunks within the network should be running the same protocols, to provide a technically sound and stable network.

The following links are procedures to set up basic networks to advanced networks, using the support protocols within BCM50:


- [“Routing-based networks using T1 E&M lines” on page 40](#)
- [“PRI networking using Call-by-Call services” on page 41](#)
- [“PRI SL-1/Q.Sig/DPNSS and VoIP trunk networking” on page 42](#)

Routing-based networks using T1 E&M lines

By properly planning and programming routing tables and destination codes, an installer can create a dialing plan where T1 E&M lines between BCM50 systems are available to other systems in the network

Figure 4 shows a network of three BCM50 systems. Two remote systems connect to a central system.

Figure 4 Dialing plan for T1 E&M routing network

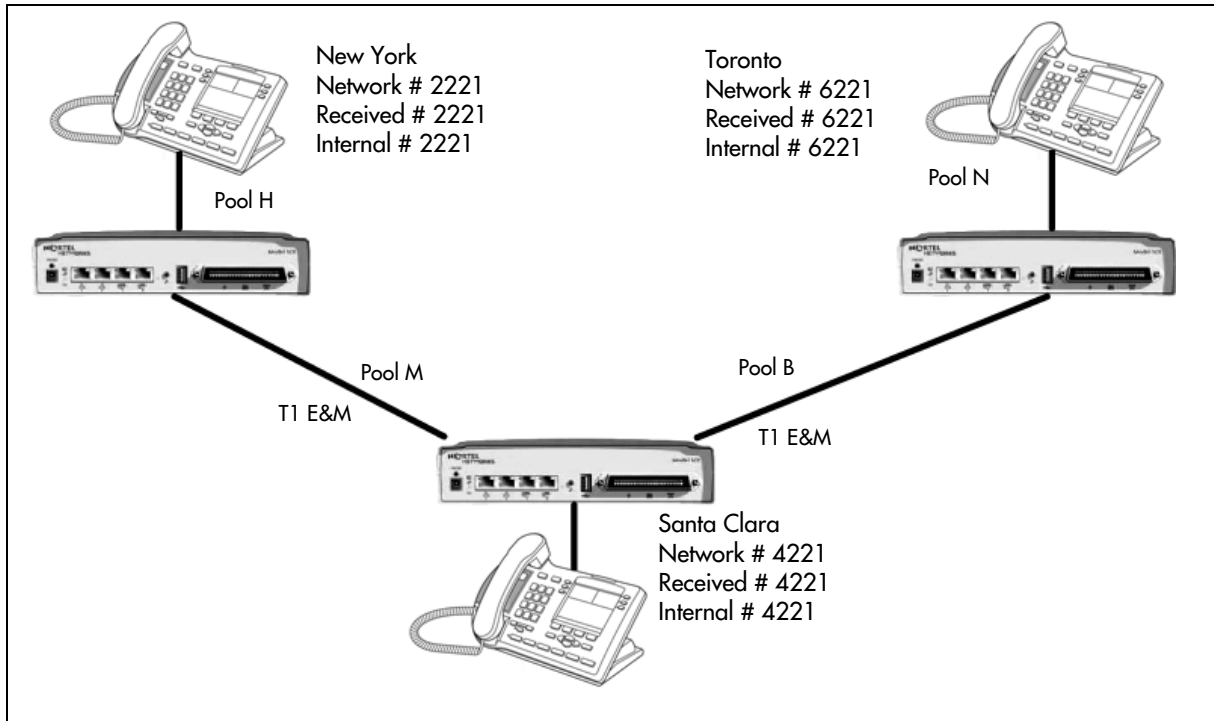

Each system must be running BCM50 software. Each system must be equipped with target lines and BCM50 expansion unit with a DTM with at least one T1 E&M line.

The call appears on the auto answer line on the BCM50 in Santa Clara as 6-221. Because 6 is programmed as a destination code for Toronto on the Santa Clara system, another call is placed using route 002 from Santa Clara to Toronto. At the Toronto system, the digits 6-221 are interpreted as a target line Private received number. The call now alerts at DN 6221 in Toronto.




Note: Network calls that use routes are subject to any restriction filters in effect. If the telephone used to make a network call has an appearance of a line used by the route, the call will move from the intercom button to the Line button. The telephone used to make a network call must have access to the line pool used by the route. Network calls are external calls, even though they are dialed as if they were internal calls. Only the features and capabilities available to external calls can be used. When programming a button to dial a Network number automatically (autodial), network calls must be treated as external numbers, even though they resemble internal telephone numbers. Routes generally define the path between your BCM50 switch and another switch in your network, not other individual telephones on that switch.

PRI networking using Call-by-Call services

The example shown in [Figure 5](#) highlights the use of PRI Call-by-Call services. It shows two offices of a company, one in New York and one in Toronto. Each office is equipped with a BCM50 system and a PRI line. Each office has to handle incoming and outgoing calls to the public network. In addition, employees at each office often have to call colleagues in the other office. Refer to [“Private networking: PRI Call-by-Call services” on page 331](#) for more information.

Figure 5 PRI networking using Call-by-Call Services

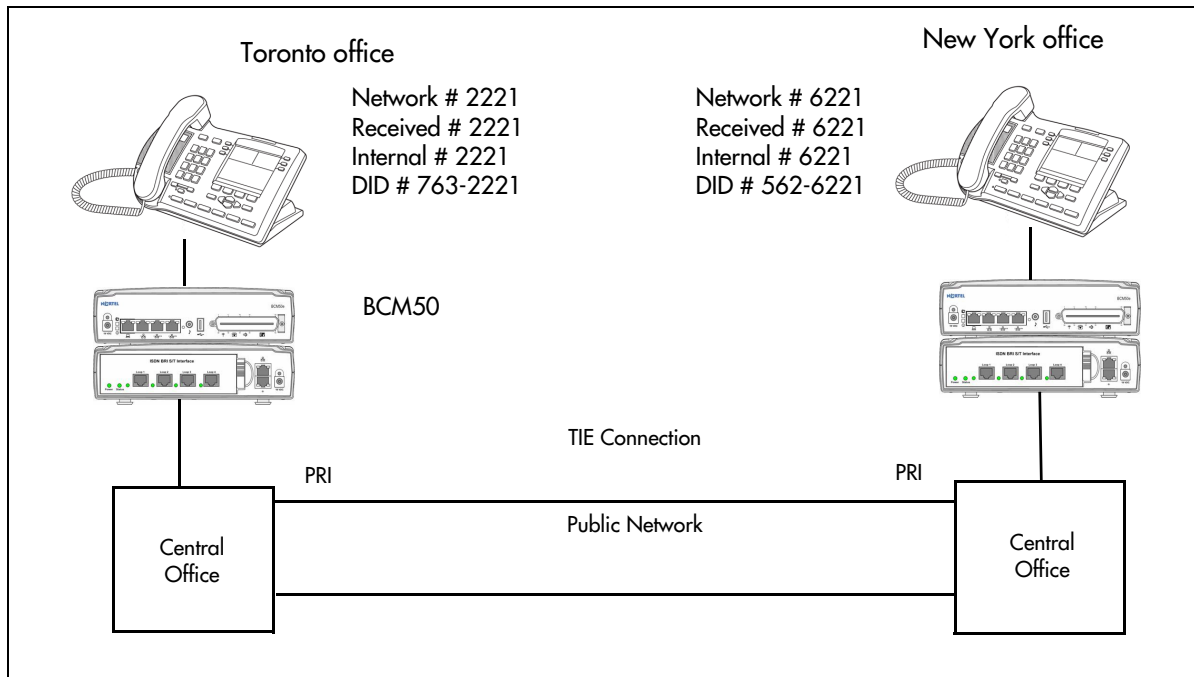

To reduce long distance costs, and to allow for a coordinated dialing plan between the offices, private lines are used to handle inter-office traffic.

If call-by-call services were *not* used, each BCM50 system might have to be equipped with the following trunks:

- 12 T1 DID lines needed to handle peak incoming call traffic.
- eight T1 E&M lines needed to handle inter-office calls.
- eight lines needed to handle outgoing public calls

PRI SL-1/Q.Sig/DPNSS and VoIP trunk networking

PRI SL-1 trunks and VoIP trunks can be used to create private networks between BCM50 systems or between BCM50 systems and larger call servers such as Meridian 1, Succession 1000/M, DMS100/250 and CSE.

ETSI-QSIG and DPNSS private networking is configured very similarly, although network features may be supported slightly differently due to local line and network requirements.

If the MCDN protocol is added to this type of private network, the network provides additional network management features, as well as allowing centralized voicemail features to be available to all nodes on the network.

The following sections describe the different aspects of SL-1 and MCDN private networking.

- [“System dialing plans” on page 43](#)
- [“Creating tandem private networks” on page 43](#)
- [“Understanding MCDN network features” on page 45](#)
- [“Networking with ETSI QSIG” on page 48](#)
- [“Private networking with DPNSS” on page 58](#)

The type of network you require depends on the equipment in the network, and how you want to use the network.

- With MCDN, you can tie a set of BCM50 systems together with PRI SL-1(MCDN)/ETSI-QSIG, DPNSS or VoIP trunks to create a tandem network. This type of network provides the additional advantage of providing private line access to local PSTNs for all the nodes on the network.



Note: A keycode is required to use SL-1(MCDN).

System dialing plans

Both these types of networks require similar setups for dialing plans and routing. Each node must have a way to route external calls to the adjacent node or nodes. To do this, all nodes must have the same Private DN lengths.

You use routing and a private dialing plan to control calls over the network. Each example in this section describes the routing configurations that are required to support calls over the network.

Depending on the type of dialing plan you choose, each node must also have a unique location or steering code so the calls can be correctly routed through the nodes of the network. MCDN networks also require a Private Network ID, which is supplied by the Meridian network administrator to define how the Meridian system identifies each node.

Creating tandem private networks

You can tie a number of BCM50 systems together with SL-1 lines. This tandem network provides you with the benefits of end-to-end name display and toll-free calling over the SL-1 private link. Each BCM50 becomes a node in the network. In this type of network, you must ensure that each BCM50 system, known as a node of the network, is set up to route calls internally as well as to other nodes on the system. This means each node must have a route to the immediately adjacent node, and the correct codes to distribute the called numbers. Each node must have a unique identification number, which is determined by the type of dialing plan chosen for the network.

As well, you can save costs by having a public network connection to only one or two nodes, and routing external calls from other nodes out through the local PSTN, thus avoiding toll charges for single calls.

VoIP note: You can also use VoIP trunks between some or all of the nodes. The setup is the same, except that you need to create gateway records for each end of the trunk, and routing tables to accommodate the gateway codes.

Routing for tandem networks

In tandem networks, each node needs to know how to route calls that do not terminate locally. To do this, you set up routes for each connecting node by defining destination codes for each route.

If the node is also connected to the public network, the usual routing is required for that connection.

The following tables show the routing tables for Node A and Node C for external and internal terminating calls.



Note: The PRI and VoIP trunks are en bloc dialing lines, so all dialed digits are collected before being dialed out.

Table 1 Node A destination code table, external termination

| Route | Absorb length | Destination code (public DNs) |
|---|---------------|---|
| 4 (PSTN) | 1 | <u>9</u> 1604 |
| 3 (Node B) | 0 | 91403762 (Node B) |
| 3 (Node B) | 0 | 91403765 (Node E) |
| 4 (PSTN) | 1 | <u>9</u> 140376* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 14037* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 1403* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> * (not internal network) |
| * This wild card represents a single digit. | | |

Table 2 Node A destination code table, internal termination

| Route | Absorb length | Destination code (private DNs) |
|------------|---------------|--------------------------------|
| 3 (Node B) | 0 | 392 (Node B) |
| 3 (Node B) | 0 | 395 (Node E) |
| 5 (Node C) | 0 | 393 (Node C) |
| 5 (Node C) | 0 | 394 (Node D) |
| 5 (Node C) | 0 | 396 (Node F) |

Table 3 Node C destination code table, external termination

| Route | Absorb length | Destination code (Public DNs) |
|---|---------------|---|
| 3 (Node B) | 0 | <u>9</u> 1613764 (Node D) |
| 3 (Node B) | 0 | <u>9</u> 1613766 (Node F) |
| 4 (PSTN) | 1 | <u>9</u> 161376* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 16137* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 1613* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 161* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 16* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 1* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> (not internal network) |
| * This wild card represents a single digit. | | |

Table 4 Node C destination code table, internal termination

| Route | Absorb length | Destination code (Private DNS) |
|------------|---------------|--------------------------------|
| 3 (Node D) | 0 | 394 (Node D) |
| 3 (Node D) | 0 | 396 (Node F) |
| 5 (Node A) | 0 | 391 (Node A) |
| 5 (Node A) | 0 | 392 (Node B) |
| 5 (Node A) | 0 | 395 (Node E) |

Understanding MCDN network features

When you connect your BCM50 systems through PRI-SL-1/ETSI QSIG/DPNSS or VoIP trunks, and activate the MCDN protocol, your network provides a number of network call features. You can use this protocol to network other BCM50 systems, such as the tandem system shown in the previous section, Norstar systems, Meridian 1 systems, Succession systems, DMS 100 systems or CSE systems.

[Table 5](#) lists the MCDN features that are provided by all SL-1/VoIP networks where MCDN is active. The features affect call redirection and trunking functions.

Table 5 MCDN network features

| | |
|-----------------------|--|
| Centralized messaging | “Network Call Redirection Information” on page 45 (NCRI) |
| Centralize trunking | “ISDN Call Connection Limitation” on page 46 (ICCL) “Trunk Route Optimization” on page 47 (TRO) “Trunk Anti-tromboning” on page 47 (TAT) |

Network Call Redirection Information


NCRI (Network Call Redirection Information) builds on the following BCM50 features:

- External Call Forward
- Call Transfer
- Call Forward

NCRI adds the ability to redirect a call across an MCDN network using Call Forward (All Calls, No Answer, Busy) and Call Transfer features. The call destination also receives the necessary redirection information. This feature allows the system to automatically redirect calls from within a BCM50 system to the mail system, such as Meridian Mail, which resides outside the BCM50 system on the Meridian 1.

[Figure 6](#) shows an example of this situation, where user A calls user B on the same BCM50. If user B is busy or not answering, the call automatically gets transferred to a Meridian Mail number (user C) across an MCDN link between the BCM50 system and the Meridian 1 system where the mailboxes are set up.

Figure 6 Network call redirection path

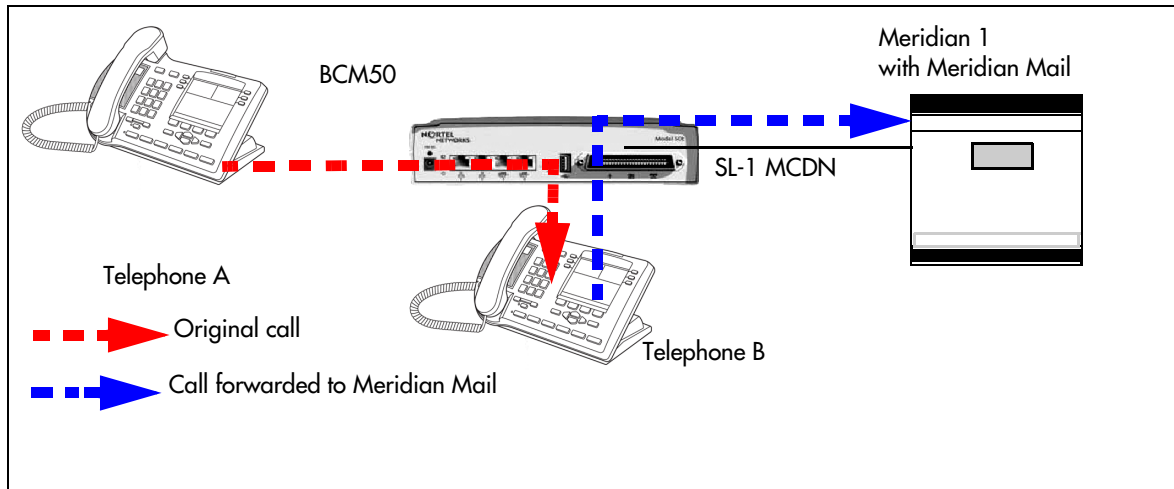


ISDN Call Connection Limitation

The ICCL (ISDN Call Connection Limitation) feature piggybacks on the call initiation request and acts as a check at transit PBX points to prevent misconfigured routes or calls with errors from blocking channels. Also refer to “[ISDN overview](#)” on page 511.

This feature adds a transit/tandem counter to a call setup message. This counter is compared at each transit PBX with a value programmed into the transit PBX, in a range from 0 to 31. If the call setup counter is higher than the PBX value, the call will be blocked at the PBX system and cleared back to the network. This prevents calls from creating loops that tie up lines.

[Figure 7](#) demonstrates how a call might loop through a network if the system is not set up with ICCL.

Figure 7 Call loop on system without ICCL

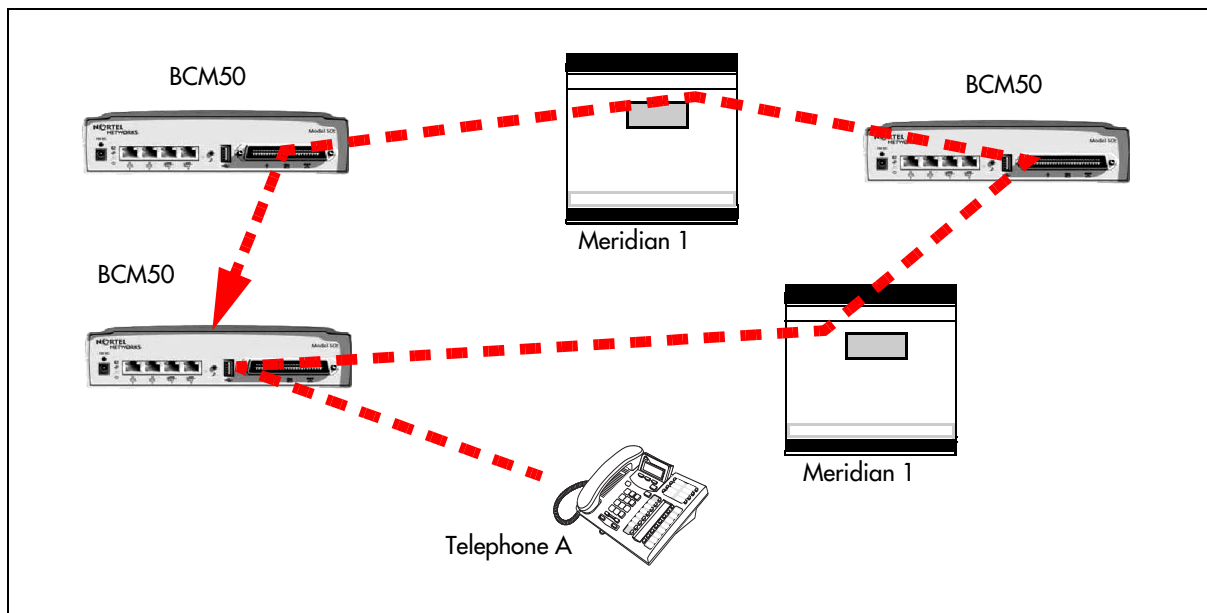

Trunk Route Optimization

Trunk Route Optimization (TRO) finds the most direct route through the network to send a call between nodes. This function occurs during the initial alerting phase of a call.


BCM50 configurations:

- Under Configuration>Dialing Plan>Private Network, select the check box beside TRO.
- Configure call routing for all optimal routes.
- Configure call forward (All Calls, No Answer, Busy) or Selective Line Redirection to use the optimal routes.

This feature avoids the following situation: A call originating from a BCM50 system may be networked to a Meridian system, which, in turn, is networked to another Meridian system, which is the destination for the call. If the call routes through the first Meridian (M1) to reach the second Meridian (M2), two trunks are required for the call. An optimal choice is a straight connection to M2. This finds these connections and overrides the less-efficient setup.

Figure 8 shows two call paths. The first route, through the Meridian, demonstrates how a call might route if TRO is not active. The second route, that bypasses the Meridian, demonstrates how TRO selects the optimum routing for a call.

Figure 8 Call paths with and without TRO

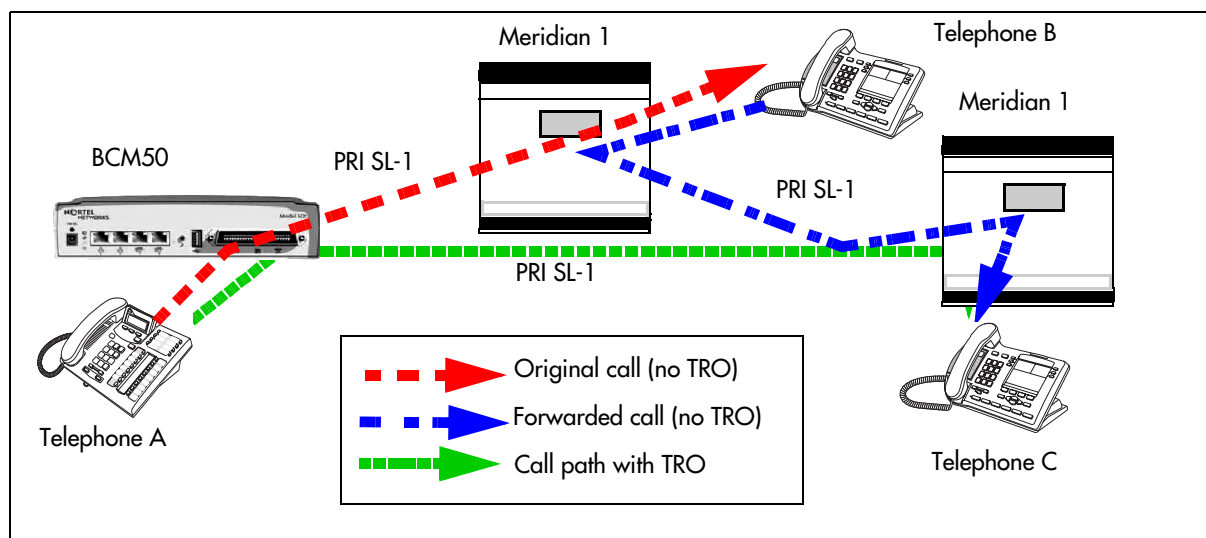

Trunk Anti-tromboning


Trunk Anti-Tromboning (TAT) is a call-reroute feature that works to find better routes during a transfer of an active call. This feature acts to prevent unnecessary tandeming and tromboning of trunks.



Note: This feature is not applicable for alerting calls.

Figure 9 shows how TAT reduces the line requirements. The solid line shows Telephone A calling Telephone B and being transferred over an additional PRI line to Telephone C. With TAT active, the same call is transferred to Telephone C over the same PRI line.

Figure 9 Call paths with and without TAT

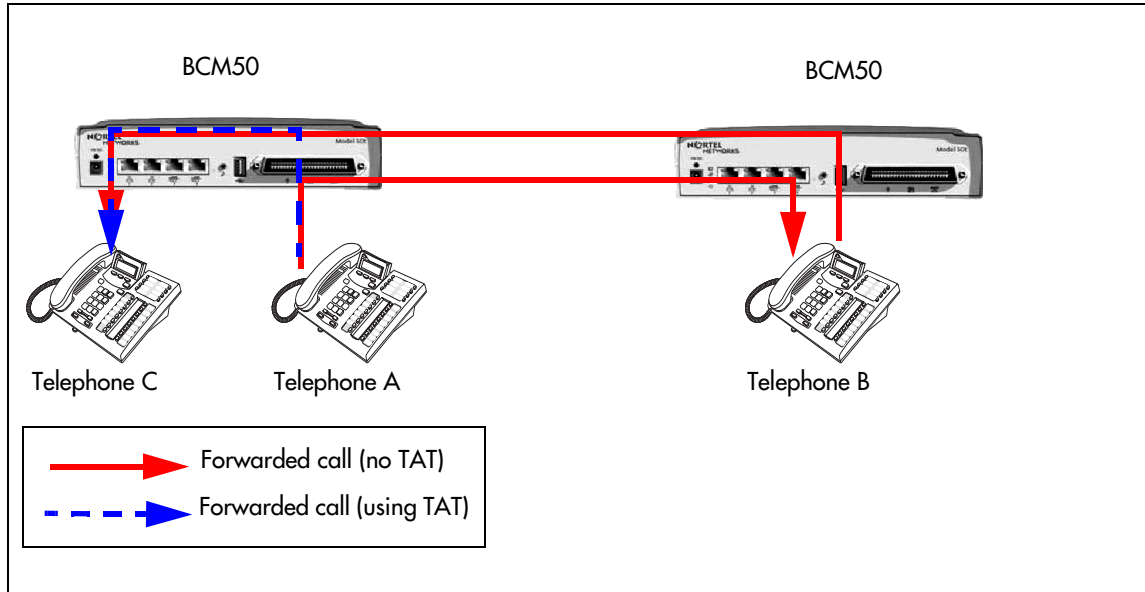

Networking with ETSI QSIG

(International systems only)

ETSI QSIG is the European standard signaling protocol for multi-vendor peer-to-peer communications between PBX systems and/or central offices.

Other information in this section: [“ETSI Euro network services” on page 49.](#)

Figure 10 illustrates an ETSI QSIG network. Note that this is exactly the same setup as that shown in the MCDN section for North America. The hardware programming for ETSI QSIG is described in Table 6. All other configurations are the same as those shown in the MCDN section for North America.

Figure 10 ETSI QSIG networking

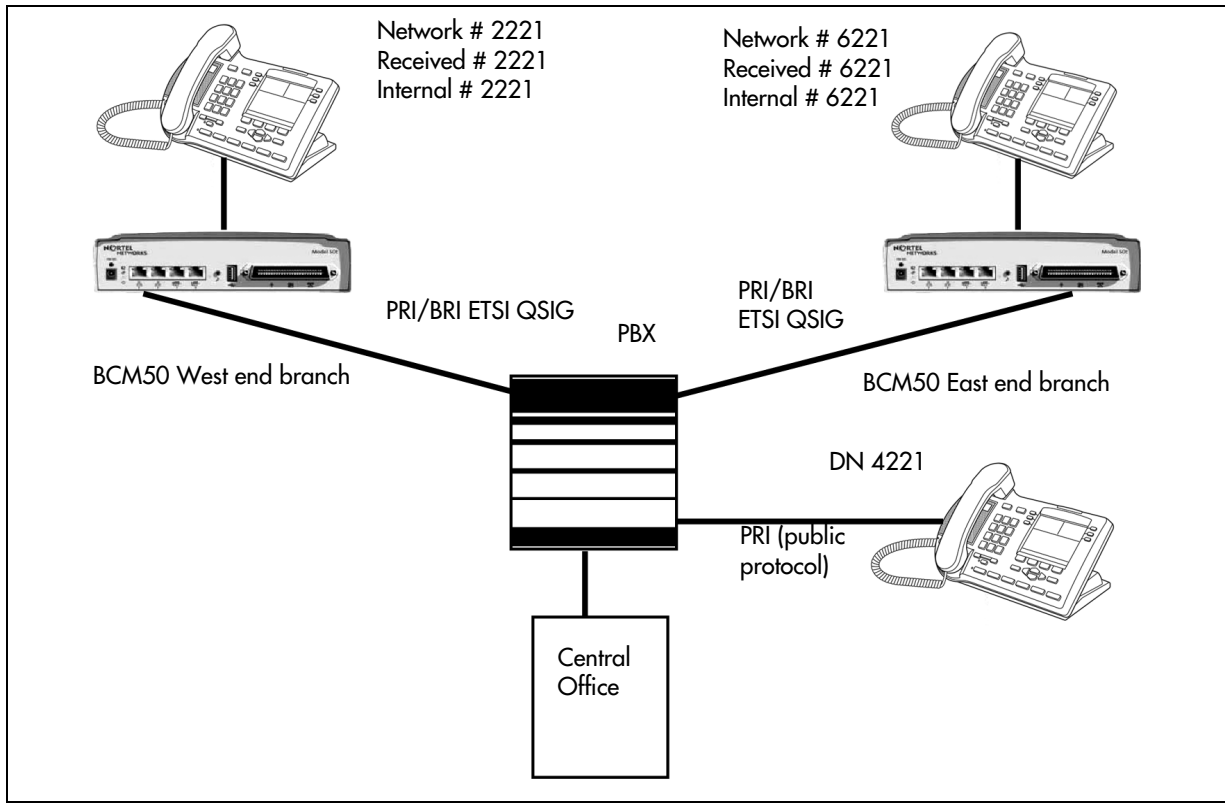


Table 6 lists the settings for some of the hardware parameters for ETSI QSIG networking example shown in Figure 10.

Table 6 Hardware programming for branch offices

| West End office: | | |
|----------------------|----------|-------------------|
| Hardware programming | DTM/BRIM | PRI/BRI |
| | Protocol | ETSI QSIG |
| | BchanSeq | Ascend (PRI only) |
| | ClockSrc | Primary |

| East End office: | | |
|----------------------|----------|-------------------|
| Hardware programming | DTM/BRIM | PRI/BRI |
| | Protocol | ETSI QSIG |
| | BchanSeq | Ascend (PRI only) |
| | ClockSrc | Primary |

ETSI Euro network services

If your system has ETSI ISDN BRI/PRI lines, you can activate the malicious call identification (MCID) and Network Diversion features. Advice of charge-end call (AOCE) is active if your service provider has activated that service on the line.

When the features are activated, users can:

- display a call charge
- redirect calls over the ETSI ISDN BRI/PRI line to the outside network
- tag malicious calls

Advice of Charge-End of Call (AOCE) — AOCE is a supplementary service available from your service provider on ETSI ISDN BRI/PRI links. This feature allows the BCM50 user to view the charges for an outgoing call once the call completes. This information is also reported to the Call Detail Reporting Application. The information can be provided in currency or charging units, depending on how the feature is set up by your service provider.

To invoke the feature, the user presses **FEATURE 818**.

DPNSS 1 services

The Digital Private Network Signaling System (DPNSS 1) is a networking protocol enhancement that extends the private networking capabilities of existing BCM50 systems. It is designed to offer greater centralized functionality for operators, giving them access to BCM50 features over multiple combined networks.



Note: The DPNSS feature is dependent on which region loaded on your system at startup and that a software keycode was entered to enable the feature.

Other information in this section includes:

- [“DPNSS 1 capabilities” on page 51](#)
- [“DPNSS 1 features” on page 51](#)
- [“Private networking with DPNSS” on page 58](#)

DPNSS 1 allows a BCM50 local node, acting as a terminating node, to communicate with other PBXs over the network. For example, corporate offices separated geographically can be linked over DPNSS 1 to other BCM50 nodes, bypassing the restrictions of the PSTNs to which they may be connected. This allows connected BCM50 nodes to function like a private network, with all features of BCM50 accessible.



Note: BCM50 DPNSS 1 works as a terminating node only. BCM50 to BCM50 DPNSS is not supported.

DPNSS 1 features can be used on any BCM50 telephone. On most BCM50 telephones, you must use specific keys and/or enter a number code to access the features.

DPNSS 1 capabilities

A single BCM50 node, acting as a terminating node on the network, supports the following capabilities over DPNSS 1 lines:

- Direct Dial Inward (DDI) for incoming calls.
- Originating Line Identification (OLI) for incoming and outgoing calls:
 - For incoming calls, the Calling Line Identification (CLI/CLID) information is displayed to the user on telephones with line display. This must be configured in programming.
 - For outgoing calls, the directory number of the originating party is sent out as OLI.
- Terminal Line Identification (TLI) for incoming and outgoing calls. Referred to as Called Line Identification.
- Selective Line Redirect (SLR) and External Call Forward (ECF) implemented on calls between DPNSS 1, and BRI/PRI, DASS2, and analog lines.
- These remote access features are supported on DPNSS: DDI, line pool access code, destination codes and remote page feature codes.

Keycodes are required to enable DPNSS 1.

DPNSS to Embark connections

DPNSS lines connected to an Embark switch perform call redirection/diversion using the Call Forward feature to create a tandem link back to the switch. Since this is different from other switches, you must select the type of switch DPNSS will be connecting to when you do module programming.

Before you program Call Forwarding, ensure that:

- Both real channels and virtual channels are provisioned.
- Destination or line pool codes are programmed for the DPNSS to Embark link.

Also, during programming for Call Forward No Answer and Call Forward on Busy, when you enter the **Forward to:** digits, the system does a validation check with the switch on the number. (Telephony>Sets>Active Sets>Line Access)

DPNSS 1 features

The following features are available and can be programmed over DPNSS lines:

- [“Three party service” on page 52](#)
- Diversion ([“Using the diversion feature” on page 53](#))
- Redirection ([“Using the Redirection feature” on page 54](#))
- [“Executive intrusion” on page 55](#)

- [“Call Offer” on page 56](#)
- [“Route optimization” on page 57](#)
- [“Loop avoidance” on page 57](#)
- Message Waiting Indication

The following parameters can be configured for DPNNS 1 lines:

- Line type
- Prime set
- CLID set
- Auto privacy
- Answer mode
- Auxiliary ringer
- Full autohold

Some features are transparent to the user, but must be programmed to be activated. Others are available for end-user programming at the telephone. Details about these features are given below.

Three party service

Three Party Service is a DPNSS 1 feature for BCM50 that is similar to the BCM50 Conference feature.

The Three Party Service allows a user, usually an operator, to establish a three-party conference by calling two other parties from one telephone. Once the connection is made, the controlling party can hang up, leaving the other two connected. The controlling party can even put one party on hold, and talk to the other party.



Note: BCM50 does not support Hold over the DPNSS link itself. This means that the conferenced party on the distant end of the network cannot place a Three Party Service call on Hold.

This feature is designed to allow operators to assist in the connection of calls from one main location.

Making a conference call

To initiate or disconnect from a conference call on a BCM50 system over DPNSS 1, use the procedure described in the *BCM50 Device Configuration Guide* (N0027146).



Note: Three Party Service is supported on model 7000 telephones, but in a receive-only fashion. These telephone types cannot initiate Three Party Service. For more information about these telephone types, see the *BCM50 Digital Telephone Installation and Configuration Guide* (N0027330).

(model 7000 phones, supported in Europe only.)

Using the diversion feature

Diversion is a DPNSS 1 feature for BCM50 that allows users to forward their calls to a third party on the DPNSS 1 network. This feature is similar to Call Forward on BCM50, but takes advantage of the broader capabilities of DPNSS.

There are five variations of Diversion: Call Diversion Immediate, Call Diversion On Busy, Call Diversion On No Reply, Bypass Call Diversion, and Follow-me Diversion. These variations are described below:

- Diversion Immediate diverts all calls to an alternate telephone. This function is programmed by the user at their telephone.
- Diversion On Busy diverts all calls to an alternate telephone when a telephone is busy. This feature is programmed in the Element Manager.
- Diversion On No Reply diverts calls that go unanswered after a specified amount of time. This feature is programmed in the Element Manager.
- Bypass Call Diversion overrides all call forward features active on a telephone over a DPNSS line. An incoming call to the telephone will not be forwarded; instead, the telephone will continue to ring as if call forward were not active. This feature is used to force a call to be answered at that location. Bypass Call Diversion is a receive-only feature on BCM50, and cannot be used from a BCM50 telephone.
- Follow-me Diversion is also a receive-only feature. It allows the call forwarded destination to remotely change the BCM50 call forwarding programming (Call Forward All Calls [CFAC] feature) to a different telephone.



Note: BCM50 CFAC must be active and the destination set/PBX system must support the feature.

For example, user A forwards all calls to telephone B, a temporary office. Later, user A moves on to location C. The user does not have to be at telephone A to forward calls to location C. Using telephone B and Follow-me Diversion, the user can forward calls from A to location C.

Follow-me diversion can be cancelled from the forwarded location.

- Diversion on Busy and Diversion on No Reply cannot be cancelled from the forwarded telephone. These are programmable only by an installer and not by the user.
- If multiple telephones are programmed to take a call, the first telephone to respond will act. All other telephones responding are ignored. Therefore, if the first telephone to respond has Diversion enabled, this feature will be invoked.

Restrictions by telephone type

- all variations supported on BCM50 digital and IP telephones
- ATA2/ASM8+—all variations supported on an ATA
- ISDN—all variations supported on ISDN telephones, except Diversion on Busy and CFWD Busy

Setting Diversion

You set Diversion for DPNSS in the same way as Call Forward. You will need to enter the end DN when prompted. You may also need to include the DPNSS 1 routing number.

Using the Redirection feature

Redirection is a DPNSS 1 feature similar to BCM50 Transfer Callback. Redirection lets a call awaiting connection, or reconnection, be redirected by the originating party to an alternate destination after a time-out period. Failed calls can also be redirected. Priority calls are not redirected.



Note: The address to redirect depends on the history of the call. Calls that have been transferred are redirected to the party that transferred them. In all other cases, the address to redirect is the one registered at the PBX system originating the redirection.



Note: BCM50 does not support the redirection of BCM50 originated calls, even over DPNSS 1.

The Diversion on No Reply feature takes precedence over Redirection.

Restrictions by telephone type

- For telephones with a single line display, the number key (#) acts as MORE and the star key (*) acts as VIEW
- ISDN—all variations supported on ISDN telephones

Setting redirection

The timer used for the network Callback feature is also used for redirection.

Executive intrusion

Executive Intrusion (EI) is a DPNSS 1 feature that allows an operator, or other calling party, to intrude on a line when it is busy. An example of the use of this feature is to make an important announcement when the recipient is on another call.

EI is similar in functionality to BCM50 Priority Call, but it is a receive-only feature on BCM50 telephones. EI cannot be initiated from a BCM50 telephone. The person using this feature must be on another PBX system on the DPNSS 1 network.

When EI is used to intrude on a call in progress, a three-way connection is established between the originating party and the two parties on the call. The result is very much like a conference call. When one of the three parties clears the line, the other two remain connected, and EI is terminated.

Restrictions by telephone type

- ATA2/ASM8+—supported
- ISDN—not supported

The telephone receiving the intrusion displays `Intrusion Call`. A warning indication tone will sound after intrusion has taken place, and the standard conference call tone will sound every 20 seconds.

Intrusion levels

Whether or not a telephone will accept or reject an Executive Intrusion request depends on the level of intrusion protection programmed. Each telephone (DN) has an Intrusion Capability Level (ICL) and four Intrusion Protection Levels (IPL).

When the ICL of the intruding telephone is higher than the IPLs of *both* telephones on the active call, EI will occur. It is best to set the IPLs of most BCM50 telephones to the default of None, or Low or Medium.

Intrusion levels are described as follows:

- ICL: determines the ability of the attendant to intrude. As long as the ICL is higher than the IPL of the wanted party, EI is allowed. Since EI is a receive-only feature, the ICL cannot be set on BCM50.
- IPL: determines the ability of the attendant to refuse intrusion. If the IPL is lower than the ICL of the originating party, EI is allowed. For general purposes setting the IPL to None, Low or Medium is recommended, unless intrusion is not wanted.

Call Offer

Call Offer over DPNSS 1 allows a calling party to indicate to the wanted party that there is an incoming call available, even though there is no answer button available to present the call on the telephone. The intended recipient can ignore, accept, or decline the offered call. Call Offer is useful in increasing the call-coverage capability of a BCM50 system, and helps to lift the network processing load. It is a receive-only capability on BCM50: incoming calls would be initiated at another PBX system on the DPNSS 1 network.

An example of Call Offer in use is an operator or attendant who has a number of calls coming in at once. The operator can call offer one call and move to the next without waiting for the first call to be answered.

Call Offer Displays

When a Call Offer is made by the originating exchange, the target telephone displays a message, and a tone is heard. When an offered call arrives on telephones with line display, the user sees `XX...X wtng` if the calling party ID is available and CLID is enabled. If CLID is not available or CLID is disabled, `Line XXX waiting` appears (the line name associated with the call). If there are more than 11 digits in the incoming number, only the last 10 will display.

If Call Queuing is programmed for the system, the display shows `Release Line XXX`.

This is the line name of the highest-priority queued call if it is an offered call.

Restrictions by telephone type

- model 7000 telephone — associated LED or LCD flashes, and a tone is heard (model 7000 phones, supported in Europe only.)
- ATA2/ASM8+—Call Offer is supported as a Camp On feature, and a tone is heard
- ISDN—not supported

Note the following general conditions and restrictions:

- DND on busy must be programmed as N (**DN ##/Capabilities**) for a telephone to accept Call Offer.
- If CF on busy is programmed for the telephone, Call Offer is not accepted.
- The target line for the telephone must be set to: If **busy: busy tone**, which is the default.
- Call Offer does not work if sent over Manual answer lines. It is recommended that the lines be left at the default: **Auto**.

User actions

The party receiving a Call Offer has three choices:

- Ignore it. After a programmed time interval, the Offer request is removed.

- Reject it. If the user activates Do Not Disturb on Busy (DND) when the Call Offer request is made, the request is removed from the telephone. The calling party is informed of the rejection.



Note: A call cannot be offered to a telephone with DND active. The line indicator for external incoming calls still flashes.

- Accept it. The Offer is accepted by releasing the active call.



Note: Forward on Busy takes priority over DND on Busy. Call Offer cannot be accepted by putting an active call on hold.

Route optimization

Route Optimization is a DPNSS 1 feature for BCM50 that allows calls to follow the optimum route between two end PBXs. This allows efficient use of network resources.

Route Optimization is initiated by the system and is transparent to the user. However, the user may see a call switch from an appearance on the telephone to another appearance key or from an intercom button to the appearance key or vice versa. This occurs when BCM50 receives a Route Optimization request and initiates a new call to follow the optimal route.

If a telephone is active on a private line call, the Route Optimization call being established may go on a public line. This will cause a loss of privacy on that line.

Data calls are rejected by Route Optimization in order to ensure the data transmission is not affected.

Certain situations result in Route Optimization not taking place. For example, calls that are using Hold, Parking or Camp features do not undergo Route Optimization, and if a Route Optimization call undergoes Diversion, the Route Optimization is dropped.

Setting Route Optimization

There is no system programming required for the feature when BCM50 is working as a terminating PBX system. However, BCM50 must have a private access code programmed that maps to a valid destination code or line pool code on DPNSS lines. Further, Allow Redirect must be selected.

Loop avoidance

Errors in the configuration of a network may make it possible for a call to be misrouted, and arrive at a PBX system through which it has already passed. This would continue, causing a loop which would eventually use up all of the available channels. The Loop Avoidance service permits counting of DPNSS 1 transit PBXs and rejecting a call when the count exceeds a predetermined limit.

Private networking with DPNSS

(International only)

DPNSS supports the Universal Dialing Plan (UDP), an international standard for sending and receiving private numbers over networks. The UDP requires that a dialing number include the following:

- a Private Access Code, programmed into the system as part of the destination code table to prevent conflicts with the internal numbering system. (**Access Codes**)
- a Home Location Code (HLC) assigned to each PBX system, and configured as part of the destination code (a maximum of seven digits). For each HLC, a destination code must be programmed in the system. (Telephony>Dialing Plan>Private Networking)
- a Directory Number (DN) assigned to each extension as a line appearance. The DN appears as the last string segment in a dialed number. In the number 244-1111, 1111 is the DN.

A typical Private Number, using a private access code and dialed from another site on the network, appears below.

| Private Access Code | + Home Location Code | + Directory Number | = Calling Party Number |
|---------------------|----------------------|--------------------|------------------------|
| 6 | + 848 | + 2222 | = 6-848-2222 |


In this networking example, a private network is formed when several systems are connected through a Meridian 1 and a terminating BCM50 system. Each site has its own HLC and a range of DNs. [Figure 11](#) illustrates this example.

[Table 7](#) shows examples of the construction of numbers used when dialing within the example network. Note that 6 is the Private Access code.

Table 7 Calling numbers required for DPNSS network example

| Calling Site | LOC/HLC | Calling Party Number | Called Site | Dialing String | Called Party Number |
|--------------|---------|----------------------|-------------|----------------|---------------------|
| Site A | 244 | 244 1111 | Site B | 6 668 2222 | 668 2222 |
| Site B | 668 | 668 2222 | Site D | 6 848 2222 | 848 2222 |
| Site D | 848 | 2222 | Site D | 2229 | 2229 |
| Site C | 496 | 496 3333 | Public DN | 9 563 3245 | 563 3245 |

Figure 11 DPNSS networking

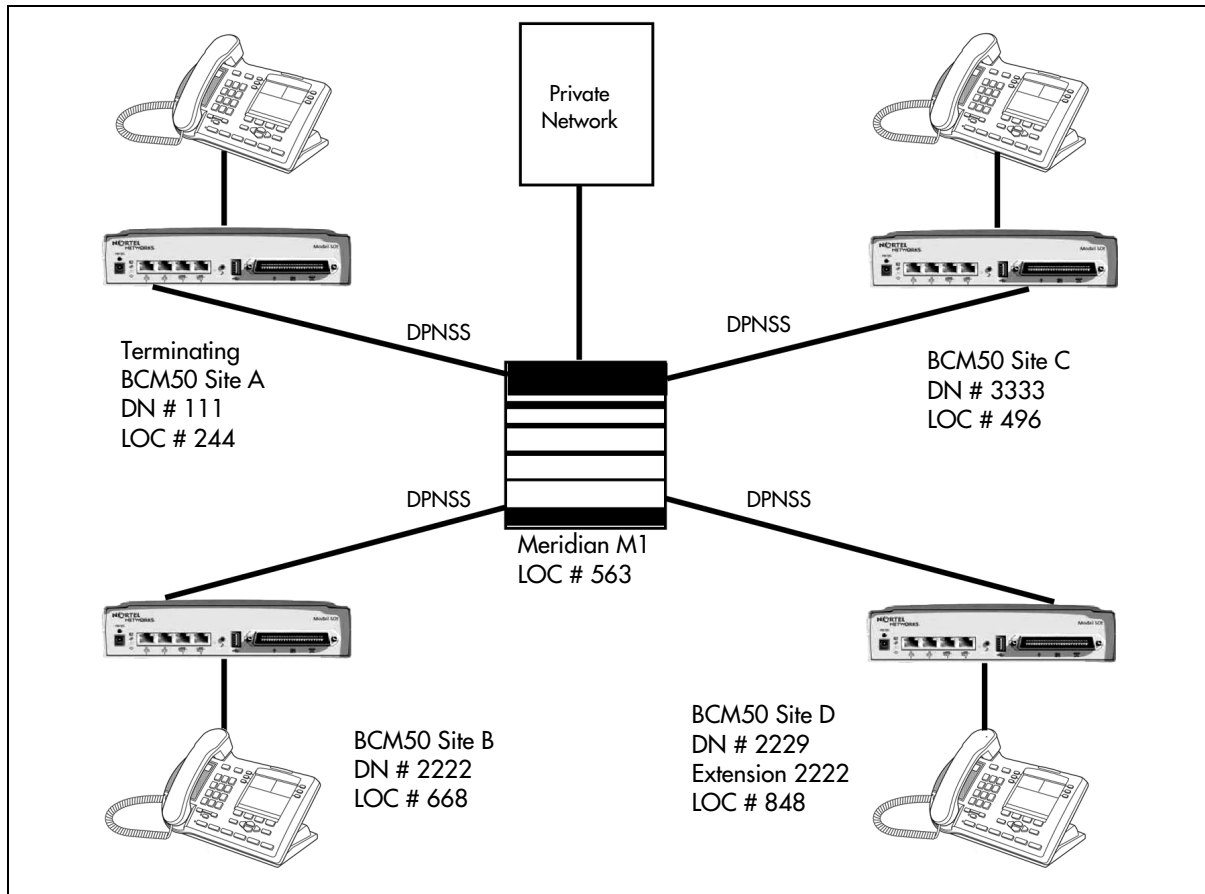

Calls are dialed and identified to the system as follows:

- To reach a telephone inside the Private Network, at the BCM50 site, the user dials the DN of choice.
- To reach a telephone inside the Private Network, from another site, the user dials HLC + DN.
- To reach a telephone outside the Private Network, the user dials an Access Code + HLC + DN.

Each node has its own destination (dest) code, which includes the appropriate access and HLC codes to route the call appropriately.

Chapter 3

Telephony programming: Configuring call traffic


Telephony call traffic has a number of configuration requirements. Some configuration is common to both incoming and outgoing traffic. Other settings are specific to the call direction.

In the case of private networking, call configuration becomes more complex, as remote systems send calls over the private network to other nodes or to your system PSTN network and your local PSTN handles calls directed to remote nodes through your system.

Line programming and number planning both play critical roles in controlling call traffic for your system.

In this section, also refer to:


- [“Incoming calls” on page 64](#)
- [“Outgoing calls” on page 68](#)

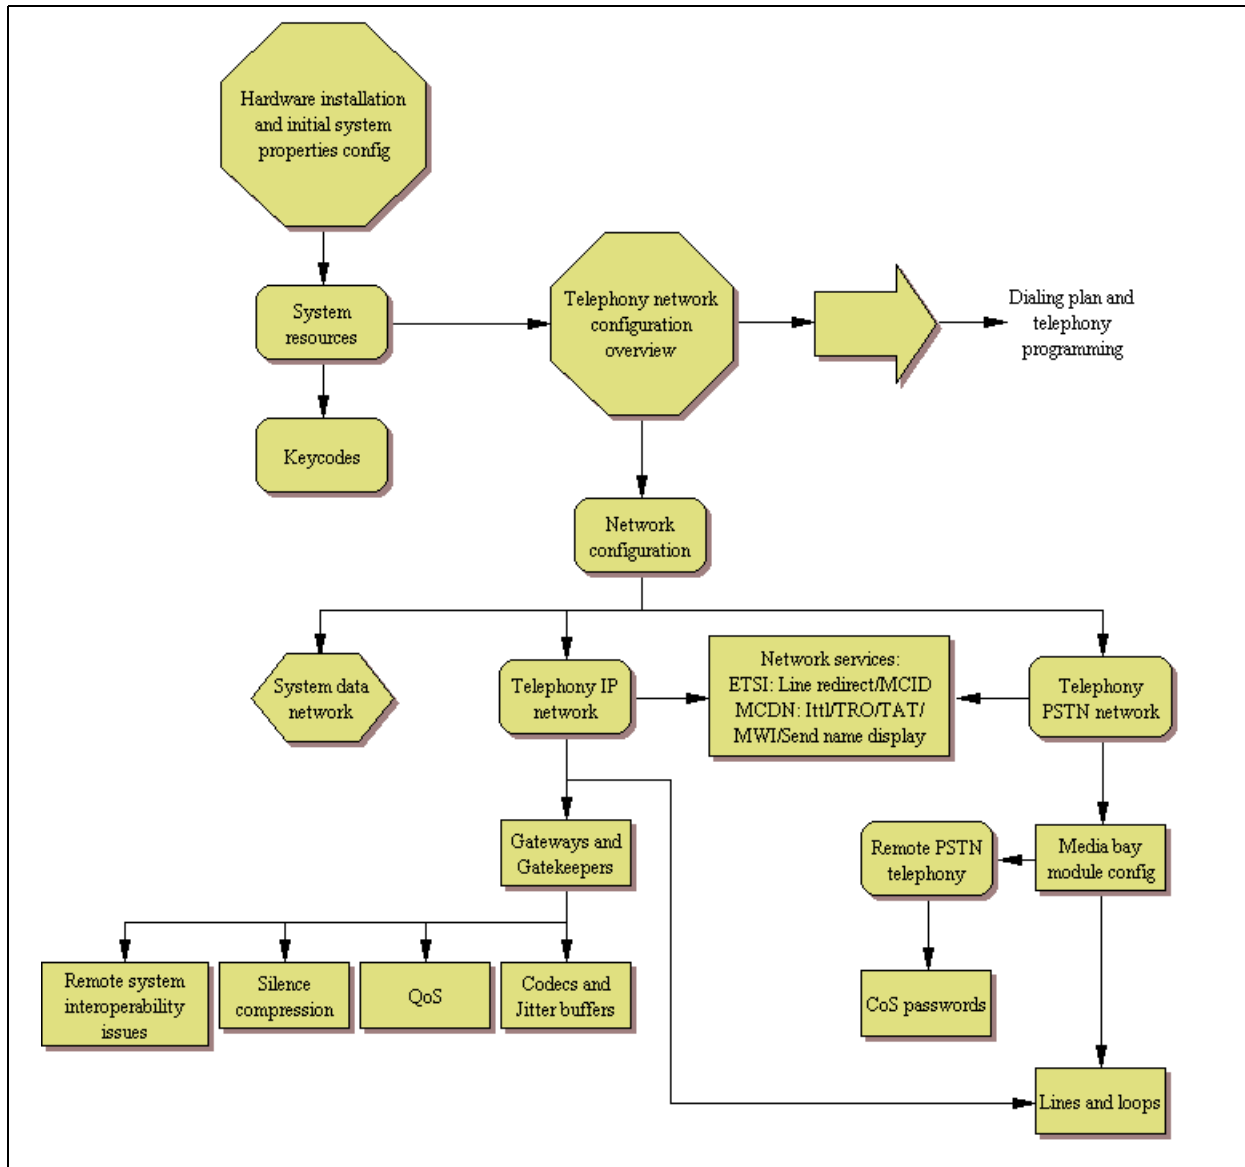Figure 12 Telephony system and device programming

Although many of the tasks involved in programming both areas can be performed in any order, work flow falls generally in the following order:

- Module configuration/VoIP trunk gateways
 - “Configuring telephony resources” on page 79
 - “Managing modules” on page 77
 - “Module configuration: Trunk modules” on page 71
 - “Configuring VoIP trunk gateways” on page 369
 - “VoIP interoperability: Gatekeeper configuration” on page 377
 - “Setting up VoIP trunks for fallback” on page 383
- Line configuration/target line configuration

- “BRI ISDN: BRI loop properties” on page 185
- “BRI ISDN: BRI T-loops” on page 175
- “Programming BRI S-loops, lines and ISDN devices” on page 181
- “Configuring BRI lines” on page 177
- “Configuring lines” on page 117
- “Configuring lines: T1-Loop start” on page 145
- “Configuring lines: T1-E&M” on page 139
- “Configuring lines: T1-Digital Ground Start” on page 151
- “Configuring lines: T1-DID” on page 157
- “Configuring lines: PRI” on page 133
- “Configuring VoIP lines” on page 374
- “Configuring lines: DPNSS lines” on page 169
- “Configuring lines: Target lines” on page 129
- “Call Security: Configuring Direct Inward System Access (DISA)” on page 415
- Networking, private and public
 - “Public networking: Setting up basic systems” on page 277
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Basic parameters” on page 303
 - “Private networking: MCDN and ETSI network features” on page 307
 - “Private networking: Using shared line pools” on page 379
 - “Private networking: Using destination codes” on page 327
 - “Private networking: PRI Call-by-Call services” on page 331
 - “Private networking: PRI and VoIP tandem networks” on page 311
 - “Private networking: MCDN over PRI and VoIP” on page 285
 - “Private networking: DPNSS network services (UK only)” on page 319
 - “Configuring centralized voicemail” on page 339
- Dialing plan configuration

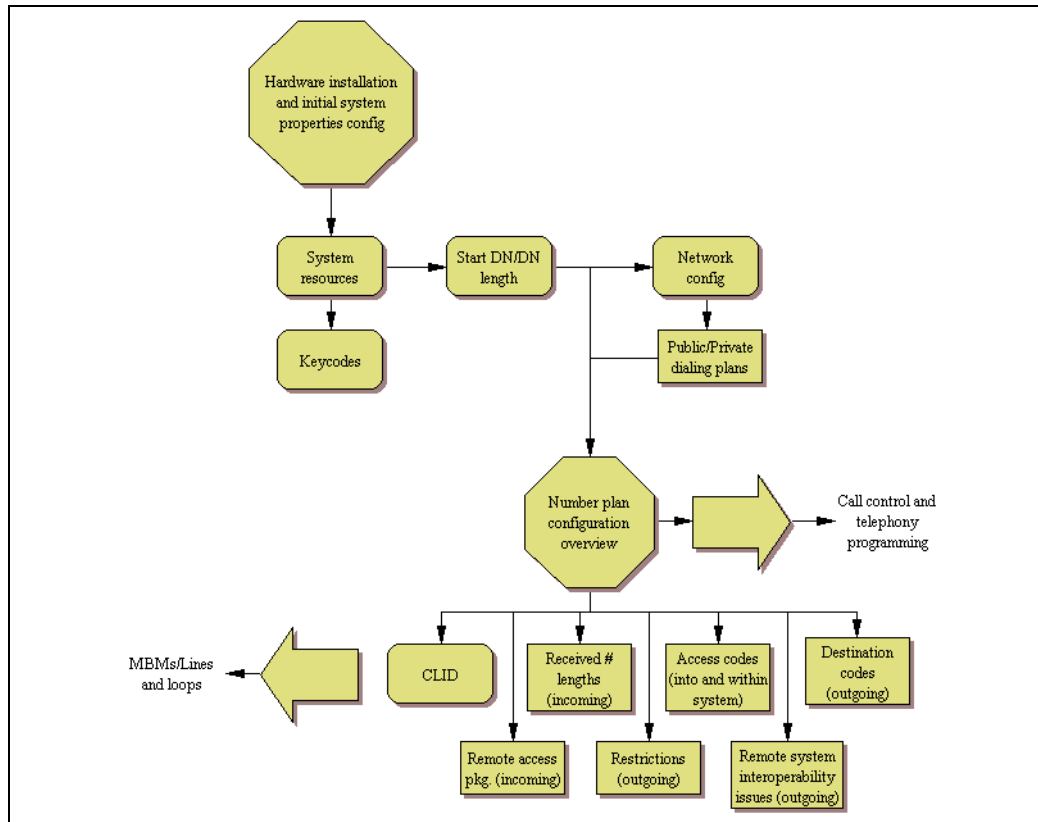Figure 13 Dialing plan configuration

- “Dialing plan: System settings” on page 255
- “Dialing plan: Public network” on page 263
- “Dialing plan: Line pools and line pool codes” on page 345
- “Dialing plan: Routing and destination codes” on page 235
- “Dialing plan: Routing configurations” on page 243
- “Configuring CLID on your system” on page 199
- “Call security: Restriction filters” on page 421 (outgoing calls)
- “Call security: Remote access packages” on page 427 (incoming calls)

Incoming calls

For incoming calls, you can have a central reception point, or you can specify target lines to one or more telephones to receive directed calling.

You can arrange your telephones in Hunt groups, ringing groups, or call groups that use system-wide call appearance (SWCA) assignments to share calls.

You can also configure lines for use by system users who call in from outside the system. You can give them direct access to the system with an Auto DN, or you can configure the line so they hear a stuttered dial tone, at which point they need to enter a password (CoS) to gain access (DISA DN).

Figure 14

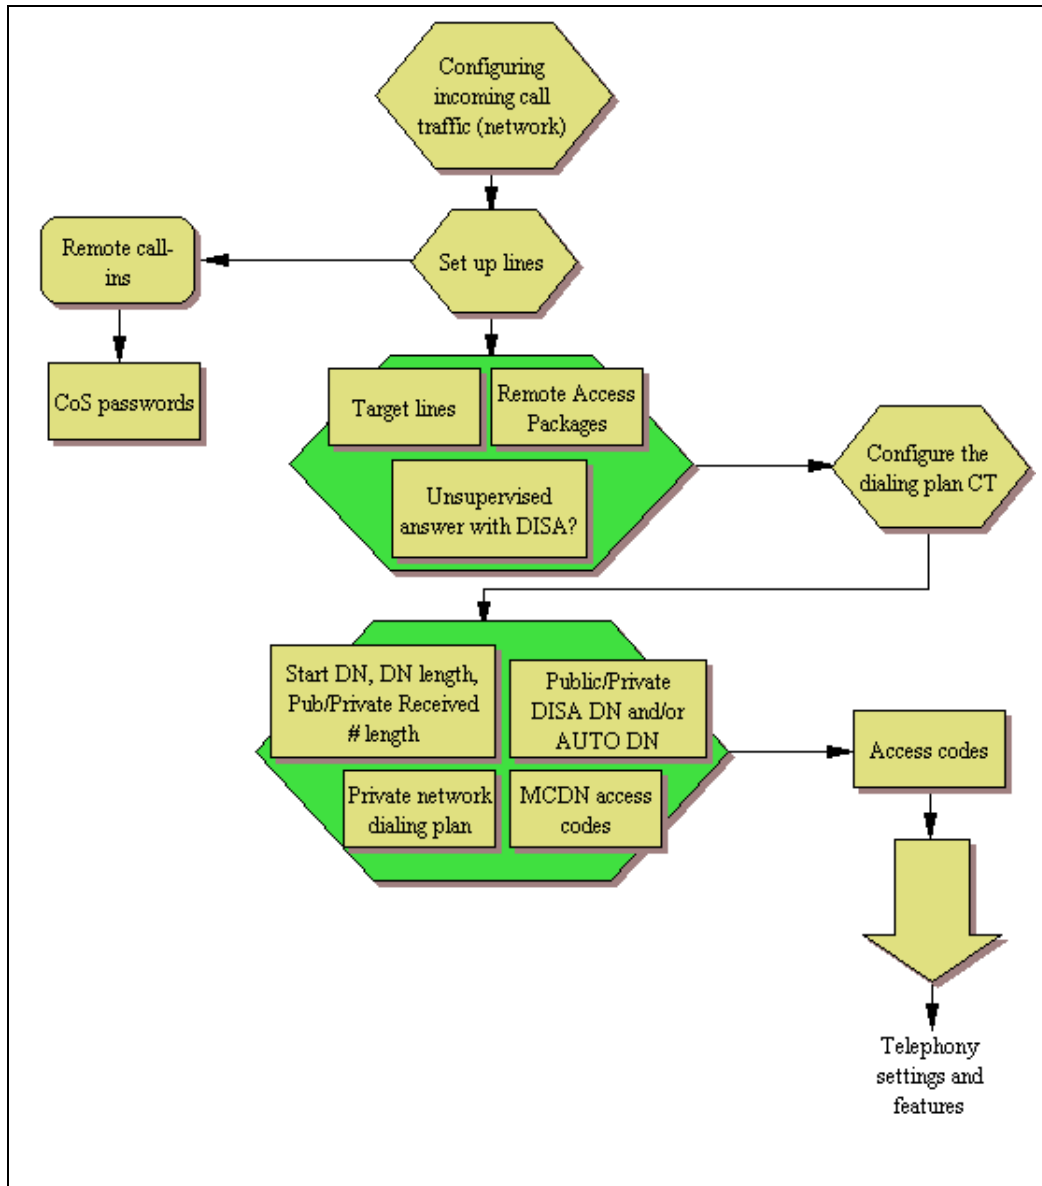


Figure 15


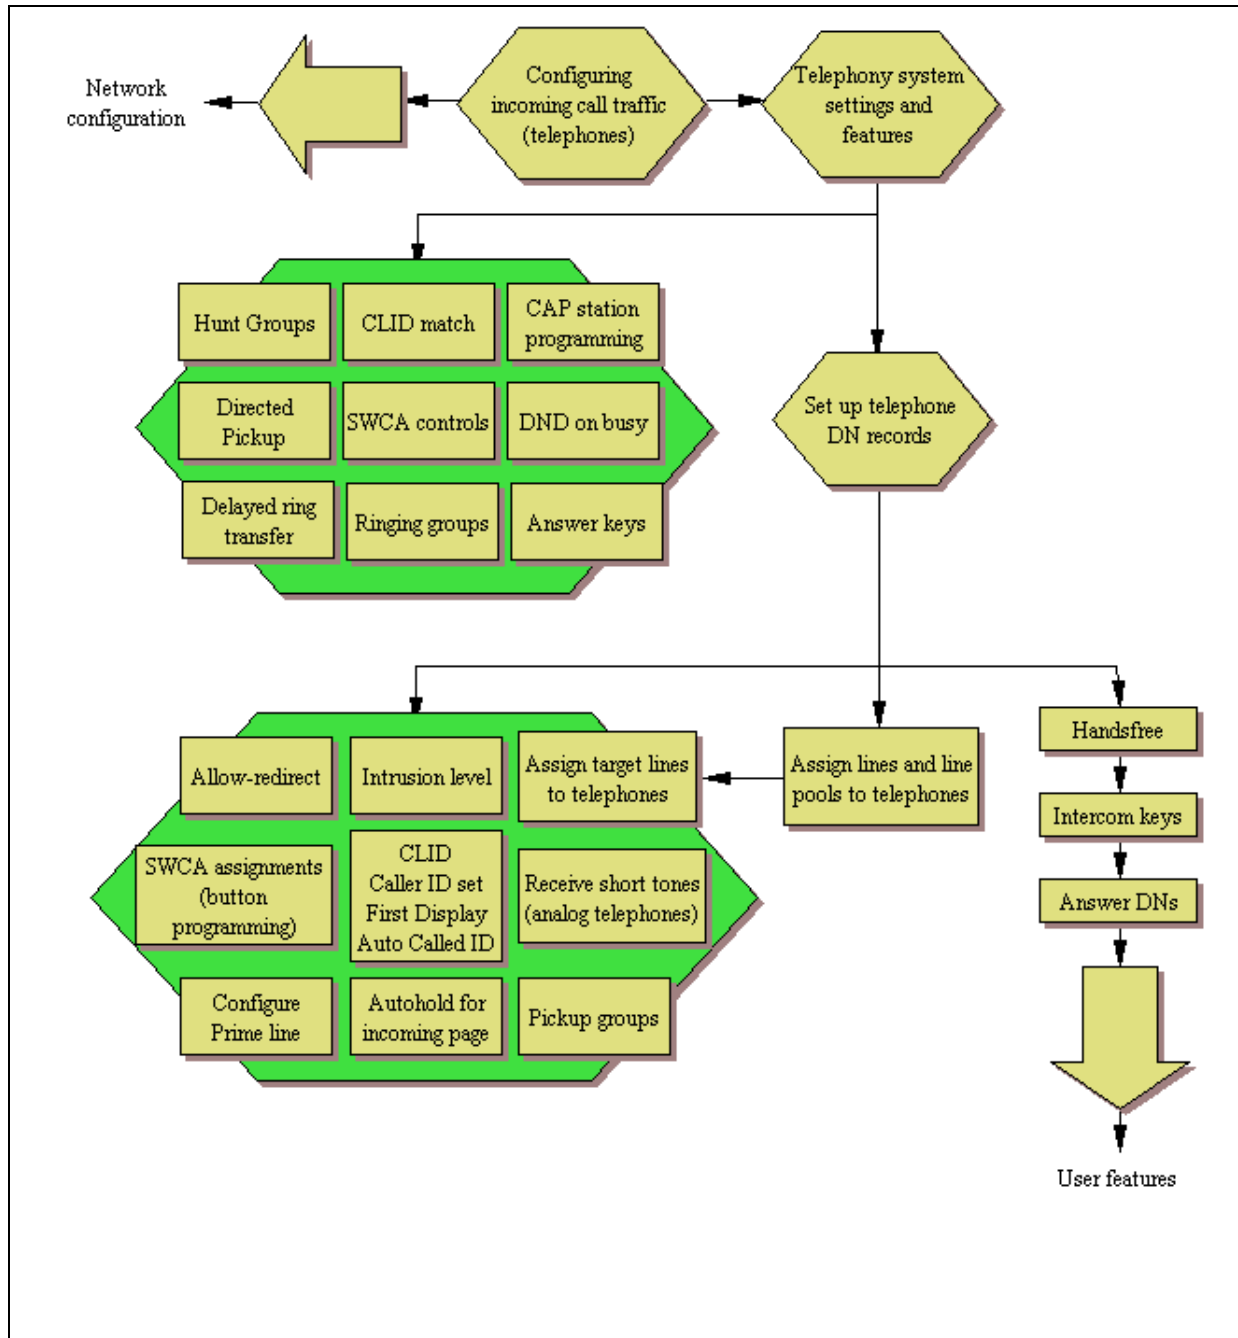


Figure 16

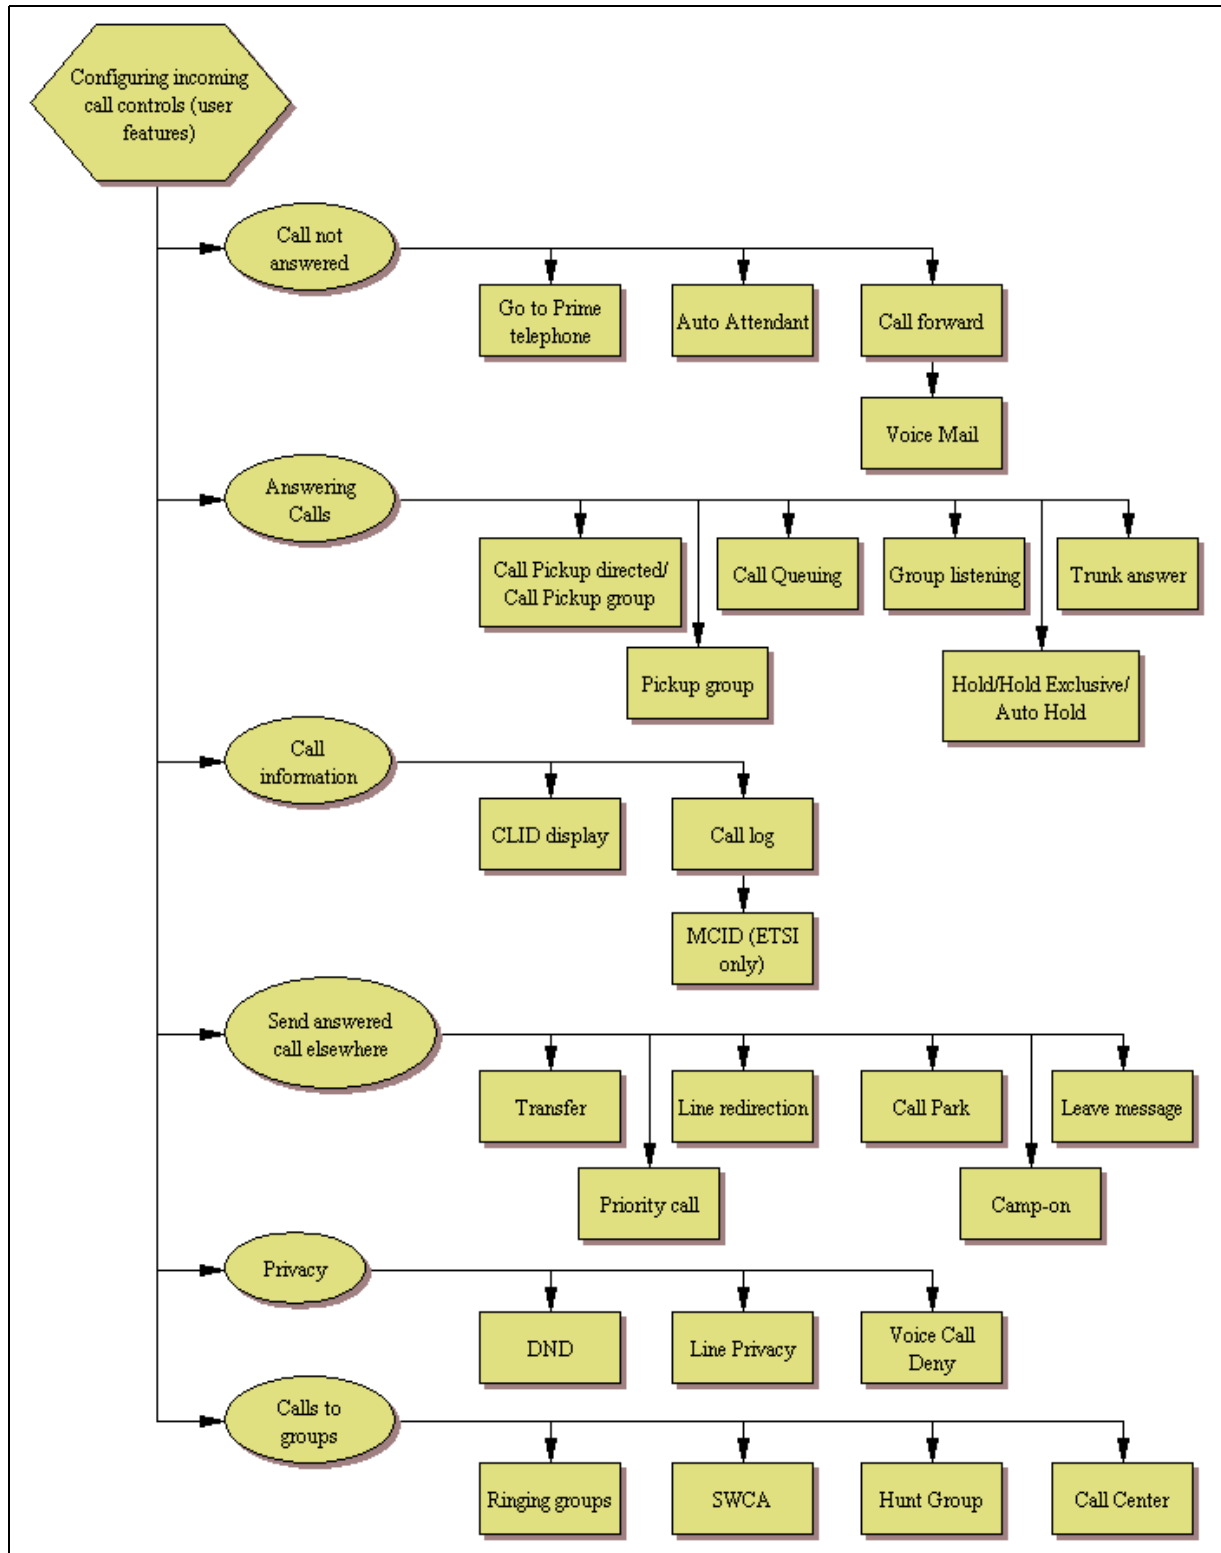

Outgoing calls

For outgoing calls, you can assign one or more intercom keys to directly link to a line pool or prime line, or allow line pool access codes, destination codes, or internal system numbers to direct the call. Telephones without intercom keys on the telephone have intercom keys assigned, but the user must pick up the handset to access calls. In this case, the intercom key is an assigned DN.

For calls within the system, all telephones are virtually linked within the system. To call another telephone inside the system, lift the handset and dial the local DN. In this case, the prime line has to be set to intercom or none.

For calls going outside the system:

- If you assign the prime line to a line pool, all the lines in that line pool must be assigned to the telephone. When you pick up the handset, the telephone automatically grabs the first available line from the assigned line pool. In this configuration, you must ensure that the outgoing number is allowed by the line pool.
- If you assign the prime line to an intercom button, when you press the intercom button you get system dial tone. Then, you enter a line pool access code or a destination code to direct the outgoing call to the appropriate line pool, where it exits the system on any available line in that pool.

Figure 17


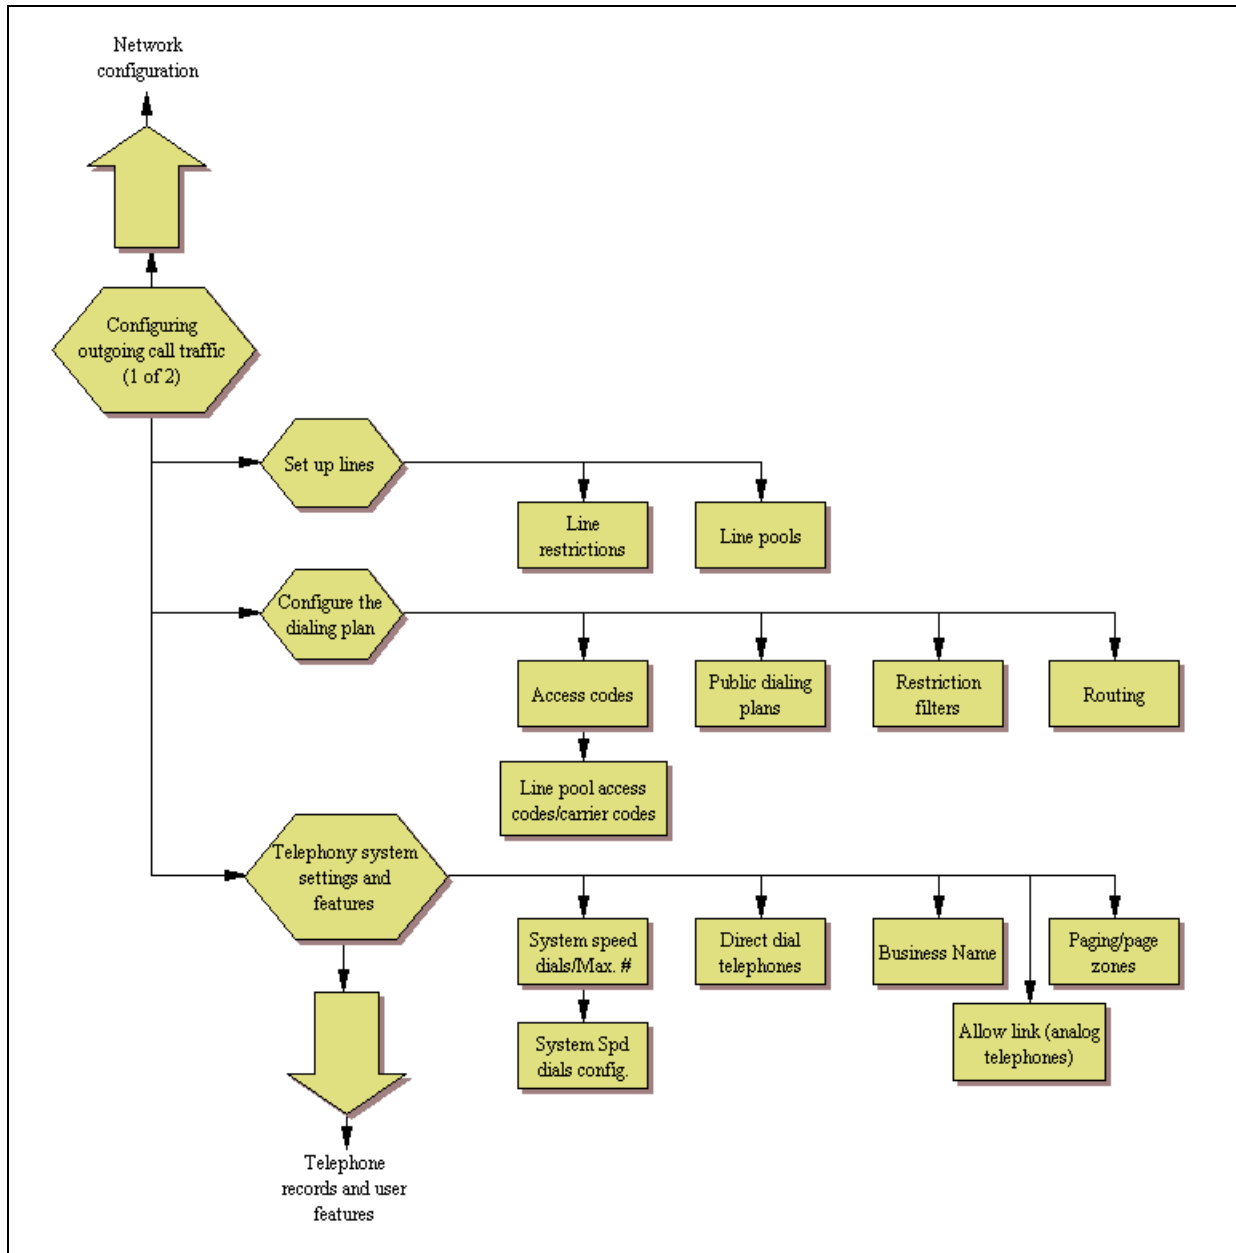


Figure 18

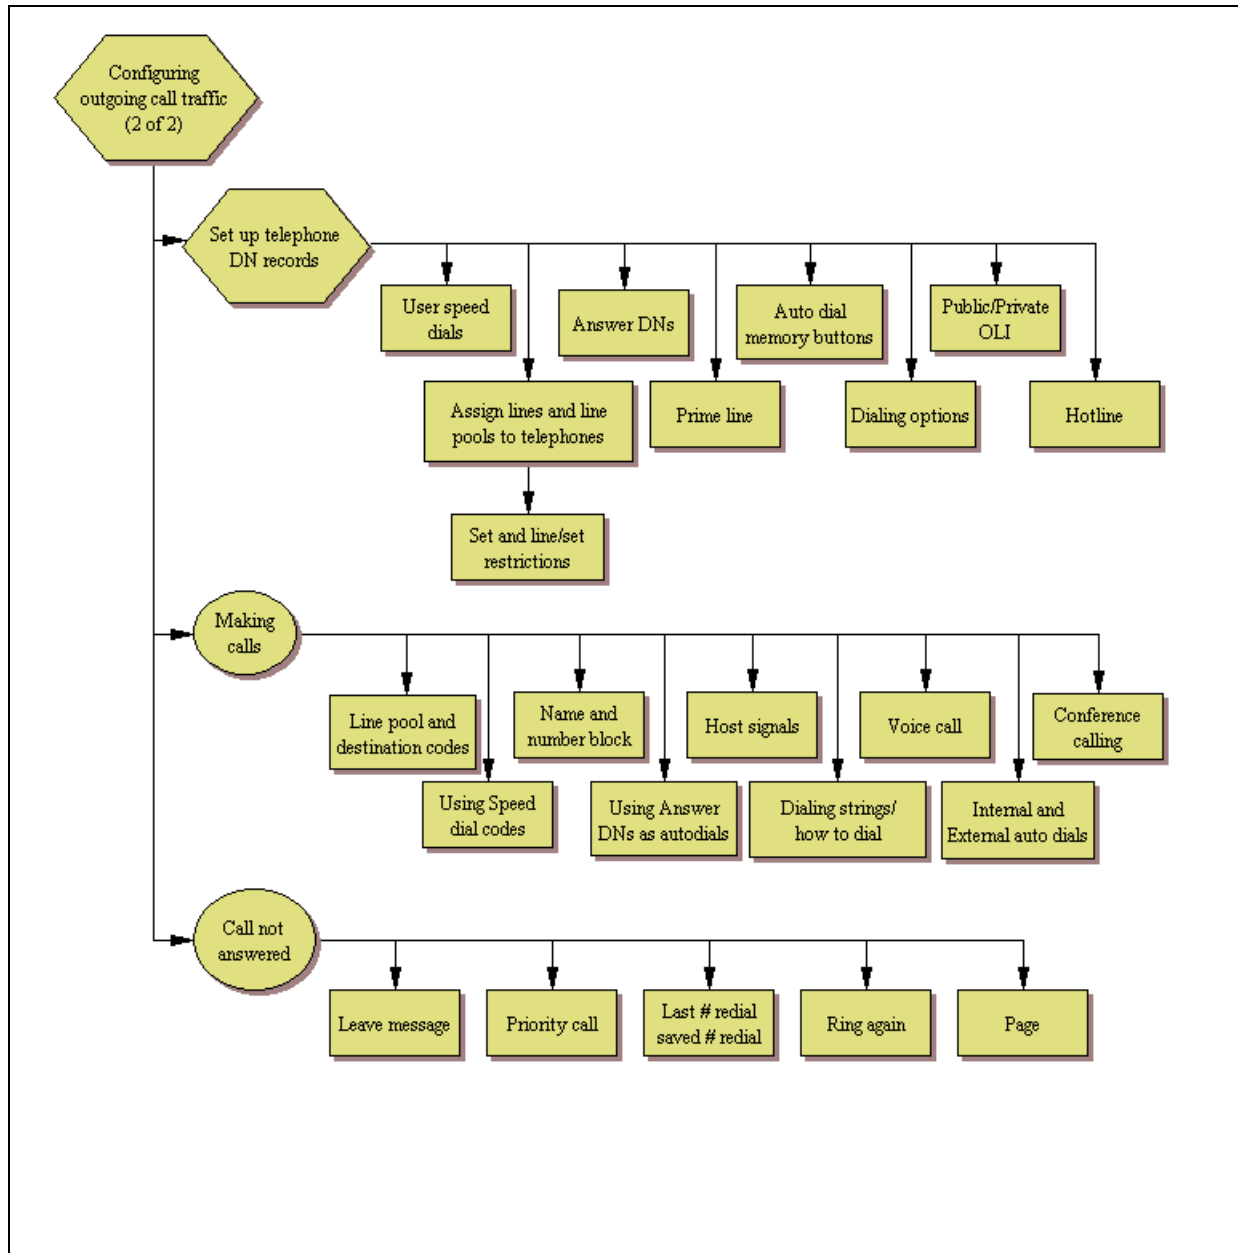

Chapter 4

Module configuration: Trunk modules

This section describes the Element Manager headings that define and control the settings for the trunk media bay modules installed on your system.

The following paths indicate where to access the trunk modules in Element Manager and through Telset Administration:

- Element Manager: Configuration>Resources>Telephony Resources
- Telset interface: **CONFIG>Hardware

For an overview of the Telephony Resources panel, refer to [“Configuring telephony resources” on page 79](#).

Task: To confirm settings for the trunk media bay modules installed in the system.


- Confirm that all prerequisites are complete. Refer to [“Configuring the trunk module parameters” on page 73](#).
- Confirm or set module parameters as follows:
 - If your module supports T1, PRI, or DASS2, refer to [“Call-by-Call Service Selection” on page 87](#) and [“Provisioning module lines/loops” on page 90](#).
 - For other types of trunk modules, configure each line record. Refer to [“Configuring lines” on page 117](#).
- Provision modules and confirm auto-entry information. Refer to [“Provisioning module lines/loops” on page 90](#).

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|--|--|
| System hardware is installed and operating correctly. | |
| All relevant central office/service provider information for the trunk type has been obtained. | |
| Keycodes have been activated for core module trunks. | |
| Expansion modules are installed and operating, and LEDs are correct. | |

Figure 19 Fitting the procedure into the overall picture

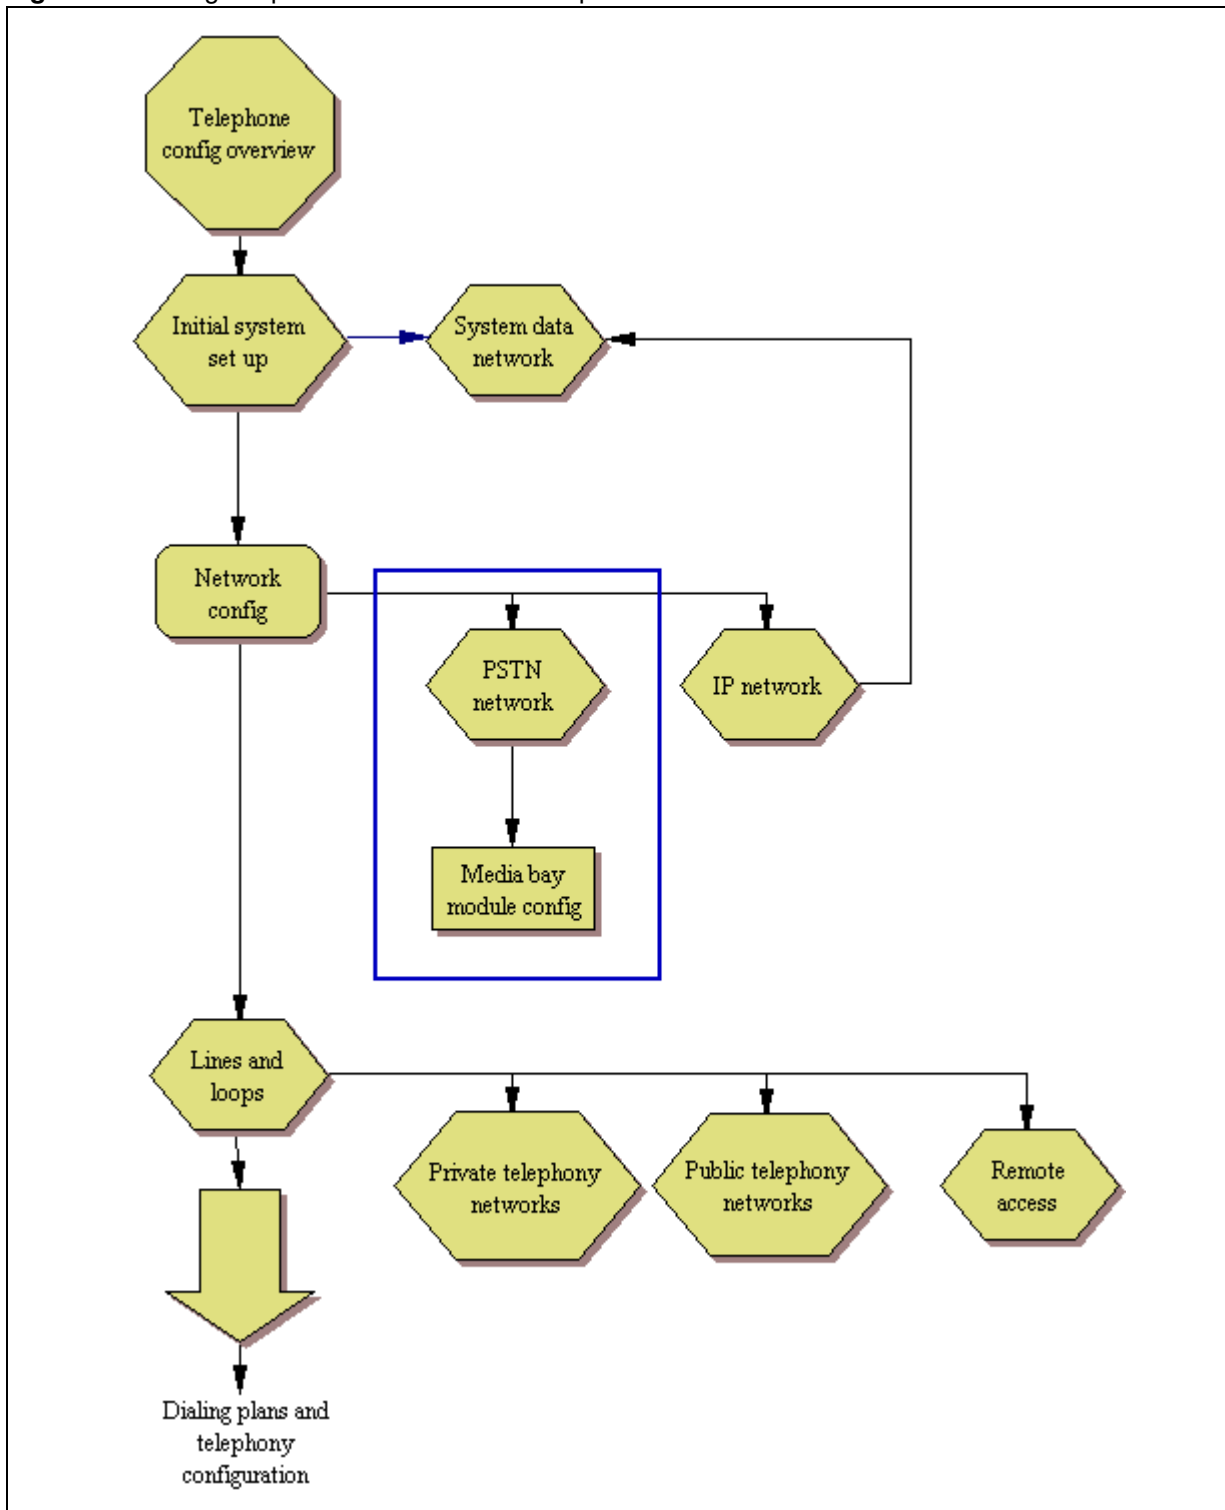

Configuring the trunk module parameters

Modules automatically configure to a free bus when they are connected to the system.

- That bus determines what line numbers are supported by the module.
- Module programming determines the type of line.
- Trunk configuration determines the line properties for the system.

To define the modules to the system

- 1 On the Modules panel, click the trunk module entry that you want to view.
- 2 On the Module Parameters tab panel, review the settings to ensure they support the type of line function provided from the Central Office (CO). For details of the configurable parameters for a trunk type, refer to [“Module parameters list” on page 73](#).
- 3 If your module supports T1, PRI, or DASS2, refer to [“Call-by-Call Service Selection” on page 87](#) and [“Provisioning module lines/loops” on page 90](#).

If your module supports other types of trunks, configure each line record. Refer to [“Configuring lines” on page 117](#).

Module parameters list

The following sections contain information about the module parameters that are specific to a module type.

Refer to [“Trunk Module Parameters” on page 82](#) for detailed field descriptions.

Configuring digital and analog loop module parameters

- Module mode: Choose the correct mode for the type of line being supported (DS/CLID, Global, Legacy).
- Disconnect Timer: Enter the time delay for disconnect supervision for lines supplying supervised external lines. This setting must match the CO setting.

Configuring DTM-T1/E1 module parameters

- Clock Source: Determine how the module functions for timing on the network (Primary External, Secondary External, Internal).



Warning: Changing the clock source may disconnect calls.

If you change the clock source for your system, you may cause your system DTM interface(s) to reset, resulting in dropped calls. Choose a suitable time to change the clock source and use the Page feature to inform users of possible service disruptions.

- CO fail: Use the carrier failure standard used by the service provider (TIA-5474, TR62411).
 - Interface levels: Choose the loss plan setting supported on the lines (ISDN, PSTN).
 - Framing: Choose the framing format supported by the service provider (ESF, SF).
 - Internal CSU: Turn the internal channel on or off.
-



Warning: Disable the module before changing the internal CSU setting.

- CSU line build (Internal CSU set to ON): Set the gain level of the transmitted signal (0, 7.5, 15 dB)
 - DSX1 build (Internal CSU set to OFF): Set the distance between the system hardware and the external channel service unit (000-100, 100-200, 200-300, 300-400, 400-500, 500-600, or 600-700 feet)
 - Line coding: Select the encoding signal used by the service provider (B8ZS, AMI)
 - CRC4 (E1 lines only): Set the parameter to match the setting at the other end of the line.
-

Configuring DTM-PRI module parameters

- Answer timer: Set the minimum period of the answer signal before a call is considered answered.
 - Protocol: Set to the protocol used by the CO.
-



Warning: Always confirm the line protocol with the head office. Failure to set the correct protocol could result in erratic service or service failure on the lines.

PRI-T1 supports: NI (NI-1/NI-2), DMS100, DMS250, AT&T4ESS, SL-1

PRI-E1 supports: ETSI QSIG, Euro, SL-1



Note: SL-1 and ETSI QSIG require an MCDN keycode.

- Protocol type (for SL-1): Select the setting that applies to the way in which the system is viewed by the network. Default is User (the CO or another network node controls the network).
If you want this system to control the network protocol, select Network.
- NSF Extension: None (DMS100/250 switches); WATS (Siemens, ESWD, Lucent 5ESS switches); ALL (GTD5 and DMS10 switches). B-channel selection sequence: choose how B-channel resources are selected for call processing.
- Clock Source: Determine how the module functions for timing on the network (Primary External, Secondary External, Internal)



Warning: Changing the clock source may disconnect calls.

If you change the clock source for your system, you may cause your system DTM interface(s) to reset, resulting in dropped calls. Choose a suitable time to change the clock source and use the Page feature to inform users of possible service disruptions.

- Send Name Display: select check box to activate outgoing name display (OLI).
- Remote Capability MWI (SL-1): Select the check box only if connecting to a Meridian 1 with the appropriate MWI package and RCAP set to MWI.
- Max transits (SL-1): Default: 31. Set the number of times a call will be transferred within the private network before being dropped.
- CO fail: Use the carrier failure standard used by the service provider (TIA-5474, TR62411)
- Interface levels: Choose the loss plan setting supported on the lines (ISDN, PSTN)
- Framing: Choose the framing format supported by the service provider (ESF, SF)
- DSX1 build (Internal CSU set to OFF): Set the distance between the system hardware and the external channel service unit (000-100, 100-200, 200-300, 300-400, 400-500, 500-600, or 600-700 feet)

Configuring BRI Loop module parameters

- Clock Source: Determine how the module functions for timing on the network (Primary External, Secondary External, Internal)



Warning: Changing the clock source may disconnect calls.

If you change the clock source for your system, you may cause your system DTM interface(s) to reset, resulting in dropped calls. Choose a suitable time to change the clock source and use the Page feature to inform users of possible service disruptions.

- Send Name Display (BRI-QSIG): select check box to activate outgoing name display (OLI).
-

Configuring DASS2 module parameters

- Clock Source: Determine how the module functions for timing on the network (Primary External, Secondary External, Internal)



Warning: Changing the clock source may disconnect calls.

If you change the clock source for your system, you may cause your system DTM interface(s) to reset, resulting in dropped calls. Choose a suitable time to change the clock source and use the Page feature to inform users of possible service disruptions.

Configuring European DTM/DPNSS line parameters

- Host node: Choose the type of switch the lines connect to, to ensure correct call forwarding (M1, Embark, IDPX, DSM).

Chapter 5

Managing modules

When you need to find out information about a module, you can determine the status of any of the settings under the media bay module headings. To correct a problem, or change a module setting, you may need to enable or disable a bus/module or select ports on the module. This section provides the procedures that describe:

- [“Disabling/enabling a bus/module” on page 77](#)
- [“Disabling or enabling a port channel setting” on page 77](#)
- [“Trunk module metrics” on page 78](#)

Disabling/enabling a bus/module

The following procedure describes the process for enabling or disabling a bus. This means that if there is more than one module assigned to the DS30 bus, all modules will be disabled.

To enable or disable a bus

- 1 On the Configuration>Resources>Telephony Resources>Modules panel, click the module you wish to enable/disable.
- 2 Click either the **Enable** or **Disable** button.
The system prompts you to confirm your request.
- 3 Click **OK**.

Disabling or enabling a port channel setting

If you need to isolate a problem or block access from the module, you may need to turn off individual port channels, rather than the entire module.

To turn a port channel on or off

- 1 On the Configuration>Resources>Telephony Resources>Modules panel, click the module supporting the port you want to enable/disable.
- 2 Select the port you want to enable/disable in the Set Port Details tab.
- 3 Click either the **Enable** or **Disable** button.
The **State** field indicates the mode of operation for the port, as shown in [Figure 20](#). If the port is enabled, this field shows unequipped unless a device is physically connected.

Figure 20 Set Port Details

Details for Module: Internal

Set Port Details

Ports on Module

| Port | DN | Device type | Version | State |
|------|-----|-------------|---------|------------|
| 0401 | 221 | Unequipped | | Unequipped |
| 0402 | 222 | Unequipped | | Unequipped |
| 0403 | 223 | Unequipped | | Unequipped |
| 0404 | 224 | Unequipped | | Unequipped |
| 0405 | 225 | Unequipped | | Unequipped |
| 0406 | 226 | Unequipped | | Unequipped |
| 0407 | 227 | Unequipped | | Unequipped |
| 0408 | 228 | Unequipped | | Unequipped |
| 0409 | 229 | Unequipped | | Unequipped |
| 0410 | 230 | Unequipped | | Unequipped |

Enable Disable



Note: A trunk media bay module has no changeable settings on the Trunk Port Details record.

Trunk module metrics

To view the current status of the module trunks, you can use the Telephony Metrics – Trunk Modules Metrics panel. Refer to the *BCM50 Administration Guide* (N0016868) for more information on telephony metrics.

Chapter 6

Configuring telephony resources

The Telephony Resources panel allows you to view and configure the information for the modules that support the digital/analog/ISDN lines for the system and the gateways that support the Voice over IP (VoIP) trunks. This provides a cohesive view of your telephony communications channels for the system.

The following paths indicate where to configure telephony resources in Element Manager and through Telset Administration:

- Element Manager: Configuration>Resources>Telephony Resources
- Telset interface: **CONFIG>Hardware (does not allow you to configure VoIP trunks or IP telephones)

The following table provides links to descriptions of each subpanel.

| Panels | Tasks |
|--|--|
| "Telephony Resources table" on page 80 | |
| "Media bay module panels" on page 82 | "Managing modules" on page 77 |
| "Trunk Module Parameters" on page 82 | "Configuring the trunk module parameters" on page 73 |
| "Port details" on page 88 | |
| "Call-by-Call Service Selection" on page 87 | "Private networking: PRI Call-by-Call services" on page 331 |
| Also refer to: | "Dialing plan: Private network settings" on page 269 |
| | "Call security: Remote access packages" on page 427 |
| "Provisioning module lines/loops" on page 90 | |
| "IP telephones" on page 91 | |
| "IP Terminal Global Settings" on page 91 | Registering Nortel 20XX IP telephones in the <i>BCM50 IP Telephone Installation and Configuration Guide</i> (N0027269) |
| "IP telephone set details" on page 93 | |
| "Voice over IP trunks" on page 94 | |
| "Local Gateway" on page 94 | "Configuring VoIP trunk gateways" on page 369 |
| | "VoIP interoperability: Gatekeeper configuration" on page 377 |
| "Media Parameters" on page 98 | "Setting up VoIP trunks for fallback" on page 383 |
| "Remote Gateways" on page 102 | |

Next steps:

Click the navigation tree heading to access general information about user management.

The top frame of this panel displays a table showing each type of module and the VoIP trunks that are assigned to the system, either through connections to a media bay module or by applying the required keycodes (VoIP trunks).

Selecting a table listing provides access to the special settings for each type of resource in tabbed panels that appear in the lower window.

Telephony Resources table

The top-level panel shows a list of active modules and VoIP gateways and IP telephone IP network information.

Click the line for the resource you want to view or configure.

Figure 21 Telephony Resources table

| Telephony Resources | | | | | | | | |
|---------------------|-----------------------|-----|-------------|---------|-----|------|-------|------|
| Modules | | | | | | | | |
| Location | Module type | Bus | State | Devices | Low | High | Total | Busy |
| Internal | IP & Application Sets | 1 | N/A | Sets | N/A | N/A | 11 | 0 |
| Internal | IP Trunks | N/A | N/A | Lines | 1 | 12 | 12 | 0 |
| Internal | Trunks | 3 | Enabling... | Lines | 61 | 64 | 4 | 0 |
| Internal | Sets | 4 | Enabled | Sets | N/A | N/A | 2 | 0 |
| Expansion 1 | DSM16 | 5 | Disabled | Sets | N/A | N/A | 0 | 0 |
| Expansion 2 | Empty | 7 | N/A | N/A | N/A | N/A | N/A | N/A |

The Telephony Resources table fields are described in [Table 8](#).

Table 8 Telephony Resources table fields (Sheet 1 of 2)

| Attribute | Value | Description |
|-------------|---|---|
| Location | <read-only> | |
| Module type | <read-only> ASM/ASM+ GATM4 DSM16 DSM32/ DSM32+ 4X16 Combo DTM-T1 DTM-PRI CTM4/ GATM4 CTM8/ GATM8 BRIM Empty | This field indicates the type of module assigned to each location. ASM/GASM: Analog and Global Analog Station Modules provide four connections for four analog telephones. GATM8: Global Analog Trunk Module with four trunk line connections. DSM16 or DSM32/DSM32+: Digital Station Module with 16 and 32 telephone connections, respectively. 4X16 Combo: A module with a four-trunk analog board and a 16-port digital station module. BRI-ST DTM-T1 DTM-PRI Empty: No module is currently connected. |
| Bus | <read-only> 1-XX | This number indicates the virtual bus to which the module is assigned. For trunk modules, this position determines the default line numbers available to the trunks attached to the module. For station modules, this position determines the DN range that will automatically be assigned to telephones plugged into the module. |
| State | Enabled Disabled Unequipped | Indicates the state of the module or bus: Enabled: module is installed and working Disabled: module is installed but has been disabled or is down for another reason Unequipped: there is no module installed on this bus |
| Devices | Set Lines | Lists the type of device configured on the bus. |
| Low | <digits> | This field indicates the lowest setting for one of the following: The range of lines the module/VoIP supports The range of loops the module supports (BRI) The range of DNs the module/IP telephony supports. |
| High | <digits> | This field indicates the highest setting for one of the following: The range of lines the module/VoIP supports The range of loops the module supports (BRI) The range of DNs the module/IP telephony supports. |
| Total | <XX> Lines, loops or Sets | This field indicates the total number of lines, loops or DNs that the module supports. |

Table 8 Telephony Resources table fields (Sheet 2 of 2)

| Attribute | Value | Description |
|-----------|-------|--|
| Busy | 1-X | This field indicates the current activity for the devices or lines attached to the module. |

Media bay module panels

The panel tabs described in this section appear when a module table entry is selected on the Telephony Resources panel.

Note that the four trunks connected to the core module are also indicated in the table when they are active. These trunks are analog trunks.

This section contains the following panel descriptions:

- [“Trunk Module Parameters” on page 82](#)
- [“Port details” on page 88](#)

Trunk Module Parameters

The Trunk Module Parameters tab shows the information that is unique to the type of trunk module selected in the main Modules list.

Figure 22 Trunk Module Parameters subpanel

Details for Module: Expansion 2.1

Trunk Module Parameters | Provision Lines

Trunk type: T1

Answer timer: 2

Disconnect timer: 460

Clock source: Primary external

T1 Parameters

CO fail: TIA-547A

Interface levels: ISDN

Framing: ESF

Line coding: B8ZS

Internal CSU:

CSU line build: 0 dB

Table 9 describes the possible fields, trunk module parameters, and an indication of which types of modules use each setting.

Table 9 Module parameters values (Sheet 1 of 4)

| Attribute | Value | Module/line type |
|---------------|--|-------------------|
| Trunk type | | All trunks |
| | Indicates the type of trunks. This field is read-only for all modules except DTM modules. | |
| Trunk mode | DS/CLID, Global, Legacy | Loop |
| | <ul style="list-style-type: none"> DS/CLID: displays for old North American LS/DS or CLID analog trunk modules, the old analog MBM, or the GATM with North American DIP switch settings. Global: displays for the GATM MBM with no regional DIP switches set. Legacy: displays for all other (old) analog trunk modules | |
| Protocol | NI-2, DMS100, DMS250, AT&T4ESS, SL-1, Euro, ETSI Q.Sig | PRI |
| | <p>Choose the trunk protocol used by your service provider.</p> <p>The supported protocols are:</p> <p>PRI-T1: NI (NI-1 and NI-2), DMS100, DMS250, AT&T4ESS, SL-1</p> <p>PRI-E1: ETSI QSIG, Euro, SL-1</p> <p>Note: SL-1 and ETSI QSIG require an MCDN keycode to display.</p> <p>BRI: Protocol can also be selected on BRI T-loops under the Configuration>Resources>Telephony Resources.</p> <p>Note: Always check the line protocol with the central office.</p> | |
| NSF Extension | None, WATS, ALL | PRI |
| | <p>The Network Specific Facilities (NSF) information element is used to request a particular service from the network. Settings are based on the type of switch to which the line connects.</p> <p>Suggested settings:</p> <p>DMS100/250: NONE</p> <p>Siemens ESWD, Lucent 5ESS: WATS</p> <p>GTD5, DMS10: ALL</p> <p>When you select NONE, the NSF extension bit is not set for any service.</p> <p>When you select WATS, the NSF extension bit is set for unbanded OUTWATS calls.</p> <p>When you select ALL, the NSF extension is always set for all CbC services.</p> <p>Appears only for NI protocol.</p> | |
| Protocol type | User, Network | PRI |
| | <p>When you select SL-1 protocol, an additional setting, Protocol type, appears.</p> <p>SL-1 protocol is a private networking protocol. This allows you to designate a BCM50 node as a Network (controller). The default setting is User (client). In public network configurations, the CO is generally considered the Network side or controller.</p> <p>Applies to SL-1 protocol only.</p> | |

Table 9 Module parameters values (Sheet 2 of 4)

| Attribute | Value | Module/line type |
|------------------------------|---|-----------------------|
| B-channel selection sequence | Ascending Sequential Descending Sequential | PRI |
| | Defines how B-channel resources are selected for call processing. | |
| Answer timer | 1, 2, 3, 4, or 5 sec. | E&M PRI |
| | Set the minimum duration of an answer signal before a call is considered to be answered. | |
| Disconnect timer | 60, 100, 260, 460, or 600 milliseconds | Loop T1 |
| | Specify the duration of an Open Switch Interval (OSI) before a call on a supervised external line is considered disconnected. This setting must match the setting for the line at the central office (CO). You must enable disconnect supervision by changing the Line Trunk mode attribute. Under the Telephony Services sub-heading, choose Lines and Line/trunk Data. | |
| Clock Source | Primary External Secondary External Internal | T1 PRI *BRI S/T DASS2 |
| | Designates whether the DTM/BRI acts as a primary or secondary timing component for an external timing source or as the internal timing source. Note: A BRI module can be programmed with primary/secondary clock source, however, it is recommended that a BRI module always be set to Internal if a DTM exists on the system to be the Primary External clock source. Warning: Changing the clock source may disconnect calls. If you change the clock source for your system, you may cause your system DTM interface(s) to reset, resulting in dropped calls. Choose a suitable time to change the clock source and use the Page feature to inform users of possible service disruptions. | |
| Send Name Display | Select or clear | PRI *BRI QSIG |
| | When you select this check box, the system sends a specified outgoing name display (OLI) from the calling telephone. Appears only for Protocols: SL-1, NI, DMS100, DMS250, or PRI QSIG. | |
| Remote Capability MWI | Select or clear | PRI |
| | This setting allows you to indicate MWI compatibility on the specific loop(s) that you are using to connect to the central voicemail system on a Meridian 1 which has the MWI package installed, with the RCAP setting set to MWI. Appears only for SL-1 protocol. | |
| Overlap receiving | | BRI |
| | Supports target lines in markets which use Overlap receiving signalling on the BRI trunks. Overlap receiving must be configured for each BRI loop. After every digit is received at the ISDN layer, Target Lines are checked for matches. If a full match is made, the call is routed immediately to the target line without waiting for additional digits. | |

Table 9 Module parameters values (Sheet 3 of 4)

| Attribute | Value | Module/line type |
|---------------------|--|------------------|
| Local Number Length | | BRI |
| | When Overlap receiving is enabled on the trunks, this number determines how many incoming digits need to match the target line numbers to be considered a call for that target line. | |
| Host node | M1, Embark, IDPX, DSM | DPNSS |
| | DPNSS cards connected to Embark switches have a different way of handling call diversion, therefore, when you provision a DTM for DPNSS, you must indicate what type of switch the lines are connected to. When you select the Embark switch, calls are diverted using the Call Forwarding feature instead of call diversion. | |
| Local Number Length | | DPNSS |
| | This number allows the system to determine how many digits to read on an incoming call to determine that the call is meant for this system. | |
| Maximum Transits | Default: 31 | PRI |
| | Indicate the maximum number of times that a call will be transferred within the SL-1 network before the call is dropped. Protocol must be set to SL-1 to display this field. | |
| T1 parameters | | |
| CO fail | | T1 PRI |
| | Specify a carrier failure standard (T1A-5474, TR62411) | |
| Interface levels | ISDN, PSTN | T1 PRI |
| | Define a loss plan setting. For more information, see “Interface levels” on page 86 . | |
| Framing | ESF, SF | T1 PRI |
| | Select the framing format used by your T1 or PRI service provider: Extended Superframe (ESF) or Superframe (SF). Contact your T1 or PRI service provider for the proper setting. (SF or Superframe is sometimes known as D4.) | |
| Line coding | B8ZS, AMI | T1 PRI |
| | Define the encoding signals on a T1 line. Select the standard used by your T1 service provider. Contact your T1 service provider for the proper setting. | |
| Internal CSU | <check box> | T1 PRI |
| | Turn the internal T1 channel service unit (CSU) on or off. For more information, see “Internal CSU” on page 86 . | |
| CSU line build | 0, 7.5, or 15 dB | T1 PRI |
| | Set the gain level of the transmitted signal. This setting appears only when the Internal CSU is Enabled. | |

Table 9 Module parameters values (Sheet 4 of 4)

| Attribute | Value | Module/line type |
|------------|--|------------------|
| DSX1 build | 000-100, 100-200, 200-300, 300-400, 400-500, 500-600, or 600-700 feet | T1 PRI |
| | Set the distance between BCM50 and an external channel service unit. This setting only appears when the Internal CSU is Disabled. Contact your service provider for the proper settings. | |
| CRC4 | <check box> | E1 PRI |
| | Ensure this is enabled or disabled to match the service provider Cyclic Redundancy Check (CRC4) setting for the trunk. | |

Station modules do not have any configurable module parameters.

Interface levels

The default Interface levels are the ISDN loss plan settings. Also refer to [“ISDN overview” on page 511](#).

Check with your telecommunications service provider to determine if your BCM50 system is connected to a central office (CO) with digital network loss treatment (ISDN I/F levels) or analog network loss treatment (PSTN I/F levels).

The ISDN setting requires digital access lines (DAL) that have digital network loss treatment. On a DAL network, the PBX system administers the dB loss, not the CO. DALs may have ISDN signaling or digital signaling (for example, T1). The loss plan follows the Draft TIA-464-C loss plan, which uses a send loudness rating (SLR) of 8 dB. You must contact your service provider to get DAL network loss treatment on a line with digital signaling.

The PSTN setting requires analog access lines (AAL) that have analog network loss treatment and digital signaling. On an AAL(D) network, the CO administers the dB loss.

The loss plan follows the Draft TIA-464-C loss plan. The ISDN loss plan uses a send loudness rating (SLR) of 8 dB and a receive loudness rating (RLR) of 2 dB. The PSTN loss plan uses an SLR of 11 dB and an RLR of -3 dB. If you choose the wrong setting, the voice signal can be too loud or too soft.

Internal CSU

Internal CSU allows you to turn the internal T1 channel service unit on or off. The channel service unit gathers performance statistics for your T1 lines or PRI with public interface. Contact your service provider for the correct settings.

You can view the performance statistics for your T1 lines in Maintenance under the CSU stats heading. Before you set the internal CSU to off, you must ensure there is an external CSU connected to your T1 lines.

Call-by-Call Service Selection

This section provides information about how to configure the PRI Call-by-call Service Selection, which is region-specific to North America, for a DTM set to a PRI Module type.

By default, incoming calls on a PRI are routed based on the Called Party Number information within the call request. The last number of digits of the called party number that match the Received Number Length setting are used as Receive Digits to find a target line.

In North American PRI, the Call-by-Call services allows alternate routing maps to be defined in various ways, depending on the protocol defined for this PRI.

Figure 23 Call-by-Call Service Selection subpanel

| Service Type | Translation Mode | Translate All Calls To |
|--------------|------------------|------------------------|
| ROstr01 | First | Modifiable string 1 |
| ROstr02 | Second | Modifiable string 2 |
| ROstr03 | Third | Modifiable string 3 |
| ROstr04 | First | Modifiable string 4 |
| ROstr05 | Second | Modifiable string 5 |
| ROstr06 | Third | Modifiable string 6 |
| ROstr07 | First | Modifiable string 7 |

| From: | To: |
|---------|-------------------|
| RWstr01 | Modifiable string |
| RWstr02 | Modifiable string |
| RWstr03 | Modifiable string |

Table 10 describes the fields shown on the Call-by-Call Service Selection tab panel.

Table 10 Call-by-Call Service selection panel fields (Sheet 1 of 2)

| Attribute | Value | Description |
|------------------------|--|--|
| Service Type | Foreign Exchange Inwats (1-800) Intl-800 Digital (SDS) 900 | Refer to “CbC services available by switch protocol” on page 88. |
| Translation Mode | None All By SID By Number | Define how the incoming digits get mapped to line numbers (target lines or DISA/AUTO DNs) within the system. |
| Translate All Calls To | | Enter the appropriate information for the mode chosen. |

Table 10 Call-by-Call Service selection panel fields (Sheet 2 of 2)

| Attribute | Value | Description |
|----------------|-------|---|
| Actions | | |
| Add | | <ol style="list-style-type: none"> 1. On the Modules table, select the PRI module you want to configure. 2. Select the Service Type record to which you want to add Digit translations 3. Under the Translate table, click Add. 4. Enter the appropriate information in the From and To fields on the dialog box. 5. Click OK on the dialog to save the translation range. |
| Delete | | <ol style="list-style-type: none"> 1. On the Modules table, select the PRI module record you want to delete. 2. Select the Service Type record from which you want to delete Digit translations 3. On the Translate table, select one or more ranges to delete. 4. Click Delete. 5. Click OK on the confirmation dialog to delete the digit translation range. |

CbC services available by switch protocol

[Table 11](#) lists the applicable services for the protocol defined on the Module record.

Table 11 Services available for each PRI protocol

| Protocol | Services Available | | | | |
|----------|--------------------|------------------------|------------------|------------------------|---------------------------|
| | Foreign Exchg | Inwats (800) | Intl-800 | Switched Digital (SDS) | Nine Hundred (900) |
| NI | SID or All | By number or All | N/A | N/A | N/A |
| DMS-100 | SID or All | SID, By number, or All | N/A | N/A | N/A |
| DMS-250 | SID or All | SID, By number, or All | N/A | N/A | SID, or By number, or All |
| 4ESS | N/A | By number or All | By number or All | By number or All | By number or All |

Port details

Both trunk and analog modules show port details. Ports settings are directly related to the physical ports into which the PSTN lines or telephony devices connect on the media bay modules.

The station module Port Details panel is illustrated in [Figure 24](#). The trunk module Port Details panel is illustrated in [Figure 25](#).

Figure 24 Station module Port Details panel

Details for Module: Internal

Set Port Details

Ports on Module

| Port | DN | Device type | Version | State |
|------|-----|-------------|---------|------------|
| 0401 | 221 | M7324 | 06PAE07 | Idle |
| 0402 | 222 | Unequipped | | Unequipped |
| 0403 | 223 | Unequipped | | Unequipped |
| 0404 | 224 | Unequipped | | Unequipped |
| 0405 | 225 | T7316E | 06ChC30 | Idle |
| 0406 | 226 | Unequipped | | Unequipped |
| 0407 | 227 | Unequipped | | Unequipped |
| 0408 | 228 | Unequipped | | Unequipped |
| 0409 | 229 | Unequipped | | Unequipped |
| 0410 | 230 | Unequipped | | Unequipped |

Figure 25 Trunk module Port Details panel

Details for Module: Internal

Trunk Module Parameters Trunk Port Details

Ports on Module

| Port | Line | State | Version |
|------|------|-------|---------|
| 0301 | N/A | Idle | N/A |
| 0302 | N/A | Idle | N/A |
| 0303 | N/A | Idle | N/A |
| 0304 | N/A | Idle | N/A |

Table 12 describes the fields shown on the Port Values tab panel.

Table 12 Port Values tab (Sheet 1 of 2)

| Attribute | Value | Module type | | | | | | | | | | | | |
|---------------|---|---|---------------|-------------------|-------|--------|---------|-------|--|--|--|--|--|--|
| Port # | Read-only | All modules | | | | | | | | | | | | |
| | | <ul style="list-style-type: none"> These are the port numbers of the physical device. | | | | | | | | | | | | |
| Device type | Read-only | All modules | | | | | | | | | | | | |
| | | <ul style="list-style-type: none"> This is the type of module. | | | | | | | | | | | | |
| Line # | 00X-XXX | <table border="1"> <thead> <tr> <th>CTM/ GATM4</th> <th>CTM/ GATM 8</th> <th>Combo</th> <th>DTM-T1</th> <th>DTM-PRI</th> <th>BRI-T</th> </tr> </thead> <tbody> <tr> <td style="background-color: #cccccc;"></td> <td style="background-color: #cccccc;"></td> <td style="background-color: #cccccc;"></td> <td style="background-color: #cccccc;"></td> <td style="background-color: #cccccc;"></td> <td style="background-color: #cccccc;"></td> </tr> </tbody> </table> | CTM/ GATM4 | CTM/ GATM 8 | Combo | DTM-T1 | DTM-PRI | BRI-T | | | | | | |
| CTM/ GATM4 | CTM/ GATM 8 | Combo | DTM-T1 | DTM-PRI | BRI-T | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | The number of lines depends on the module type. | | | | | | | | | | | | | |

Table 12 Port Values tab (Sheet 2 of 2)

| Attribute | Value | Module type |
|---------------------|---|--|
| Call State or State | Idle Active Deprovisioned | All modules |
| | This field indicates whether a module line or DN is in use or even provisioned. | |
| Version | <read-only> | All modules |
| | This field indicates the version of firmware running on the module. | |
| DN | XXXX | ASM/ GASM DSM |
| | Each port supports one telephone, hence, one DN record. | |
| Addons | | All modules |
| | Indicates auxiliary items added to the telephony devices or trunks | |
| | Add-on | This is a list number. |
| | Type | This field indicates the type of add-on, such as a KIM module. |
| | Version | This field indicates the version of firmware running on the add-on device. |

Provisioning module lines/loops

There are three provisioning subpanels, which can be accessed in Element Manager at the path Element Manager: Configuration>. The tabbed provisioning panel that appears depends on the type of module that is selected on the Telephony Resources table.

The provisioning subpanels are as follows:

- The Provision Line tab panel is used for all trunks except DPNSS and BRI loops.
- The DPNSS module displays the Provision Virtual Channels tab panel.
- BRI loops require an extra step, so the Provision Loops tab panel appears when a BRI module is selected.

[Table 13](#) describes the fields on these panels.

Table 13 Provisioning panels (Sheet 1 of 2)

| Field | Value | Description |
|---------------------------------------|---------------|--|
| Provision Lines tab | | |
| Line | <line number> | This is a list of the lines assigned to the module. |
| Provisioned | <check box> | If the check box is selected beside a line, that line is available for call traffic. |
| Provision Virtual Channels tab | | |
| Virtual Channel | <read-only> | A virtual channel assigned to the DPNSS module. |
| Provisioned | <check box> | If the check box is selected beside a channel, that channel is available for call traffic. |

Table 13 Provisioning panels (Sheet 2 of 2)

| Field | Value | Description |
|----------------------------|---------------|---|
| Provision Loops tab | | |
| Loop | <loop-number> | These are the loop numbers assigned to the selected BRI module. Modules have four loops, but only loops designated as T-loops require provisioning. |
| Provisioned | <check box> | If the check box is selected beside a loop, that loop has lines that can be provisioned. |
| Line | <line number> | Each loop as two lines assigned. You can provision or deprovision these lines individually. |
| Provisioned | <check box> | If the check box is selected beside a line, that line is available for call traffic. |

IP telephones

The tabbed panels described in this section appear when an IP terminals entry is selected on the Telephony Resources table.

- [“IP Terminal Global Settings” on page 91](#)
- [“IP telephone set details” on page 93](#)

IP Terminal Global Settings

The parameters on the IP Terminal Global Settings subpanel affect all Nortel 20XX IP telephones. This is also the panel you use to allow these telephones to register to the system, and to turn off registration once you have registered all the telephones.

Figure 26 IP Terminal Global Settings subpanel

Details for Module: Internal

IP Terminal Global Settings | IP Terminal Details | Set Port Details

Enable registration Default codec Auto

Enable global registration password Default jitter buffer Auto

Global password ***** G.729 payload size (ms) 30

Auto-assign DNs G.723 payload size (ms) 30

Advertisement/Logo Nortel Networks G.711 payload size (ms) 30

Table 14 defines the fields on this panel and indicates the lines.

Table 14 IP terminal Global panel fields (Sheet 1 of 2)

| Field | Value | Description |
|-------------------------------------|---|---|
| Enable registration | <check box> | Set this value to ON to allow new IP clients to register with the system. Warning: Remember to set Registration to Off when you have finished registering the new telephones. |
| Enable global registration password | <check box> | If you want to require the installer to enter a password when IP telephones are configured and registered to the system, check this box. |
| Global password | <10 alphanumeric> Default: bcmi (2264) | If the Enable global registration password check box is selected, enter the password the installer will enter on the IP telephone to connect to the system. If this field is left blank, no password prompt occurs during registration. |
| Auto Assign DN | <check box> | If selected, the system assigns an available DN as an IP terminal requests registration. It does not prompt the installer to enter a set DN. Note: For this feature to work, Registration must be selected and Password must be blank. If not selected, the installer receives a prompt to enter the assigned DN during the programming session. Note: Refer to the Caution notice at the top of this section. |
| Advertisement/Logo | <alphanumeric string> | Any information in this field appears on the display of all IP telephones. For example, your company name or slogan. |
| Default Codec | Auto G.711-aLaw G.711-uLaw G.729 G723 G.729 + VAD G.723 + VAD | If the IP telephone has not been configured with a preferred codec, choose a specific codec that the IP telephone will use when it connects to the system. If you choose Auto , the IP telephone selects the codec. If you are unsure about applying a specific codec, ask your network administrator for guidance. |
| Default Jitter Buffer | None Auto Small Medium Large | Choose one of these settings to change the default jitter buffer size: NONE: Minimal latency, best for short-haul networks with good bandwidth. AUTO: The system will dynamically adjust the size. SMALL: The system will adjust the buffer size, depending on CODEC type and number of frames per packet to introduce a 60-millisecond delay. MEDIUM: 120-millisecond delay LARGE: 180-millisecond delay |


Table 14 IP terminal Global panel fields (Sheet 2 of 2)

| Field | Value | Description |
|-------------------------|---------------------------------------|---|
| G.729 Payload Size (ms) | 10, 20, 30, 40, 50, 60 Default: 30 | Set the maximum required payload size, per codec, for the IP telephone calls sent over H.323 trunks. Note: Payload size can also be set for Nortel IP trunks. Refer to “Configuring VoIP trunk media parameters” on page 370. |
| G.723 Payload Size (ms) | 30 | |
| G.711 Payload Size (ms) | 10, 20, 30, 40, 50, 60 Default: 20 | |

IP telephone set details

Once a Nortel 20XX IP telephone registers with the system, this panel displays the terminal parameters.

The telephone is identified to the system by its IP address, so this cannot be changed. If you need to change the IP address of a telephone, you need to deregister the telephone and then register it again with the new IP address.

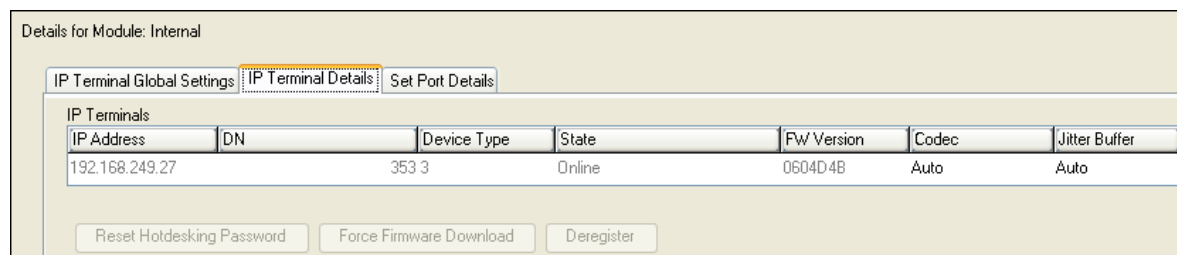Figure 27 IP Terminal Details (Telephony Resources) subpanel

[Table 15](#) describes the fields on this panel.

Table 15 IP terminal fields (Sheet 1 of 2)

| Field | Value | Description |
|-------------|-------------|---|
| IP Address | <read-only> | If the telephone is using DHCP or partial DHCP, this may vary. |
| DN | <DN> | This is the DN record that defines the system parameters for the telephone. |
| Device Type | <read-only> | This is the type of IP telephone. |
| State | | |
| FW Version | <read-only> | Current version of telephone software. |

Table 15 IP terminal fields (Sheet 2 of 2)

| Field | Value | Description |
|---------------------------|--|--|
| Codec | Default G.711-aLaw G.711-uLaw G.711 with VAD G.729 G.729 with VAD G.723 | Specifying a non-default Codec for a telephone allows you to override the general setting. You might, for example, want to specify a low bandwidth Codec (G.729) for a telephone that is on a remote or busy sub-net. Note: You can only change the codec on a configured IP telephone if it is online to the system, or if Keep DN Alive is enabled for an offline telephone. |
| Jitter Buffer | Auto Default None Small Medium Large | Increase the jitter buffer size for any telephone that has poor network connectivity to the system. Note: You can only change the jitter buffer on a configured IP telephone if it is online to the system, or if Keep DN Alive is enabled for an offline telephone. |
| Actions | | |
| Reset Hotdesking password | This button allows you to reset the hotdesking password for a telephone. Refer to the <i>BCM50 Device Configuration Guide</i> (N0027146). | |
| Force firmware download | This button downloads the firmware from the system to the selected telephone. Refer to the <i>BCM50 Device Configuration Guide</i> (N0027146). | |
| Deregister | This button allows you to deregister the selected telephone. Refer to the <i>BCM50 Device Configuration Guide</i> (N0027146). | |

Voice over IP trunks

The tabbed panels described in this section appear when a VoIP trunk entry is selected on the Telephony Resources panel. Refer to the sections below for a description of each tabbed panel and their fields.

- [“Local Gateway” on page 94](#)
- [“Media Parameters” on page 98](#)
- [“Remote Gateways” on page 102](#)

Local Gateway

The Local Gateway settings define how your system is set up to receive VoIP trunk traffic. These settings are universal for all VoIP trunks on the system.

Figure 28 Local Gateway subpanel

Table 16 describes the fields on this panel.

Table 16 Local Gateway IP interface fields (Sheet 1 of 4)

| Field | Value | Description |
|---|---|---|
| Telephony Settings | | |
| Fallback to Circuit-Switched | Enabled-All Enabled-TDM-only Disabled | Your choice determines how the system will handle calls if the IP network cannot be used. <ul style="list-style-type: none"> Enabled-All: All calls will be rerouted over specified PSTN trunks lines. Enabled-TDM-only: All TDM (digital telephones) voice calls will be rerouted over specified PSTN trunks lines. Disabled: Calls will not be rerouted. |
| <p>Note: Enabled-TDM-only enables fallback for calls originating on digital telephones. This is useful if your IP telephones are connected remotely, on the public side of the BCM50 network, because PSTN fallback is unlikely to result in better quality of service in that scenario.</p> | | |

Table 16 Local Gateway IP interface fields (Sheet 2 of 4)

| Field | Value | Description |
|------------------------|---|--|
| Forward redirected OLI | <check box> | If the check box is selected, the OLI of an internal telephone is forwarded over the VoIP trunk when a call is transferred to an external number over the private VoIP network. If the check box is cleared, only the CLID of the transferred call is forwarded. |
| Send name display | <check box> | When selected, the telephone name is sent with outgoing calls to the network. |
| Remote capability MWI | <check box> | This setting must coordinate with the functionality of the remote system hosting the remote voicemail. |
| H.323 Settings | | |
| *Call Signaling | Direct GateKeeperRouted GateKeeperResolved GatekeeperRoutesNoRAS | Direct: call signaling information is passed directly between endpoints. The remote gateway table in the Element Manager defines a destination code (digits) for each remote system to direct the calls for that system to route. In each system, the Nortel IP Terminals and H.323 Terminals records map IP addresses to specific telephones. GatekeeperResolved: all call signaling occurs directly between H.323 endpoints. This means that the gatekeeper resolves the phone numbers into IP addresses, but the gatekeeper is not involved in call signaling. GatekeeperRouted: uses a gatekeeper for call setup and control. In this method, call signaling is directed through the gatekeeper. GatekeeperRoutedNoRAS: Use this setting for a NetCentrex gatekeeper. With this setting, the system routes all calls through the gatekeeper but does not use any of the gatekeeper Registration and Admission Services (RAS). |
| Call Signaling Port | 0-65535 | Default: 1720 This field allows you to set non-standard call signaling port for VoIP applications that require special ports. 0 = The first available port is used. Ensure that you do not select a port that has been assigned elsewhere in the BCM50. To ensure the port is not in use, run netstat-a from the command line. |
| RAS Port | 0-65535 | Default: 0 This field allows you to set a non-standard Registration and Admission (RAS) port for VoIP applications that require special ports. 0 = The first available port is used. Ensure that you do not select a port that has been assigned elsewhere in the BCM50. To ensure the port is not in use, run netstat-a from the command line. |

Table 16 Local Gateway IP interface fields (Sheet 3 of 4)

| Field | Value | Description |
|---|---|---|
| Enable H245 Tunneling | <check box> | Default: Disabled. If Enabled, the VoIP Gateway tunnels H.245 messages within H.225. The VoIP Gateway service must be restarted for a change to take effect. |
| Gatekeeper Support | | |
| Configuration note: | Refer to “Using CSE 1000 as a gatekeeper” in the <i>BCM50 Device Configuration Guide</i> (N0027146) for specific information about configuring the gatekeeper for H.323 trunks. Network note: If your private network contains a Meridian 1-IPT, you cannot use Radvision for a gatekeeper. | |
| Primary Gatekeeper IP | <IP address> | If GateKeeperRouted, GateKeeperResolved or GateKeeperRoutedNoRAS are selected under Call Signaling, type the IP address of the machine that is running the gatekeeper. |
| Gateway Protocol | None SL-1 CSE | Both these protocols require a keycode. SL-1: use this protocol only for BCM 2.5 systems CSE: Use this protocol for BCM 3.0 and newer systems. This protocol supports Meridian 1 IPT. Otherwise, use None. |
| Backup gatekeeper(s) | <IP address>, <IP address> | NetCentrex gatekeeper does not support RAS, therefore, any backup gatekeepers must be entered in this field. Note: Gatekeepers that use RAS can provide a list of backup gatekeepers for the end point to use in the event of the primary gatekeeper failure. |
| Registration TTL | Default: 60 seconds | This TimeToLive parameter specifies the intervals when the VoIP gateway sends KeepAlive signals to the gatekeeper. The gatekeeper can override this timer and send its own TimeToLive period. |
| Alias Names table | | |
| If GateKeeperRouted, GateKeeperResolved, or GatekeeperRoutedNoRAS are selected under Call Signaling, enter one or more alias names for the gateway. | | |
| Alias Names | Alias names are comma delimited, and may be one of the following types: E.164 — numeric identifier containing a digit in the range 0-9. Identified by the keyword TEL: Example: the BCM50 is assigned an E.164 and an H323 Identifier: Alias Names: TEL:76, NAME:bcm10.nortel.com <ul style="list-style-type: none"> NPI-TON — also referred to as a PartyNumber alias. Similar to E164 except that the keyword indicates the NPI (numbering plan identification), as well as the TON (type of number). Identified by one of the following keywords: PUB (Public Unknown Number); PRI (Private Unknown Number); UDP (Private Level 1 Regional Number (UDP)); CDP (Private Local Number (CDP)). Refer to “Notes about NPI-TON aliases for H.323 trunks” on page 98. | |

Table 16 Local Gateway IP interface fields (Sheet 4 of 4)

| Field | Value | Description |
|-------|--|-------------|
| | <ul style="list-style-type: none"> H.323Identifier — alphanumeric strings representing names, e-mail addresses, etc. Identified by the keyword <code>NAME</code>: Example: The BCM50 is assigned a public dialed number prefix of 76, a private CDP number of 45, and an H323 Identifier alias: <code>Alias Names: PUB:76, CDP:45, NAME:bcm10.nortel.com</code> H.225 (Q.931) CallingPartyNumber (NetCentrex gatekeeper) — The NetCentrex gatekeeper uses the H.225(Q.931) CallingPartyNumber to resolve the call originator for billing purposes. This number must then contain a unique prefix, or location code that is unique across all endpoints that are using the NetCentrex gatekeeper. Identified by the keyword <code>src</code>:. Example for private networks: CDP alias = <code>src:<DN></code>; UDP alias = <code>src:<LOC><DN></code>. Example for public network: <code>src:<public OLI></code> <p>Note: E164 or NPI-TON alias types are commonly used since they fit into dialing plans. A BCM50 alias list should not mix these types. Also, the type of alias used should be consistent with the dialing plan configuration. Use the same alias naming method on all BCM50s within a network.</p> | |

Notes about NPI-TON aliases for H.323 trunks

NPI-TON aliases store dialed number prefixes as well as information about the type of number. A dialed number can be qualified according to its TON (type of Number), as well as its NPI (numbering plan identification). Nortel recommends this format over the E.164 format, for encoding dialed numbers and aliases registered with a gatekeeper.

When using a gatekeeper, and attempting to place an outgoing VoIP trunk call, ensure that the route and dialing plan configuration matches the NPI-TON aliases registered, by the destination, with the gatekeeper.

These requirements are summarized in [Table 17](#).

Table 17 Route and Dialing Plan configurations for NPI-TON

| Route (DN type) | Dialing Plan used by calling gateway | Alias configured for calling gateway |
|-----------------|--------------------------------------|--------------------------------------|
| Public | Public | PUB:<dialedDigitsPrefix> |
| Private | Private (Type = None) | PRI:<dialedDigitsPrefix> |
| | Private (Type = CDP) | CDP:<dialedDigitsPrefix> |
| | Private (Type = UDP) | UDP:<dialedDigitsPrefix> |

Media Parameters

The Media Parameters panel defines how the signals will be handled by the VoIP trunks. This panel also includes the setting to enable T.38 Fax signals over the trunks.

Figure 29 Media Parameters subpanel

Details for Module: Internal

Local Gateway | **Media Parameters** | Remote Gateways

Preferred Codecs

Codec Preferences

Available list

➔ Add

Del ➔

Selected list

- G.729
- G.723
- G.711-uLaw
- G.711-aLaw

↑ ↓

Settings

Enable silence compression

Jitter buffer Auto

G.729 payload size (ms) 30

G.723 payload size (ms) 30

G.711 payload size (ms) 30

Incremental payload size

Enable T.38 fax

Force G.711 for 3.1k audio

Table 18 describes the fields on this panel.

Table 18 Media parameters record (Sheet 1 of 3)




| Field | Value | Description |
|---|--|--|
| Preferred Codecs | | |
| Preferred Codecs: | None G.711-uLaw G.711-aLaw G.729 G.723 G.729 + VAD G.723 + VAD | Select the Codecs in the order in which you want the system to attempt to use them. Performance note: Codecs on all networked BCM50s must be consistent to ensure that interacting features such as Transfer and Conference work correctly. Systems running BCM 3.5 or newer software allow codec negotiation and renegotiation to accommodate inconsistencies in Codec settings over VoIP trunks. |
| Actions | | |
|  | 1. On the Available list, click the codec you want to add to the Selected list. 2. Click the button to move the codec to the Selected list. | |
|  | 1. Select a codec that you want to remove from the Selected list. 2. Click this button to move the codec back to the Available list. | |
|  | 1. Select a codec on the Selected list. 2. Click the appropriate arrow to move the codec up or down in the Selected list. | |

Table 18 Media parameters record (Sheet 2 of 3)


| Field | Value | Description |
|----------------------------|---|---|
| Settings | | |
| Enable silence compression | Disabled Enabled | <p>The silence compression identifies periods of silence in a conversation, and stops sending IP speech packets during those periods. In a typical telephone conversation, most of the conversation is half-duplex, meaning that one person is speaking while the other is listening. Refer to “Silence compression” on page 505.</p> <p>If silence compression is enabled, no voice packets are sent from the listener end. This greatly reduces bandwidth requirements.</p> <p>G.723.1 and G.729 support silence compression. G.711 does not support silence compression.</p> <p>Performance note: Silence Compression on all networked BCM50s and IPT systems (VAD setting on IPT systems) must be consistent to ensure that interacting features such as Transfer and Conference work correctly. As well, the Payload size on the IPT must be set to 30ms.</p> |
| Jitter Buffer | Auto None Small Medium Large | Select the size of jitter buffer you want to allow for your system. |
| G.729 Payload Size (ms) | 10, 20, 30, 40, 50, 60 Default: 30 | Set the maximum required payload size, per codec, for the VoIP calls sent over H.323 trunks. |
| G.723 Payload Size (ms) | 30 | Note: Payload size can also be set for Nortel IP telephones. Refer to the <i>BCM50 IP Telephone Installation and Configuration Guide (N0027269)</i> . |
| G.711 Payload Size (ms) | 10, 20, 30, 40, 50, 60 Default: 30 | |
| Incremental Payload Size | <checkbox> | When enabled, the system advertises a variable payload size (40, 30, 20, 10 ms) |
| T.38 Fax Support | Enabled Disabled | Note: This field appears on H.323 panels only. Enabled: The system supports T.38 fax over IP. Disabled: The system does not support T.38 fax over IP |
| |  | Caution: Operations note: Fax tones that broadcast through a telephone speaker will disrupt calls at other telephones using VoIP trunks in the vicinity of the fax machine. Here are some suggestions to minimize the possibility of your VoIP calls being dropped because of fax tone interference: Locate fax machine away from other telephones. Turn the speaker volume on the fax machine to the lowest level, or off, if that option is available. |

Table 18 Media parameters record (Sheet 3 of 3)

| Field | Value | Description |
|----------------------------|-------------|---|
| Force G.711 for 3.1k Audio | <check box> | When enabled, the system forces the VoIP trunk to use the G.711 codec for 3.1k audio signals such as modem or TTY machines. Note: This setting can also be used for fax machines if T.38 fax is not enabled on the trunk. |

T.38 Fax constraints

If you allow fax messaging for the local VoIP gateway, there are some guidelines you need to be aware of sending and receiving fax messages over VoIP trunks.

The feature is supported between BCM50 systems, between BCM50 systems and Business Communication Managers running BCM 3.5 or newer software, and between BCM50 systems and Meridian 1 systems running IPT 3.0 or newer software and CS 1000/M systems.

Operational notes and restrictions:

Some fax machines will be unable to send faxes successfully over VoIP (T.38) trunks to the following destinations:

- CallPilot mailboxes
- CallPilot mailboxes (accessed through auto-attendant)
- Fax Transfer (calls transferred to a system fax device through the auto-attendant)

Use the following tips to avoid this problem:

- Avoid the use of manual dial on the originating fax machine. In some fax machines, manually dialing introduces a much shorter call time-out.
- If manual dial must be used, then the user should wait until the call is answered before starting the fax session.
- If manual dial must be used, then the user should enter the digit **8** before initiating the fax session. This ensures that the fax session is initiated by CallPilot before the fax machine's timer is started.
- The call duration can be increased by adding a timed pause to the end of dialing string (for example: 758-5428,,). This allows the call to ring at the destination before the fax machine call duration timer starts.
- Since the problem is related to the delay in initiating the fax session, the number of rings for fax mailboxes Call Forward No Answer (CFNA) should be minimized.



Caution: Operations note: Fax tones that broadcast through a telephone speaker will disrupt calls at other telephones using VoIP trunks in the vicinity of the fax machine. Here are some suggestions to minimize the possibility of your VoIP calls being dropped because of fax tone interference:

- Locate fax machine away from other telephones.
- Turn the speaker volume on the fax machine to the lowest level, or off.

Fax tones recorded in a voicemail box: In the rare event that fax tones are captured in a voicemail message, opening that message from an telephone using a VoIP trunk will cause the connection to fail.

Remote Gateways

You require a Remote Gateway record for any system to which you want to connect with a VoIP trunk. This panel provides the parameters the system uses to direct outgoing calls over VoIP trunks.



Note: If there is a Gatekeeper on the network, you do not need to specify remote gateways, as that information is handled at the Gatekeeper.

Figure 30 Remote Gateways subpanel

Details for Module: Internal

Local Gateway | Media Parameters | Remote Gateways

Remote Gateway Table

| Name | Destination Digits | Destination IP | GW Type | GW Protocol | QoS Monitor | Tx Threshold |
|------|--------------------|----------------|---------|-------------|--------------------------|--------------|
| gw20 | 20 | 47.135.163.20 | BCM36 | CSE | <input type="checkbox"/> | 0.0 |
| m22 | 22 3 5 8 6 9 | 47.135.163.176 | BCM36 | CSE | <input type="checkbox"/> | 0.0 |
| t15 | 15 | 47.135.163.15 | BCM36 | CSE | <input type="checkbox"/> | 0.0 |

Add... Delete

Table 19 provides descriptions about each field on this panel.

Table 19 Remote gateway record (Sheet 1 of 2)

| Field | Value | Description |
|--------------------|---|--|
| Name | <alphanumeric> | Enter an identifying tag for the remote system |
| Destination IP | <IP address> | Enter the IP address of the remote system gateway. |
| GW Type | BCM36 BCM35 BCM30 BCM25 CS 1000 ITG IPT Other | Choose the type of system that is accessed through the remote gateway: BCM36: Business Communications Managers running 3.6 or newer software and BCM50 systems with compatible versions of H.323. BCM35/BCM30/BCM25: for Business Communications Managers running the software version of the selected tag. IPT: M1 Internet Telephony Network Gateway CSE 1000: CSE1000 switch. ITG/IPT: Meridian 1 system running IP software |
| GW Protocol | None SL-1 CSE | Select the gateway protocol that the trunk expects to use. None: No special features SL-1: Use for BCM 2.5 systems only that require MCDN over VoIP trunks CSE: MCDN protocol for gateways that provide VoIP service through Meridian 1 IPT (BCM 3.6 and newer software) or CSE 1000 gateways (BCM 3.0 and newer software) |
| QoS Monitor | <check box> | If you intend to use a fallback PSTN line for this gateway, ensure that the check box is selected. Ensure that QoS Monitor is also enabled on the remote system. Otherwise, leave the check box empty. |
| Destination Digits | <numeric> (could be the same as the destination code for the route to this system) | Set the leading digits which callers can dial to route calls through the remote gateway. Ensure that there are no other remote gateways currently using this combination of destination digits. If multiple leading digits map to the same remote gateway, separate them with a space. For example, 7 81 9555. These numbers are passed to the remote system as part of the dialed number. |
| Actions | | |
| Add | <ol style="list-style-type: none"> 1. On the Remote Gateways panel, click Add. On the Add dialog: 2. Name: Enter a short descriptive title for the remote system 3. Destination IP: Enter the public IP address of the remote system 4. Click OK. 5. On the Remote Gateway Table panel, click in the fields to set any other parameters that you require. | |

Table 19 Remote gateway record (Sheet 2 of 2)

| Field | Value | Description |
|--------|-------|--|
| Delete | | <ol style="list-style-type: none">1. On the Remote Gateways table, select the gateway you want to delete.2. Click Delete.3. Click OK on the confirmation dialog box. |

Chapter 7

Lines overview

Telephony signals into the system, within the system, and out of the system are carried over channels. For consistency, these channels are all called lines or trunks. This designation includes:

- circuit switched lines (PSTN): connect to the system through media bay modules
- Voice over IP (VoIP) trunks: connect through the LAN or IP network
- target lines, internal channels: connect PRI, T1 and VoIP trunks to specific devices
- intercom lines: connect all internal telephones together through the DN numbers, and allow the user to access line pools for making outgoing calls, as well as being required for other call features such as conference calling and system-wide call appearance (SWCA) calls. Intercom designations are assigned in the DN record, or automatically by the system for each telephone.

Prerequisites

You must configure the media bay modules and/or the VoIP trunk parameters before you can set up line programming.

- The position on the system bus of the trunk media bay modules determines the line numbers that are available. Refer to the *BCM50 Installation & Maintenance Guide* (N0027152).
- The position on the system bus of the station media bay modules determines which DNs are available, although DN numbers can be changed.
- Available VoIP lines are determined by the number of VoIP keycodes entered on the system (between 01 and 12), starting with line 001 and ending at line 012.

This section contains the following information:

- [“Understanding how the system identifies lines” on page 106](#)
- [“Line record” on page 108](#)
- [“Line Job Aids” on page 110](#)

Other line configuration options or requirements:

- **BRI loops** require configuration and provisioning before the BRI lines can be configured.
- The BCM50 also offers facilities for **splitting trunks** to deliver both data and telephony services. The BCM50 does not support DDIM.

Understanding how the system identifies lines

On a new system, lines and loops are numbered and assigned defaults based on the type of media bay modules that have been connected to the system. The exception are the VoIP trunks, which require a keycode to activate.

These panels allow you to easily view which lines have been enabled through a media bay module.

From this heading, you can access each line record and assign attributes, as you require.

Determining which lines you need to program

Under **Lines**, note that line types are divided into five headings. The fifth heading contains all line numbers.

- Active physical lines
- Active VoIP Lines
- Target Lines
- Inactive Lines
- All Lines

Active physical lines

Lines 061-124 are reserved for physical lines.

Active VoIP lines (require keycode)

Voice over IP (VoIP) lines are signaling channels that simulate how CO lines work. However, VoIP lines transmit data to the IP network over a LAN or IP network rather than over physical lines. Once the VoIP trunks are set up, you can assign them to line pools, and program their behavior in the same way you would PRI lines.

VoIP lines use line numbers 001 to 012. These line records appear under Configuration>Telephony>Lines>Active VoIP Lines. To access VoIP lines, you need to enter software keycodes. Each keycode supports a specific number of lines. No entries appear in the Enabled VoIP lines field until you complete the IP Trunks Settings field, which displays when you click IP Trunks under Configuration>Resources>Telephony Resources>IP trunks.

VoIP trunks should be configured to use a single line pool per trunk type. Do not mix other trunk types on the same line pool. The VoIP line pools are assigned to routes, which, in turn, are configured with destination codes that route calls to the designated remote gateways of other BCM50 systems or Meridian 1-IPT systems.

You can also create a fallback for the trunk. This is a situation where the system reroutes the call to a PSTN line pool if the primary route is not available or the call quality is not suitable. If you do not configure your network for fallback and the call quality is below threshold, the IP call fails.

Target lines

Target lines are internal communications paths that directly connect auto-answer trunks to system telephones. These lines are incoming only.

Target lines allow you to make more efficient use of DID line resources. You can map a range of target lines for each DID line. The incoming call is routed according to the mapped dialed digits, rather than a one-to-one line assignment. Systems configured using the DID template automatically assign target lines to all assigned DNs.

You also require target lines when you use PRI, T1 or VoIP trunks.

Target lines use line numbers 125 to 268. These lines are found under Configuration>Telephony>Lines>Target Lines. Record this information in your system Programming Records so you have a clear view of where each line is assigned.

Other features:

- Each target line can be assigned to more than one telephone.
- A telephone can have multiple appearances of a target line.

Target lines are internal direct links the BCM50 uses to allow external callers to dial specific system telephones, or a group of system telephones. You assign the target line to one or more telephone DNs, and then configure the target line to function as you require. You can also assign multiple appearances of a target line to one telephone. This allows more than one call to simultaneously use the target line. Target lines are required by lines that support multiple numbers over one trunk (T1 E&M, DID trunks, T1 DID trunks, PRI trunks, and VoIP trunks).



Caution: Changing the received # length:

If you change the received # length for your system, the **Public number** entry for the target lines will clear if the new received # length is less than the number entered in this field.

If the new received # length has more digits than the number entered in this field, you need to change the entry manually, if changes are required.

Programming note: The following trunks use one or both of these settings to route calls:

- DPNSS lines use the Private received number to route calls in the system.
- BRI ETSI-QSIG, PRI ETSI-QSIG, MCDN, DMS100, DMS250 and VoIP trunks route calls on a per-call basis to either the public or private received digits.



Note: VoIP trunking MCDN calls do not support Auto DN/DISA DN functionality.

- BRI (ETSI-Euro, NI), PRI (ETSI-Euro, NI, 4ESS), T1 (LoopStart, E&M, DID, GroundStart), Analog LEC (LoopStart), and DASS2 trunks route calls using the Public received number.

Physical lines

Physical lines are the central office (CO) trunks assigned to the trunk media bay modules. Refer to the *BCM50 Installation & Maintenance Guide* (N0027152) for information on which lines are enabled.

You can change the line types to suit your system. For instance, BRI and DTM modules can be designated to a number of line types, depending on the type of line service provided through the central office (CO). However, the line numbers are associated for specific tasks or to specific DS30 bus numbers.

The line record allows you to program settings for lines that affect how the lines operate in the network and with other switches, as well as how the system uses the line.

Trunk types:

- VoIP
- DTM (digital): TI types (Loop, E&M, DID, Ground, or fixed data channel), PRI, DASS2, DPNSS.
- CTM (North America)/GATM: Analog Loop
- BRI: BRI S/T
- Target lines

BRI loops programming

The Loops panels define the loop numbers and loop attributes that correspond to the DIP switch settings that were configured on the BRI trunk media bay modules installed on your system. Check your Programming Record to see which modules are installed, and what settings were chosen.

Available BRI trunk loop attributes are determined by the country profile that is assigned to your system. All profiles allow BRI programming; however, there is a difference between T1-based profiles and for E1-based profiles.

Once loops are provisioned, the system assigns two line numbers per loop. These lines are then programmed as you would any other lines.

You can program a loop to support either trunking services to the ISDN network, or terminal services to one or more ISDN devices. The following sections describe the programming for each type of loop. For complete module installation instructions and safety precautions, see the *BCM50 Installation & Maintenance Guide* (N0027152).

Programming links

Determine line assignments for routing: [“Line Job Aids” on page 110](#).

Line record

The line record allows you to:

- Identify the line and the features on the line.
- Assign restrictions for outgoing calls.
- Assign a voice message center, if the line connects to a remote voicemail system, either on another node on the private network, or at the central office.

Line characteristics

Line type determines what features are available. Some features must be coordinated with the settings at the other end of the line.

Programming links

Alternate-click the Line Assignment panel tab to see a list of the line feature settings, and to see which lines have each setting.

Line restrictions

Restrictions prevent certain kinds of calls from occurring over specific lines. You can also restrict some features.

If you want different restrictions to apply at different times of the day or week, you can set up the line restriction schedules to that effect. The Normal schedule runs when no other schedule is specified or if fallback is used for VoIP trunks.

The default restriction filters are listed in [Table 20](#).

Table 20 Default restriction filters

| Schedule | Restriction filter | Schedule | Restriction filter |
|----------------------|--------------------|------------|--------------------|
| Normal | 03 | Schedule 4 | 00 |
| Schedule 1 (Night) | 21 | Schedule 5 | 00 |
| Schedule 2 (Evening) | 22 | Schedule 6 | 00 |
| Schedule 3 (Lunch) | 23 | | |



Note: When a remote user places an external call on a line, any filters used with the line still apply.

Programming links

The template has a set of default restrictions in Restriction 02 only. You must create your own restriction files if you want to use other settings.

Remote restrictions

Your system can accommodate users who call in from outside the system to access system features. Calls coming in over the Private network that are routing out of the system to remote systems or to the PSTN are also considered to be remote call-ins.

To restrict the access remote callers have, or to control outbound private network calls, specify the appropriate filter for the line.

If you want different restrictions to apply at different times of the day or week, you can set up the line restriction schedules to that effect. The Normal schedule runs when no other schedule is specified or if fallback is used for VoIP trunks.

The default restrictions are shown in [Table 21](#).

Table 21 Default remote restrictions

| Schedule | Restriction filter | Schedule | Restriction filter |
|----------------------|--------------------|------------|--------------------|
| Normal | 04 | Schedule 4 | 00 |
| Schedule 1 (Night) | 31 | Schedule 5 | 00 |
| Schedule 2 (Evening) | 32 | Schedule 6 | 00 |
| Schedule 3 (Lunch) | 33 | | |



Note: The remote restriction restricts the numbers a user can dial on an incoming auto-answer line. If a remote user then selects a line to place an external call, any filter used with the line still applies.

Voice message center

If you subscribe to a voice message service outside your office, you can indicate to the line with which voice message service to connect.

Voice message centers are defined as part of the system telephony global programming. This is located in the Element Manager under Configuration>Applications>Voice Messaging.

Line Job Aids

The following section provides additional information about:

- [“Determining line numbers and destination codes” on page 111](#)
- [“Line pool tips” on page 112](#)
- [“Using loss packages” on page 113](#)
- [“Turn Privacy on or off for a call” on page 113](#)

Determining line numbers and destination codes

Refer to [Table 22](#) for a list of lines assigned per bus (DS30 bus and offset), based on the module type configured with that address. You can use this chart to note which lines should be active for the modules you installed. You can also note which line pool you put the lines in, and note the line pool access codes or routes and destination codes to which you assigned the line pools (or use your programming records).

Follow these steps to use the table:

- 1** For each bus number, circle the module you set to that number.
- 2** Beside the module name, circle the group of line numbers appropriate for the offset you set on the modules.
- 3** In the Line pool column, indicate a line pool name if you want to associate lines into a pool. This enables assigned telephones to grab any free line from the pool.
- 4** On the far right column, list the access codes and routes associated with the lines.

Table 22 Line numbering for modules and VoIP

| DS30 bus | Type of module | Line/Loop numbers (default) | | | | Line pool A-O/Bloc | Access codes and routes |
|----------|----------------------------------|-----------------------------|--|--|--|--------------------|-------------------------|
| N/A | VoIP trunks (no module) | 001-012 | | | | | |
| 3 | Built-in analog ports (4) | 061-064 | | | | | |
| 05 / 06 | Expansion 1 | | | | | | |
| | DTM (T1) | 65-88 | | | | | |
| | DTM (NA-PRI) | 65-87 | | | | | |
| | DTM (E1 PRI) | 65-94 | | | | | |
| | BRI | 65-72 | | | | | |
| | CTM4, GATM4 and 4X16 | 65-68 | | | | | |
| | CTM8, GATM8 (upper/lower) | 65-68 73-76 | | | | | |
| | ISDN loops | | | | | | |
| | BRI ST | 365-380 | | | | | |
| 07/ 08 | Expansion 2 | | | | | | |
| | DTM (T1) | 95-118 | | | | | |
| | DTM (NA-PRI) | 95-117 | | | | | |
| | DTM (E1 PRI) | 95-124 | | | | | |
| | BRI | 95-102 | | | | | |
| | CTM4, GATM4 and 4X16 | 95-98 | | | | | |
| | CTM8, GATM8 (upper/lower) | 95-98 103-106 | | | | | |
| | ISDN loops | | | | | | |
| | BRI ST | 381-396 | | | | | |

Line pool tips

Line pools are groups of lines. Pooling lines allows you to use fewer lines than there are users. PRI lines and VoIP lines are always defined into line pools.

- Line pools must never contain a mixture of lines. All lines in a given line pool should go to the same location.
- Avoid putting unsupervised loop start lines in a line pool. These lines can become unusable, especially when a remote user uses the line pool to make an external call.
- Assign line pool access to telephones under Configuration>Telephony>Dialing Plan>Line Pools.

- Assign system-wide line pool access codes under Configuration>Telephony>Dialing Plan>General (not applicable to Bloc pools).
- A telephone can be administered to search automatically for an idle line from several lines that appear on the telephone. Assign a line pool as the prime line. When the user lifts the receiver or presses Handsfree, any one of the lines, if idle, can be selected by Automatic Outgoing Line selection.
- Changes in the settings for trunk type on a system that is in use can result in dropped calls.
- When assigning lines to line pools, consider your network configuration. You can create a unified dialing plan by assigning lines to the same location to the same line pool on each of your systems. For example, if system A and system B each have TIE lines to system C, assign the TIE lines to pool D on each of the systems. You cannot assign target lines to a line pool, as they are incoming-only.

Using loss packages

The loss package settings allow you to select the appropriate loss/gain and impedance settings for each line. The setting is based on the terminating switch type and the distance between BCM50 and the terminating switch.

When measuring the distance from BCM50 to CO and from BCM50 to PBX systems, use 600 ohms as the termination resistance setting.

Table 23 Loss package settings

| Loss Package | Receive Loss | Transmit Loss | Impedance | Distance to switch/cable loss/terminating switch |
|--------------|--------------|---------------|-------------|--|
| Short CO | 0 dB | 3 dB | Short | Short/<2 dB/BCM50 to CO |
| Medium CO | 0 dB | 0 dB | TIA/EIA 464 | Medium/>2 dB and <6 dB/BCM50 to CO |
| Long CO | -3 dB | 0 dB | TIA/EIA 464 | Long/>6 dB/BCM50 to CO |
| Short PBX | 0 dB | 0 dB | Short | Short/<2 dB/BCM50 to PBX |
| Long PBX | -3 dB | 0 dB | TIA/EIA 464 | Long/>2 dB/BCM50 to PBX |

A loss of 4 dB corresponds to a cable length of approximately 2700 m (9000 ft).



Note: Loss packages are not supported on the 4X16 combo.

Turn Privacy on or off for a call

You can configure lines in your system to have automatic privacy. With a line not programmed with privacy, anyone with the line assigned to their telephone can join your call by pressing the line button. With a line programmed with privacy, one person at a time can use the line.

Use **FEATURE 83** to turn the Privacy feature off and on.

Privacy control cannot be used for internal or conference calls.

When another telephone joins a call, the participants on the call hear a tone, and a message appears on the telephone display. It is not possible to join a call without everyone hearing this tone.



Note: The Auto privacy setting does not apply to target lines, PRI lines or VoIP trunking lines.

Programming line access

There are a number of ways you can configure your lines. You can assign each line to one telephone or several telephones, or a specific line to a specific telephone. You can also pool your lines so that a number of telephones have access to several lines.

This section contains the following information:

- [“Making lines available” on page 114](#)
- [“Incoming calls” on page 115](#)
- [“Outgoing calls” on page 115](#)

Making lines available

- You can determine whether a line will be assigned solely to one telephone, or if a group of users will have access to the line.
- Even when you use line pools, it is possible that a line pool will be unavailable for outgoing traffic. To alleviate this, you can determine overflow paths for any routes that you designate.
- Incoming lines can be assigned to telephones as individual lines or through target lines, depending on the type of trunk supplied from the central office (CO). Incoming lines do not need to have an appearance on the telephone. Target lines are for incoming calls only. Two-way single lines, such as analog lines, allow the user to make an outgoing call by pressing the (idle) assigned line button or, if the line is part of a line pool, by entering a line pool access code or destination code to access the line pool. These lines can also be redirected on a per-trunk basis through Element Manager or from the telephone by using **FEATURE 84**.
- PRI lines are always configured into line pools. These lines require a destination code for outgoing calls. Incoming calls use target line assignments.
- Voice over IP (VoIP) trunks use the data network to provide line service in and out of the system. VoIP trunk configuration is described in the *BCM50 Device Configuration Guide* (N0027146). VoIP trunks use target lines for incoming calls, and require line pool codes or destination codes for outgoing calls.
- You can assign a line a maximum of 93 times.

Incoming calls

For incoming calls, you can have a central answering position, or you can specify lines to one or more telephones to receive directed calling.

You can arrange your telephones in Hunt groups, ringing groups, or call groups that use system-wide call appearance (SWCA) assignments to share calls.

You can also configure lines for use by system users who call in from outside the system. You can give them direct access to the system with an Auto DN, or you can configure the line so they hear a stuttered dial tone, at which point they need to enter a password (CoS) to gain access (DISA DN).

Outgoing calls

For outgoing calls, you can assign one or more intercom keys to access a line pool or prime line, destination code, or internal system numbers to direct the call. Telephones without intercom keys do require intercom paths assigned, but to access calls, users must pick up the handset to connect.

For calls within the system, all telephones are virtually linked within the system. To call another telephone inside the system, you can lift the handset and dial the local DN. In this case, the prime line must be set to intercom.

For calls going outside the system:

- If you assign the prime line to a line pool — When you pick up the handset, the telephone automatically grabs the first available line from the assigned line pool. In this configuration, you must ensure that the outgoing number is allowed by the line pool.
- If you assign the prime line to an intercom button — You can enter a line pool access code or a destination code followed by the telephone number to direct the outgoing call where it exits the system on any available line in that pool.

Chapter 8

Configuring lines

All the Lines panels show the same type of tabbed panels. The information on the tabbed panels may vary, however, depending on the type of line.

The following paths indicate where to access the lines information in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

The top panel provides a table of lines and the current or default settings.

The bottom frame contains three tabs. The contents of the tabs may vary, depending on the line selected in the top table.

- The Properties tabbed panel provides the settings for individual line characteristics.
- The Restrictions tabbed panel allows you to define which restrictions will be active for individual lines. Note that lines that are assigned to the same line pool will automatically assign the same restrictions.
- The Assigned DNs tabbed panel provides a quick way to assign lines to telephones. You must use the DN records panels to assign line pools to telephones.

Click one of the following links to connect with the type of information you want to view:

| Panel tabs | Tasks |
|--|---|
| "Trunk/Line data, main panel" on page 118 | "Configuring lines: T1-Loop start" on page 145 |
| "Properties" on page 120 | "Configuring lines: T1-Digital Ground Start" on page 151 |
| "Restrictions (Line and Remote)" on page 125 | "Configuring lines: T1-E&M" on page 139 |
| "Assigned DNs" on page 126 | "Configuring lines: T1-DID" on page 157 |
| See also: <i>BCM50 Device Configuration Guide</i> (N0027146) | "Configuring lines: PRI" on page 133 |
| | "Configuring lines: DPNSS lines" on page 169 |
| | "Configuring lines: Target lines" on page 129 |
| | "Configuring BRI lines" on page 177 |
| | "Configuring VoIP lines" on page 374 |
| | "Call Security: Configuring Direct Inward System Access (DISA)" on page 415 |

Click the navigation tree heading to access general information about user management.

Trunk/Line data, main panel

The top-level Table View panel shows line records for all lines active on the system, and the common assigned parameters. [Figure 31](#) shows the Trunk/Line Data lines panel.

Figure 31 Trunk/Line Data lines panel

| All Lines | | | | | | | | |
|-----------|------------|---------|-------------|------------|-------------|-----------------|--------------|---------------|
| Line | Trunk Type | Name | Control Set | Line Type | Prime ... ▲ | Pub. Received # | Priv. Rec... | Distinct Ring |
| 001 | VoIP | Line001 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 002 | VoIP | Line002 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 003 | VoIP | Line003 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 004 | VoIP | Line004 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 005 | VoIP | Line005 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 006 | VoIP | Line006 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 007 | VoIP | Line007 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 008 | VoIP | Line008 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 009 | VoIP | Line009 | 221 | Pool:BlocA | 221 | N/A | N/A | None |
| 010 | VoIP | Line010 | 221 | Pool:BlocA | 221 | N/A | N/A | None |

Table 24 describes the fields found on the Trunk/Line Data main panel.

Table 24 Trunk/Line Data main panel (Sheet 1 of 2)


| Attribute | Value | Description |
|---|--|--|
| Line | This list contains all the possible line numbers for the system, including target lines. | Configure only those lines that are active on the system. (Click the Active check box and ensure that the Inactive check box is empty). |
| Trunk Type | Loop, PRI, VoIP, Target | There are three main categories of lines: PSTN-based lines: (analog, T1, PRI, BRI) Voice over IP (VoIP) trunks, which connect through the LAN or WAN. Target lines, which are internal channels that provide direct dial capability. |
| Name | <maximum of seven alphanumeric characters> | Identify the line in a way that is meaningful to your system, such as by the type of line and line pool or the DN it is attached to in the case of target lines. |
| Control Set | DN <control telephone DN> Default: 221 (default Start DN) | Enter a telephone DN for a telephone that you want to use to turn service off or on for other telephones using this line. The control telephone must have the line assigned, or must be assigned to the line pool the line is in. Refer to "Line Access - Line Pool Access tab" in the <i>BCM50 Device Configuration Guide</i> (N0027146). |
|  | <p>Tips: External lines and telephones must be programmed to use one of the Scheduled Services: Ringing, Restriction, and Routing Services. For maximum flexibility, Nortel recommends that you create two different control telephones, one for the lines and one for the telephones. You can turn on a service manually or automatically for all external lines from an assigned control telephone. However, you cannot combine schedules. A service can only be active as normal service or one of the six schedules at any one time. Several schedules can be active at one time, but they must use different services.</p> | |
| Line Type | Public Private to: Pool A to O, BlocA to BlocF | Define how the line is used in relation to other lines in the system. <ul style="list-style-type: none"> Public line: can be accessed by more than one telephone. Private line: can be assigned only to one telephone and the prime telephone for that line. Enter the internal number of the telephone. Pool A - O (digital lines and BRI/BlocA to BlocF (PRI and VoIP lines): assigns the line to one of the line pools. If a line is assigned to a line pool, but is not assigned to any telephone, that line is available only for outgoing calls. Bloc line pools must be used in conjunction with routes and destination codes. Target lines cannot be put into line pools. |

Table 24 Trunk/Line Data main panel (Sheet 2 of 2)

| Attribute | Value | Description |
|---|---|--|
| Prime set | DN: None | Assign a telephone to provide backup answering for calls on the line. For an Auto Answer line, calls are redirected if the received number is invalid or the target line is busy, and if the If busy parameter is set To prime . Each line can be assigned only one prime telephone. |
| Pub. Received # (Target lines only) | <digits associated with a specific target line> | Specify the digits the system will use to identify a call from the public network to this target line. <ul style="list-style-type: none"> A received number cannot be the same as, or be the start digits, of a line pool access code, a destination code, the DISA DN or the Auto DN. If you are configuring auto-answer BRI trunks to map to target lines, the received number should be the same as the Network DN supplied by your service provider. The call will be directed to the prime telephone for the incoming line if the Network DN is not used. |
| Priv. Received # (Target lines only) | <digits associated with a specific target line> | Specify the digits the system will use to identify a call from the private network to this target line. <ul style="list-style-type: none"> A received number cannot be the same as, or be the start digits, of a line pool access code, a destination code, the DISA DN or the Auto DN. If you are configuring auto-answer BRI trunks to map to target lines, the received number should be the same as the Network DN supplied by your service provider. The call will be directed to the prime telephone for the incoming line if the Network DN is not used. |
| Distinct ring | None Pattern 2 Pattern 3 Pattern 4 | Choose the distinctive ring pattern that you want to assign to the line. This allows you to provide selective service to calls with differing answer priorities. When more than one line with the distinct ring settings rings at a telephone, the line with the highest priority will ring first. <ul style="list-style-type: none"> Pattern 4 has the highest ring priority Pattern 3 has second highest ring priority Pattern 2 has third highest ring priority None has the lowest ring priority. By default, all telephones and lines are set to None. |

Properties

The Properties tab shows basic line properties. Not all fields apply to all types of lines.

The Properties tab is shown in [Figure 32 on page 121](#).

Figure 32 Properties details panel

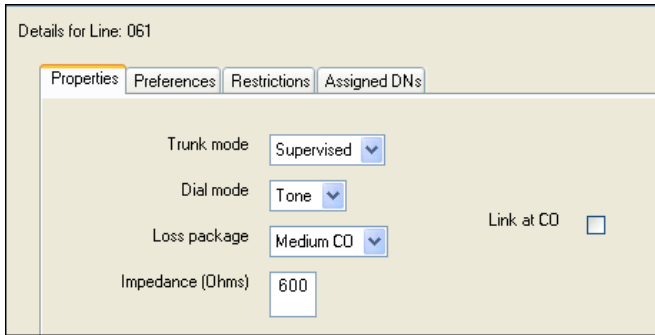


Table 25 defines the fields on this panel and indicates the lines.

Table 25 Properties line settings (Sheet 1 of 2)

| Attribute | Value | | Description | | | | | |
|---|---|-----------|---|----------------|--|--|--|--|
| Legend: Loop = analog/digital loop; GS = ground start; DID = DID; E&M = E&M; BRI = BRI; DPNSS = DPNSS; VoIP = VoIP; TL = Target. Note: PRI fields are all included under the main table. | | | | | | | | |
| Trunk mode | Loop | | | | | | | |
| | Unspr Supervised *Earth calling *Loop guarded *Loop unguarded | | Define whether disconnect supervision, also referred to as loop supervision, releases an external line when an open switch interval (OSI) is detected during a call on that line. You must set this to Supervised if a loop trunk has its Answer mode set to Auto or if you enable Answer with DISA. Disconnect supervision is also required to conference two external callers. The line must be equipped with disconnect supervision from the central office for the Supervised option to work. * These listing only appear for UK analog lines. | | | | | |
| Dial mode | Loop | GS | DID | E&M | | | | |
| | Pulse Tone | | Specify whether the system uses dual tone multifrequency (DTMF) or pulse signaling on the trunk. Tone does not appear if Signaling is set to Immediate (T1 DID & T1 E&M trunk types only). | | | | | |
| Loss package | Loop (analog only) | | | | | | | |
| | Short CO Medium CO Long CO Short PBX Long PBX | | Select the appropriate loss/gain and impedance settings for each line., see Table 23 . | | | | | |
| Impedance (Ohms) | Loop (analog only) | | | | | | | |
| | 600 ohm 900 ohm | | The GATM can be set to a specific impedance level. | | | | | |

Table 25 Properties line settings (Sheet 2 of 2)

| Attribute | Value | Description | | | | | |
|---|-------------------------------------|---|----------------|--|--|--|--|
| Legend: Loop = analog/digital loop; GS = ground start; DID = DID; E&M = E&M; BRI = BRI; DPNSS = DPNSS; VoIP = VoIP; TL = Target. Note: PRI fields are all included under the main table. | | | | | | | |
| Signaling | | DID | E&M | | | | |
| | WinkStart Immediate DelayDial | Select the signal type for the line. The immediate setting does not appear for T1 E&M or T1 DID trunks connected to a DTM if the Dial mode is set to tone. Make sure that this matches the signal type programmed for the trunk at the other switch. | | | | | |
| Link at CO | Loop (analog only) | | | | | | |
| | <check box> | Some exchanges respond to a Link signal, also called hook flash (FEATURE 71), by providing an alternative line for making outgoing calls. Enabling Link at CO causes the system to apply the restrictions on outgoing calls to the digits dialed after the Link signal. As well, the call on the alternative line is subject to all restrictions. Disabling Link at CO prevents a Link signal from resetting the BCM50 restrictions in cases where the host exchange does not provide an alternative line. | | | | | |
| Link time | Loop (analog only) | | | | | | |
| | <time> | Link at CO is enabled. The duration of the on-hook signal sent when the user activates the Link feature. | | | | | |
| Dial tone (detect delay) | Loop (analog only) | | | | | | |
| | Detect Delay | This field tells the system to either detect a dial tone before sending the dialstring, or to wait a period of time and then send the dial string. | | | | | |

Preferences (lines)

The Preferences tab shows information that may vary from trunk to trunk. Most of this information needs to coordinate with the line service provider equipment.

The Preferences tab is shown in [Figure 33](#).

Figure 33 Preferences details panel

Details for Line: 061

Properties | **Preferences** | Restrictions | Assigned DN's

Auto privacy

Full autohold

Aux. ringer

Distinct rings in use

Answer mode

Voice message center

Redirect to

Table 26 defines the fields on this panel and indicates the lines.

Table 26 Preferences details fields for lines (Sheet 1 of 3)

| Attribute | Value | | Description | | | | | |
|---|-------------|-----------|---|----------------|------------|--------------|-------------|-----------|
| Legend: Loop = analog/digital loop; GS = ground start; DID = DID; E&M = E&M; BRI = BRI; DPNSS = DPNSS; VoIP = VoIP; TL = Target and DASS2. Note: PRI fields are all included under the main panel. | | | | | | | | |
| Auto privacy | Loop | GS | DID | E&M | BRI | | VoIP | |
| | <check box> | | Define whether one BCM50 user can select a line in use at another telephone to join an existing call. Refer to "Turn Privacy on or off" in the <i>BCM50 Device Configuration Guide</i> (N0027146) (FEATURE 83). | | | | | |
| Full autohold | Loop | | | | BRI | DPNSS | VoIP | |
| | <check box> | | Enables or disables Full autohold. When enabled, if a caller selects an idle line but does not dial any digits, that line is automatically placed on hold if you then select another line. Full autohold is always in place for T1 E&M trunks because it has no meaning for incoming-only T1 DID trunks. The default setting should be changed only if Full autohold is required for a specific application. | | | | | |
| Aux. ringer | Loop | GS | DID | E&M | BRI | DPNSS | VoIP | TL |
| | <check box> | | Turn the auxiliary ringer on or off for all telephones using this line. When programmed on a line, the auxiliary ringer will ring every time a call is received. Note: When programmed only on a telephone, no ring occurs for a transferred call. An auxiliary ringer can also be programmed in Services to ring for a line placed into a scheduled Ringing service. Refer to "Configuring scheduled service" in the <i>BCM50 Device Configuration Guide</i> (N0027146). | | | | | |

Table 26 Preferences details fields for lines (Sheet 2 of 3)

| Attribute | Value | | Description | | | | | |
|---|--|------------|--|----------------|------------|--------------|--|--|
| Legend: Loop = analog/digital loop; GS = ground start; DID = DID; E&M = E&M; BRI = BRI; DPNSS = DPNSS; VoIP = VoIP; TL = Target and DASS2. Note: PRI fields are all included under the main panel. | | | | | | | | |
| ANI Number | | DID | E&M | | | | | |
| | <check box> | | Define whether the telephone number of the caller will be shown for this line. For T1 E&M and T1 DID trunks connected to a DTM, this setting only appears if Signaling is set to WinkStart. The central office must deliver ANI/DNIS in DTMF mode. No additional equipment is required. | | | | | |
| DNIS Number | | | E&M | | | | | |
| | <check box> | | Defines whether the digits dialed by an external caller on this line will be shown. For T1 E&M trunks connected to a DTM, this setting only appears if Signaling is set to WinkStart and Answer mode is set to Manual. | | | | | |
| Distinct Rings in use | <read-only> | | Indicates if a special ring has been assigned. See Distinct Ring on the main table. | | | | | |
| Answer mode | Loop | GS | | E&M | BRI | DPNSS | | |
| | Manual Auto | | Define whether a trunk is manual or automatic answer. Auto answer mode allows the trunk to be a shared resource by the system telephones. This shared resource is created through routing to target lines or using DISA. For auto answer trunks being used to allow remote call-in from system users, the trunk can be configured to answer with a straight dial tone, if DISA has not been enabled. It can also be configured to answer with a stuttered dial tone if DISA is enabled and the caller is expected to enter a CoS password. The CoS password defines which system features the caller is permitted to access. Manual answer trunks are assigned to one or more telephones. The assigned telephones exclusively own the line. | | | | | |
| | Note: You require Disconnect supervision on the line if loop start trunks are to operate in auto-answer mode. | | | | | | | |
| Answer with DISA | Loop | GS | | E&M | BRI | | | |
| | <check box> | | Define whether the system prompts a caller for a six-digit class of service (CoS) password. This setting appears for T1 loop start, T1 E&M lines that have auto-answer mode, and analog trunks. Set this option to No for T1 E&M lines on a private network that have auto-answer mode. To program DISA on a PRI trunk you need to specify a DISA DN, see “Call Security: Configuring Direct Inward System Access (DISA)” on page 415 and “Dialing plan: Private network settings” on page 269. | | | | | |

Table 26 Preferences details fields for lines (Sheet 3 of 3)

| Attribute | Value | Description |
|---|--|---|
| Legend: Loop = analog/digital loop; GS = ground start; DID = DID; E&M = E&M; BRI = BRI; DPNSS = DPNSS; VoIP = VoIP; TL = Target and DASS2. Note: PRI fields are all included under the main panel. | | |
| If busy | | |
| | To Prime Busy Tone | Define whether a caller receives a busy tone or the call forwards to the prime telephone when the target line is busy. Busy tone only works for PRI trunks. |
| | Tips: The duration of an open switch interval (OSI) before BCM50 disconnects a call is programmed by the Disconnect timer setting. Refer to “Trunk Module Parameters” on page 82. | |
| Voice Message Center | Loop GS | DID E&M BRI DPNSS VoIP TL |
| | Center 1 - Center 5 | If this line connects to a remote voicemail, either through the private network or at the Central Office, indicate which Center number has been configured with the contact number. The system calls that number to check voicemail messages when a message indicator is presented to a telephone. |
| Redirect to | Loop GS | DID E&M |
| | <dial string> | Enter a dial string (including destination code) to redirect the line to an external telephone, such as a call attendant on another system. If you want to stop redirection, you need to delete the dial string and allow the record to update. Warning: If the dialstring is set up, the line will immediately be redirected out of the system not ringing any telephone. |
| Warning: Enable modules If you disabled any trunk media bay modules prior to performing programming, enable them now to ensure your system will function properly. | | |

Restrictions (Line and Remote)

Assigning Line restrictions and Remote Access Package restrictions are part of the configuration for controlling calls out of the system (line restrictions) and into the system from a private network node or from a remote user calling in over the PSTN lines (Remote Access Packages).

The following paths indicate where to access the restriction settings in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface:**CONFIG>Terminals and Sets

The Restrictions tab is shown in [Figure 34](#).

Figure 34 Restrictions tables for a line

Details for Line: 061

Properties | Preferences | **Restrictions** | Assigned DN's

Use remote package

| Line Restrictions | | Remote Restrictions | |
|-------------------|------------|---------------------|------------|
| Schedule | Use Filter | Schedule | Use Filter |
| Normal | 03 | Normal | 04 |
| Night | 21 | Night | 31 |
| Evening | 22 | Evening | 32 |
| Lunch | 23 | Lunch | 33 |
| Sched 4 | 00 | Sched 4 | 00 |
| Sched 5 | 00 | Sched 5 | 00 |
| Sched 6 | 00 | Sched 6 | 00 |

Table 27 describes the fields on this panel.

Table 27 Restrictions

| Attribute | Values | Description |
|----------------------------------|---|---|
| Use remote package | <remote package #> | If the line is being used to receive external calls or calls from other nodes on the private network, ensure that you indicate a remote package that provides only the availability that you want external callers to have. This attribute is typically used for tandeming calls. |
| Schedule | Default: Normal, Night, Evening, Lunch, Sched 4, Sched 5, Sched 6 | |
| Line Restrictions - Use Filter | <00-99> | Enter the restriction filter number that applies to each schedule. (controls outgoing calls) |
| Remote Restrictions - Use Filter | <00-99> | Enter the restriction filter that applies to each schedule. This setting provides call controls for incoming calls over a private network or from remote user dialing in over PSTN) |

Assigned DN's


The Assigned DN's tabbed panel displays the DN properties for lines that are assigned to telephones.

This information can also be configured on the DN record. Any information added, deleted or modified in this table reflects in the DN record.



Note: Lines that do not allow single-line assignment, such as PRI lines and VoIP lines, will not display this tabbed panel.

The Assigned DN's tab is shown in Figure 35.

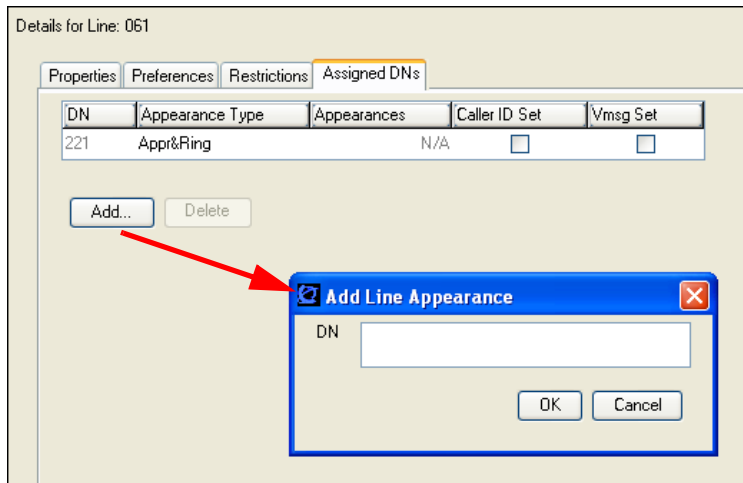Figure 35 Add a DN record

To add a DN record to a line record

- 1 In the top panel, click the line where you want to add a DN record.
- 2 In the bottom frame, click **Add**.
- 3 Enter the DN record number and line settings:
 - DN
 - Appearance Type
 - Appearances (target lines only)
 - Caller ID Set (for display sets and ASM8+)
 - VMsg Set
- 4 Click **OK**.
- 5 Repeat for all the DN records you want to assign.

Chapter 9

Configuring lines: Target lines

Target lines are virtual lines that allow the mapping of received digits to a line number over PRI channel.

The following paths indicate where to access target lines in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: Configure Target lines and DASS2 line settings

- [“Prerequisites” on page 129](#)
- [“Process map” on page 129](#)
- [“Configuring Target line settings” on page 132](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| Ensure that external number is mapped to internal received number, if required. | |
| Have a list of DNs where the target lines will get assigned. | |
| <p>For features that require target lines:</p> <ul style="list-style-type: none"> • Configure lines into line pools. Refer to “Trunk Module Parameters” on page 82. • Routing and destination codes. Refer to “Dialing plan: Routing and destination codes” on page 235. • Set up VoIP fallback. Refer to “Setting up VoIP trunks for fallback” on page 383. | |

Process map

[Figure 36](#) and [Figure 37](#) provide an overview of the target line feature configuration process.

Figure 36 Configuring target lines — main screen


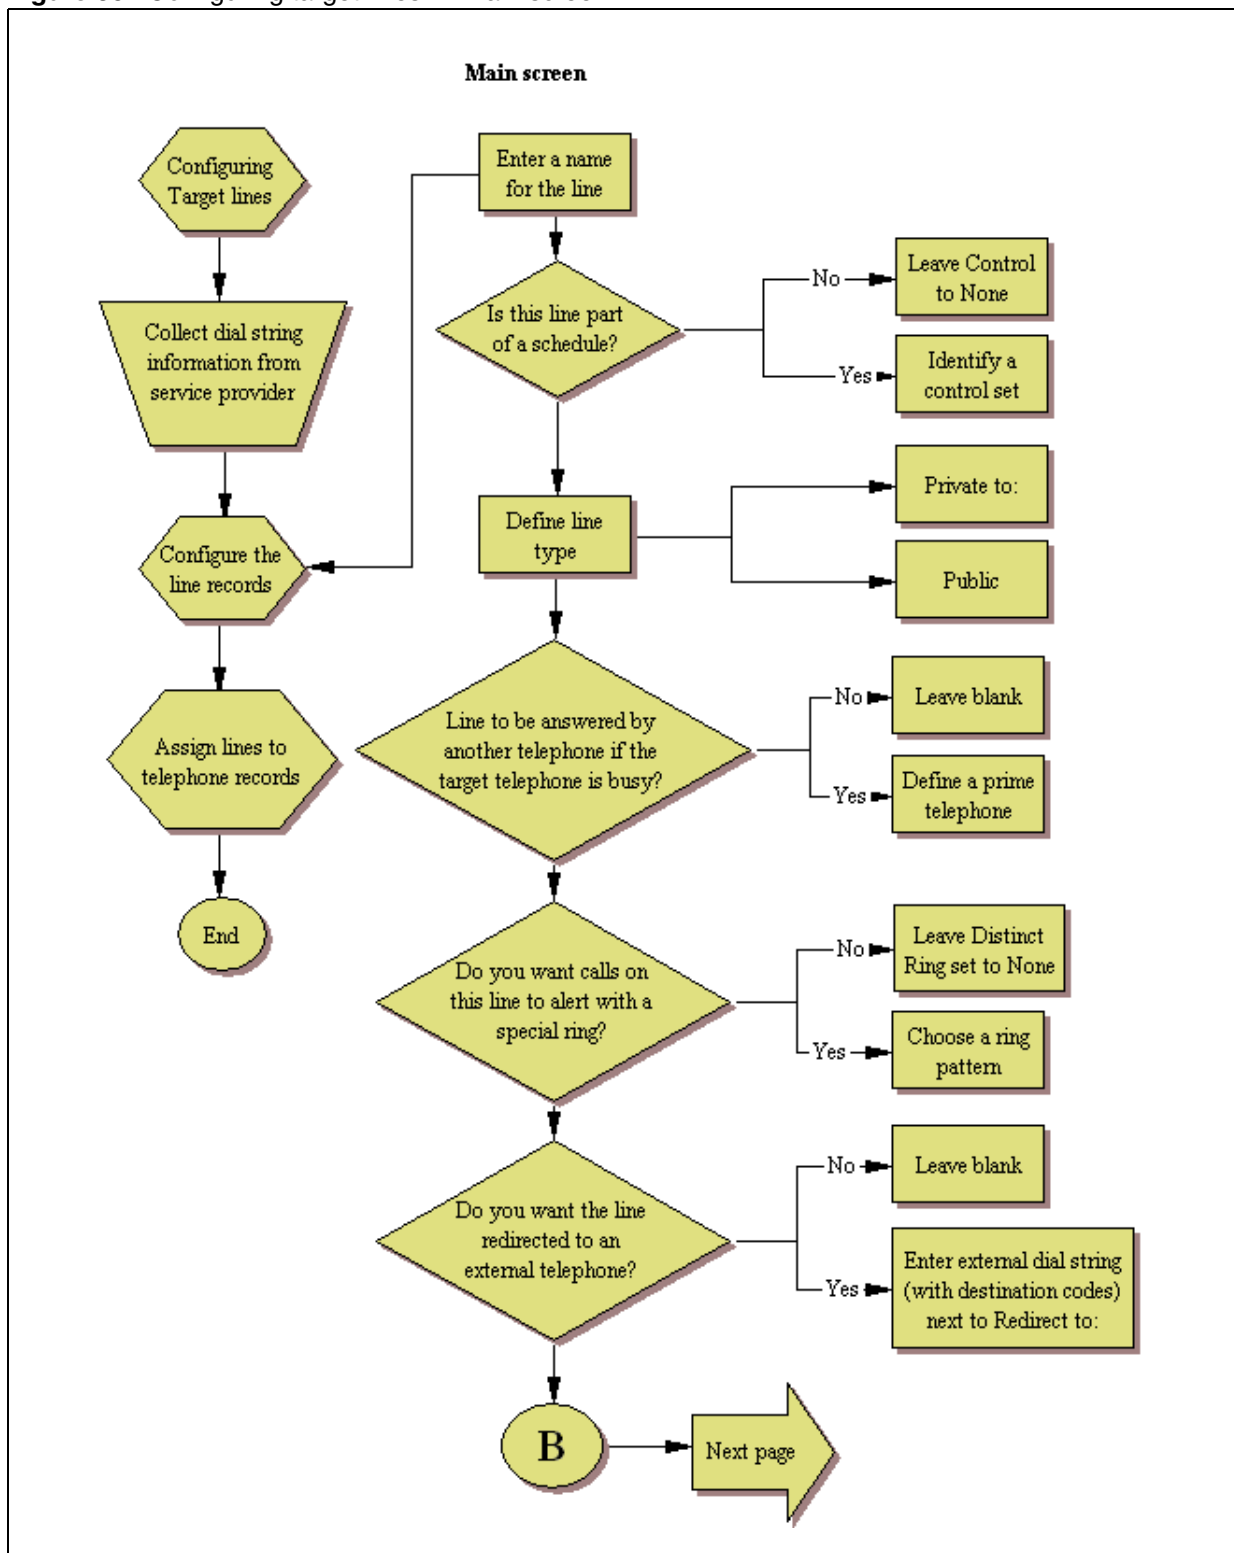


Figure 37 Configuring target lines — subscreens

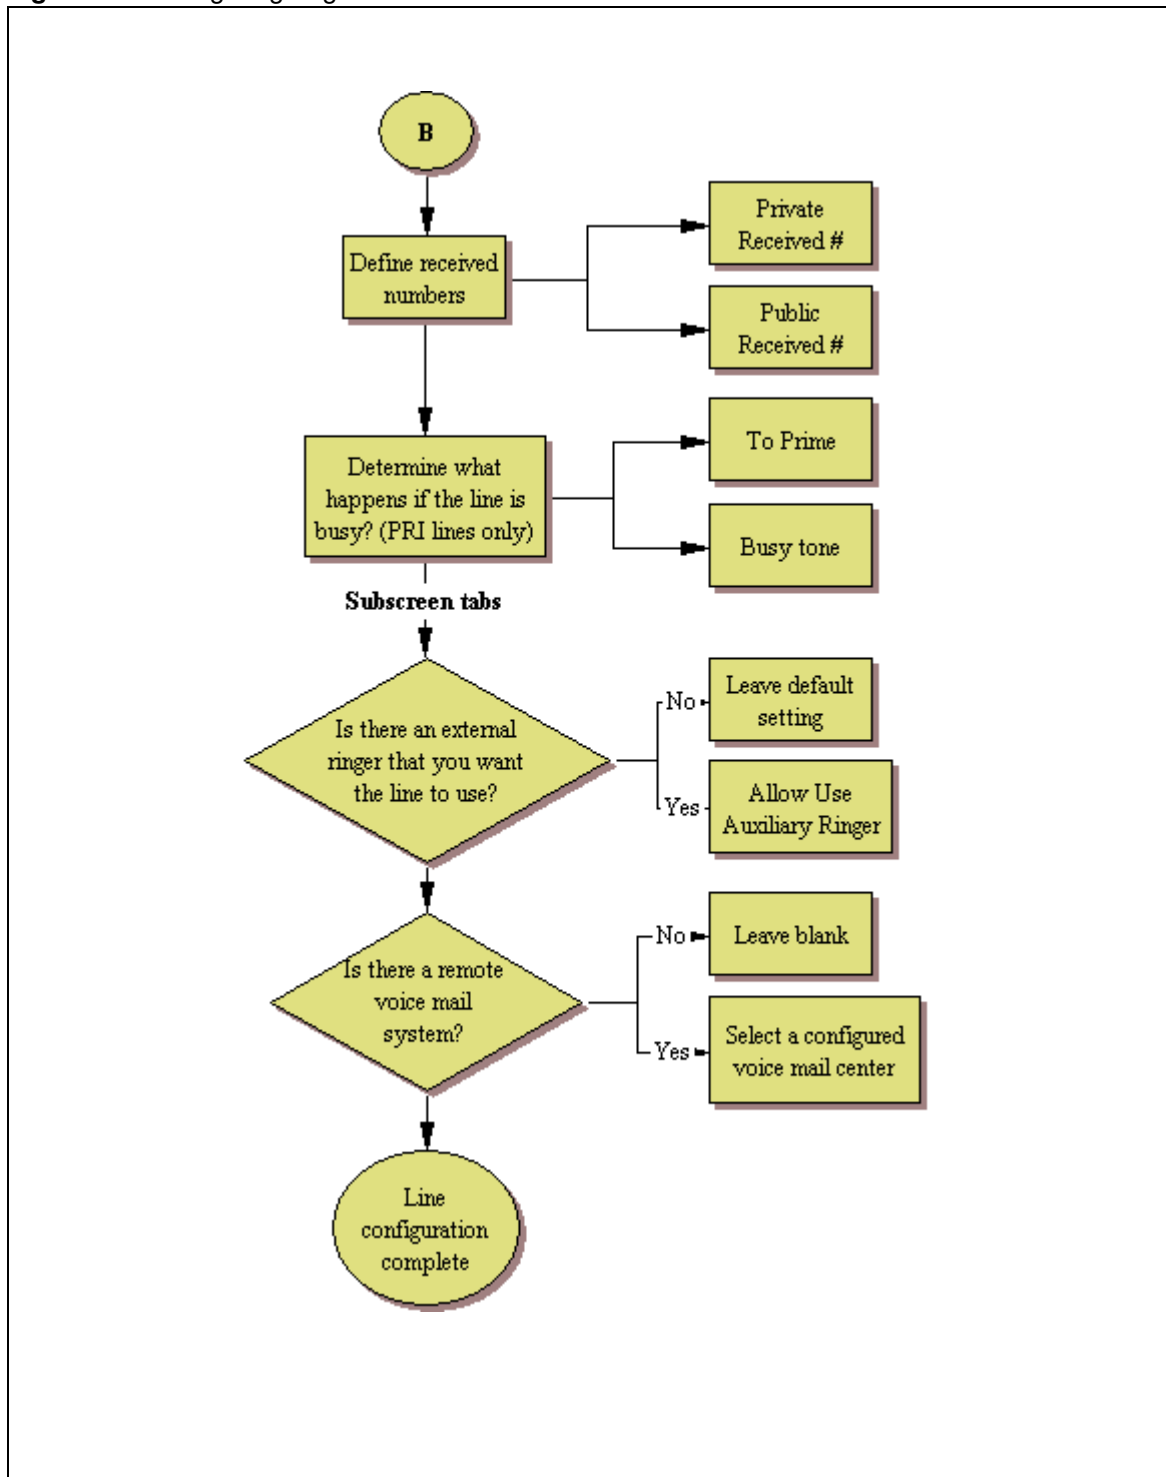

Configuring Target line settings

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

- 1** Confirm or change the settings on the Trunk/Line Data main panel:
 - Line: Number of the assigned line.
 - Trunk Type: Target line.
 - Name: Identify the line or line function.
 - Control Set: Identify a DN if you are using this line with scheduling.
 - Line Type: Set to Public, if the line is to be shared among telephones or DN:*: if the line is only assigned to one telephone.
 - Prime Set: If the line is to be answered at another telephone if the line is not answered at the target telephone.
 - Pub. Received #: Confirm the existing number or enter a public received # (PSTN DID or PRI trunks) that the system will recognize as the target telephone/group.
 - Private Received #: If private network trunks (PRI or VoIP trunks) are configured, enter a Private received #. This number is usually the same as the DN.
 - Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4, or None).
- 2** Configure the trunk/line data (Preferences tab):
 - Aux. ringer: If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
 - If Busy: To automatically direct calls to the prime telephone, select To prime from the drop-down menu, or select Busy tone.
 - Voice message center: If the system is using a remote voicemail, pick the center configured with the contact number.
 - Redirect to: To automatically direct calls out of the system to a specific telephone, such as a headoffice answer attendant, enter that remote number here. Ensure that you include the proper routing information.
- 3** Assign the lines to DNs (see [“Assigned DNs” on page 126](#)):

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs here. The DN record can also be used to assign lines; refer to [“Line Access - Line Assignment tab in the BCM50 Device Configuration Guide \(N0027146\)](#).

 - DN: Unique number.
 - Appearance Type: Choose Appr only or Appr&Ring if the telephone has an available button, otherwise choose Ring only.
 - Appearances: Target lines can have more than one appearance, so that multiple calls can be accommodated. For telephones that have these lines set to Ring only, set to None.
 - Caller ID Set: Select check box to display caller ID for calls coming in over the target line.
 - VMsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system. Check with your system administrator for the system voicemail setup before changing this parameter.

Chapter 10

Configuring lines: PRI

PRI are auto-answer lines. These lines cannot be individually assigned to telephones. They must be configured into line pools. PRI line pools then are assigned routes and these routes are used to create destination codes.

The following paths indicate where to access PRI line pools in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: Configure the PRI lines connected to the system

- [“Configuring PRI line features” on page 135](#)
- [“Configuring PRI Call-by-Call services” on page 136](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| Install and configure the DTM module. Refer to “Trunk Module Parameters” on page 82 . | |
| Provision lines. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 38](#) and [Figure 39](#) provide an overview of the PRI line feature configuration process.

Figure 38 PRI line feature configuration process — Part A


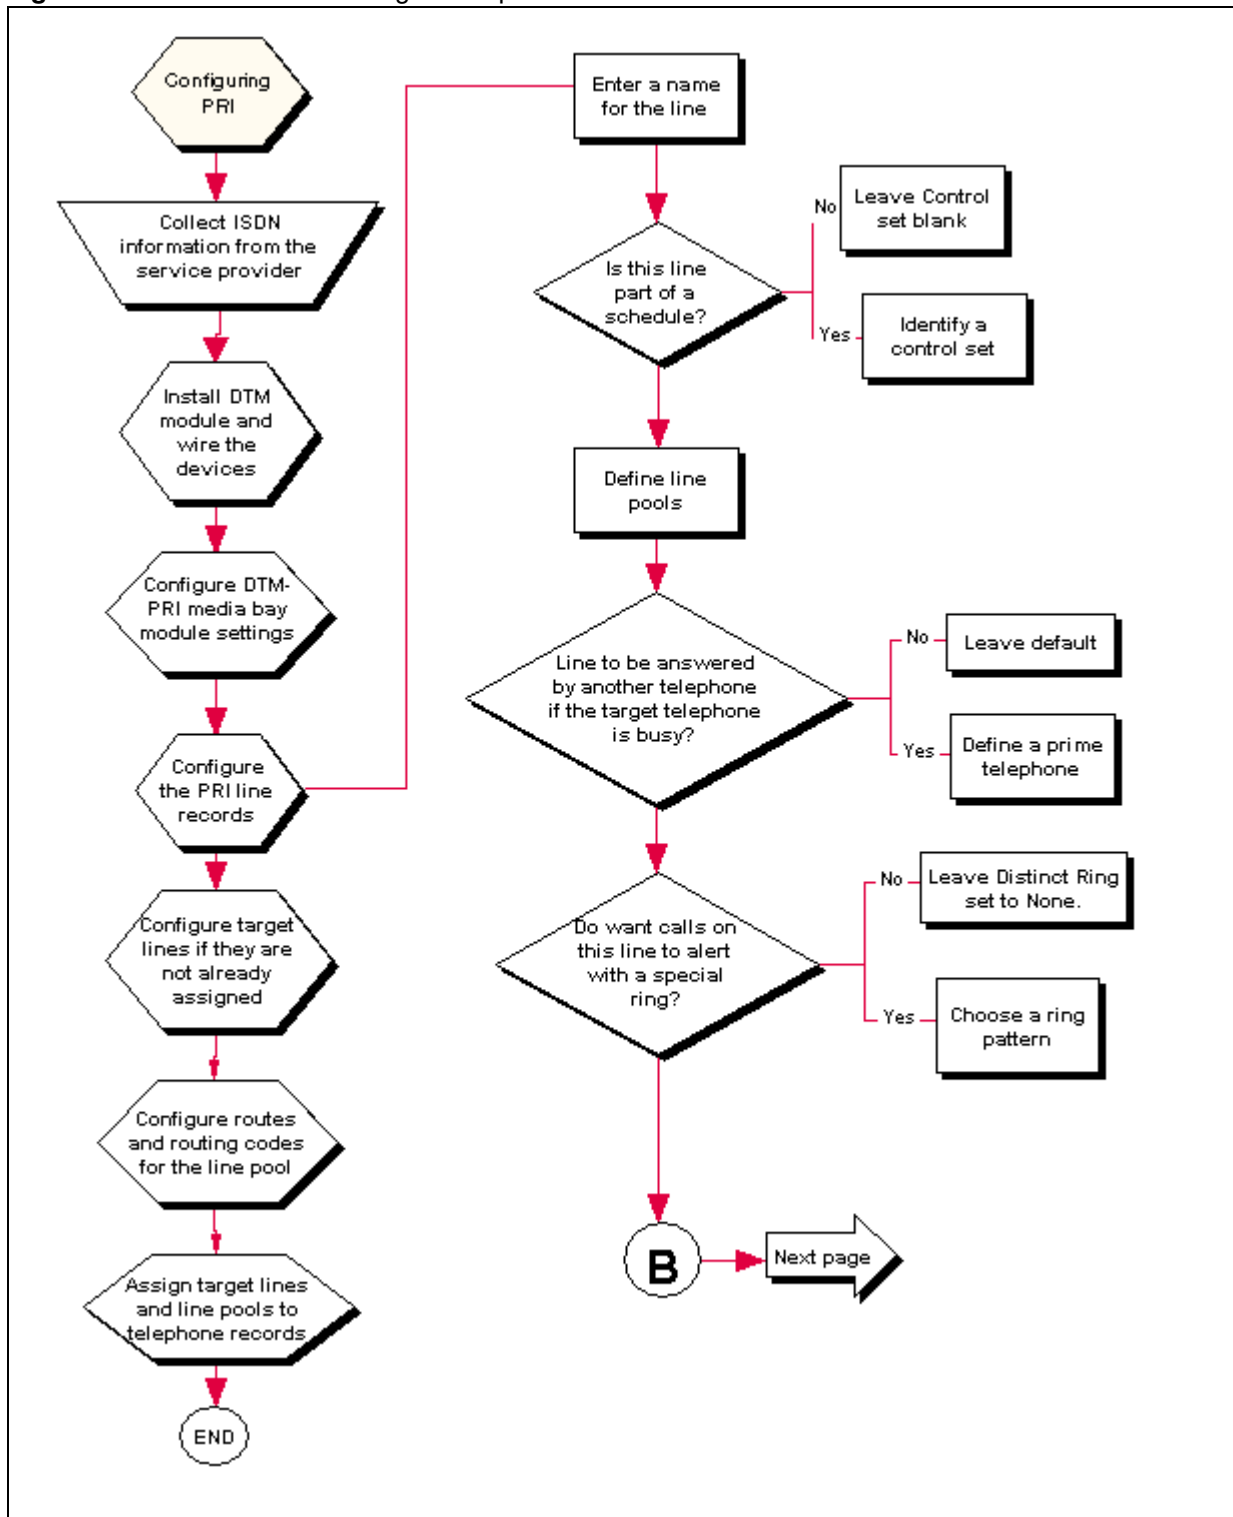


Figure 39 PRI line feature configuration process — Part B

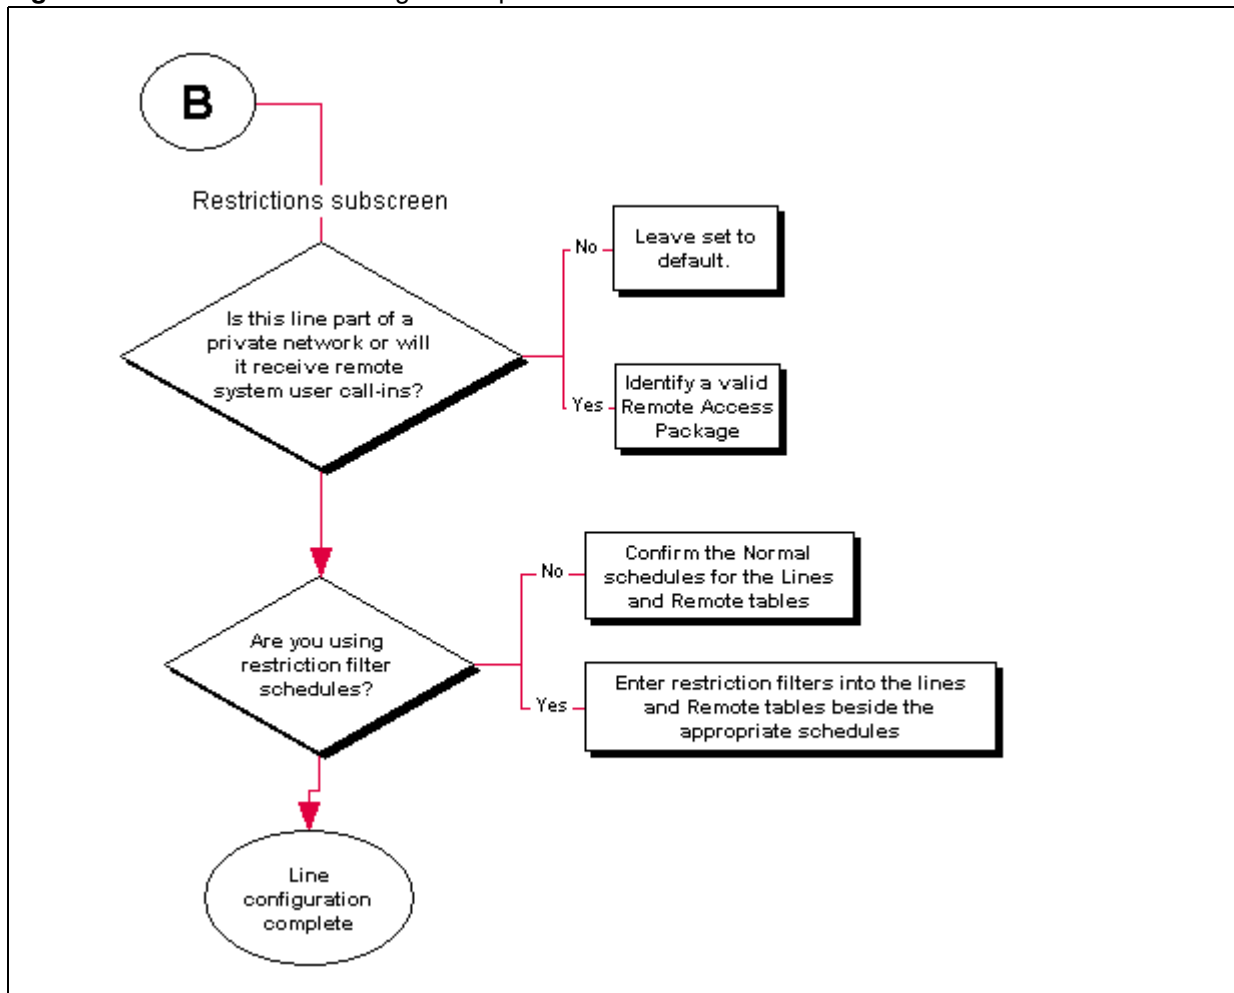

Configuring PRI line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

- 1 Confirm or change the settings on the Trunk/Line Data main panel:
 - Line: Number of the line being assigned.
 - Trunk Type: PRI or ETSI (European standard).
 - Name: Identify the line or line function.
 - Control Set: Identify a DN if you are using this line with scheduling.
 - Line Type: Define how the line will be used. If you are using routing, ensure it is put into line pool (BlocA to BlocF). If you use line pools, you need to assign target lines to the telephones, as well (refer to [“Configuring lines: Target lines” on page 129](#)).
 - Prime Set: If you want the line to be answered at another telephone, if the line is not answered at the target telephone.

- Pub. Received #: Not applicable.
- Priv. Received #: Not applicable.
- Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4, or None).

Subpanel under Restrictions tab:

- Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid package.
- 2** These lines cannot be assigned to DN's as line assignments. They are assigned only as line pools. Instead, configure target lines for each telephone and assign the target line to the telephones. For more information, refer to the *BCM50 Device Configuration Guide* (N0027146).
- 3** Suggested next steps:
- Dialing plan sections
 - “Dialing plan: System settings” on page 255
 - “Dialing plan: Public network” on page 263
 - “Dialing plan: Private network settings” on page 269
 - “Dialing plan: Routing and destination codes” on page 235
 - Networking sections
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Using destination codes” on page 327
 - “Private networking: PRI Call-by-Call services” on page 331
 - “Private networking: PRI and VoIP tandem networks” on page 311
 - “Private networking: MCDN and ETSI network features” on page 307
 - “Private networking: MCDN over PRI and VoIP” on page 285

Configuring PRI Call-by-Call services

Call-by-Call service selection (CbC) allows you to access services or private facilities over a PRI line without the need for dedicated facilities. The different services represent different types of access to the network.

The following protocols support Call-by-Call limits:

- National ISDN 2 (NI-2)
- DMS100 custom
- DMS250
- AT&T 4ESS custom

There are several areas in the interface where you need to configure Call-by-Call services and the PRI lines that support these services.

To configure Call-by-Call services and the PRI lines

- 1 Set up the DTM module to support PRI.
- 2 Set up the Call-by-Call services selection for the module. Refer to [“Call-by-Call Service Selection” on page 87](#).
- 3 Provision the PRI lines. Refer to [“Provisioning module lines/loops” on page 90](#).
- 4 Configure the PRI lines. Refer to [“Configuring lines: PRI” on page 133](#).
- 5 Configure target lines, if they are not already configured for your system. Refer to [“Configuring lines: Target lines” on page 129](#).
- 6 Assign the PRI line pools to telephones. Refer to “Line Access - Line Pool Access tab in the *BCM50 Device Configuration Guide* (N0027146).
- 7 Assign the target lines to telephones. Refer to “Line Access - Line Pool Access tab in the *BCM50 Device Configuration Guide* (N0027146) and Line pools: DN’s tab in the *BCM50 Device Configuration Guide* (N0027146).
- 8 Set up routing for the PRI pools. Refer to [“Programming the PRI routing table” on page 251](#).
- 9 Set up call-by-call limits for the line pools. Refer to [“Line pools: Call-by-Call Limits tab \(PRI only\)” on page 348](#). Set up routing scheduling for the PRI line pools.

Chapter 11

Configuring lines: T1-E&M

E&M lines must be digital (T1).

The following paths indicate where to access the E&M lines in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: Configure T1 E&M lines connected to the system

- [“Prerequisites” on page 139](#)
- [“Process map” on page 139](#)
- [“Configuring E&M line features” on page 143](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| DTM module: Installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| Lines are provisioned. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 40](#), [Figure 41](#), and [Figure 42](#) provide an overview for configuring the line features for T1-E&M lines.

Figure 40 T1-E&M line configuration process — Part A

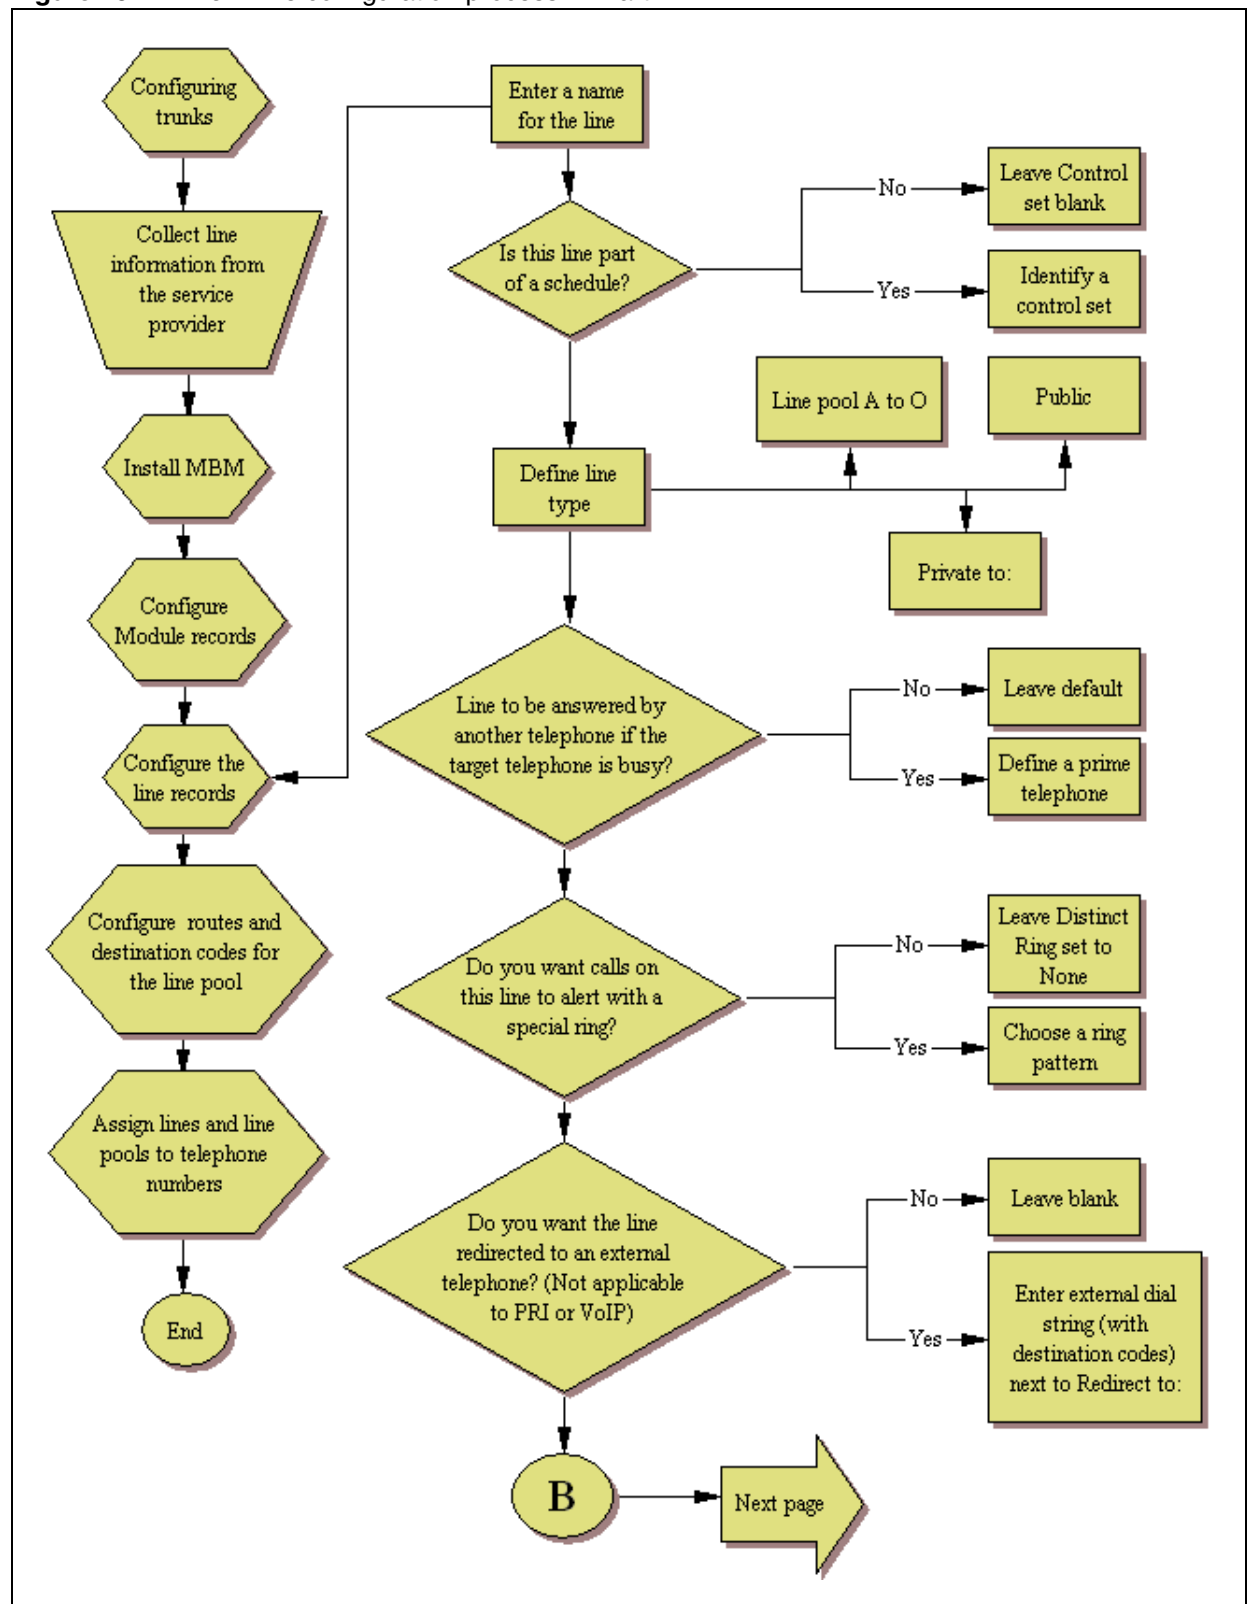


Figure 41 T1-E&M line configuration process — Part B


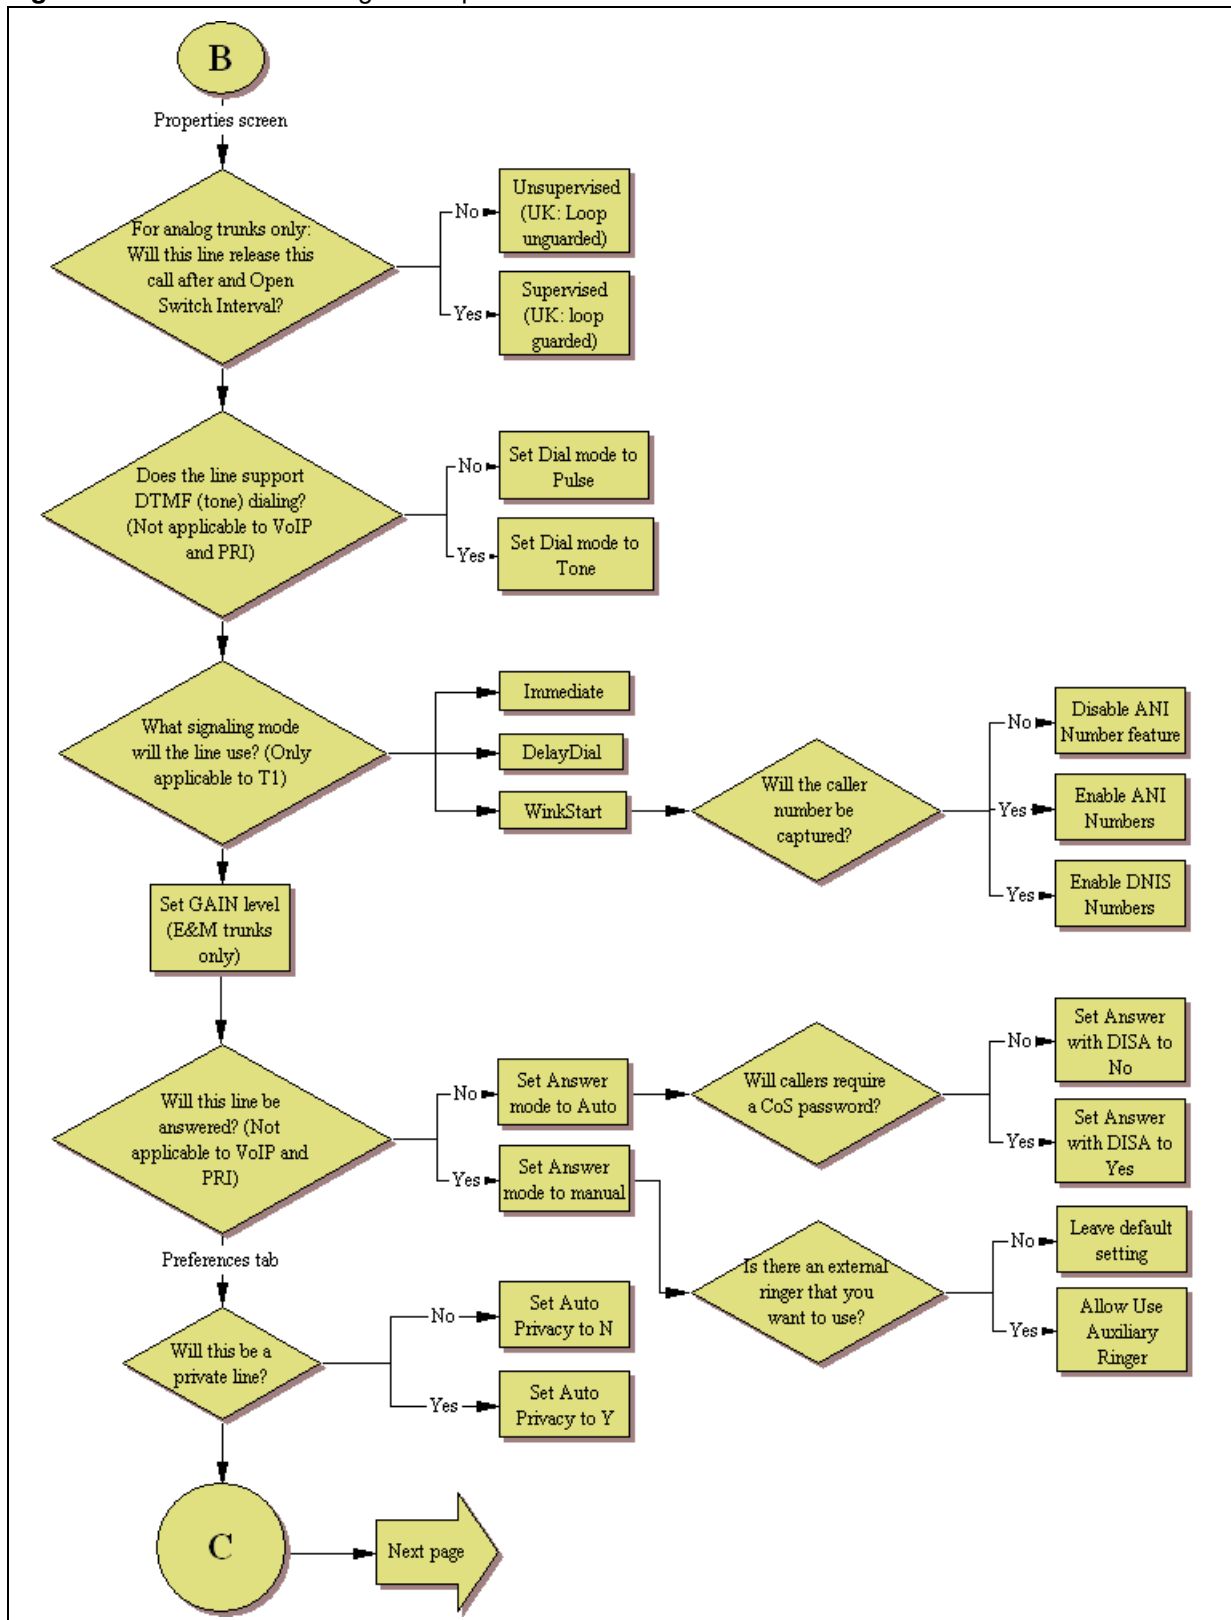


Figure 42 T1-E&M line configuration process — Part C

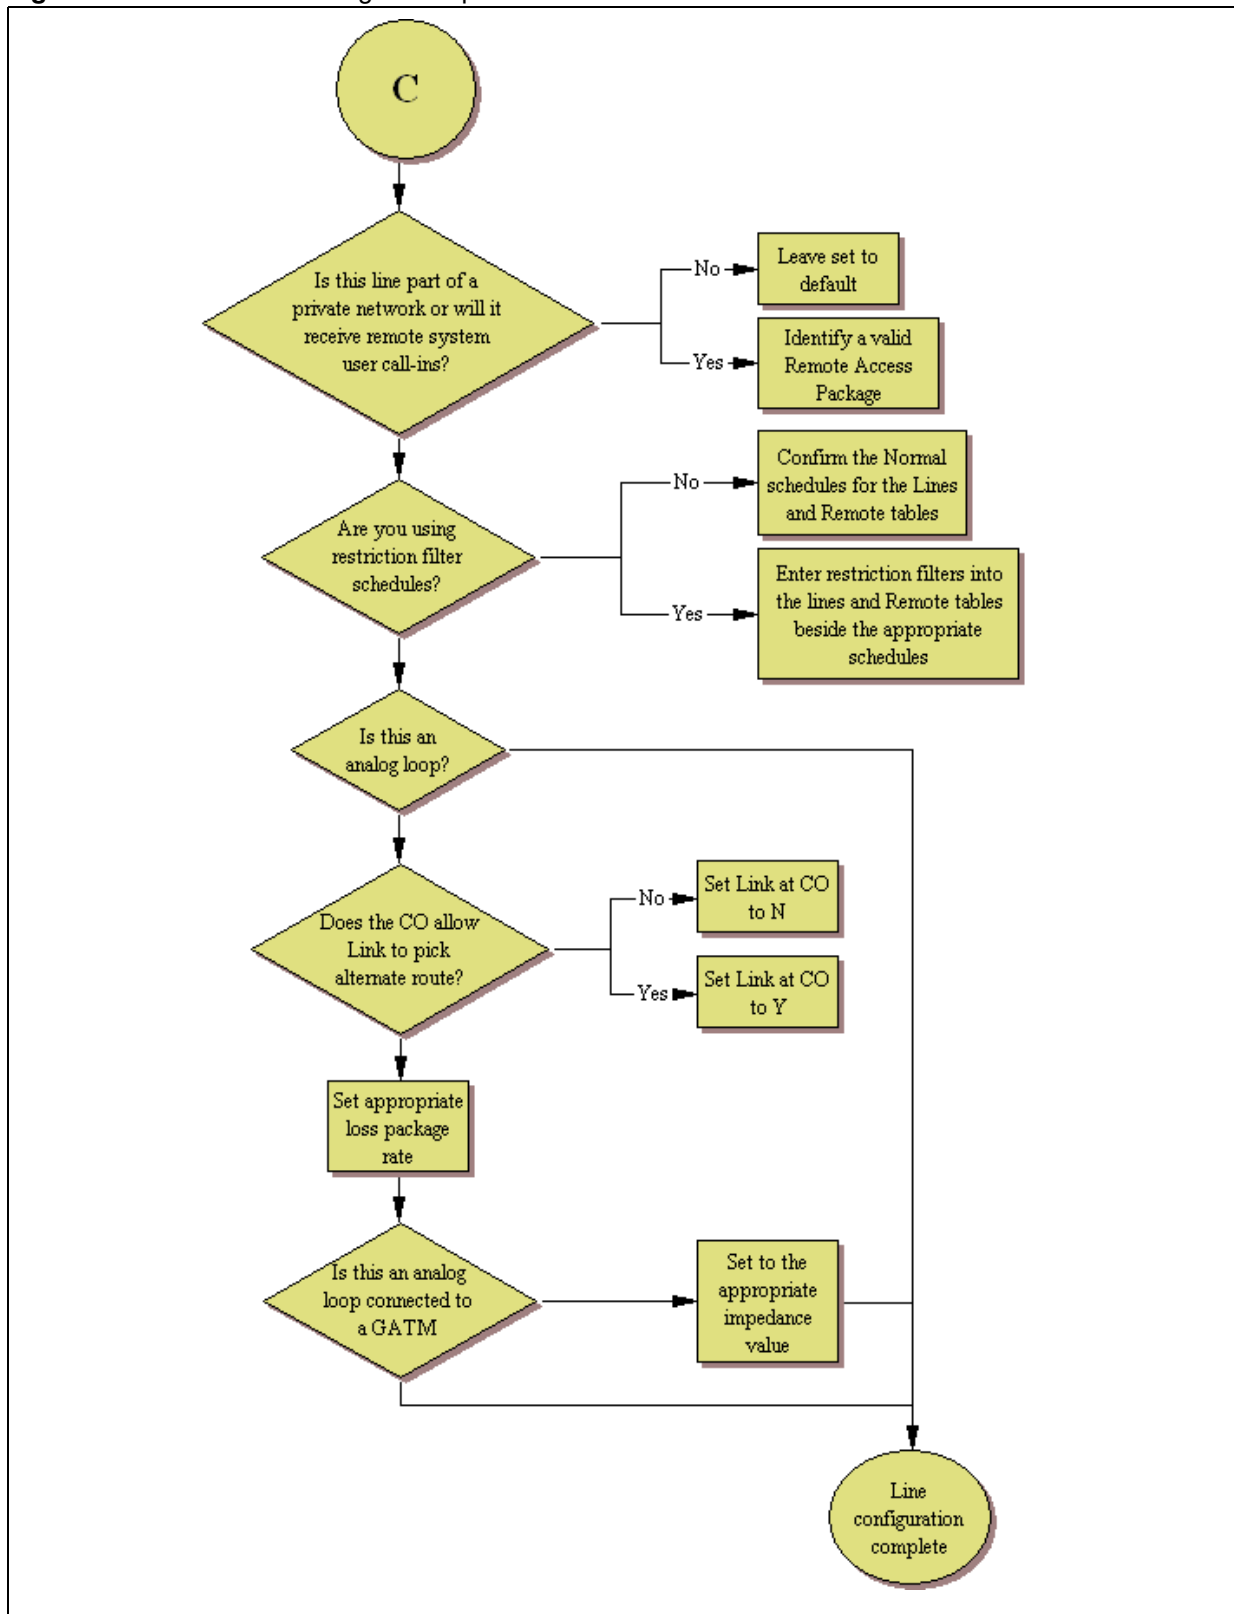

Configuring E&M line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

- 1** Confirm or change the settings on the Trunk/Line Data main panel:
 - Line: Line number.
 - Trunk Type: E&M.
 - Name: Identify the line or line function.
 - Control Set: Identify a DN if you are using this line with scheduling.
 - Line Type: Define how the line will be used. If you are using routing, ensure it is put into line pool (A to O). If you use line pools, you also need to configure target lines and assign the target lines to DNs. Refer to [“Configuring Target line settings” on page 132](#).
 - Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
 - Pub. Received #: Not applicable.
 - Priv. Received #: Not applicable.
 - Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, or 4).
 - Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid package.
- 2** Configure the trunk/line data (Properties tab):
 - Dial mode: The line service will dictate whether this needs to be set to Pulse or Tone (DTMF) dialing. These are the only two sections available
 - Signaling: Match this choice with the information supplied by the service provider.
- 3** Set the preferences (Preferences tab):
 - Auto privacy: If you activate this feature, the line is available only to the telephone that answers the call.
 - Aux. ringer: Use if your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
 - ANI number: Enable if the caller number is to be logged. For T1 lines, this only appears if Signaling is set to WinkStart.
 - DNIS number: Defines whether the digits dialed by an external caller on this line will be shown.
 - Answer mode: If this line is used for remote call-ins, determine how you want the line to answer (Auto or Manual). If the answer mode is set to Auto, decide whether the caller will be immediately connected to the system or whether a stuttered dial tone will require the caller to enter a CoS password.
 - Voice message center: If the system is using a remote voicemail, pick the center configured with the contact number.
 - Distinct rings: If you want this line to have a special ring, indicate a pattern (2, 3, 4, or None).

- Redirect to: If you want to automatically direct calls out of the system to a specific telephone, such as a headoffice answer attendant, enter that remote number here. Ensure that you include the proper routing information.
- 4** Set the restriction and remote package scheduling (Restrictions tab):
- Use remote package: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)
 - Line restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
 - Remote Restrictions: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)
- 5** Assign the lines to DNs (Assigned DNs tab)(applicable to manual answer only)

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs, here. The DN record also can be used to assign lines and line pools for these lines.

- DN: Unique number.
 - Appearance type: Choose Appr or Appr&ring if the telephone has an available button, otherwise choose Ring only. Model 7000 and 7100 telephones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
 - Vmsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system. Check with your system administrator for the system voicemail setup before changing this parameter.
- 6** Suggested next steps:
- Dialing plan sections
 - “Dialing plan: System settings” on page 255
 - “Dialing plan: Public network” on page 263
 - “Dialing plan: Routing and destination codes” on page 235)
 - Networking sections
 - “Public networking: Setting up basic systems” on page 277
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Using shared line pools” on page 379
 - “Private networking: Using destination codes” on page 327

Chapter 12

Configuring lines: T1-Loop start

Loop start trunks provide remote access to the BCM50 from the public network. They must be configured to auto-answer to provide remote system access. A loop start trunk must have disconnect supervision if it is to operate in the auto-answer mode.

The following paths indicate where to access the loop start trunks information through Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: Configure the analog or digital loop start lines connected to the system.

- [“Prerequisites” on page 145](#)
- [“Process map” on page 145](#)
- [“Configuring digital \(T1/E1\) loop start lines” on page 149](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| Analog or DTM module is installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| Lines are provisioned. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 43](#), [Figure 44](#), and [Figure 45](#) provide an overview of the configuration process for T1-Loop start lines.

Figure 43 T1-Loop start line configuration process — Part A

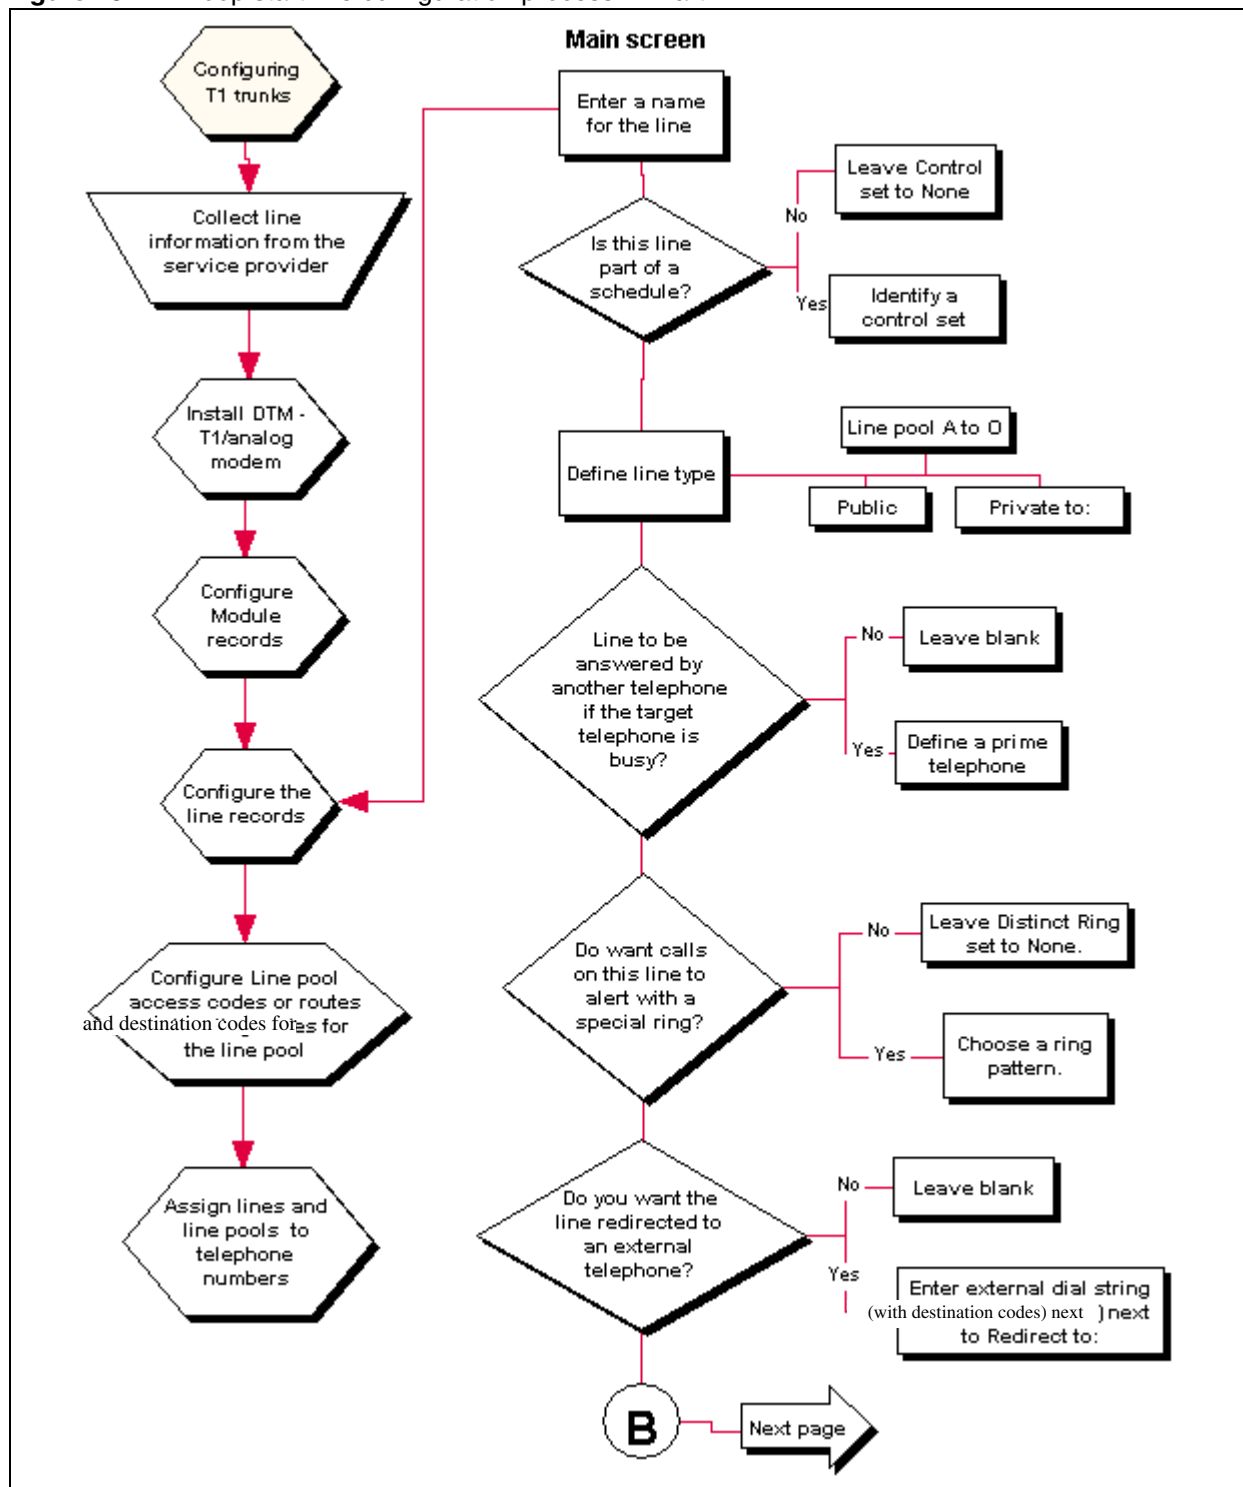


Figure 44 T1-Loop start line configuration process — Part B


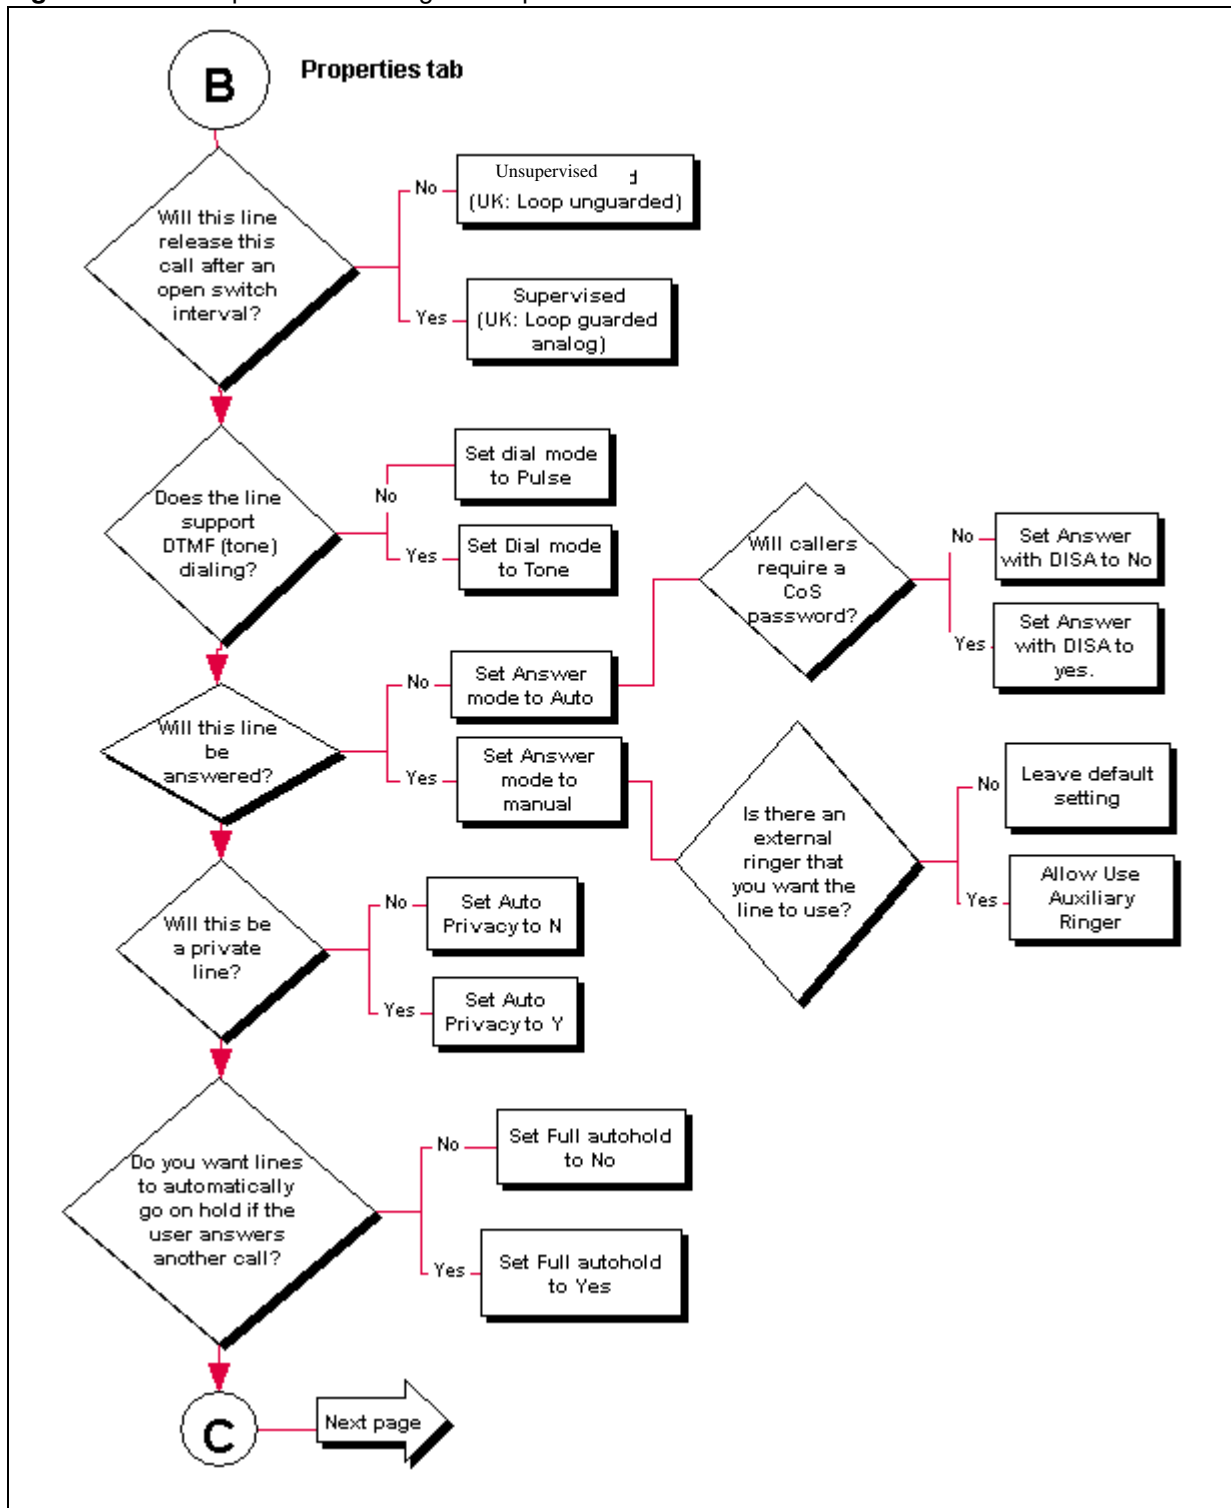


Figure 45 T1-Loop start line configuration process — Part C

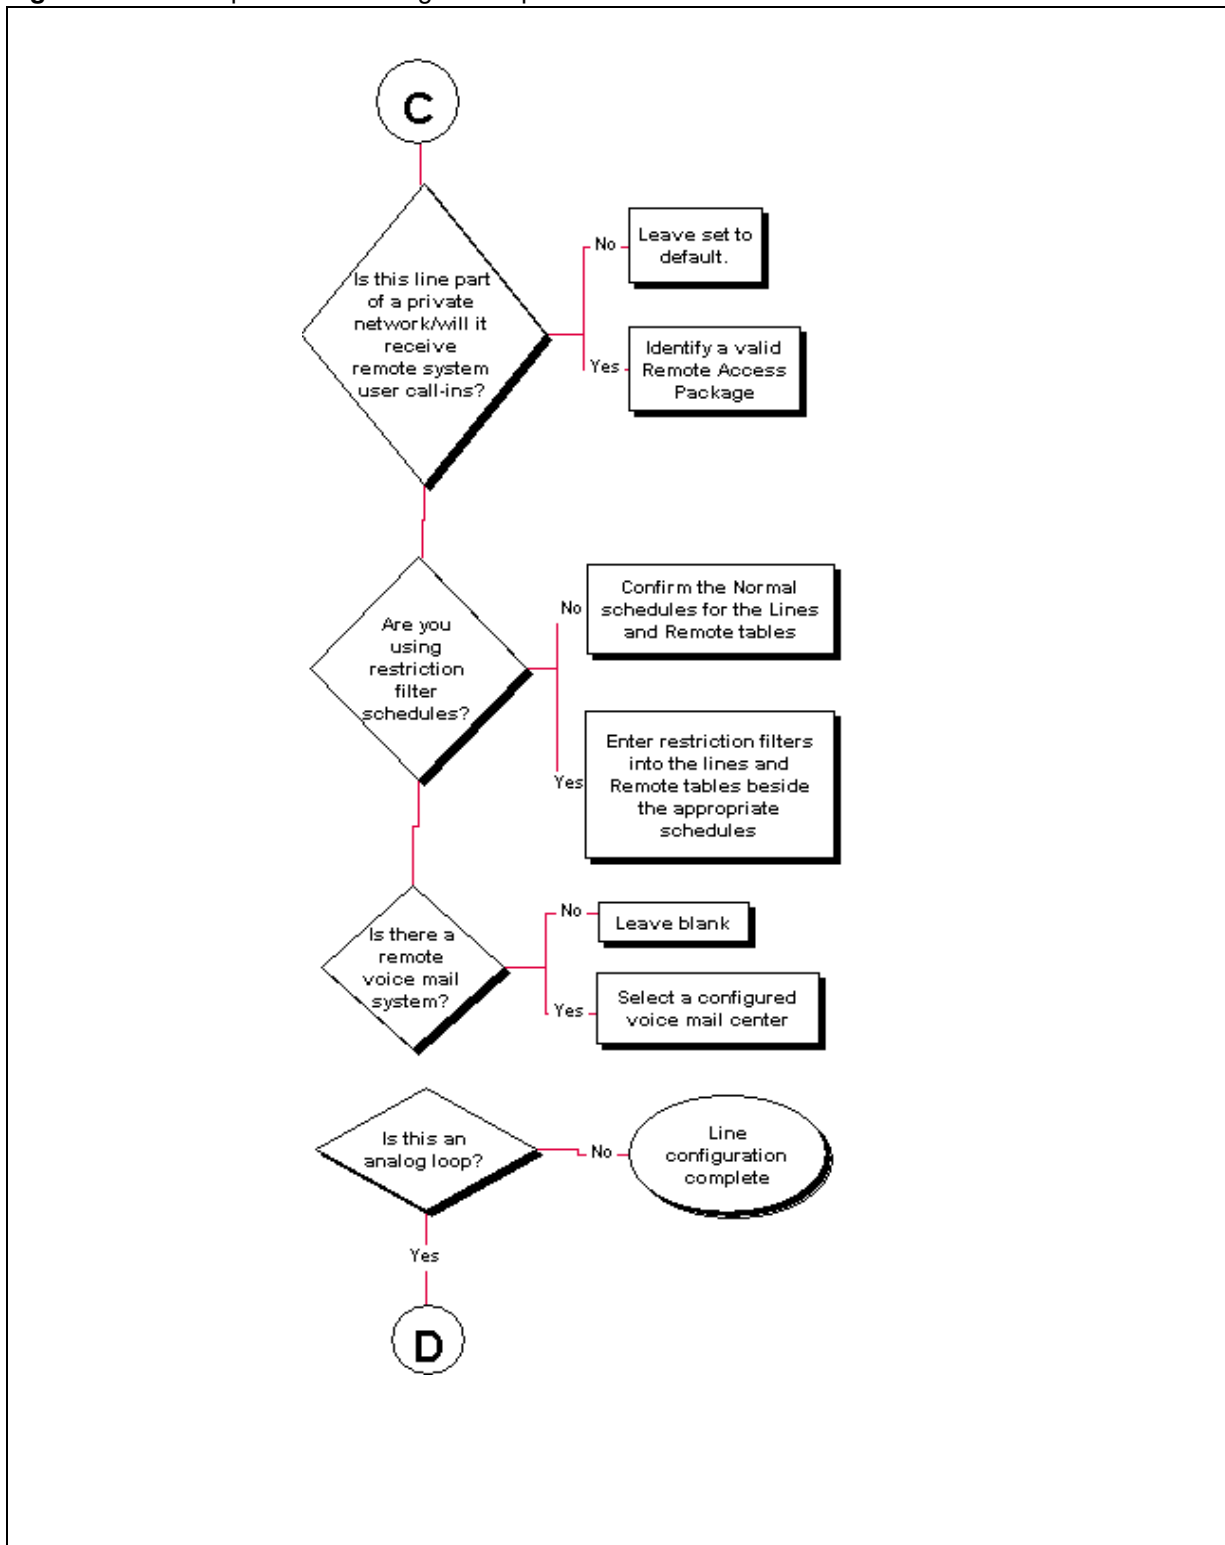

Configuring digital (T1/E1) loop start lines

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

To configure digital loop start lines

- 1 Confirm or change the settings on the Trunk/Line Data main panel:
 - Line: Read only list shows available lines for system.
 - Trunk Type: Loop.
 - Name: Default name is line number, shown as part of incoming CLID.
 - Control Set: If you use schedules, enter DN for telephone that controls line schedules.
 - Line Type: Define as public, if the line is shared or as Private To (DN) if the line is assigned to a specific telephone, or put it in a line pool (A to O).
 - Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
 - Pub. Received #: Not applicable.
 - Priv. Received #: Not applicable.
 - Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4, or None).

Under the Properties tab:

- Trunk mode: Define whether the line will detect the open switch interval (OSI) when a call is released (supervised). Note: UK profiles use Loop guarded/Loop unguarded.
 - Dial mode: The line service will dictate whether this needs to be set to Pulse or Tone (DTMF) dialing.
- 2 Configure the trunk/line data (Preferences tab):
 - Auto privacy: If you activate this feature, the line is available only to the telephone that answers the call.
 - Full autohold: This allows telephones to put a line on hold if the user picks up another line or starts to dial out on another line.
 - Aux. ringer: If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
 - Distinct rings in use: Indicates if a special ring has been assigned.
 - Answer mode/Answer with DISA: If this line is used for remote call-ins, determine how you want the line to answer (automatically, or requiring more user input). If the answer mode is set to Auto, decide whether the caller will be immediately connected to the system or whether a stuttered dialtone will require the caller to enter a CoS password.
 - Voice Message Center: If the system is using a remote voicemail, pick the center configured with the contact number.
 - Redirect to: If you want to automatically direct calls out of the system to a specific telephone, such as a headoffice answer attendant, enter that remote number here. Ensure that you include the proper routing information.

Under the Restrictions tab:

- Use remote package: If this line allows remote call-ins, ensure that you define a remote package.
- Line Restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
- Remote Restrictions: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)

3 Assign the lines to DN's ([“Assigned DN's” on page 126](#))

If you have configured the DN's and know to which telephones the line needs to be assigned, you can enter those DN's here. The DN record also can be used to assign lines.

- DN: Unique number
- Appearance Type: Choose Appr only or Appr&Ring if the telephone has an available button with indicator, otherwise choose Ring only. The 7000 and 7100 digital phones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
- VMsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system. Check with your system administrator for the system voicemail setup before changing this parameter.

4 If the lines are assigned to a line pool:

- assign the line pool to DN's ([“Line Access - Line Pool Access tab” in the BCM50 Device Configuration Guide \(N0027146\)](#))
- also assign a target line to the DN record. ([“Line Access - Line Assignment tab”](#) and, [“Line Access - Line Pool Access tab” in the BCM50 Device Configuration Guide \(N0027146\)](#)).

5 Suggested next steps:

- Dialing plan sections
 - [“Dialing plan: System settings” on page 255](#)
 - [“Dialing plan: Public network” on page 263](#)
 - [“Dialing plan: Routing and destination codes” on page 235](#)
- Networking sections
 - [“Public networking: Setting up basic systems” on page 277](#)
 - [“Public networking: Tandem calls from private node” on page 281](#)
 - [“Private networking: Using shared line pools” on page 379](#)
 - [“Private networking: Using destination codes” on page 327](#)

Chapter 13

Configuring lines: T1-Digital Ground Start

This section describes how to configure digital Ground Start lines.

The following paths indicate where to access the Ground Start lines through Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: Configure ground start lines connected to the system

- [“Prerequisites” on page 151](#)
- [“Process map” on page 151](#)
- [“Configuring digital ground start line features” on page 154](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| DTM module is installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| Lines are provisioned. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 46](#) and [Figure 47](#) provide an overview of the line features for Ground Start lines.

Figure 46 T1-Digital Ground Start lines configuration process — Part A


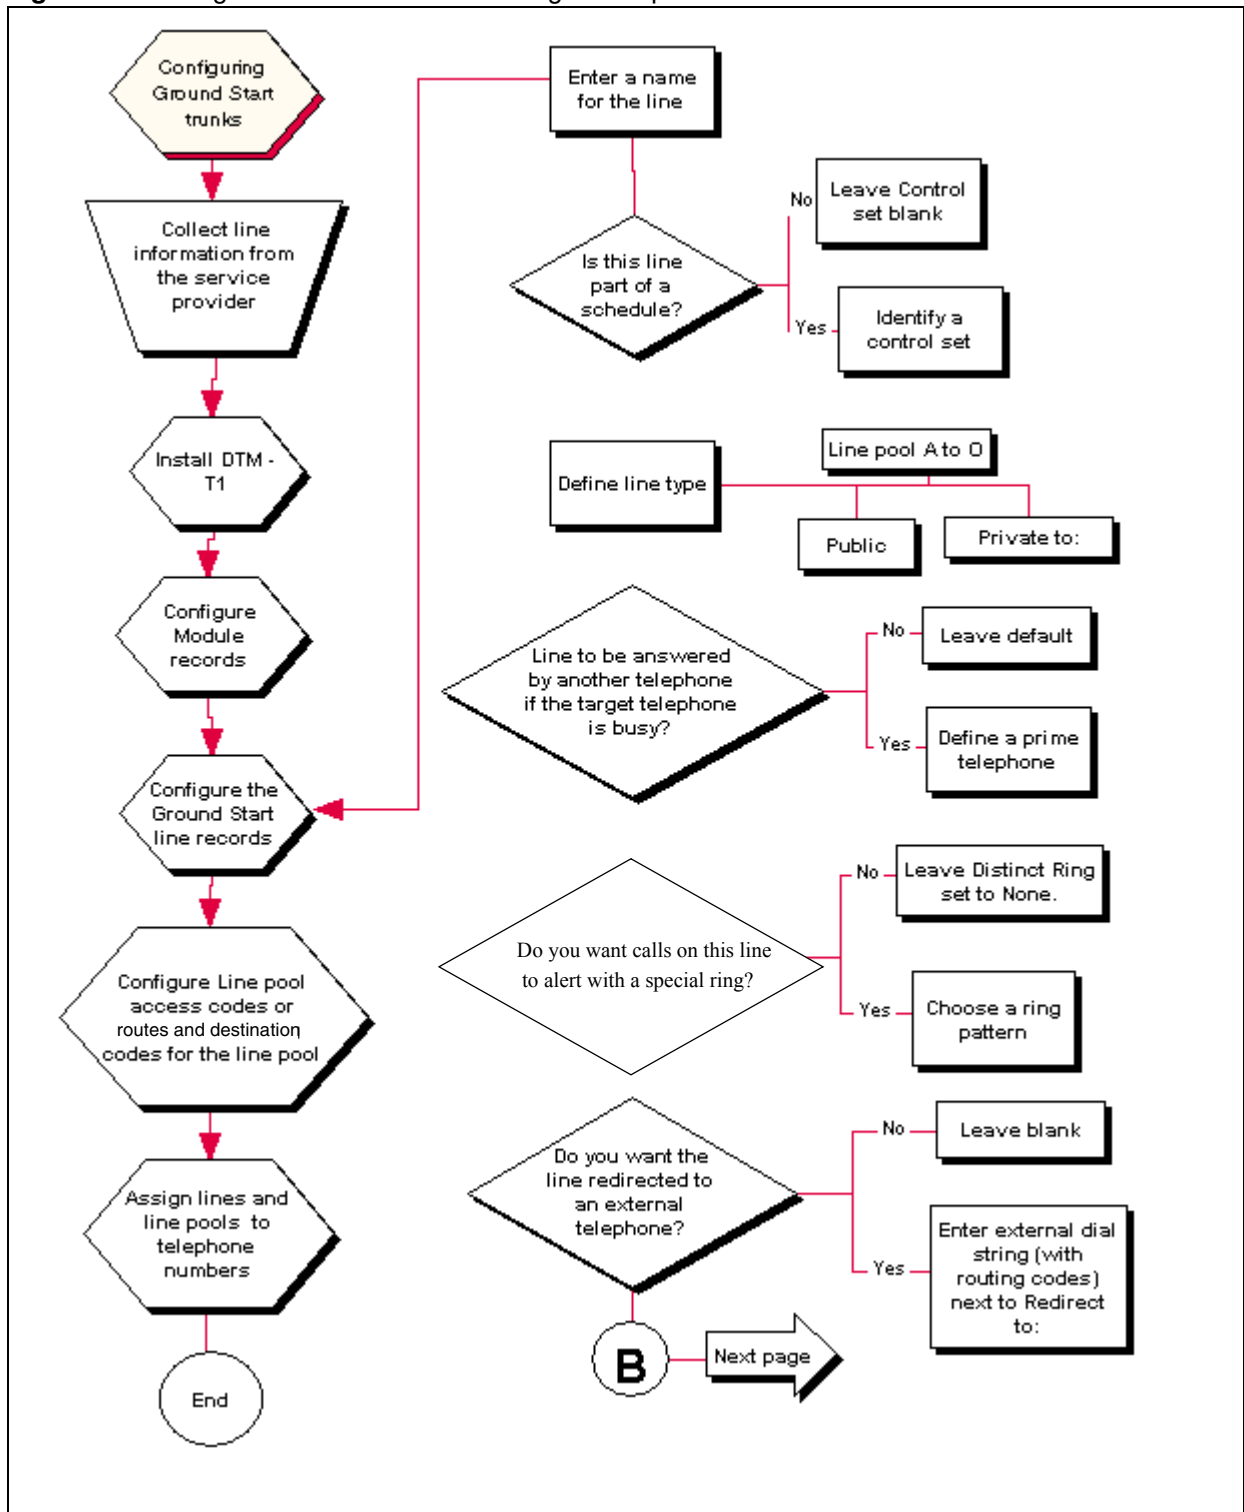


Figure 47 T1-Digital Ground Start lines configuration process — Part B

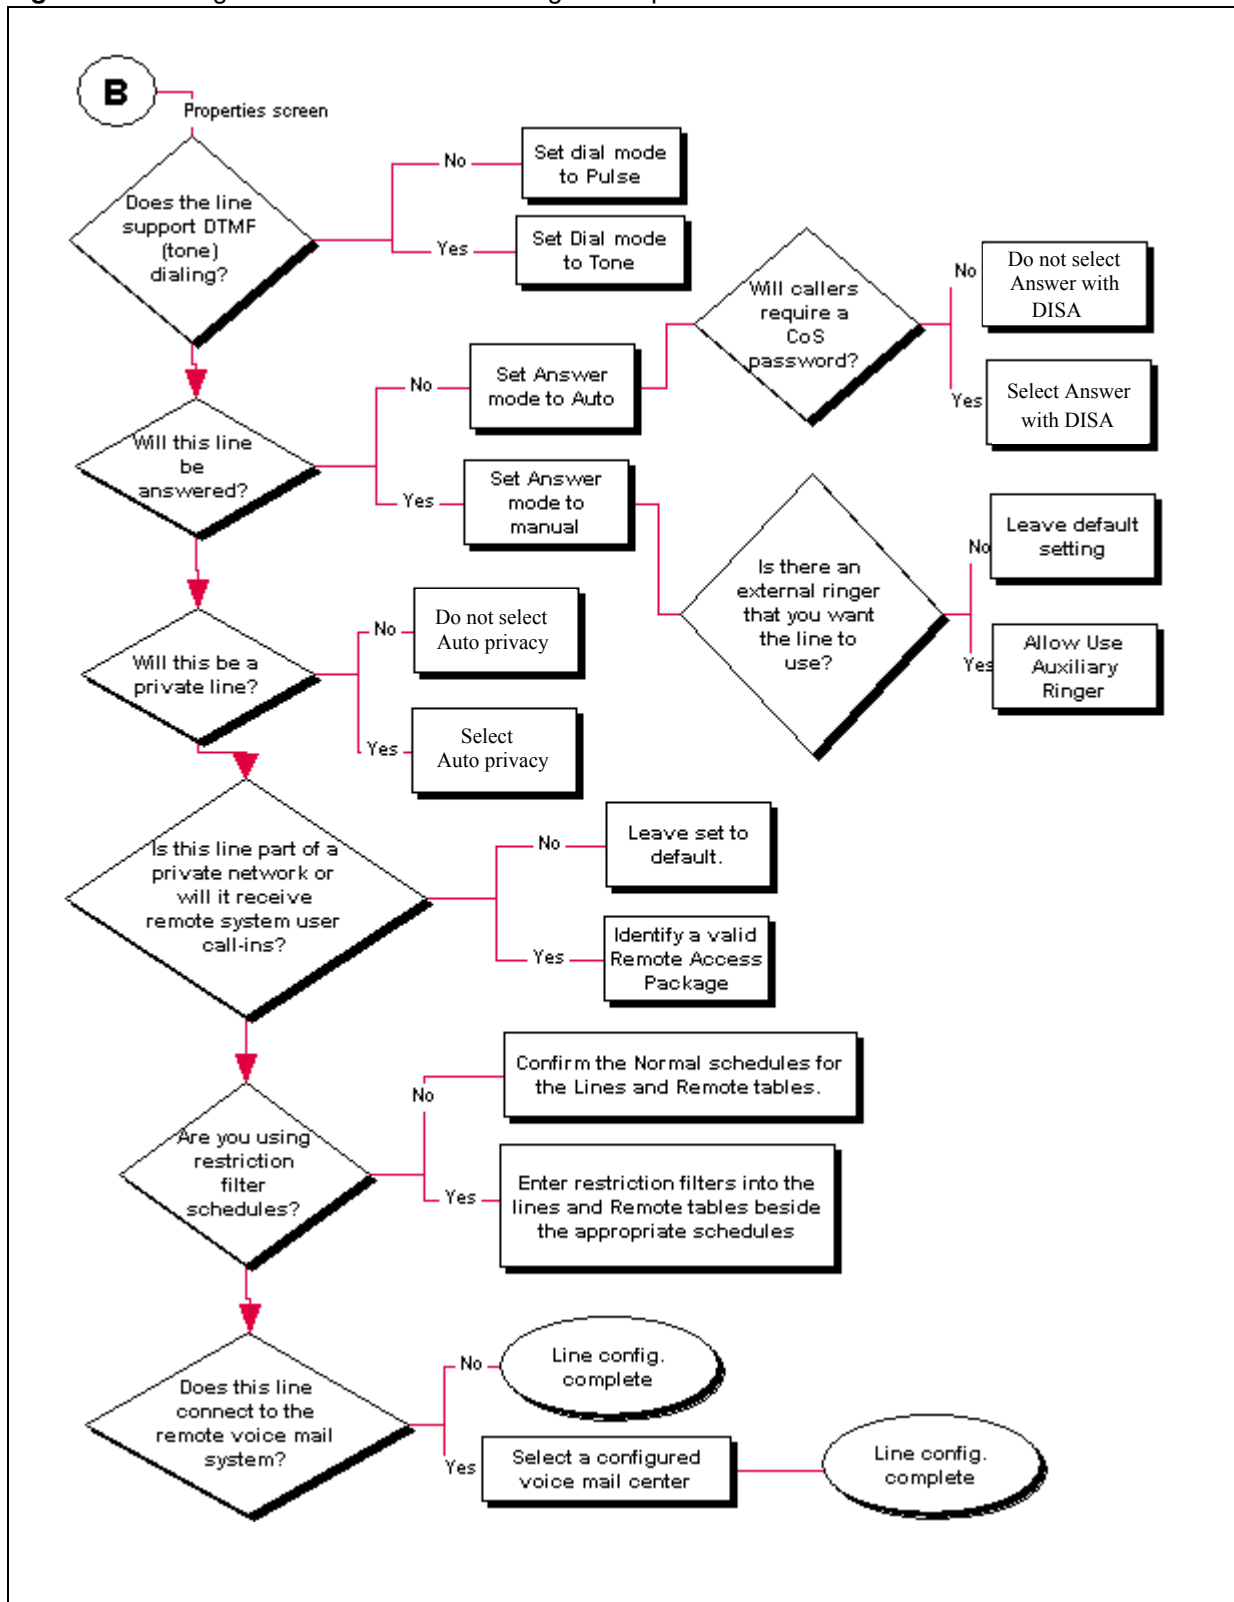

Configuring digital ground start line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

To configure digital Ground Start line features

- 1** Confirm or change the settings on the Trunk/Line Data main panel:
 - Line: Unique number.
 - Trunk type: Ground Start.
 - Name: Identify the line or line function.
 - Control set: Identify a DN if you are using this line with scheduling.
 - Line type: Define how the line will be used. If you are using routing, ensure it is put into line pool (A to O). If you are using line pools, you must also configure target lines. ([“Configuring lines: Target lines” on page 129](#))
 - Prime set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
 - Pub. Received #: Not applicable.
 - Priv. Received #: Not applicable.
 - Distinct ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4, or None).
 - Restrictions tab: Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid package.
- 2** Configure the trunk/line data (Properties tab):
 - Auto privacy: If you activate this feature, the line is available only to the telephone that answers the call.
 - Dial mode: The line service will dictate whether this needs to be set to Pulse or Tone (DTMF) dialing.
 - Answer mode/Answer with DISA: If this line is used for remote call-ins, determine how you want the line to answer (automatically, or requiring more user input). If the answer mode is set to Automatic, decide whether the caller will be immediately connected to the system or whether a stuttered dial tone will require the caller to enter a CoS password.
 - Aux. ringer: If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
 - Redirect to: If you want to automatically direct calls out of the system to a specific telephone, such as a headoffice answer attendant, enter that remote number here. Ensure that you include the proper routing information.
 - Voice Message Center: If the system is using a remote voicemail, pick the center configured with the contact number.
- 3** Set the restriction and remote package scheduling (Restrictions tab):
 - Line restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)

- Remote Packages: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)

4 Assign the lines to DNs (Assigned DNs tab)

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs here. The DN record also can be used to assign lines and line pools for these lines.

- Appearance Type: Choose Appr only or Appr&Ring if the telephone has an available button, otherwise choose Ring only. Model 7000 and 7100 telephones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
- VMsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system. Check with your system administrator for the system voicemail setup before changing this parameter.

5 Suggested next steps:

- Dialing plan sections
 - “Dialing plan: System settings” on page 255
 - “Dialing plan: Public network” on page 263
 - “Dialing plan: Routing and destination codes” on page 235
- Networking sections
 - “Public networking: Setting up basic systems” on page 277
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Using shared line pools” on page 379
 - “Private networking: Using destination codes” on page 327

Chapter 14

Configuring lines: T1-DID

DID (Direct Inward Dial) are lines on a digital trunk module on a T1. Inbound DID lines are mapped through target lines.

The following paths indicate where to access the DID lines in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: Configure the properties for DID (Direct Inward Dial) lines

- [“Prerequisites” on page 157](#)
- [“Configuring DID line features” on page 160](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| DTM module is installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| Lines are provisioned. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 48](#) and [Figure 49](#) provide an overview of the DID line features configuration process.

Figure 48 DID line feature configuration process — Part A


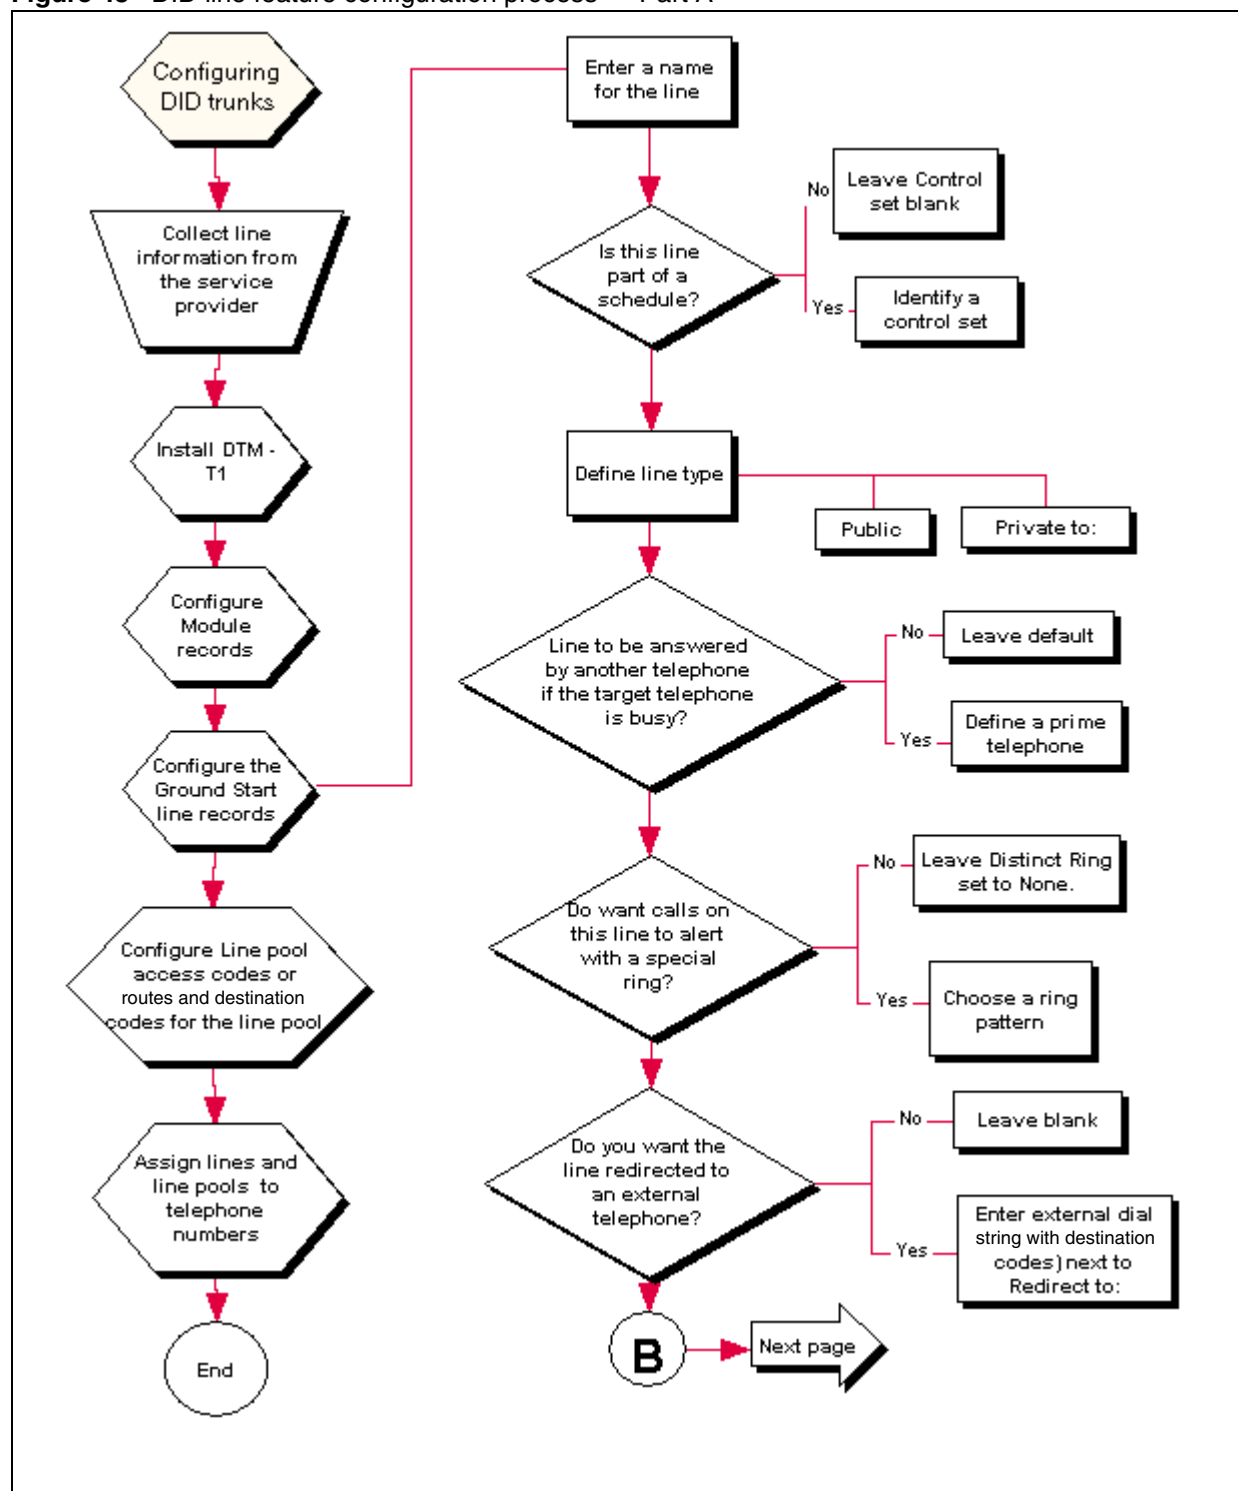


Figure 49 DID line feature configuration process — Part B

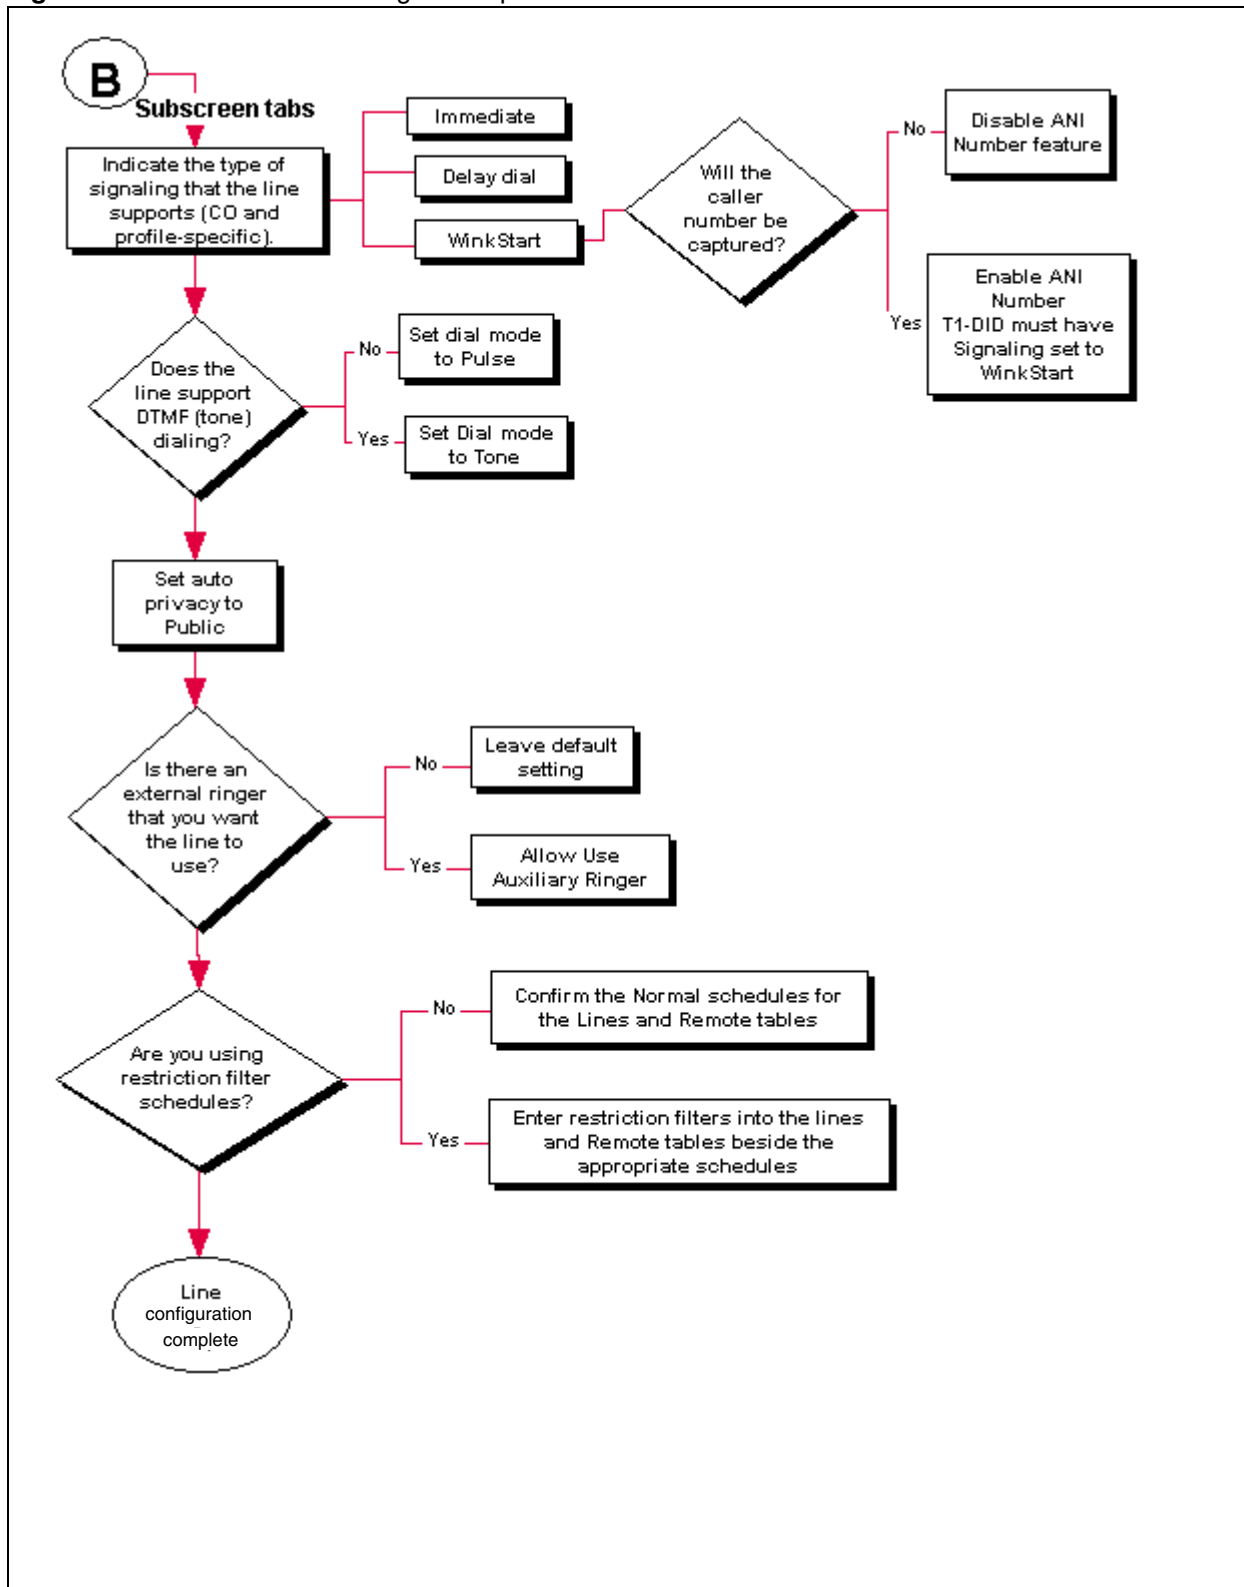

Configuring DID line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

To configure DID line features

- 1** Confirm or change the settings on the Trunk/Line Data main panel:
 - Trunk Type: T-1 DID
 - Name: Identify the line or line function.
 - Control Set: Identify a DN if you are using this line with scheduling.
 - Line Type: Define as public if the line is shared, or as Private To (DN) if the line is assigned to a specific telephone.
 - Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
 - Pub. Received #: Not applicable.
 - Priv. Received #: Not applicable.
 - Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, or 4).
 - Use remote package: Not applicable.
- 2** Configure the trunk/line data (Properties tab):
 - Dial mode: The line service will dictate whether this needs to be set to Pulse or Tone (DTMF) dialing.
 - Signaling: Match this choice with the information supplied by the service provider.
- 3** Set the restriction and remote package scheduling (Restrictions tab):
 - Line restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
 - Remote Restrictions: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)
- 4** Assign the lines to DNs (Assigned DNs tab)(applicable to manual answer only)

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs, here. The DN record also can be used to assign lines and line pools for these lines.

- Appearance type: Choose Appear or Appear and ring if the telephone has an available button, otherwise choose Ring Only. Model 7000 and 7100 telephones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
- VMsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system.

Check with your system administrator for the system voicemail setup before changing this parameter.

5 Suggested next steps:

- Dialing plan sections
 - “Dialing plan: System settings” on page 255
 - “Dialing plan: Public network” on page 263
 - “Dialing plan: Routing and destination codes” on page 235
- Networking sections
 - “Public networking: Setting up basic systems” on page 277
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Using shared line pools” on page 379
 - “Private networking: Using destination codes” on page 327

Chapter 15

Configuring lines: DASS2 lines

DASS2 trunks are specific to the UK protocol.

The following paths indicate where to access the DASS2 trunks in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset Interface: **CONFIG>Lines

Task: configure DPNSS lines connected to the system

- [“Configuring DASS2 line features” on page 165](#)
- Also refer to [“Private networking: DPNSS network services \(UK only\)” on page 319](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| DTM module is installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| Lines are provisioned. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 50](#) and [Figure 51](#) provide an overview of the DASS2 line feature configuration.

Figure 50 DASS2 line feature configuration process — Part A


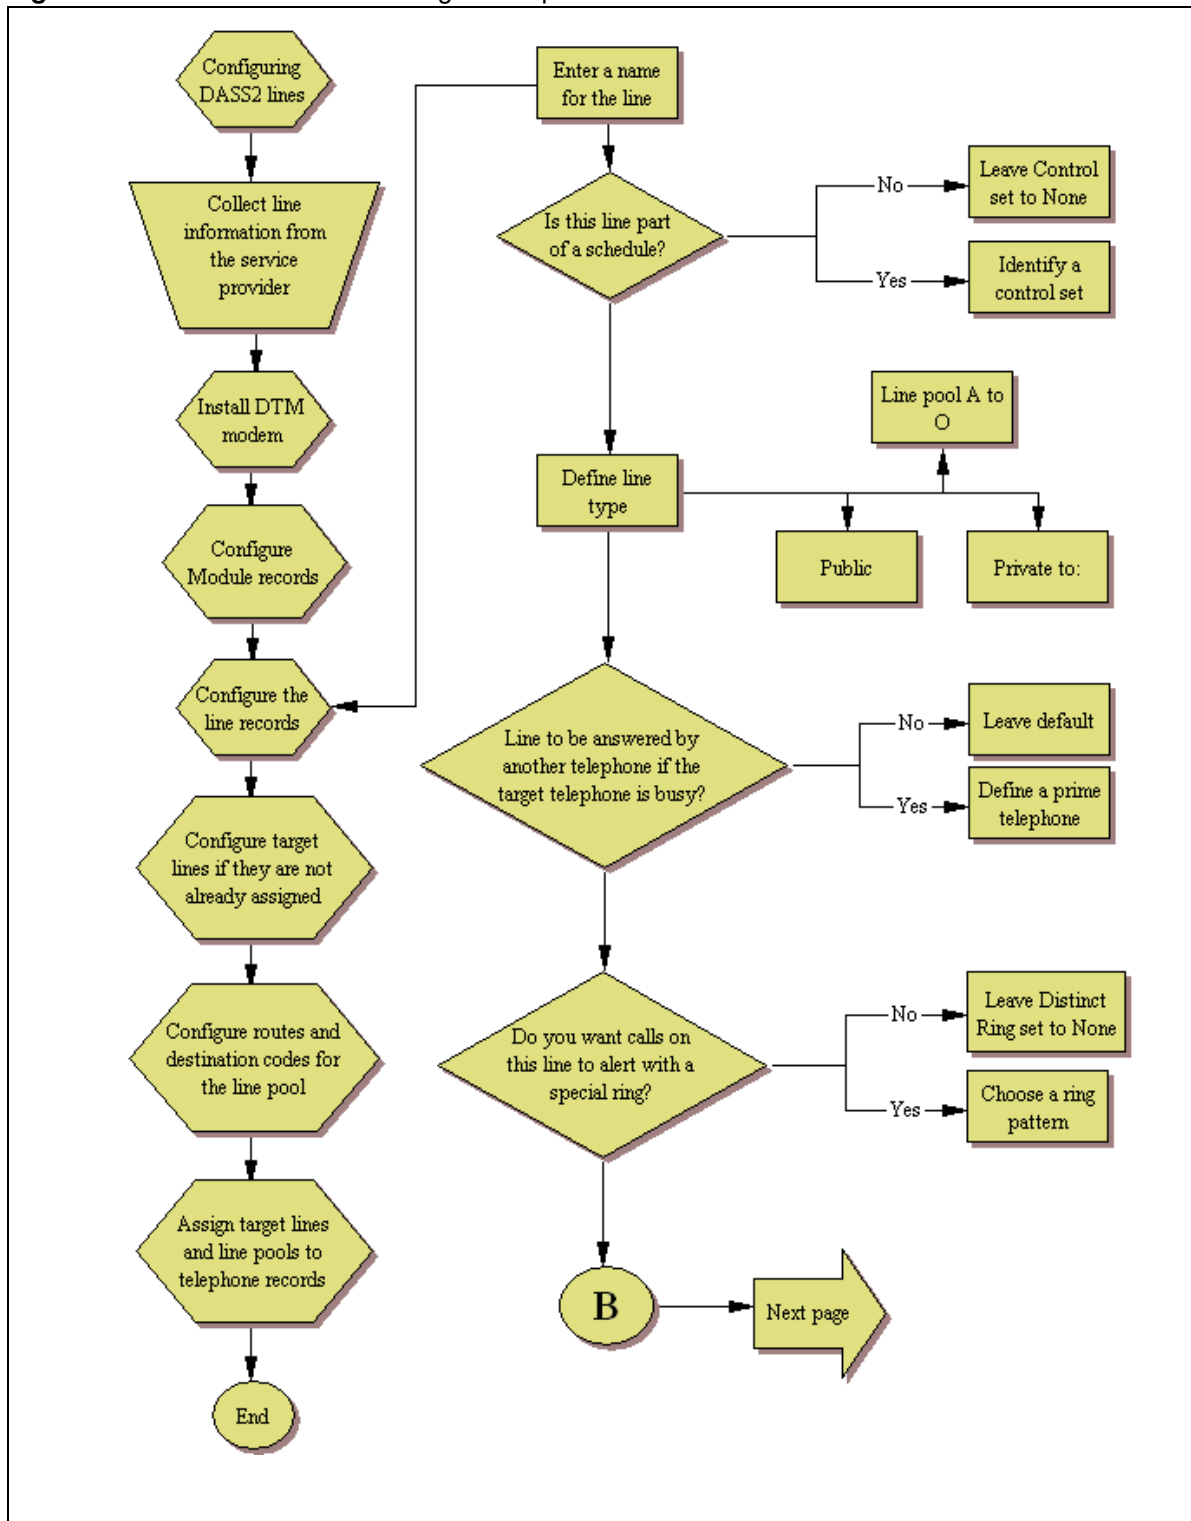


Figure 51 DASS2 line feature configuration process — Part B

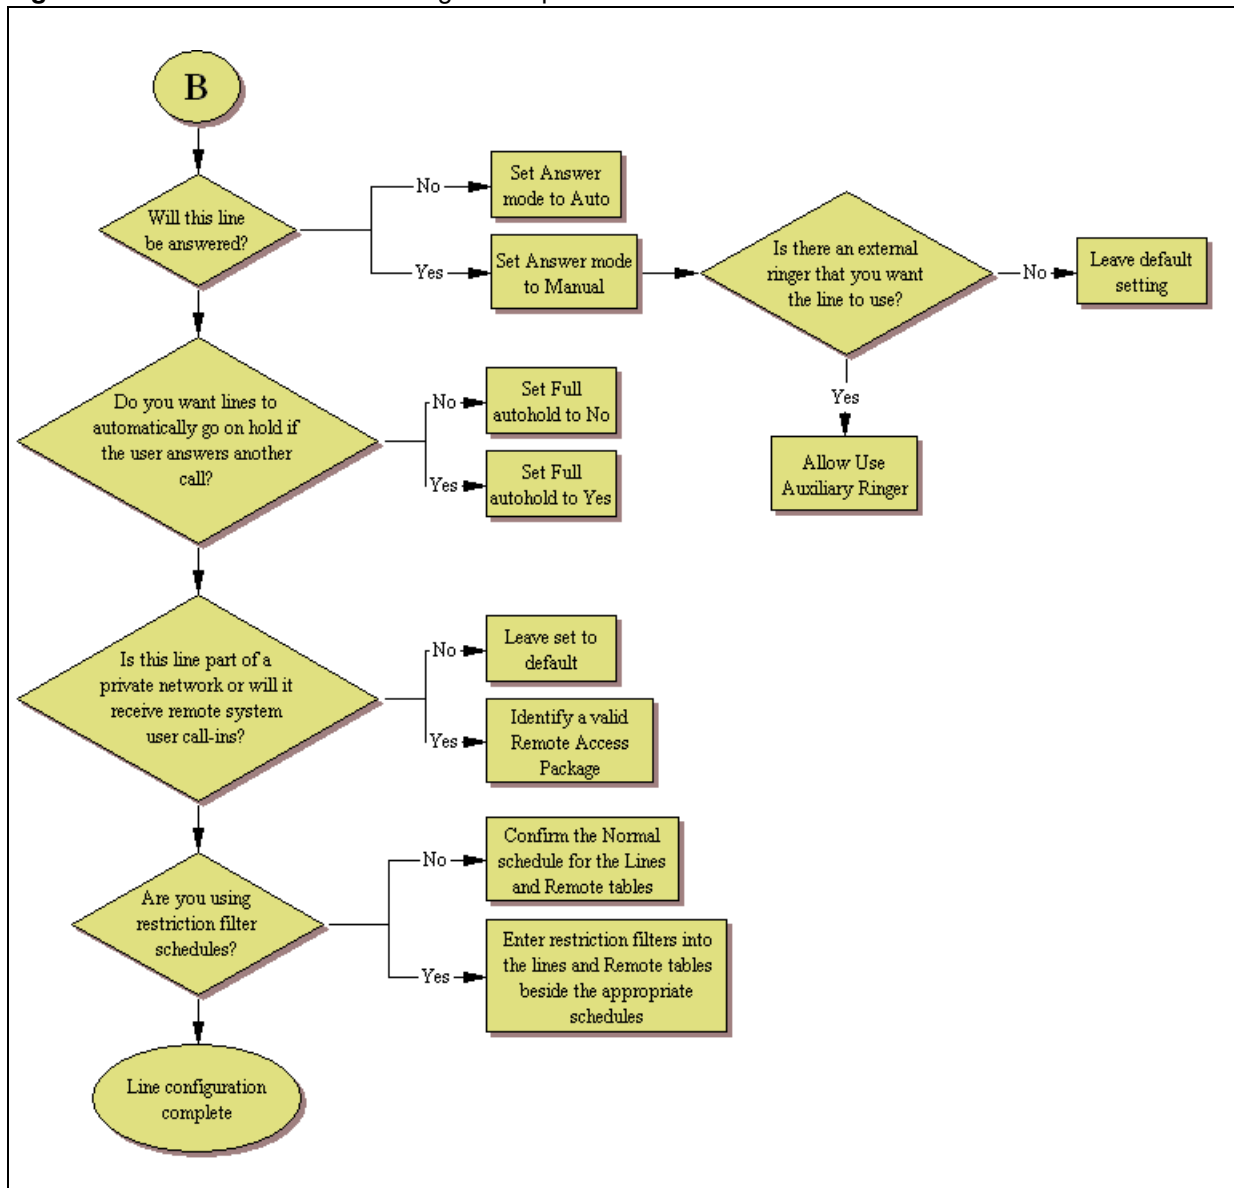

Configuring DASS2 line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

- 1 Confirm or change the settings on the Trunk/Line Data main panel:
 - Trunk type: DASS2
 - Name: Identify the line or line function.
 - Control Set: Identify a DN if you are using this line with scheduling.

- Line type: Define how the line will be used. If you are using routing, ensure it is put into line pool (A to O).
- Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
- Pub. Received #: Not applicable.
- Priv. Received #: Not applicable.
- Distinct ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4 or None).
- Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid package.

2 Configure the trunk/line data (Properties tab):

- Answer mode: If this line is used for remote call-ins, determine how you want the line to answer (automatically, or requiring more user input).
- Use auxiliary ringer: If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
- Full autohold: This allows telephones to put a line on hold if the user picks up another line or starts to dial out on another line.
- Voice Message Center: If the system is using a remote voicemail, pick the center configured with the contact number.

3 Set the restriction and remote package scheduling (Restrictions tab):

- Line restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
- Remote Packages: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)

4 Assign the lines to DNs (Assigned DNs tab)

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs, here. The DN record also can be used to assign lines and line pools for these lines.

- Appearance type: Choose Appr or Appr&ring if the telephone has an available button, otherwise choose Ring only. Model 7000 and 7100 telephones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
- VMmsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system. Check with your system administrator for the system voicemail setup before changing this parameter.

5 Suggested next steps:

- Dialing plan sections

[“Dialing plan: System settings” on page 255](#)

[“Dialing plan: Public network” on page 263](#)

[“Dialing plan: Private network settings” on page 269](#)

[“Dialing plan: Routing and destination codes” on page 235](#)

- Networking sections
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Using destination codes” on page 327
 - “Private networking: DPNSS network services (UK only)” on page 319
 - “Private networking: MCDN over PRI and VoIP” on page 285

Chapter 16

Configuring lines: DPNSS lines

DPNSS trunks are specific to the UK protocol.

The following paths indicate where to access the DPNSS trunks in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines
- Telset interface: **CONFIG>Lines

Task: configure DPNSS lines connected to the system

- [“Configuring DPNSS line features” on page 171](#)
- Also refer to [“Private networking: DPNSS network services \(UK only\)” on page 319](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| DTM module is installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| Lines are provisioned. Refer to “Provisioning module lines/loops” on page 90 . | |

Process map

[Figure 52](#) and [Figure 53](#) provide an overview of the DPNSS line feature configuration process.

Figure 52 DPNSS line feature configuration process — Part A


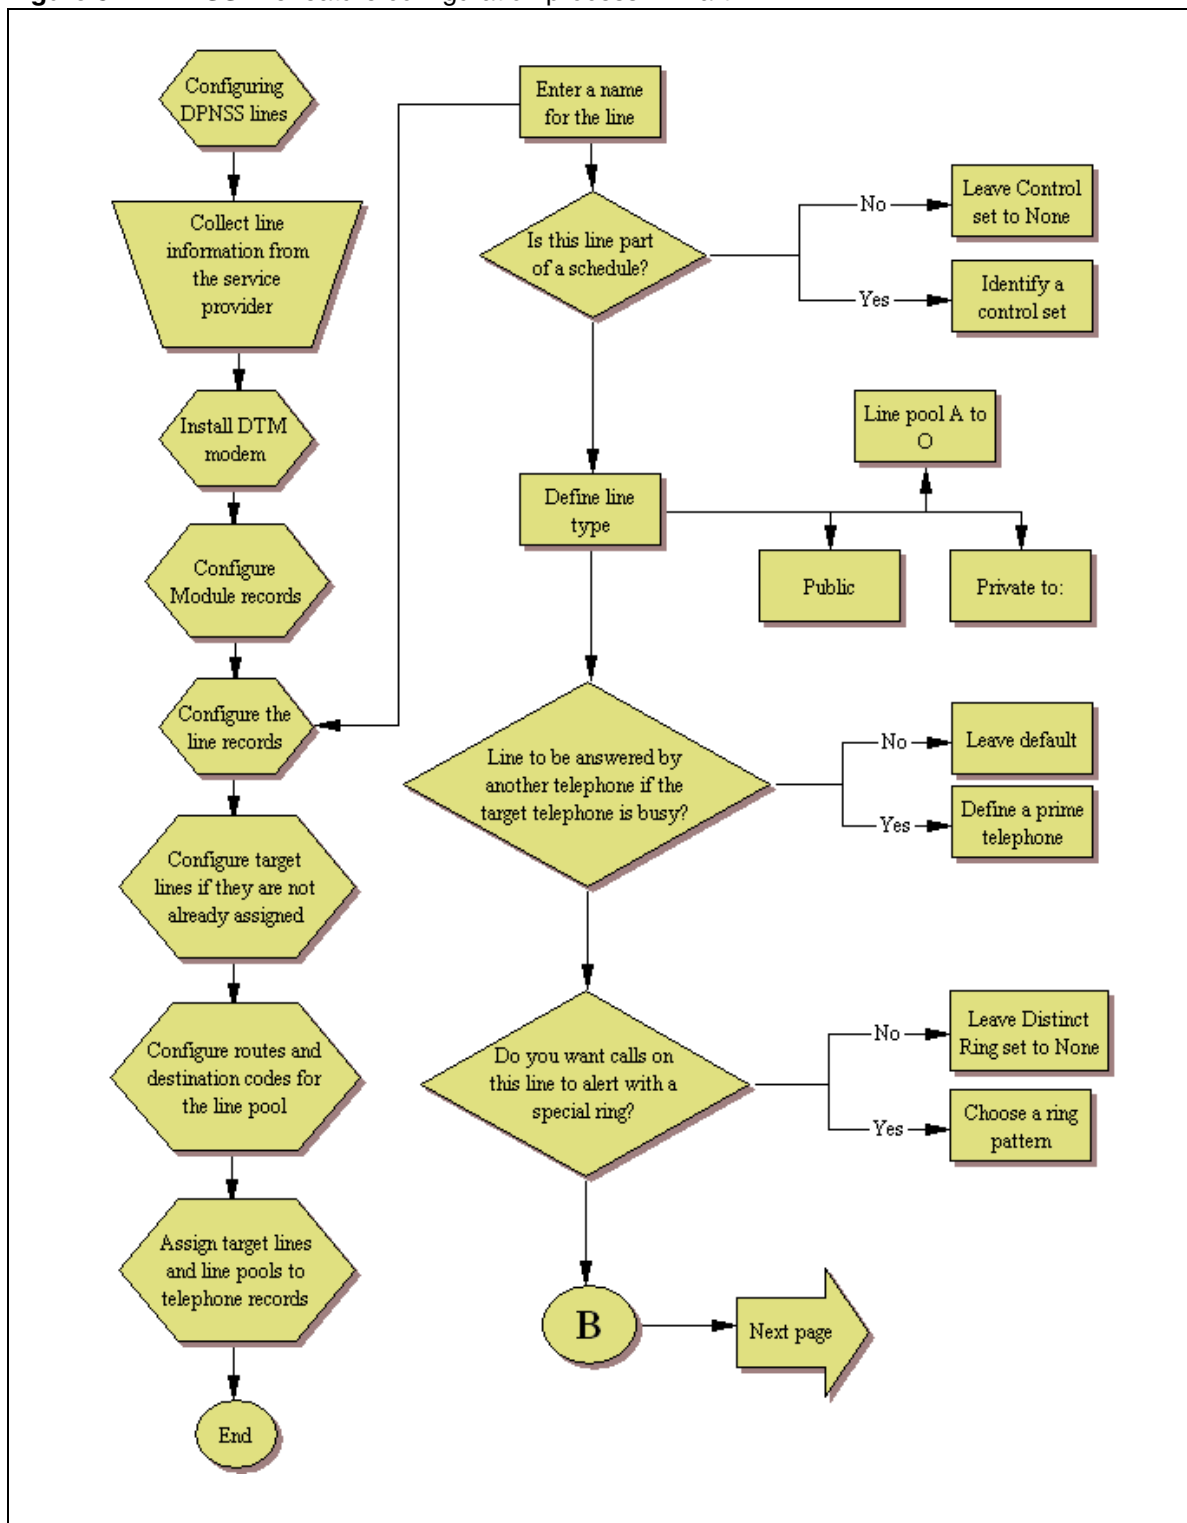


Figure 53 DPNSS line feature configuration process — Part B

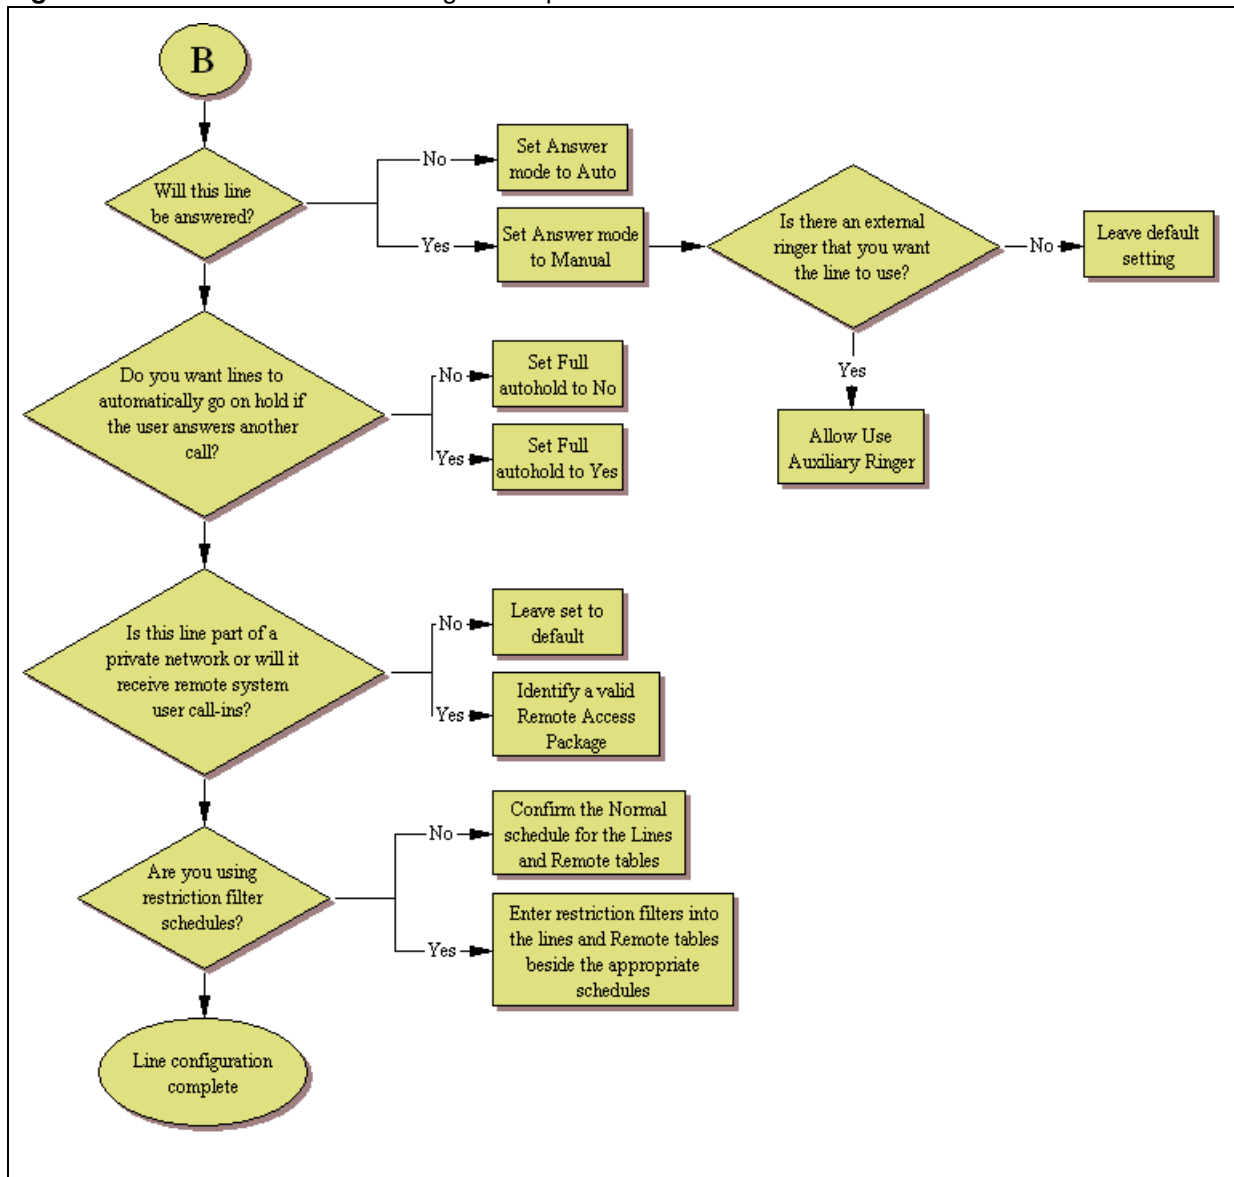

Configuring DPNSS line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

1 Confirm or change the settings on the Trunk/Line Data main panel:

- Trunk type: DPNSS
- Name: Identify the line or line function.
- Control Set: Identify a DN if you are using this line with scheduling.
- Line type: Define how the line will be used. If you are using routing, ensure it is put into line pool (A to O).

- Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
- Pub. Received #: Not applicable.
- Priv. Received #: Not applicable.
- Distinct ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4 or None).
- Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid package.

2 Configure the trunk/line data (Properties tab):

- Answer mode: If this line is used for remote call-ins, determine how you want the line to answer (automatically, or requiring more user input).
- Use auxiliary ringer: If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
- Full autohold: This allows telephones to put a line on hold if the user picks up another line or starts to dial out on another line.
- Voice Message Center: If the system is using a remote voicemail, pick the center configured with the contact number.

3 Set the restriction and remote package scheduling (Restrictions tab):

- Line restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
- Remote Packages: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)

4 Assign the lines to DNs (Assigned DNs tab)

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs, here. The DN record also can be used to assign lines and line pools for these lines.

- Appearance type: Choose Appr or Appr&ring if the telephone has an available button, otherwise choose Ring only. Model 7000 and 7100 telephones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
- VMsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system. Check with your system administrator for the system voicemail setup before changing this parameter.

5 Suggested next steps:

- Dialing plan sections

[“Dialing plan: System settings” on page 255](#)

[“Dialing plan: Public network” on page 263](#)

[“Dialing plan: Private network settings” on page 269](#)

[“Dialing plan: Routing and destination codes” on page 235](#)

- Networking sections
 - “Public networking: Tandem calls from private node” on page 281
 - “Private networking: Using destination codes” on page 327
 - “Private networking: DPNSS network services (UK only)” on page 319
 - “Private networking: MCDN over PRI and VoIP” on page 285

Chapter 17

BRI ISDN: BRI T-loops

BRI modules support both trunk and station (telephone) services. This section describes the process for configuring trunk (T) loops.

Task: Configure BRI T-loops

[“Prerequisites” on page 175](#)

[“Configuring BRI T-loop parameters” on page 177](#)

Prerequisites


Complete the following prerequisites checklist before configuring the modules.

| | |
|--|--|
| Ensure that system hardware is installed and operating correctly. | |
| Obtain all relevant central office/service provider information for the loops. | |
| BRI module is installed and operating (LEDs are correct). | |

Process overview

[Figure 54](#) shows the process for configuring BRI loops.

Figure 54 BRI loops configuration process

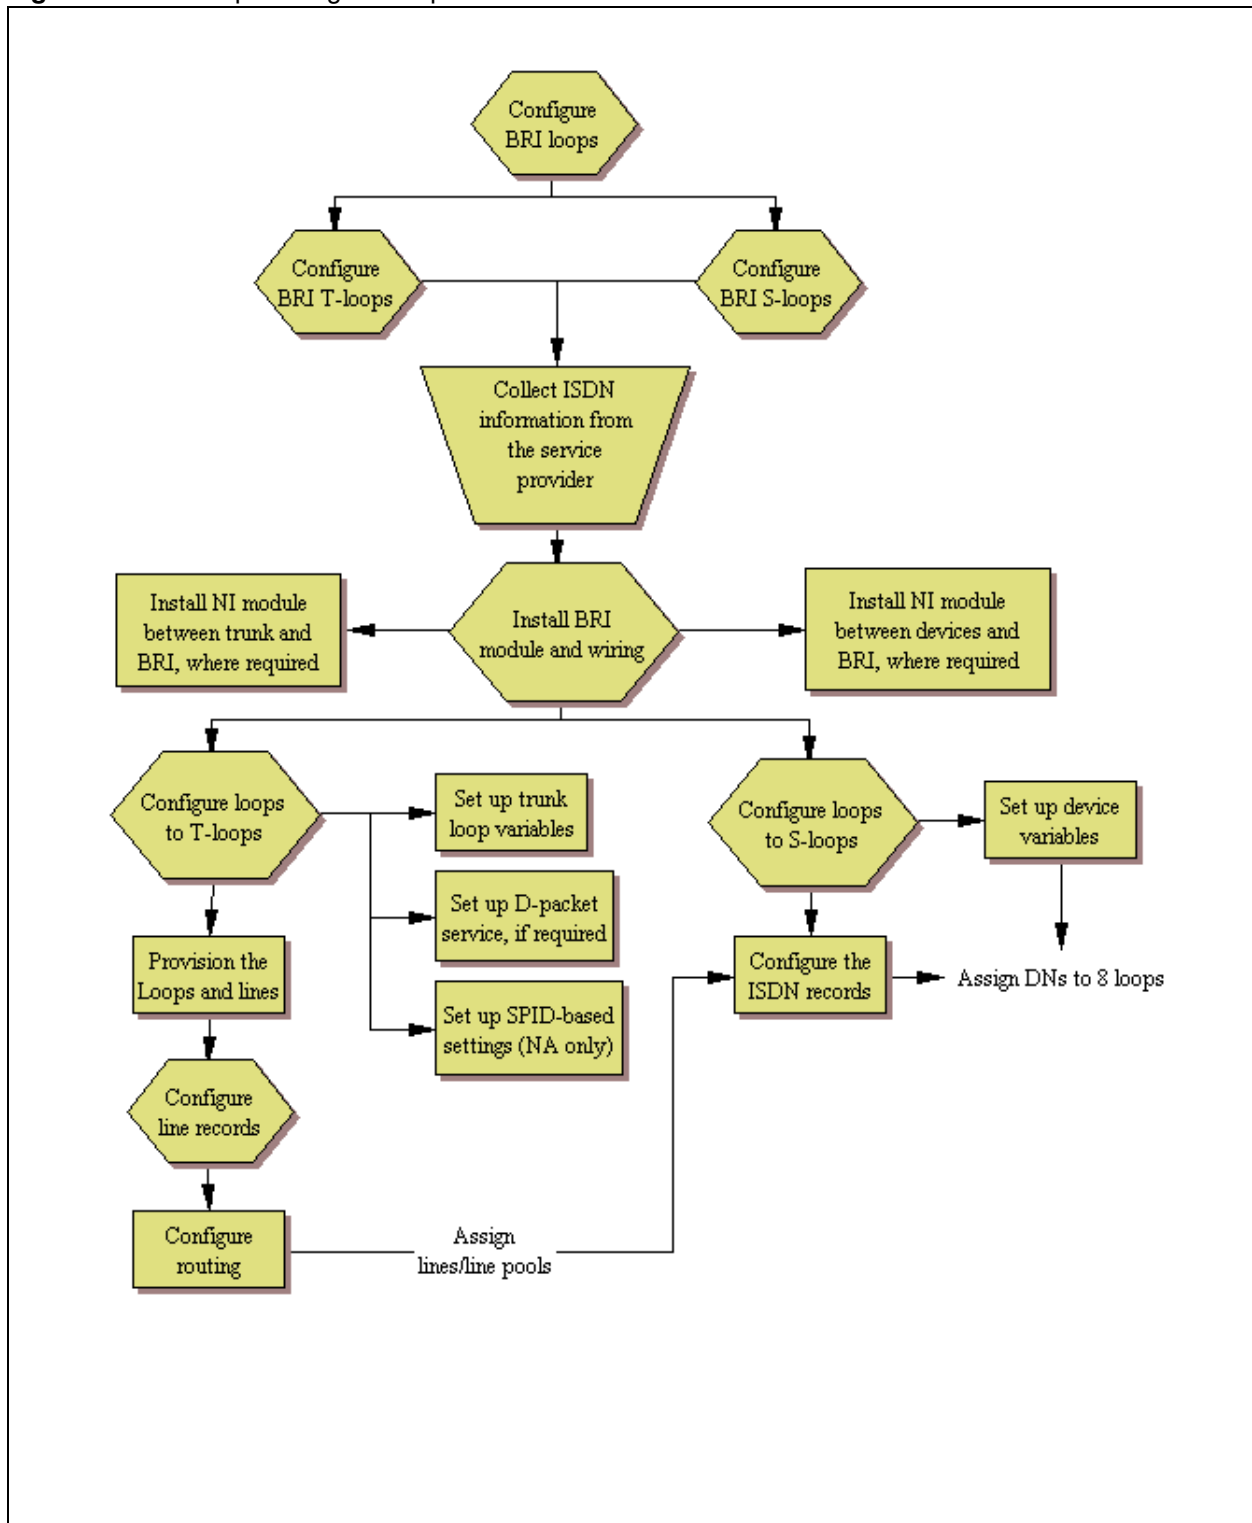

Configuring BRI T-loop parameters

To configure BRI T-loop parameters

- 1 Identify the loop as a T-loop (refer to [“Configure loop type and general parameters”](#) on page 185).
 - Protocol (ETSI and ETSI-QSIG loops, only)
 - ONN block state
 - Overlap receiving
 - Overlap length
 - Send name display (ETSI-QSIG only)
- 2 Enter the details for the loop (refer to [“T-loop SPIDS and network DNs”](#) on page 188).

North American systems, only:

 - SPID
 - B-channel
 - Network DN
 - Call type

ETSI and ETSI-QSIG T-loops (UK profile)

 - Clock source
- 3 If applicable, configure D-packet service for the loop (refer to [“T-loops D-packet service”](#) on page 190).
- 4 Provision the loop and the loop lines (refer to [“Provisioning module lines/loops”](#) on page 90).
- 5 Program the BRI lines (refer to [“Configuring BRI lines”](#) on page 177). If the lines are set to auto-answer, put the lines into line pools (A to O) and configure target lines.
- 6 Assign the lines/line pools and target lines to the telephones. Refer to Line Access - Line Assignment tab, and Line Access - Line Pool Access tab in the *BCM50 Device Configuration Guide* (N0027146).

Configuring BRI lines

There are two lines for every ISDN BRI loop that is designated as a T-loop. Unlike PRI lines, these lines can be set to either manual or automatic answer when using for remote call-ins.

The following paths indicate where to access the line configuration menu through Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Lines>Active Physical Lines, Inactive Lines, All Lines
- Telset interface: **CONFIG>Lines

Prior programming:

| | |
|---|--|
| BRI module: Installed and configured. Refer to “Trunk Module Parameters” on page 82 . | |
| BRI loops are configured as T loops. Refer to “Configuring BRI T-loop parameters” on page 177 . | |
| BRI loop lines are provisioned. Refer to “Provisioning module lines/ loops” on page 90 . | |

Configuring provisioned BRI line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

To configure provisioned BRI line features

- 1 Confirm or change the settings on the Trunk/Line Data main panel:
 - Trunk Type: BRI-ST (determined by profile and type of BRI module)
 - Name: Identify the line or line function.
 - Control Set: Identify a DN if you are using this line with scheduling.
 - Line Type: Define how the line will be used. If you are using routing, ensure it is put into line pool (A to O).
 - Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
 - Pub. Received #: Not applicable.
 - Priv. Received#: Not applicable.
 - Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, or 4).
 - Subpanel, under Restrictions tab: Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid package.
- 2 Configure the trunk/line data (Properties tab):
 - Auto privacy: If you activate this feature, the line is available only to the telephone that answers the call.
 - Answer mode/Answer with DISA: If this line is used for remote call-ins, determine how you want the line to answer (automatically, or requiring more user input). If the answer mode is set to Automatic, decide whether the caller will be immediately connected to the system or whether a stuttered dial tone will require the caller to enter a CoS password.
 - Aux. ringer: If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.
 - Full autohold: This allows telephones to put a line on hold if the user picks up another line or starts to dial out on another line.
 - Voice Message Center: If the system is using a remote voicemail, pick the center configured with the contact number.

3 Set the restriction and remote package scheduling (Restrictions tab):

- Line restrictions: Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
- Remote Packages: Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of (incoming calls from remote users or private networks)

4 Assign the lines to DNs (Assigned DNs tab)

If you have configured the DNs and know to which telephones the line needs to be assigned, you can enter those DNs, here. The DN record also can be used to assign lines and line pools for these lines.

- Appearance Type: Choose Appr only or Appr&Ring if the telephone has an available button, otherwise choose Ring only. Model 7000 and 7100 telephones have no programmable buttons, so this must be set to Ring only. (Model 7000 phones, supported in Europe only.)
- VMmsg set: When activated, an indicator on the telephone appears when there is a message waiting from a remote voicemail system.

Check with your system administrator for the system voicemail setup before changing this parameter.

Chapter 18

Programming BRI S-loops, lines and ISDN devices

BRI modules support both trunk and station (telephone) services. This section describes the process for configuring station/device (S) loops, which support devices that use an ISDN interface. You can assign a single device to a loop, or multiple devices connected through an NT-1 interface.

The following paths indicate where to configure loops through Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Loops
- Telset interface: **CONFIG>Hardware>Loops

Task: Configure BRI S-loops

[“Prerequisites” on page 181](#)

[“Setting BRI properties for ISDN device connections” on page 181](#)

[“DN records: ISDN devices” on page 182](#)

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|--|--|
| Ensure that system hardware is installed and operating correctly. | |
| Obtain all relevant central office/service provider information for the loops. | |
| BRI module is installed and operating (LEDs are correct). | |
| Wiring is complete for ISDN device configuration. | |

Setting BRI properties for ISDN device connections

BRI S-loops support devices that use an ISDN interface. Also refer to [“ISDN overview” on page 511](#). You can assign a single device to a loop, or multiple devices connected through an NT-1 interface.

- You can assign a maximum of eight devices to a loop.
- Any device can only be configured to one loop.
- S-loops do not supply any voltage for ISDN devices requiring power, such as video cameras. Voltage for these devices must be supplied by an external source on the S-loop.

For detailed descriptions of the BRI module fields, refer to [“BRI ISDN: BRI loop properties” on page 185](#).

To set BRI properties for ISDN device connections

- 1 On the top panel, identify the loop as an S-loop. Refer to [“Configure loop type and general parameters” on page 185](#).
 - Sampling
 - ONN block state
- 2 On the bottom panel, identify which ISDN DNs to associate to the loop ([“S-loops assigned DNs” on page 191](#)) (Default DNs: 597-694; additional DNs: 565-597, change type to ISDN):
 - Assigned DNs
 - Loop DN (must be on the Assigned DN list). If you set this field to None, unanswered calls are dropped. If the field is left blank, Assigned DNs make and receive data calls.
- 3 Configure the ISDN DN records for the device(s) assigned to the loop. Refer to [“Configuring an ISDN telephone DN record” on page 184](#).

DN records: ISDN devices

ISDN telephones and devices have a limited feature set. They do not have programmable buttons or user preferences, and do not support call forward features. However, you can assign Answer DNs and some capabilities features.

Task: Determine the programming for individual telephones and devices attached to BRI module S-loops.

[“Process map” on page 182](#)

[“Configuring an ISDN telephone DN record” on page 184](#)

[“ISDN overview” on page 511](#)


For a detailed description of DN record panels, and DN record procedures, refer to the *BCM50 Device Configuration Guide* (N0027146).

ISDN devices have a DN range that is unique to ISDN devices.

Process map

[Figure 55](#) provides an overview of the ISDN DN record configuration process.

Figure 55 ISDN DN record overview

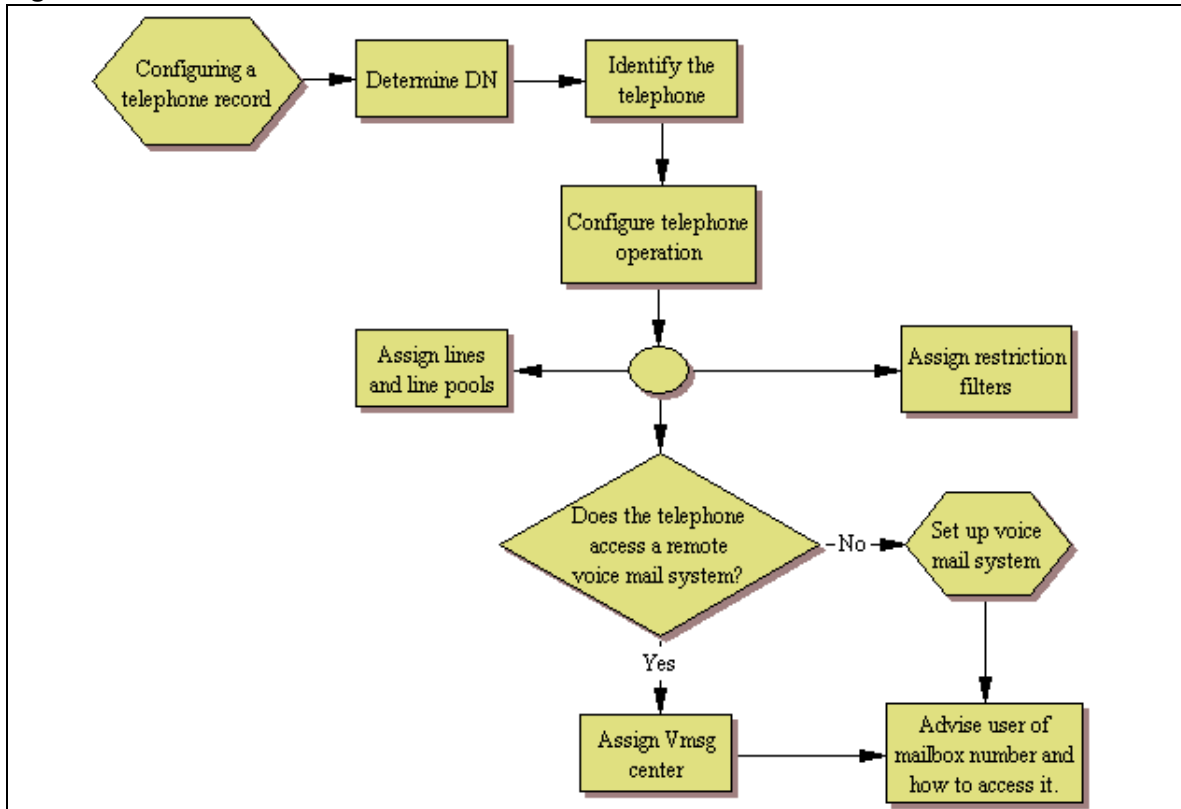

Prerequisites

Ensure that the following prerequisites checklist is complete before configuring the devices.

| | |
|---|--|
| BRI module installation and configuration is complete. Refer to “Trunk Module Parameters” on page 82. | |
| BRI loops programming is complete. Refer to “Setting BRI properties for ISDN device connections” on page 181. | |
| Lines are provisioned and configured. Refer to “Provisioning module lines/loops” on page 90. | |
| Wiring and network connections for the devices are complete. | |

Configuring an ISDN telephone DN record

On each panel on the DNs list, add or modify settings to customize the telephone operations. The following headings correspond to each panel. Refer to the **Programming notes** in each section for configurations that are unique or specific for ISDN telephones.

Table 28 ISDN device-specific DN record settings

| Affected field | Setting | Panel name and link to common procedures |
|--|---|--|
| Name | Unique to each device or device loop | "System DNs - Line Access tab" in the <i>BCM50 Device Configuration Guide</i> (N0027146) |
| Call forward | Not supported | |
| Line appearances | Ring only | "Line Assignment and Line Pools" in the <i>BCM50 Device Configuration Guide</i> (N0027146) |
| Answer DNs | Ring only | |
| Intercom keys | two: not configurable | "Configuring Capabilities & Preferences" in the <i>BCM50 Device Configuration Guide</i> (N0027146) |
| The following settings are the only capability settings that require specific configuration for ISDN devices. | | |
| Page settings | Page only- select. Devices cannot be assigned to Page zones. | "Configuring telephone capabilities" in the <i>BCM50 Device Configuration Guide</i> (N0027146) |
| OLI as called number | <check box> | If Enabled, the specified OLI for the telephone is used for CLID for calls. |
| All other settings are variable, based on your system requirements. | | |

Chapter 19

BRI ISDN: BRI loop properties

The Loops tables display settings for installed BRI modules.

The following paths indicate where to access the loops table for BRI modules in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Loops
- Telset interface: **CONFIG>Hardware

This panel contains the following tab:

- Loops - provides configuration for general loop settings.

Click one of the following links to connect with the type of information you want to view:

| Panel tabs | Tasks |
|--|--|
| “Configure loop type and general parameters” on page 185 | ONN blocking |
| “T-loop general settings” on page 187 | “Provisioning module lines/loops” on page 90 “Configuring lines” on page 117 “Configuring lines: T1-Loop start” on page 145 |
| “T-loop SPIDS and network DNs” on page 188 | “BRI ISDN: BRI T-loops” on page 175 |
| “S-loops assigned DNs” on page 191 | “Programming BRI S-loops, lines and ISDN devices” on page 181 “DN records parameters” in the <i>BCM50 Device Configuration Guide</i> (N0027146) |
| “T-loops D-packet service” on page 190 | |

Click the navigation tree heading to access general information about user management.

You can define BRI loops as either T-loops, for connecting to ISDN trunks, or S-loops, for connecting to internal ISDN equipment. Both types of loops are displayed in the top frame in the Loop Parameters panel. In the bottom frame, the settings displayed are specific to each type of loop.

Configure loop type and general parameters

The Loops table displays the BRI loops for an installed module and the settings that are common to both T-loops and S-loops. [Figure 56](#) illustrates the Loops table.

Figure 56 Loops table

| Loops | | | | |
|-------|------|----------|----------|-----------------|
| Loop | Type | Protocol | Sampling | ONN Blocking |
| 701 | T | NI-2 | N/A | Suppression bit |
| 702 | T | NI-2 | N/A | Suppression bit |
| 703 | T | NI-2 | N/A | Suppression bit |
| 704 | T | NI-2 | N/A | Suppression bit |

Table 29 describes the fields found on the Loop main panel.

Table 29 Loops main panel (Sheet 1 of 2)

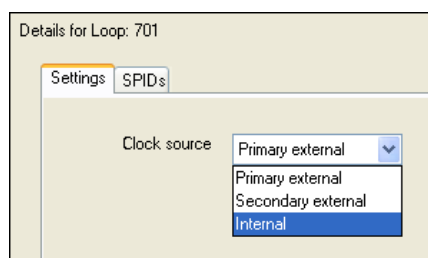
| Attribute | Value | Description |
|-------------------------|---------------------------------|--|
| Loop | <X01-X04> | Each BRI module supports four loops (eight lines for T-loop programming). |
| Type | T S | This setting defines whether the loop supports trunks (T-loop) or device connections (S-loop). Note: This variable may be different for different market profiles. |
| Protocol | Euro QSIG NI-2 | Select the appropriate ISDN protocol. The values displayed depend on both the market profile and software keycodes. Euro - ETSI ISDN standard QSIG - also an ETSI standard. Only appears if the ETSI QSIG keycode is loaded. NI-2 |
| Sampling (S-loops only) | Adaptive Fixed N/A | Select a sampling rate for the S-loop. Fixed: two or more S-interface devices use the loop, and the length of the loop is less than 200 m (650 ft.). Adaptive: two or more S-interface devices use the loop, and the length of the loop is greater than 200 m (650 ft.). If one device is using the loop, the length of the loop can be a maximum of 1000 m (3230 ft) |
| ONN blocking | Suppression bit Service code | Set the Outgoing Name and Number (ONN) Blocking. When you activate ONN, a user can press FEATURE 819 to block the outgoing name and number on a per call basis. Programming note: Ensure that all telephones that have this feature available are assigned valid OLI numbers. Refer to “Programming outgoing number display (OLI)” on page 203 . |

Table 29 Loops main panel (Sheet 2 of 2)

| Attribute | Value | Description |
|----------------------|-------|--|
| ONN blocking (cont.) | | <p>Suppression bit: the system flags the call to the Central Office (CO) so that the name and number is not sent to the person you call.</p> <p>Service code: VSC digits are dialed out before the called number to activate ONN at the central office. These codes are supplied by your service provider for the lines. Refer to “ONN Blocking codes (North American systems)” in the <i>BCM50 Device Configuration Guide</i> (N0027146). PRI lines have only one code, so do not require specific configuration.</p> |

T-loop general settings

The Settings tab allows you to define loop characteristics. Note that not all of these settings are required in all BRI markets. [Figure 57](#) illustrates the Settings tab.

Figure 57 Settings subpanel (T loops)

[Table 30](#) describes the fields on this panel.

Table 30 Details for Loop (Sheet 1 of 2)

| Attribute | Value | Description |
|--------------------|--|---|
| Clock source | Primary External Secondary External Internal | Primary External - uses clock from PSTN Secondary External - used if system has more than one Loop Internal - uses clock on BCM50 |
| Overlap: receiving | <check box> | Supports target lines in markets which use Overlap receiving signaling on the BRI trunks. Overlap receiving must be configured for each BRI loop. |
| Overlap: length | 0-10 | Set the local number length for loops to interfaces that receive overlap rather than enbloc digits. This number is the total length of the called party number received. This number is used to calculate the number of leading digits that need to be removed by the system. |

Table 30 Details for Loop (Sheet 2 of 2)


| | | |
|------------------------------------|---|---|
| | <p>Note: This parameter appears only when Overlap receiving is enabled. Example: Public received number = 4502303 Target line received numbers = 303 Local number length = 7 Public received number length = 3 Thus the first four digits are deleted by the system.</p> | |
| Send Name Display (ETSI QSIG only) | <check box> | If the switch allows outgoing name display, select the check box. |

T-loop SPIDs and network DNs

These settings are only available for systems running a North American profile. SPID numbers are supplied by the ISDN service provider. Also refer to [“ISDN overview” on page 511](#).

[Figure 58](#) illustrates the SPIDs tab.

Figure 58 SPIDs and network DNs (T-loops, North America only)

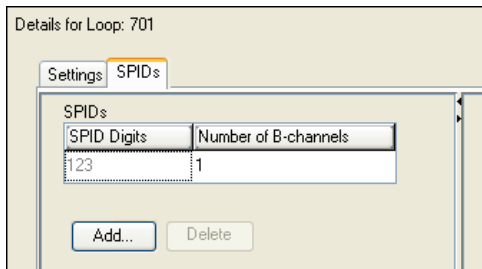

[Table 31](#) defines the fields on the SPIDs tab and indicates the lines.

Table 31 Loop settings (Sheet 1 of 2)



| Attribute | Value | Description |
|--------------------------|--|--|
| SPIDS table | | |
| SPID Digits | <digits> | Supplied by your service provider. System running with North American country profiles support additional BRI services offered by ISDN service providers and defined by network service profile identifiers (SPID). The SPID allows you to enter a network connection that provides a path for voice or data services |
| Number of B-channels | 1, 2 | North American BRI loops can support two B-channels. The SPID may be the same or different for the channels. |
| Actions | | |
| Add (SPID digits) | <ol style="list-style-type: none"> 1. Select the appropriate SPID (1 or 2) 2. Click Add.  <ol style="list-style-type: none"> 3. Enter the SPID digits supplied by your ISDN service provider. 4. Click OK. 5. On the table, click the Number of B-channels field beside the number you entered. 6. Choose the number of B-channels allowed for this SPID. | |
| Delete | <ol style="list-style-type: none"> 1. Select the SPID that you want to delete. 2. Click Delete. 3. Click OK. | |
| Network DNs table | | |
| DN | <system DN> | This ISDN DN acts as the contact point for the loop to the system. |
| Call Type | Voice Data Both | Defines the type of calls supported on the loop. |

Table 31 Loop settings (Sheet 2 of 2)

| Attribute | Value | Description |
|----------------|--|-------------|
| Actions | | |
| Add | <ol style="list-style-type: none"> 1. Select the appropriate SPID (1 or 2) 2. Under the Details for SPID table, click Add.  <ol style="list-style-type: none"> 3. Enter a network DN. 4. Click OK. 5. On the table, click in the Call Type field beside the DN you entered. 6. Choose the call type for the DN. | |
| Delete | <ol style="list-style-type: none"> 1. Select the SPID that you want to delete. 2. Click Delete. 3. Click OK. | |

T-loops D-packet service

The D-Packet Service panel is the second tab of the loops panels.

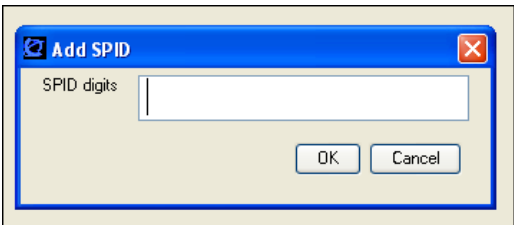

Note: D-Packet service is only available if your service provider provides this Capability

This panel enables you to configure D-Packet Service to T-loops. You must have both T-loops and S-loops configured on the same module to allow this feature.

Figure 59 illustrates the D-Packet Service panel.

Figure 59 D-packet service (T-loops)

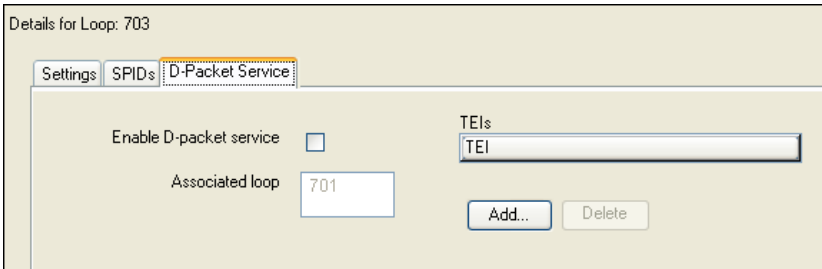
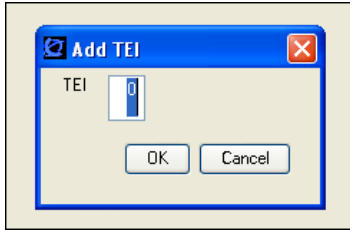


Table 32 describes each section on the D-Packet Service panel.

Table 32 D-packet settings

| Attribute | Value | Description |
|--------------------------|-------------|--|
| Associated loop | X01-X04 | T-loop: This is the loop on the BRI module that is configured as the T-loop and is connected to the external trunk. S-loop: This is the loop on the BRI module where the device is connected. |
| Enabled D-packet Service | <check box> | Enable this service, only if you are installing devices that require this type of service. |
| TEI | <digits> | These entries identify up to eight terminal identifiers for the devices assigned to the S-loops. Your BRI service provider supplies these numbers, if they are required. |
| Actions | | |
| Add | | <ol style="list-style-type: none"> In the top frame, click the loop where you want to define D-Packet Service. In the bottom frame, Ensure Enable D-packet service check box is selected. In the Associated loop field, enter a defined S-loop. Under the TEIs table, click Add.  <ol style="list-style-type: none"> Enter a TEI. Click OK. Repeat for all the TEIs you want to assign. |
| Delete | | <ol style="list-style-type: none"> In the top frame, click the loop where you want to delete TEI assignments. In the bottom frame, click the TEI you want to delete. Click Delete. Click OK. |

S-loops assigned DNs

The Details for Loop panel for S-loops allows you to view which device records are assigned to a loop, and to add or delete a record from the loop.

Figure 60 illustrates the Details for Loop panel.

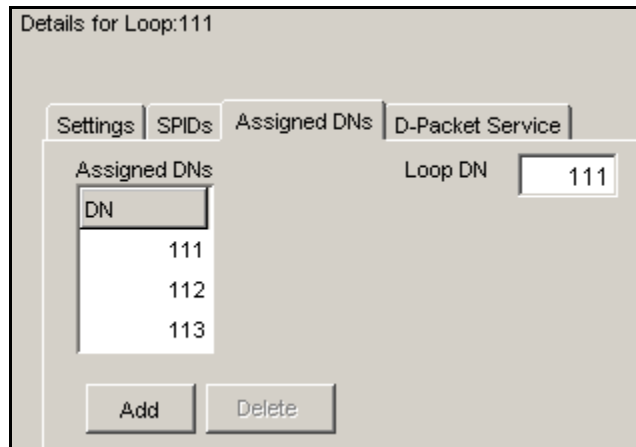
Figure 60 Assigned DN (S-loops)

Table 33 defines the fields on the Details for Loop panel.

Table 33 Loop settings

| Attribute | Value | Description |
|---------------------------|---|--|
| Loop DN | <system DN> | Control DN for the loop. This DN must be on the Assigned DNs list. |
| Assigned DNs table | | |
| DN | <system DN> | ISDN assigned to the loop (up to eight devices) |
| Actions | | |
| Add | <ol style="list-style-type: none"> 1. In the top frame, click the loop where you want to add DN records. 2. In the bottom frame, click Add. 3. Enter the DN record number. 4. Click OK. 5. Repeat for all the DN records you want to assign. | |
| Delete | <ol style="list-style-type: none"> 1. In the top frame, click the loop where you want to delete DN record assignments. 2. In the bottom frame, click the DN record you want to delete. 3. Click Delete. 4. Click OK. | |

Chapter 20

CLID: Name display

Name and number display

BCM50 displays the name of the calling party at the answering telephone when this information is available on Private or Public PRI trunks, VoIP trunks, and analog trunks that support Calling Line Identification (CLID). The displayed name can include the Receiving Calling Name, Receiving Redirected Name, and/or Receiving Connected Name. Refer to [“Receiving and sending calling party name”](#) on page 194.

If only a number is available for CLI on an incoming call, you can program a system speed dial in such a way that a name displays when that number calls in. Refer to [“Alpha tagging for name display”](#) on page 194.

Name and number information are also transmitted with outgoing calls. This can be blocked by the user (**FEATURE 819**) on a per-call basis. As well, you can block this information on a per-trunk basis. This is important if the connecting system cannot process name and number information. Some service providers also may have different codes that need to be mapped so that the blocking feature works.

[Table 34](#) provides a list of the name/number display features and the list of ISDN interfaces that support each feature.

Table 34 Call features/interface list

| Feature | Interface | | | | | |
|----------------------------|-----------|----------------|-------------|-----------|---------------------|-----------|
| | NI PRI | DMS Custom PRI | SL-1 (MCDN) | NI-BRI | ETSI Euro (PRI/BRI) | ETSI QSIG |
| Receiving Calling Name | Supported | Supported | Supported | Supported | | Supported |
| Receiving Redirected Name | Supported | | Supported | Supported | | |
| Receiving Connected Name | | Supported | Supported | | | Supported |
| Sending Calling Party Name | Supported | Supported | Supported | | | Supported |
| Sending Connected Name | | Supported | Supported | | | Supported |



Note: Name Display is an optional feature that is available based on the interface you subscribe to.



Note: MCDN networks fully support name display features within the private network environment.

Receiving and sending calling party name

Network Name Display allows the name of an incoming PRI/BRI, analog with CLID, or VoIP with MCDN call to appear on the BCM50 telephone receiving the call.

Calling Party Name with status of Private can appear on the Called Party telephone as Private name. If the incoming Calling Name is defined by the CO as a private name, then Private name appears on the answering telephone. If the Calling Party Name is unavailable it can appear on the Called Party telephone as Unknown name.

If the call is answered by a Hunt group, the hunt group name appears instead of the telephone name in forming the connected name.

The Connected Name is a transient display that appears for approximately three seconds. The Connected Name is sent only if the OLI is programmed. You can program both a public and private OLI. The system uses the one appropriate to the type of call.

Network name display interactions

Calling and Connected Name information (if available) passes between trunks with Selective Line Redirection (SLR). Only Calling Name information passes between trunks in cases where Direct System Inward Access (DISA) results in tandeming of trunks.

Outgoing name display

You can set up the trunks to disallow name display to be sent out on PRI, BRI, and VoIP trunks. Use this for trunks where the connecting switch does not support outgoing line display. Default is enabled.

Business name display

Nortel recommends that you use a blank space for the last character of the Business name to act as a separator between the Business name and telephone name. A maximum of eight characters is supported.

Alpha tagging for name display

You can configure your system to display a caller name for incoming calls that provide number-only CLID, such as if the name service is not subscribed to or available in your area.



Note: Lines that provide name and number CLID, such as PRI lines, use that name for display, rather than the alpha tagging feature.

Limitations:

- Due to system resource limitations, only 30 telephones can be assigned to provide alpha tagging CLID per line.
- If the incoming number only partially matches the CLID match length, no name displays.
- If the number matches more than one speed dial, and the matches have different names, the telephone displays the name of the first match.
- ISDN devices do not support the alpha tagging feature.

Name display

You can assign names to identify your company, external lines, target lines, and your colleagues' telephones. During a call, the name (if programmed) appears on the telephone display instead of on the external line number or internal telephone number of the caller.


Names can contain both letters and numbers, but cannot be longer than seven characters. You cannot use the number (#) and star (*) symbols.



Note: You can give the same name to a telephone and a line in your system. Use initials, abbreviations, or even nicknames to give each telephone a unique name to avoid confusion.

You can also determine if the calling line ID (CLID) is received by a telephone, or if the CLID information from a system telephone gets sent out over the network. Refer to [“Incoming and outgoing call display” on page 196](#).

[Figure 61](#) illustrates an example of naming system components.

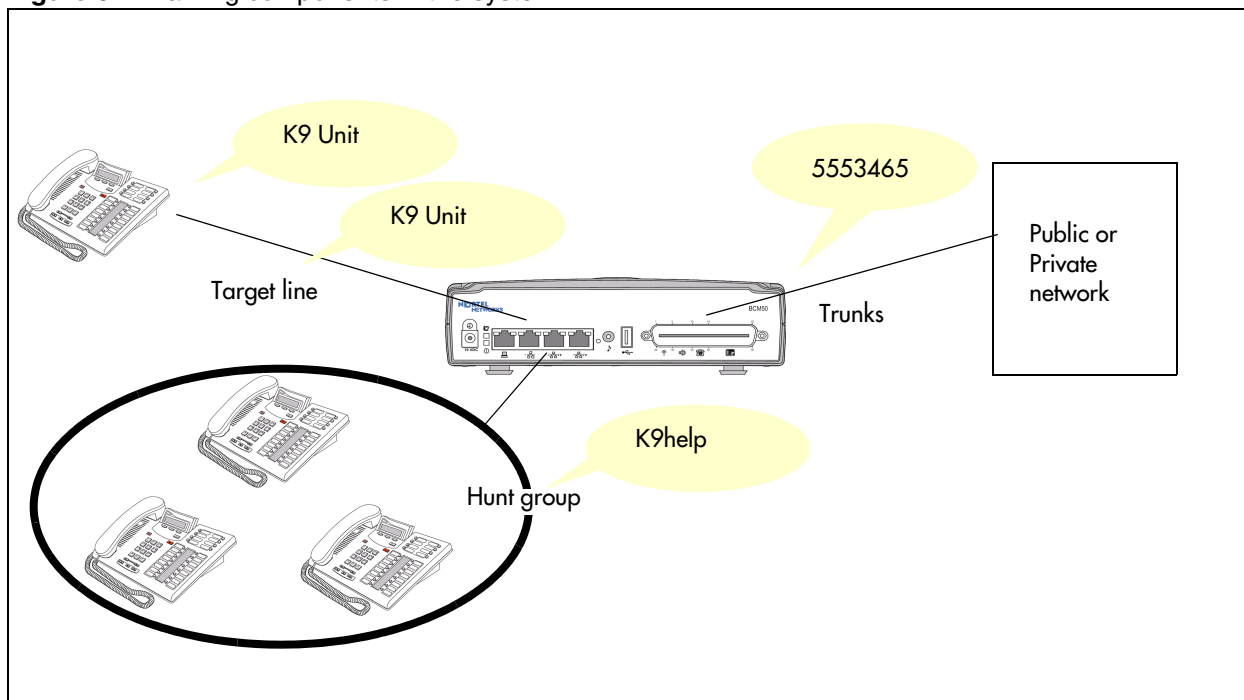Figure 61 Naming components in the system

Incoming and outgoing call display

If you subscribe to Call Display services from your local telephone company, one line of information about an external caller appears on the display after you answer a call. If you answer before the Call Display information appears on your display, press **FEATURE 811** to view the line number or line name. When you transfer an external call to another telephone in your system, the same information appears on the recipient telephone display.


Depending on the services you subscribe to, incoming Call Display information can contain up to three parts:

- the name of the caller
- the number of the caller
- the name of the line in your system that the call is on

Call display information can also be sent out when a system telephone calls out of the system. What displays at the called party's telephone, depends on what the private or public lines allow. Outgoing call display information can be allowed or blocked at the system level or single telephone level.

[Figure 62](#) illustrates an example of incoming and outgoing call display.

Figure 62 Sending and receiving call display

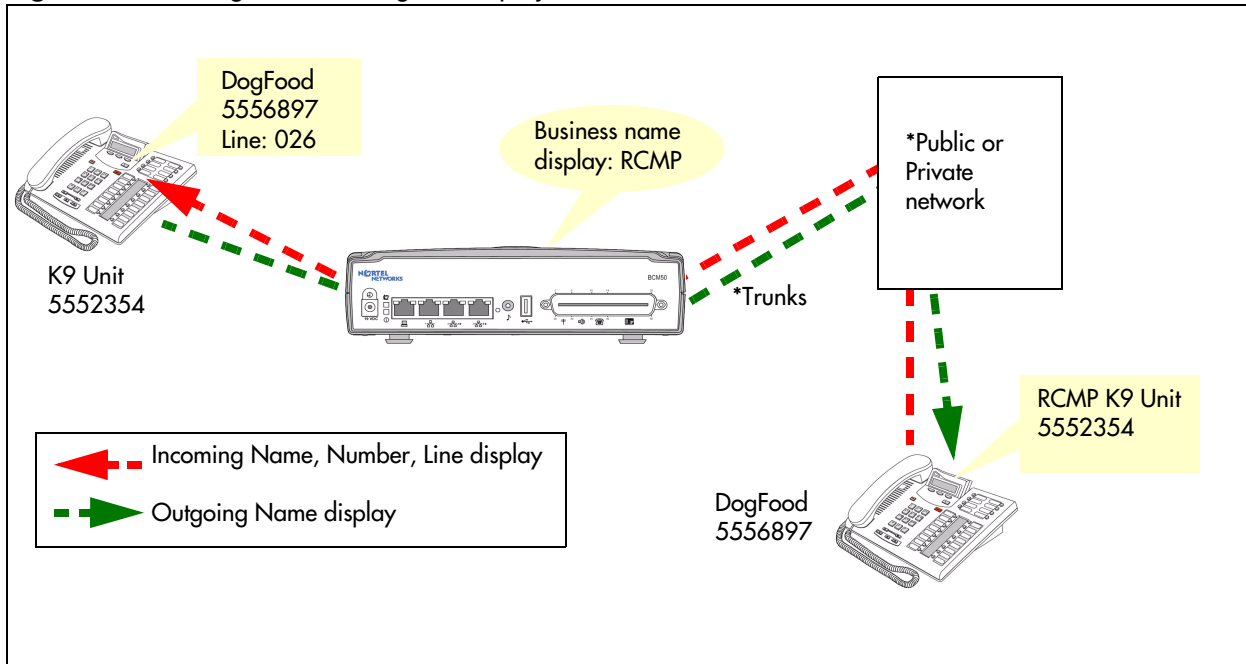

Chapter 21

Configuring CLID on your system

This section describes the various areas in the system that need configuration to allow incoming or outgoing Calling Line Identification Display (CLID) information to display (incoming calls) or transmit over the trunks (outgoing calls).

The following section describes programming and setting up this feature.

Tasks:

Set up incoming display: [“Programming incoming CLID” on page 201](#)


Set up outgoing display: [“Programming outgoing CLID” on page 202](#)

Set up the method for blocking outgoing set identification: ONN Blocking (North American systems) in the *BCM50 Device Configuration Guide* (N0027146)

Process map

[Figure 63](#) provides a quick view of the areas of the system that need programming to provide incoming and outgoing CLID services.

Figure 63 CLID configuration process

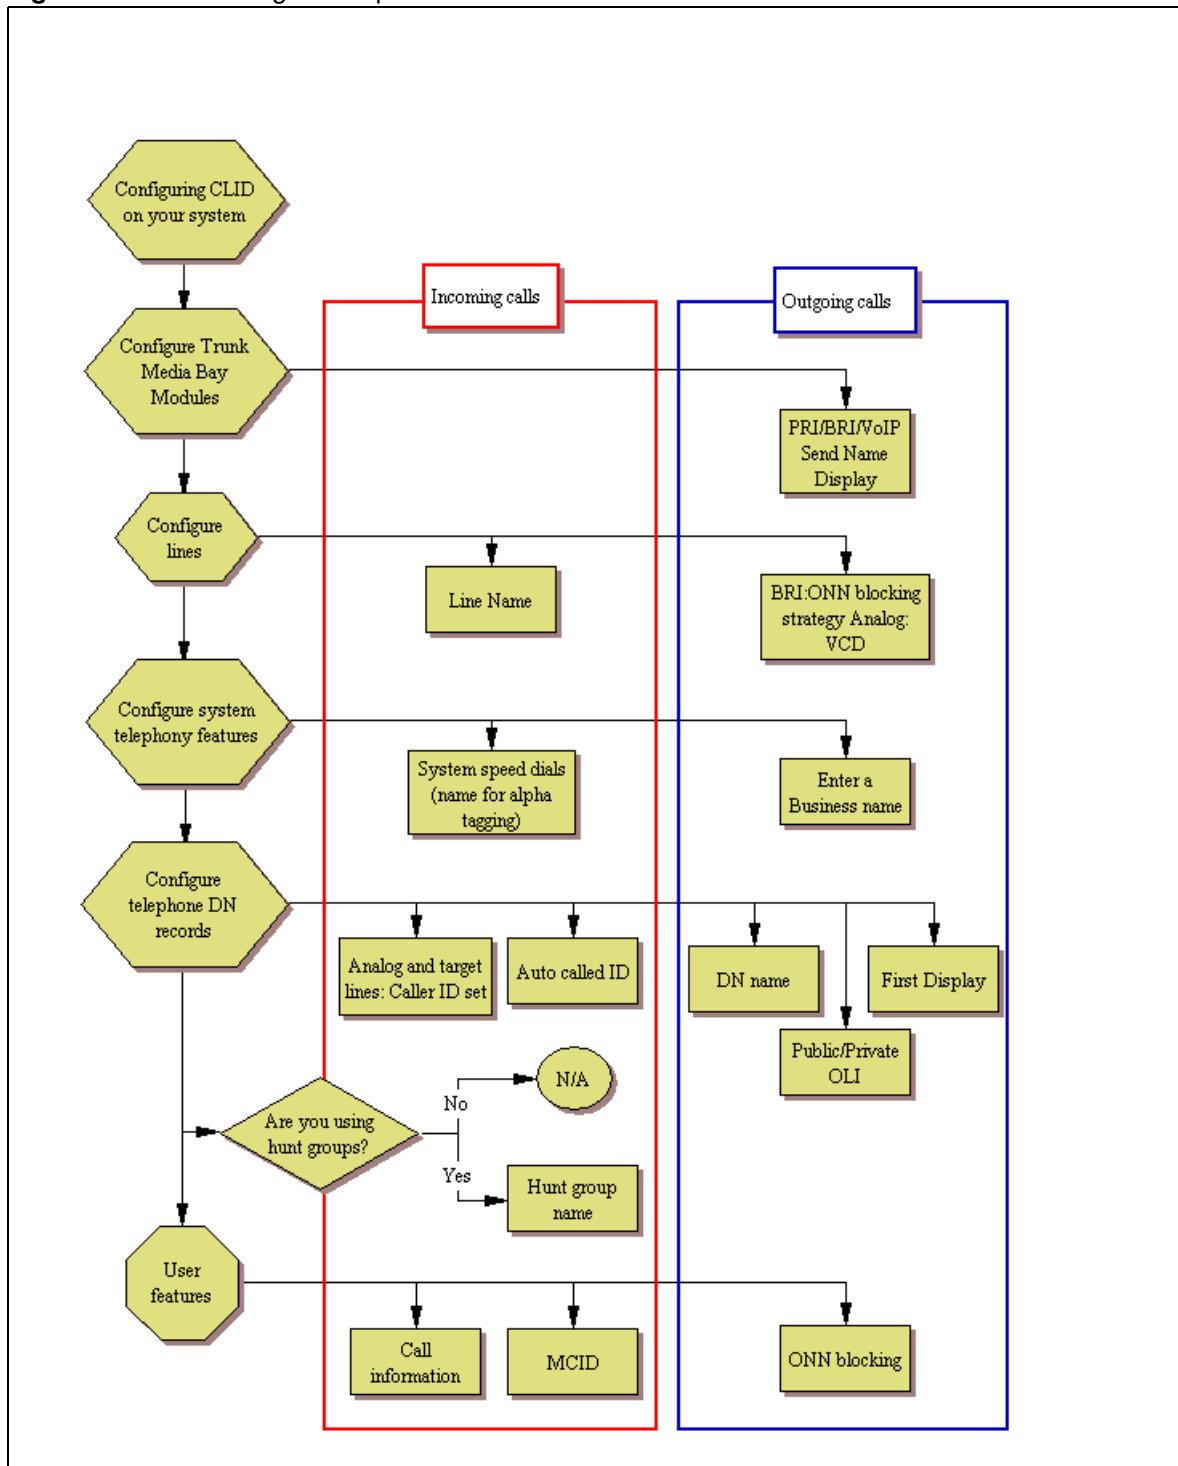

Programming incoming CLID

Telephones can receive Name, Number, and Line display for incoming calls over trunks that support CLID or between telephones within the system. This section describes the different areas where these capabilities are configured.



Note: If no configuration is done, CLID will show up after answering a call unless Feature 811 is used. To make CLID appear before answer, you must set the Caller ID set on the set programming.

Digital, analog, and VoIP lines support CLID for incoming calls, and there is no special programming to allow the feature on these lines for BCM50 digital or IP phones.

Allowing CLID for telephones (incoming)

Target lines and analog CLID trunks connected to a GATM:

- 1 Under Telephony>System DNS>Line Access main table, select the DN record for a telephone assigned with analog lines that support CLID.
- 2 On the Line Assignment table, select a line that supports CLID.
- 3 Select the check box beside the Caller ID set field of the highlighted row.
- 4 Repeat for each line assigned to the telephone.
- 5 Repeat above steps for telephones assigned with these lines.



Note: Only 30 telephones can be assigned CLID for a line.

Using alpha tagging for name display (incoming)

To set up alpha tagging on your system

- 1 To determine the name to display, you add a system speed dial for the number, entering a display name. Refer to “Configuring system speed dial numbers” in the *BCM50 Device Configuration Guide* (N0027146).



Note: You can increase the default number of system speed dials from 70 to 255 if you want to provide an extensive CLID list.

- 2 To determine how many digits of the dialed number and the system speed dial must match before a name is displayed, you set the **Clid match length** setting to the required number (1 to 8).

- 3 In order for the telephone to display the name, it must have **Caller ID** set for the line assigned to the telephone. Refer to “Line Access - Line Assignment tab” in the *BCM50 Device Configuration Guide* (N0027146).
- 4 As well, **First display** must be set to **Name**. Refer to “Capabilities and Preferences main tab” in the *BCM50 Device Configuration Guide* (N0027146).

Programming line name display (incoming)

Answered calls can display the name, incoming number, and line name/number for calls coming in over lines that allow full CLID.

Lines are named by their number as a default. However, you can provide a more descriptive identifier. The Name field is located on the main table under Telephony>Lines (“Trunk/Line Data, main panel” in the *BCM50 Device Configuration Guide* (N0027146)).

On the Hunt group record (Telephony>Hunt Groups>Hunt Groups table), you can change the Hunt group Name field from the Hunt group DN to a more logical label for the group. Note that only eight characters display. Refer to “Hunt Groups system setup” in the *BCM50 Device Configuration Guide* (N0027146).

Programming outgoing CLID

Telephones can transmit a business name, telephone name and number (outgoing line identifier) for outgoing calls over trunks to switches that support outgoing name and number (ONN) display, or between telephones within the system. This section describes the different areas where these capabilities are configured.

Programming Business name display (outgoing)

Nortel recommends that you use a blank space for the last character of the Business name to act as a separator between the Business name and telephone name.

Note that if you leave this field blank, no name appears.

Program the Business Name under Telephony>Global Settings>General>Global Telephony Settings panel>top panel.

To program the Business Name

- 1 Click the field beside Business Name.
- 2 Type a maximum of eight characters for a name.
Leave a blank space for the last character of the Business name to act as a separator between the Business name and telephone name.
- 3 Other areas that you must program include:

- The **OLI number**. Refer to “Line Access tab” in the *BCM50 Device Configuration Guide* (N0027146).
- The **Auto Called ID** must be selected. Refer to “Capabilities and Preferences - Capabilities tab” in the *BCM50 Device Configuration Guide* (N0027146).

Internal name and extension display

If you want to be able to see the CLID of internal telephones you call, ensure that Auto caller ID is enabled under Telephony>System DNs>Capabilities and Preferences. Refer to “Capabilities and Preferences main tab” in the *BCM50 Device Configuration Guide* (N0027146).

Programming name display (outgoing)

You can program name display for individual telephones.

On the DN record, you can change the Name field from the DN to a more logical label (Telephony>System DNs>System DNs table>any tab). Note that only eight characters display. Refer to “Main panel tabs: common fields” in the *BCM50 Device Configuration Guide* (N0027146).

Programming outgoing number display (OLI)

You can determine what number displays at the other end of an outgoing call, if the outgoing line allows name display and the receiving telephone has number display active.



Note: OLI is not supported on analog trunks.

The Outgoing Line Identification (OLI) can be set for each telephone for both private and public network calls.

The Private OLI is used for CLID over private networks. It is usually set to the DN number as a default, although this does not always occur if there have been DN length changes. (Telephony>System DNs>Line Access table). Refer to “Line Access tab” in the *BCM50 Device Configuration Guide* (N0027146). If the system is running with a UDP dialing plan, you might want to add the LOC to the DN. Refer to [“Outgoing private calls routing” on page 274](#).

The Public OLI is used for CLID over public networks and for tandemed calls over private networks that terminate on the public network. The number of digits for this field is determined by your local service provider. (Telephony>System DNs>Line Access table). Refer to “Line Access tab” in the *BCM50 Device Configuration Guide* (N0027146).

Blocking outgoing name display at the trunks

To block outgoing name display at the media bay module level, you can configure module records to disable the Send Name display check box, under Resources>Telephony Resources>Trunk Module Parameters (not available for all trunk types). Refer to “Trunk Module parameters” in the *BCM50 Device Configuration Guide* (N0027146).

Blocking outgoing name display at the telephone

ONN is also enabled and disabled from a telephone, on a per-call basis, using **FEATURE 819**.

To allow **FEATURE 819** to work correctly, you may need to specify an ONN blocking service code.

The BCM50 alerts the CO by two methods. The method used depends on the type of trunk involved in placing the outgoing call. This information is supplied by your service provider.

- Analog trunks use a dialing digit sequence called a Vertical Service Code (VSC). The VSC differs from region to region and must be programmed. Analog trunks with both tone and pulse dialing trunks can have separate VSCs.
- PRI trunks have only one VSC. No specific system programming is required.

ETSI note: ETSI lines may use the Calling Line Information Restriction (CLIR) supplementary service to provide this feature.

ETSI PRI lines do not use a VSC. The line always uses Suppression bit to invoke the CLIR supplementary service.

- BRI trunks can be set to either:
 - provide ONN using a suppression bit, which provides a notice from the system to the central office to withhold CLI.
 - provide ONN using a VCS, which is dialed out in front of the dialed digits (optional on ETSI trunks).

BRI trunk ONN settings are located under the loops settings. Refer to “BRI ISDN: BRI T-loops” in the *BCM50 Device Configuration Guide* (N0027146).

Programming note: Ensure that users who have access to this feature have telephones with valid OLI numbers.

Chapter 22

Dialing plans

The BCM50 allows for flexible dialing plans using access codes, destination codes, PSTN trunks and private network trunks that provide multiple options for customizing the dialing options to meet each customer's unique requirements. Refer to [“Outgoing call routing” on page 210](#).

While the BCM50 can be plugged in and used immediately, it is recommended that you plan and execute the appropriate dialing plan.

The dialing plan includes:

- the dialing plans that govern the expected dialing strings on a private network
- the allowed dial strings on a public network
- the access and destination codes that get dialed out as part of the dialing string
- access codes that identify a call type on incoming MCDN calls

These topics are discussed under the following sections:

- [“Creating dialing plans” on page 206](#)
- [“Public and Private Received numbers” on page 209](#)
- [“Private network dialing” on page 209](#)
- [“Setting up public network dialing” on page 210](#)
- [“Outgoing call routing” on page 210](#)
- [“Incoming call routing” on page 212](#)
- [“Determining line access dialing” on page 216](#)
- [“Understanding access codes” on page 217](#)
- [“Line pool access codes” on page 221](#)
- [“Using Carrier codes” on page 222](#)
- [“Configuring call routing” on page 222](#)
- [“Configuring Call-by-Call services” on page 223](#)
- [“Using destination codes” on page 227](#)
- [“Setting up VoIP trunks for fallback” on page 232](#)

Also refer to the section about call security which deals with defining restriction filters for outgoing calls and remote access packages for incoming calls. This section also discusses Class of Service (CoS) passwords, which can be used when you allow users to access the system features over public connections. Refer to [“Call security and remote access” on page 403](#).

Creating dialing plans

Dialing plans allow users to access the public network, to make calls, and to answer dial strings.

Access to and from and within your system is based on dialing strings and how the system adds or deletes digits from this sequence to route the call.

A dialing string is the numbers that the caller physically enters on a telephone or programs onto a memory key. This can also include numbers the system adds to a dial string when a call goes through call routing.

This process also includes how the receiving system reads the sequence. All of which means that coordination is required at both ends of the call to ensure that calls are routed correctly. This is especially important if calls need to be routed through your system, or through a remote system, to reach another node on the network.

Basic numbering: The first numbering that you set is your DN length (Start DN length) and Start DN and Public and Private Received # length. DN length and Start DN information is entered when the system is initially set up. These numbers can be changed after the system has been set up, but only at the risk of compromising other numbering in the system. If your system is part of a network, these numbers must be coordinated with the other nodes in the network to ensure that the network dialing plans are consistent. The Public and Private Received Number lengths take their sequence from the initial DN length, but this can be changed to accommodate local dialing requirements, the Private length should mirror the DN length, except in special circumstances. Refer to [“Incoming call routing” on page 212](#).

| Variable | Example settings |
|------------------------------|--------------------|
| Start DN | 2 (221) |
| DN length, Received # length | |
| Private length | 3 |
| Public length (max) | 10 (North America) |

Remote access: When you set up lines that do not offer DISA directly on the line, you can determine if remote access prompts with DISA or allows auto answering. This determines the Public/Private Auto DN and Public/Private DISA DN settings, which are set under Telephony>Dialing Plan>Public Network and Private Network. These numbers will have the same first number as you specified in the Start DN and be of the same length. Remote callers dial the system public or private access number, and then dial either the Private/Public Auto DN or Private/Public DISA DN, as determined by the line setup.

| Variable | Example or default settings |
|-----------------|-----------------------------|
| Private Auto DN | 2XX |
| Public Auto DN | 2XX |
| Private DISA DN | 2XX |
| Public DISA DN | 2XX |

Incoming calls: The Private Dialing Plan provides the special codes that identify the system to calls coming over private PSTN or VoIP trunks. Calls that do not match the private dialing plan information, are not accepted by the system.

| Variable | Example or default settings |
|--------------------|--|
| Private network ID | Number that identifies the system as part of the private network |
| Location code | UDP networks |
| Private DN length | DPNSS systems only |

Calls coming in over private networks or PRI/BRI termination target lines can be set up for each telephone or group of telephones to which the calls are directed. As with other incoming calls, these calls can have a public or private call type that matches to a public or private received number assigned to a target line.

| Variable | Example or default settings |
|-------------------------|---|
| Private received number | <CDP: same as DN of telephone> <UDP: LOC code + DN> |
| Public received number | <North America: 10 digits XXX-XXX-XXXX, the trailing digits are the DN> <DPNSS: maximum number of digits in local dialing pattern> |

Outgoing calls: Other network codes include the information about public dialing codes that you enter under **Telephony>Dialing Plan>Public Networks**.

The public dialing plan defines which dialing string prefixes will be allowed over the public PSTN lines. By defining these dial strings and the length of the prefix, the central office can direct the calls to the correct public destination.

| Variable | Example or default settings |
|------------------------------|-----------------------------|
| Public DN lengths (prefixes) | Public dialing table |

For private networks, if you are not using routing and destination codes, you need to identify an access code that indicates an incoming call is destined for the private network.

| Variable | Example or default settings |
|---------------------|-----------------------------|
| Private Access Code | 6 |

MCDN special call types: If your system is networked to other types of systems, such as Meridian 1, which sends calls through one or more BCM50 systems to the public network, you need to specify specific call-type codes. These codes append to the incoming dial string, so that the call-type remains intact as it passes through the BCM50 call processing:

| Variable | Example or default settings | |
|----------------------|-----------------------------|--|
| Local Access Code | 9 | Coordinate these settings with Meridian routing for these calls types and the Private Access Code. |
| National Access Code | 61 | |
| Special Access Code | 911 | |

Internal feature access: Meanwhile, you need to keep in mind that the leading digit of any of the above dialing codes cannot conflict with the other system access codes that you want to use:

| Variable | Example or default settings |
|-------------------|-----------------------------|
| Park Prefix | 1 (101-125) |
| Direct Dial Digit | 0 |

Line pool and destination access codes: Once these basic numbers have been picked, you can decide what numbers to use for line pool access codes and/or destination codes. The system will not allow these codes to start with any of the numbers currently assigned. If you are working with an established dialing plan, you may want to ensure that the numbers that the users are familiar with dialing are reserved for these codes.

For instance, if the users are familiar with dialing 9XXXXXXX to access numbers outside of their own offices, you will want to reserve this number for the destination codes. If you are setting up a new system, you could opt to use the location codes of the other systems as destination codes, or you could define one number for local calls (but which are still outside the system) and one number for long distance calls. For example: The users may dial 6<DN number> for calls within a local system, but dial 8<area code><office code><extension or "DN"> for calls in another city over the public network.

| Variable | Example or default settings |
|-------------------------------------|--|
| Line pool codes (first character) | 5 |
| Destination codes (first character) | 6<up to 11 more characters> 9<up to 11 more characters> |

Telephones use pool codes and destination codes to dial externally, because when the analog device goes off hook, it seizes internal dial tone from the system. The external access code, is either a line pool code, or destination code assigned to your system dialing plan.

| Variable | Example or default settings |
|---------------|-----------------------------|
| External code | 9 |

Public and Private Received numbers

If the received number is different than the regular DN number, in the target line configuration programming, enter the number in the **Private number** and/or **Public number** field.

Programming note: Auto-answer trunks such as PRI, T1, BRI, and VoIP trunks, use these settings to route calls:

- DPNSS lines use the Private received number to route calls in the system.
- BRI (ETSI-QSIG), PRI (ETSI-QSIG, MCDN, DMS100, DMS250) and VoIP trunks route calls on a per-call basis to either the public or private received digits.



Note: VoIP trunking does not support Auto DN/DISA DN functionality.

- BRI (ETSI-Euro, NI), PRI (ETSI-Euro, NI, 4ESS), T1 (LoopStart, E&M, DID, GroundStart), Analog LEC (LoopStart), and DASS2 trunks route calls using the Public received number.

Private network dialing

If your BCM50 is part of a private network, you have a choice of dialing plans. However, all BCM50s on a network must use the same type of dialing plan and have the same Private DN lengths to ensure proper call direction. Plan out these settings before you start programming for the private network.

- UDP (Universal Dialing Plan) uses a destination code and a location code plus the set DN (that is, 6-403-XXXX) to determine where a call gets routed. You specify a Private DN length to allow all required digits to be dialed. Each node on the network has a unique location code.
- CDP (Coordinated Dialing Plan) uses a unique steering code that is transparent to the user and is dialed as part of the destination set's DN (that is, 2XXXX for one node, 3XXXX for another node, and so on) to determine where the call gets routed. Since each node on the network has a unique code, no other routing is required.
- The Meridian system administrator, or the call control system, generates the Private Network IDs. These IDs are unique to each node on a network. Both UDP and CDP must include this code in programming.

Setting up public network dialing

The public network settings allows you to enter DN lengths for the networks the callers are allowed to dial, including special numbers such as 411 and 911.

The public DN lengths table is used for all PRI calls except for those routes that use service type Private or service type TIE with DN Type specified as Private. This table allows the BCM50 to determine the length of a DN, based on the initial digits dialed.

A set of default Public DN lengths is included with the default template. In most cases it is not necessary to change the default values.

About the Public DN lengths table

In the public DN lengths table:

- You can define up to 30 entries.
- Each entry consists of a DN prefix string (1 to 10 digits) and a length value (two digits, 1 to 25).
- Several entries are predefined in the North America profile. These defaults can handle most regions in North America without the need for additional programming. If required, you can remove or modify these entries.
- The table always contains one default entry. You cannot remove this entry. You can only modify the length parameter associated with this entry. The default entry specifies the length of any dialing string that does not match one of the other table entries.

Outgoing call routing

Outgoing calls require line pool access codes or destination code (with defined routes) to leave the system.

- Access codes provide direct, unscheduled access to an analog, digital (T1).
- Destination codes also provide access to line pools, but they also allow more flexibility in dialing, which allows for more complex routing options, such as scheduling, fallback routing (VoIP trunks), call definition, and multiple routing (least-cost routing). Routing also allows you to minimize the dialout for the user, especially to systems on the same private network.

Outgoing calls can be either public or private, which is defined by the route. The public or private designation determines which dialing plan is used to determine the validity of the call. Normally, public calls are routed over PSTN trunks and private calls are routed over a private network. However, MCDN trunks can also pass calls designated as public to allow remote nodes on the network to call out of the PSTN of a local node. This is called tandem dialing.

- If the outgoing call is designated as private, the system checks the beginning of the string for a destination code that routes to a private network. It also checks that the dial string is the correct length. The destination code routing determines what the final dial string will be, adding or removing digits, as required.
- If the outgoing call is designated as public, the system checks the beginning of the string for a destination code that routes to a PSTN or an MCDN trunk. If the call routes to a public route, the system checks the public dialing table to ensure that the dialout string has legitimate leading digits and is the correct length. If the call routes to an MCDN trunk, the call is passed as dialed, minus the private networking codes. The call will pass through the system until the system with the matching destination code receives it, at which point it will be sent through the local PSTN of that system.

How the system identifies the call depends on the type of trunk chosen for the route. Refer to the table below.

| Dialing plan setting | NPI/TON | Private called number length based on |
|---|--------------------|--|
| MCDN trunks send private calls in this way: | | |
| None | Private/Subscriber | Private DN length (set on Private Network panel) |
| UDP | Private/UDP | private access code + home location code (LOC) + private received digits |
| CDP | Private/CDP | private received digit |
| DMS100/DMS250/ETSI-QSIG trunks send private calls in this way: | | |
| None | Private/Subscriber | Private DN length (set on Private Network panel) |
| UDP | Private/Subscriber | private access code + home location code (LOC) + private received digits |
| CDP | Private/Subscriber | private received digit |

Outgoing public calls routing

Outgoing public calls from within the system typically have the routes set to Public. Refer to [“Configuring call routing” on page 222](#). The NPI/TON gets sent as Unknown/Unknown. The public called number length is based on the Public DN lengths table in the Public networks dialing plan.

MCDN trunks also allow public call types when tandeming calls from another system on the private network. Some of these systems use specific call types that the BCM50 needs to recognize to pass on correctly. Also refer to “Using the MCDN access codes (tandem calls)” on page 220.

| Type of call | NPI/TON | BCM50 prepend access code | BCM50 monitor display code |
|--|-----------------|---------------------------|----------------------------|
| Local | E164/Local | Local access code (9) | E.164/Subscriber |
| National | E164/National | National access code (X1) | E.164/National |
| Special calls (international, 911, etc.) | Private/Special | Special access code (9) | |

Incoming call routing

Incoming call routing also depends on the call type. The system also uses the Public and Private DN length settings to determine call routing.

Defining DN length

The DN lengths setting allows you to change the number of digits for the Received number length and the DN length, which are used by the system to determine if an incoming call is valid for the system.

Each increase in length repeats the first digit in front of any existing DN. For example, if DN 234 was increased to a length of four, the new DN would be 2234.



Warning: Do not change DN length immediately after a system start-up. You must wait until the system is operational with two solid green status LEDs.



Warning: Increasing the DN length affects other areas of the system:

If the DN length change creates a conflict with the Park prefix, external line access code, direct-dial digit, or any line pool access code, the setting for the prefix or code changes to None, and the corresponding feature is disabled.

Optional applications affected by DN length changes:

Voicemail and **Call Center** applications are reset if you change the DN length after these services are installed.

If you increase your DN length and then decide to decrease the DN length you will have to cold start your system and lose all of the programming.



Warning: If your system is running with a PBX telephony template, the Public and Private received # length are by default 3 (digits) at startup. Increasing the DN length after system startup does not change these digits, so you will need to manually change the Public and Private Receive Number length.

Private OLI's are automatically assigned to the DN records if the DN length and the Private Received Number length are the same. If this changes, the Private OLI's are cleared, or are not assigned (PBX template).

Network note: If your system is part of a private network, ensure that you confirm the dialing plan for the network before changing this length. If you change the length, ensure that you check all DN-related settings after the change.

Using the Received # length

If you change the DN length of your system, you may need to change the Received # length. Private and public networking, and the access codes to determine a route for an incoming call over an auto-answer trunk.

On systems running the DID telephony template, the Private and Public Received # length is set to the same length as the DN length for the system. On systems running the PBX telephony template, the Private and Public Received # length default to 3, unless the DN length is changed during the Startup procedure.

These digits identify target lines ([“Processing incoming calls” on page 213](#)), Auto DN's, and DISA DN's.

The received number can be shorter if network or central office constraints require this. This number cannot be greater than the system DN length on a networked system using a coordinated dialing plan (CDP) or a universal dialing plan (UDP). On a standalone system it is possible that the received number length would be greater than the DN length.



Warning: Decreasing the received number length clears all programmed received digits that are longer than the new settings.

Processing incoming calls

The system processes a call in the following way:

- 1 The system receives a call from the public or private network.
- 2 The system identifies the call type:

Public calls:

- If the call is from the MCDN network and is a local, national, or special call type, the system prepends the appropriate access code.


- If the call is from (ETSI-QSIG, MCDN, NI, DMS100, DMS250) and tagged as Private/Subscriber, the system prepends the Private access code, if the dialing plan is UDP.
- If the call is tagged as Unknown/Unknown or Private/Unknown (ETSI-QSIG, MCDN, N1, DMS100, DMS250 trunks), no access code is added.
- For all other call types, the system truncates the trailing digits to the Public Received # Length. (Go to step 4)

Private calls:

- If the call is tagged as Private/Subscriber or Private/UDP, the system prepends the Private access code.
 - If the call is tagged as Private/CDP, no access code is added.
- 3** The system tries to match the first digits of the dial string to a destination code. If the digits match, the dial string is routed out of the system.
 - 4** If the system cannot match the first digits to a destination code, the system tries to match the dial string to a target line (Public or Private Received Number). If the dial string does not match any target lines, the call is routed to the prime set for the line.

Figure 64 is a graphic illustration of incoming call processing.

Figure 64 Incoming public and private call coding

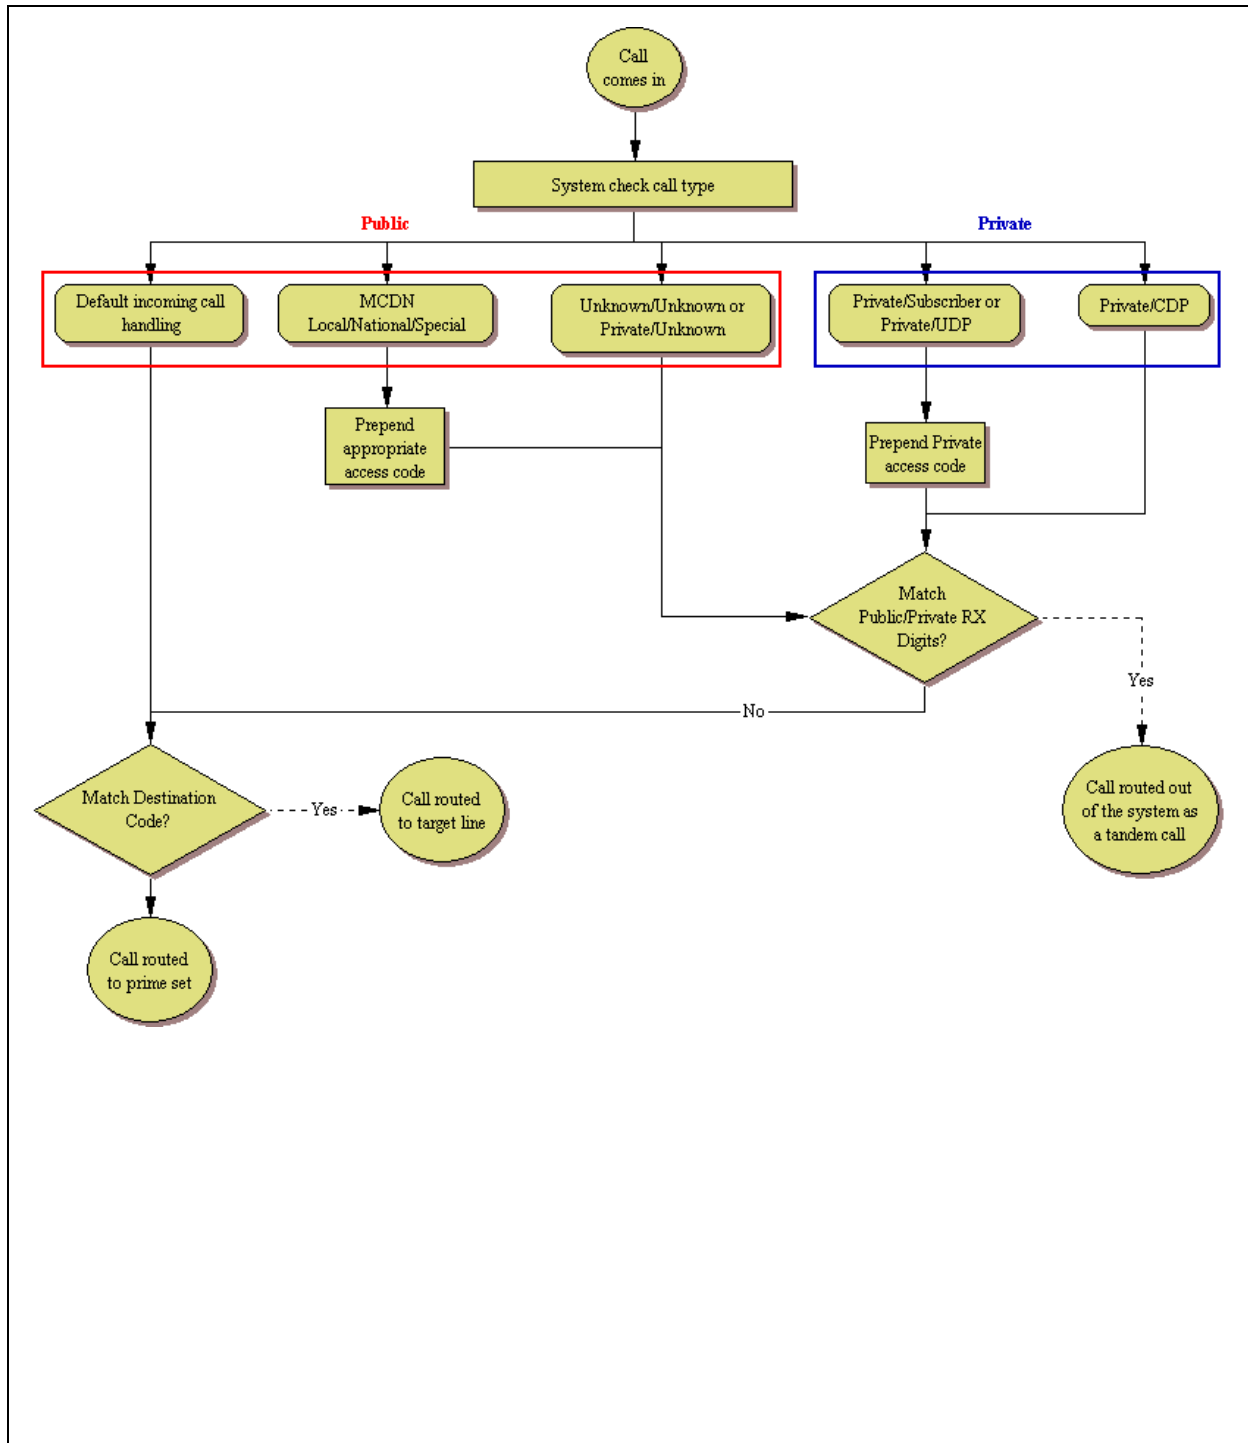


Determining line access dialing

“Understanding access codes” on page 217 and “Configuring call routing” on page 222 describe what you do with the lines and loops you previously set up into line pools.

By using access codes or call routing, which uses destination codes, you can determine which lines (routes) outgoing calls use. When you create a route, you can also specify restrictions that apply to how or when the line will be used.

Figure 65 provides an overview of how access codes and routing is used within the system to direct calls from a telephone in one system to a telephone in another system.

Figure 65 Line management diagram

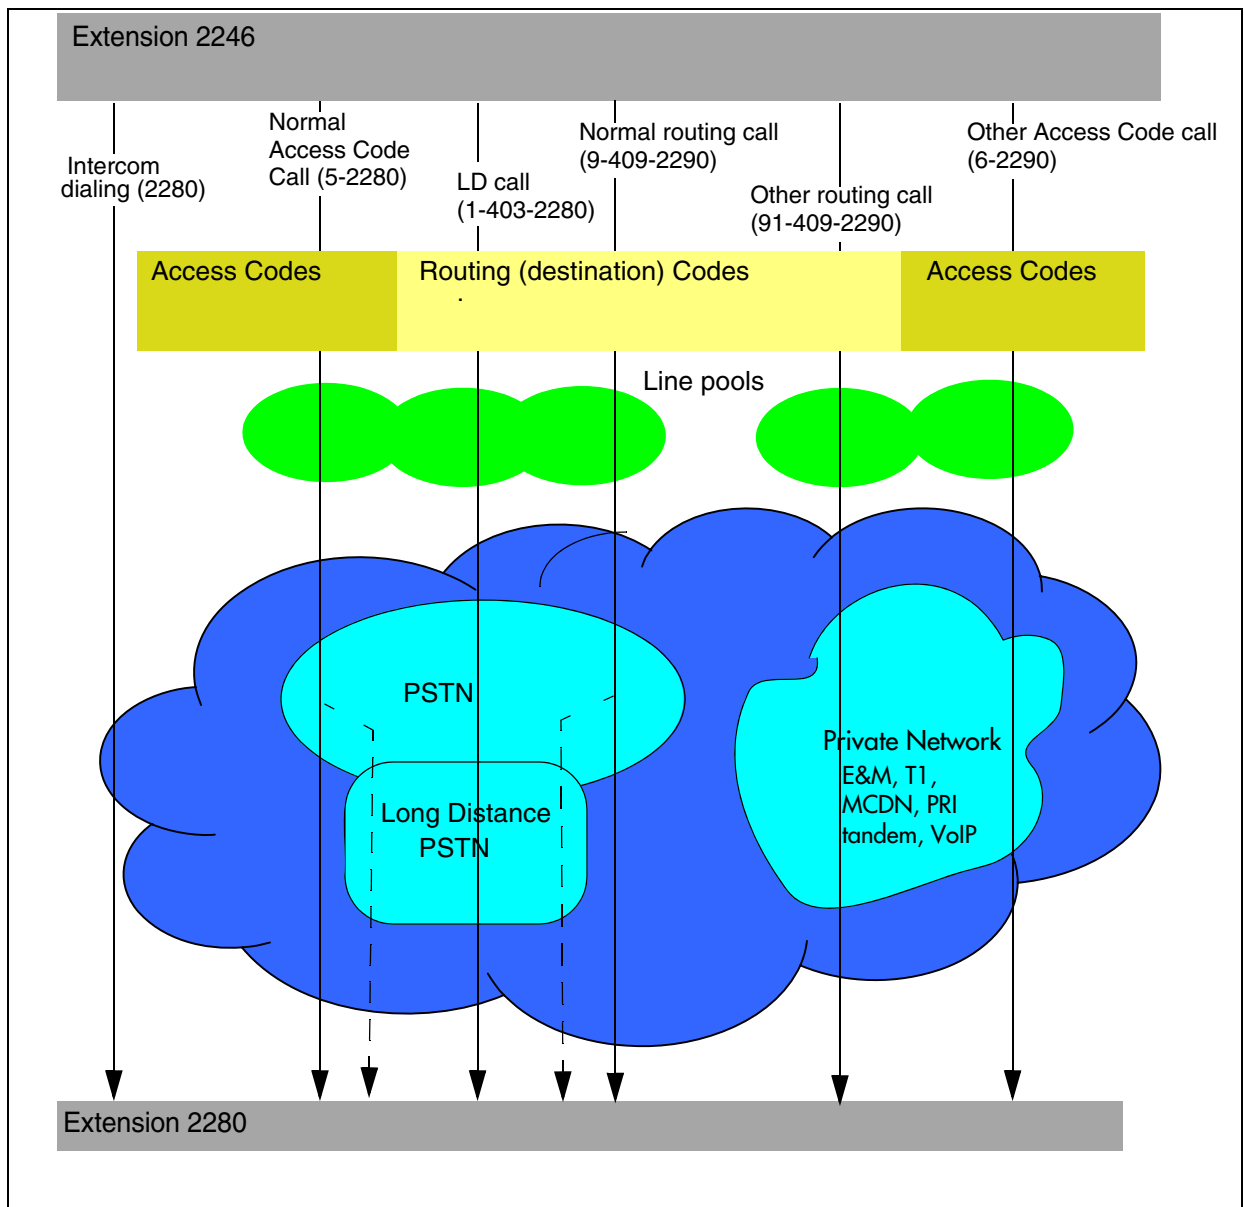

Understanding access codes

The system uses access codes to direct calls to the correct lines and destinations. Refer to [“Creating dialing plans” on page 206](#) for a general overview about using access codes within the system dialing plan.

Task:

Set up access codes for internal features:

- park prefix
- direct dial digit

Set up access codes that affect users dialing in from remote locations:

- Private Auto DN
- Public Auto DN
- Private DISA DN
- Public DISA DN

Set up access codes that affect calls coming in over the private network:

- Private access code
- Local access code
- National access code
- Special access code

Set up access codes that affect calls leaving the system:

- External code (ATA and analog devices)
- Line pool access codes
- Destination codes
- Carrier codes

The default settings shown in [Table 35](#) can help you plan your access codes so there are no conflicts.

Table 35 Default codes table

| Digit | Use | System panel |
|-------|--|--------------------------------|
| 0 | direct dial digit | Access codes |
| 1 | park prefix | Access codes |
| 2XX | first digit of DNs/DN lengths | Set through Quick Start Wizard |
| 9 | line pool A access code (Takes precedence over the External line access code if there is a conflict.) | Access codes |

Call Park codes

When you park a call (**FEATURE 74**), the system assigns one of 25 codes for the retrieval of the call. You can then press the Page display key to announce the code that appears on the display.

These three-digit codes include the Call Park prefix, which can be any digit from 1 to 9, and a two-digit call number between 01 and 25. For example, if the Call Park prefix is 1, the first parked call is assigned Call Park retrieval code 101.



Note: The Park prefix must not conflict with the following:

- external code
- direct dial digit
- private access code
- Public/Private Auto DN
- Public Private DISA DN
- line pool code/destination code, or
- telephone DN



Note: Other programmable settings may affect which numbers appear in the window during programming. Although the numbers 0 to 9 are valid Park prefix settings, some may already be assigned elsewhere by default or by programming changes.

If the DN length changes, and the changed DNs conflict with the Park prefix, the setting changes to None.

The system assigns Call Park codes to calls in sequence, from the lowest to the highest, until all the codes are used. The use of different of codes ensures a call reaches the right person, especially when more than one incoming call is parked.



Note: Model 7000 phones are supported in Europe only.

The highest call number (the Call Park prefix followed by 25) is used by model 7000 and 7100 telephones, analog telephones, or devices connected to the system using an ATA2. Analog telephones or devices cannot use the other Call Park codes.

When parking a code on an analog telephone, the call is parked on the highest park code. When retrieving a call, any phone can retrieve the call by entering the park code.

Calls are retrieved by pressing the intercom button and dialing the retrieval code. On model 7000 and analog telephones, pick up the receiver, and then dial *<parkcode>25*.

You also need to program the park timeout. The park timeout determines when external parked calls that are not answered return to the originating telephone. See the *BCM50 Device Configuration Guide* (N0027146) for information on programming park timeout.

You can disable Call Park by setting the Park prefix to None.

Creating Direct Dial sets

The Direct dial setting allows you to dial a single system-wide digit to call a specific telephone, called a direct dial telephone. The most common example of a direct dial set is a telephone for an operator, a receptionist or an attendant. You can program a maximum of five direct dial sets on the system, however, you can only specify one direct dial number for the system.

Tips about access codes

Here are some pointers to assist you in planning the access codes for your system.



Note: The following codes/digits must not conflict:

- park prefix
 - external code
 - direct dial digit
 - private access code
 - Public/Private Auto DN
 - Public/Private DISA DN
 - line pool code/destination code
 - telephone DN
-

- **External line access code:** If the DN length is changed, and the changed DNs conflict with the external line access code, the setting changes to None.
- **Direct dial telephone:** Another direct dial telephone, an extra dial telephone, can be assigned for each schedule in Services programming.


If the DN length is changed, and the changed DNs conflict with the Direct dial digit, the setting changes to None.

- **Public/Private Auto DN:** The length of the Auto DNs are the same as the Public or Private Received Number Lengths specified under Configuration>Telephony>Dialing Plan. The public/private Auto DN is cleared if the corresponding Received Number Length is changed.
- **Public/Private DISA DN:** The length of the DISA DNs are the same as the Public or Private Received number length specified under Configuration>Telephony>Dialing Plan. The public/private DISA DN is cleared if the corresponding Received number length is changed.

Using the MCDN access codes (tandem calls)

Three special codes exist specifically for programming over PRI and VoIP trunks that are using the MCDN protocol, and which connect to a call server systems that use specific call codes for special call types, such as the Meridian 1 (M1). The purpose of the codes is to allow easier programming of the call server systems when calls are tandemed through a BCM50 to the local PSTN.

Calls tandeming to the public network through the private network need to retain their dialing protocol throughout the private network. This means that a call from an M1 node tagged as a local call gets received by the BCM50 node and is recognized as a call intended for the public network, but also as a call that needs to maintain the local call tag until it gets to the BCM50 node that is directly connected to the PSTN. This is accomplished by ensuring that the destination code, which starts with this access code, passes the call on using the route designated with the correct call type. [Figure 66](#) charts this process.

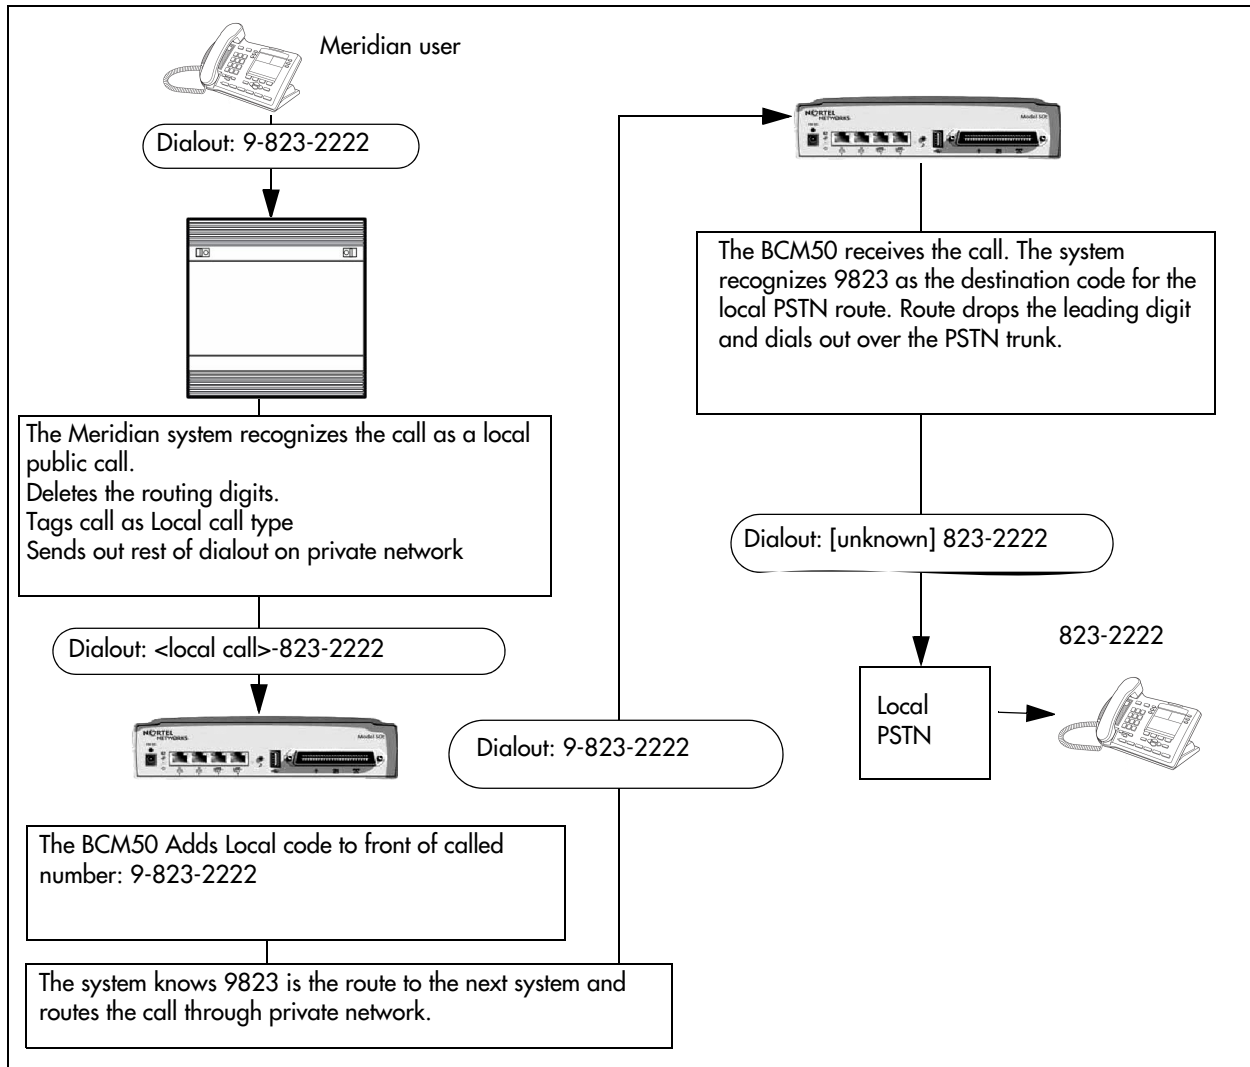Figure 66 Local call tandemed through BCM50 nodes

Calls coming in from the public network need to be translated to their private network destination before routing/tandeming through the private network. In this case, the route used is defined with the call type of Private.

Line pool access codes

Line pool access codes allow you to assign an access code for each of the basic line pools (A to O). These codes specify the line pool for making an outgoing external call. Up to three digits in length, these codes do not allow any other routing programming. The user simply dials the code in front of the dial string. The system, in turn, deletes the entire code before sending the call out over the appropriate route.

If you need a more complex routing arrangement, you need to specify routes and destination codes, which allows you more flexibility in terms of dial strings, routing schedules, and routing restrictions.

Using Carrier codes

A multi-digit Carrier access code contains an Equal Access Identifier Code (CAC) followed by a Carrier Identification Code (CIC). The CIC identifies the carrier that handles the call. The Carrier Access Code table stores the CAC digit pattern that you define for your region.

In most cases it is not necessary to change the default values.

About Carrier access codes

Here are some general points about carrier access codes:

- You can define up to five carrier codes.
- Two entries will be predefined in North America, but you can remove these defaults.
- Each entry consists of an equal access identifier code prefix (one to six digits) and a carrier identification code length (one digit, 1 to 9).
- Each entry is identified by the prefix digits themselves.

Configuring call routing

Call routing allows you to define how calls are routed by your BCM50 system.

Call routing decides what path an outgoing call takes using the digits that are dialed. It is sometimes called Automatic Route Selection (ARS).

When you select an internal line and dial, the system checks the numbers you enter against the routing tables. If the number you dial starts with a destination code, the system uses the line pool and dials out digits specified by the route assigned to that destination code, and then dials the rest of the number that you dialed.

Routing service replaces a number of manual tasks, including:

- entering a line pool code
- dialing an access code for a long distance carrier
- deciding which line pool to use according to the time and day

You can set up routing to take advantage of any leased or discounted routes using information supplied by the customer. The system cannot tell what lines are cheaper to use.

For Call by Call service selection (PRI only), the installer defines destination codes for various call types over PRI lines (for example, Foreign Exchange, TIE Trunk, or OUTWATS). The user dials a number using the intercom button without entering any special information. For more information see [“Provisioning for Call by Call limits with PRI” on page 226](#).



Warning: Plan your routing service before you do any programming.

Routing affects every call placed in the system and must be carefully planned to avoid conflicts and gaps in the programming. Use tables to design routes and destination codes, then check for potential problems before you start programming. It also saves you time when all the settings are written out in front of you.

Routing configuration

The settings for a call routing include:

- a three-digit route number (000-999)
- external # digits (up to 24 digits)
- a line pool
- destination codes (max. of 500 available, up to 12 digits)
- DN type and/or Service Type
- public and private DN lengths
- a schedule (optional)

Configuring Call-by-Call services

Call-by-Call service selection (CbC) allows you to access services or private facilities over a PRI line without the need for dedicated facilities. The different services represent different types of access to the network.

This section includes information about:

- [“Call-by-Call services” on page 224](#)
- [“Switches supporting Call by Call limits” on page 224](#)
- [“Provisioning for Call by Call limits with PRI” on page 226](#)

Supporting protocols

The following protocols support Call by Call limits:

- National ISDN 2 (NI-2)
- DMS-100 custom
- DMS-250
- AT&T 4ESS custom

Call-by-Call services

BCM50 supports the Call-by-Call Services listed in [Table 36](#).

Table 36 Call-by-Call Services available on the system

| Service | Description |
|-----------------------|---|
| Public | Public calls connect BCM50 and a Central Office (CO). BCM50 supports both incoming and outgoing calls over the public network. Dialed digits conform to the standard North American dialing plan (E.164 standard). |
| Foreign Exchange (FX) | Foreign exchange service connects a BCM50 site to a remote central office (CO). This provides the equivalent of local service at the remote location. |
| TIE | TIE lines are private incoming and outgoing lines that connect Private Branch Exchanges (PBXs) such as another BCM50. |
| OUTWATS | Outward Wide Area Telecommunications: This outgoing call service allows a BCM50 user to call telephones in a specific geographical area referred to as a zone or band. Typically, a flat monthly fee is charged for this service. |
| INWATS | Inward Wide Area Telecommunications: This long distance service allows a BCM50 user to receive calls originating from specified areas without charge to the caller. A toll-free number is assigned to permit reverse billing. |
| International INWATS | An international long distance service that allows a BCM50 user to receive international calls originating from specified areas without charge to the caller. A toll-free number is assigned to permit reverse billing. |
| Switched Digital | This service provides premises-to-premises voice and data transport with call management and monitoring features. |
| Nine Hundred | This service is commonly referred to as fixed-charge dialing. |
| Private | Private incoming and outgoing calls connect BCM50 to a virtual private network. Dialed digits can conform to the standard North American dialing plan (E.164 standard) or the dialed digits can use a private dialing plan. |

Switches supporting Call by Call limits

[Table 37](#) lists the service types and cross-references them with four common switches.

Table 37 Switches and service types chart (Sheet 1 of 2)

| Service types ¹ | Switches | | | |
|----------------------------|----------------|------------------|----------------|---------------------------------|
| | NI-26 | DMS-100 (custom) | DMS-250 | AT&T 4ESS |
| FX | FX | FX ² | N/A | N/A |
| Tie ³ | TIE | TIE | TIE | SDN (software defined network) |
| INWATS | INWATS | INWATS | Eight Hundred | Toll Free MEGACOM |
| International INWATS | Same as INWATS | Same as INWATS | Same as INWATS | International Toll Free Service |

Table 37 Switches and service types chart (Sheet 2 of 2)

| Service types ¹ | Switches | | | |
|----------------------------|---|--------------------------|---------------------------|----------------------|
| | NI-26 | DMS-100 (custom) | DMS-250 | AT&T 4ESS |
| OUTWATS | IntraLATA OUTWATS OUTWATS with bands InterLATA OUTWATS | OUTWATS | PRISM | MEGACOM |
| Private | | DMS Private ⁵ | VNET (virtual network) | N/A |
| Switched Digital | N/A | N/A | N/A | ACCUNET ⁴ |
| Nine Hundred | N/A | N/A | Nine Hundred | MultiQuest |
| Public | Public | Public | Public | N/A |

1. N/A indicates that the protocol does not support the service.

2. DMS-250 Sprint and UCS support incoming FX only (that is, Network-to-BCM50). DMS-250 MCI does not support FX.

3. NI-2 allows two TIE operating modes: senderized and cut-through. BCM50 supports only senderized mode.

4. Rates greater than 64 kbps are not supported.

5. Bell Canada VNET.

6. Not all service types may be supported by a switch type. For information, contact your service provider.

Provisioning for Call by Call limits with PRI

To program the system for Call by Call Limits with a PRI interface, you must:

- provision a DTM as PRI, if one is not already configured as part of the system
- select a protocol
- program incoming call routing
- program routes that use the PRI pools, see [“Configuring call routing” on page 222](#).

Other required programming in the Element Manager

Programming Call by Call on PRI requires these settings:

- Under Configuration>Sets>All DNs, assign the line pool.
- Under Configuration>Telephony>Dialing Plan>Routing, assign a pool for routing, and assign the service type and service id, if required.
- Under Telephony>Dialing Plan>General, specify the minimum and maximum values for the pools.

Call by Call service routing

[Table 38](#) is an example of a Routing Table containing Call by Call programming (available in the North America market profile). Also refer to [“Configuring Call-by-Call services” on page 223](#).

Table 38 Call by Call routing table example

| Route Number (000-999) | Dial Out (24 digits) | Use Pool | Service Type | Service Identifier |
|---------------------------|-------------------------|----------|------------------|--------------------|
| 003 | | BlocA | Public | |
| 004 | | BlocA | FX | xxxxx |
| 005 | | BlocA | TIE | xxxxx |
| 006 | | BlocB | OUTWATS | xxx |
| 007 | | BlocB | Private | |
| 008 | | BlocB | Switched Digital | |

Note: The public DN lengths are used for all PRI calls except those whose routes use service type Private or service type TIE with DN Type specified as Private.



Note: This type of routing only applies to those PRI trunks set with a protocol of NI, DMS100, DMS250 or 4ESS.

The service identifier (SID) depends on the selected service type (for example, with NI-2 protocol).

| Service Type | Service Identifier description |
|----------------------|---------------------------------|
| Public | None |
| FX | Facility Number 1-5 digits |
| TIE | Facility Number 1-5 digits |
| OUTWATS ^a | Optional Band Number 1-3 digits |
| Private | None |
| Switched Digital | None |

a. For NI-2, do not program the Carrier Access Code for banded OUTWAT calls. This call may be rejected.

When you select or change a PRI protocol, the Service Type and Service ID fields automatically clear for each entry in the routing table for that PRI.

PRI routing protocols

Table 39 lists the service/DN type choices available for PRI lines.

Table 39 PRI Service type/DN type values

| PRI Protocol | Type | Values |
|--------------|---------|--|
| MCDN | DN | Public, Private, Local, National, Special |
| ETSI Euro | DN | None, Overlap |
| ETSI QSIG | N/A | |
| NI | Service | Public, TIE, Foreign Exchange (FX), OUTWATS |
| DMS100 | Service | Public, Private, TIE, Foreign Exchange (FX), OUTWATS |
| DMS250 | Service | Public, Private, TIE, Foreign Exchange (FX), OUTWATS |
| 4ESS | Service | TIE, OUTWATS, Switched Digital (SDS) |

Using destination codes

Destination codes allow you to control how the system interprets and routes dial strings from internal sources. Destination codes are similar to line pool codes except that by using routes (which attach dial strings and DN type designators to line pools) and schedules you can control what digits the user has to dial and how the system routes the call out of the system, including what numbers from the dial string get added or deleted to the route dialout.



Note: Destination codes must not conflict with the following:

- park prefix
 - external code
 - direct dial digit
 - Auto DN
 - DISA DN
 - Private access code
 - line pool codes
 - telephone DN
 - public target line received digits
 - other destination codes
-




Note: You can enter destination codes up to a maximum of 12 digits.

Why use destination codes?

Routes determine path (line or pool) and any required access numbers.

Destination codes determine which route to take (that is, an end node uses one destination code for all other nodes in the system). If you choose to use the destination codes Normal schedule, the call will always go out over the same route. If you choose to use the other destination codes schedules, you can set up a more responsive plan, whereby calls can go out over more than one route, based on scheduled times.

Destination codes provide you with the opportunity to create a dialing plan that allows users to connect to other systems in a relatively seamless or consistent manner, regardless of the lines or routes that are being used to get there. For example, connecting through VoIP lines requires significantly different ways of dialing than dialing over T1 lines. However, you can configure destination codes, such that the user dials the same number of digits regardless of the trunks over which the calls are routed.

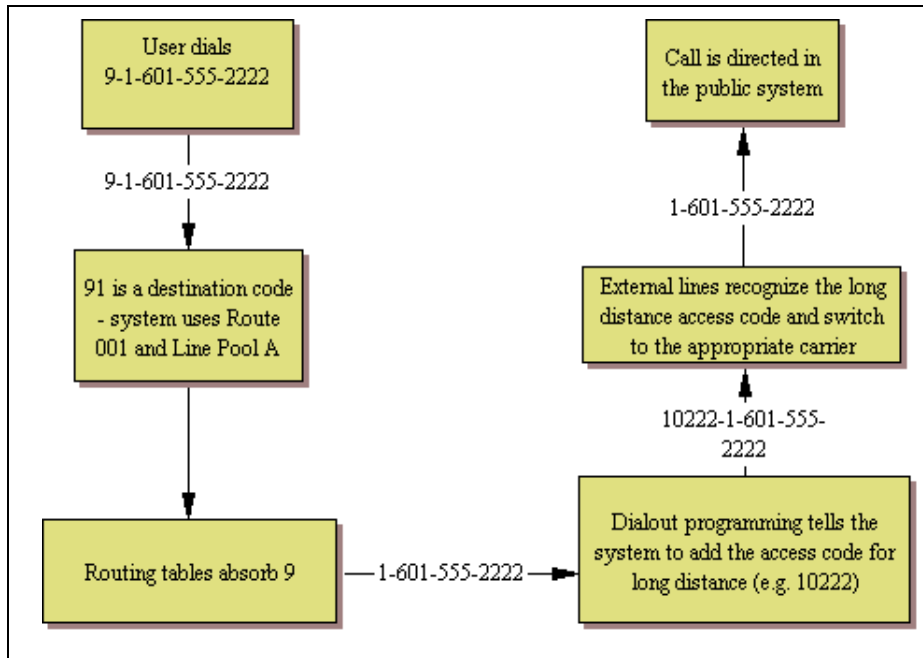Figure 67 Using destination codes to access another system

Deciding on a code

When deciding on which digits to use to start your destination codes, consider the following:

- Ensure that the digit or digits you want to start your destination codes with do not match any of the access codes, including the line pool codes that already exist in your system. You may find that you need to delete line pool codes and create a route and destination code instead. This could occur if you want to set up fallback to a public line, for instance. If the public line is accessed by a line pool code, you would have to change access to a route so you could create a fallback schedule with the destination code used for the primary line (or lines, if you have more than one outgoing line pool that requires fallback).
- Decide how much of the common part of a dial string you want your users to have to dial, and how much you can put in the dial string.
- If you want specific dial strings to use specific routes, map these out first.

For instance, if you want users to dial between BCM50s over VoIP lines, you would create destination codes specific to those systems which use the VoIP line pool, using the digits with which the users are familiar. You can then create a unique destination code for the call you want to route.

Example: If users are used to dialing 9-1-555-1234-<DN number> to reach another system (whose DN codes start with 6), you create a destination code of 915551236A, using the VoIP line pools (users dial the destination code plus the DN of the telephone they want to reach on the other system). The letter A at the end of the code represents any number from 0 to 9 which is not used by any other destination code.

If you need to use PSTN lines for a specific connection on the other system, you can create a destination code specific to that destination number and attach it to the route set up with the PSTN line pool (for example, 915551236333, 6333 being the DN of the device on the other system. When the user dials that specific number, the call will always go over the PSTN line). Note that by entering this code, users dialing with the code in the previous paragraph could never dial any DN that started with 63XX.

- If you want to use VoIP lines as your main lines, but you want to program one or more PSTN lines as fallback lines, you need to configure the routing and routing schedules so that the user dials the same number, regardless of which routes get used. You use the external number dialout string and absorb digits fields under the schedules in Destination code programming for this purpose.
- If a company wants to use VoIP lines between sites for interoffice calls, but not necessarily for all the voice traffic, they can configure specific destination codes for the VoIP routes. In this case, the destination code contains the same digits as a user would dial for a PSTN line, thus, making the shift transparent to the user and, at the same time, ensuring that the most economical route is being used. Depending on how many exceptions there are, you can use the wild card at the end of the string to save yourself from the necessity of entering a number of destination codes with the same leading digits.


Configuring Absorbed length

The digit absorption setting (**Absorbed Length**) applies only to the destination code digits.

When the Absorbed Length is at 0, the actual digits dialed by a caller are preserved in the dialout sequence. As you increase the absorbed length the equivalent number of digits are removed from the beginning of the destination code.

Adding Carrier access codes to destination codes

In some instances, long distance service uses the same lines as local service but is switched to a specific carrier using an access number, which is sometimes referred to as a carrier access code (CAC). Route programming can include the access number so the users do not have to dial it every time they make a long distance call. [Figure 68](#) shows an example of how the system interprets what the user dials into a valid outgoing call.

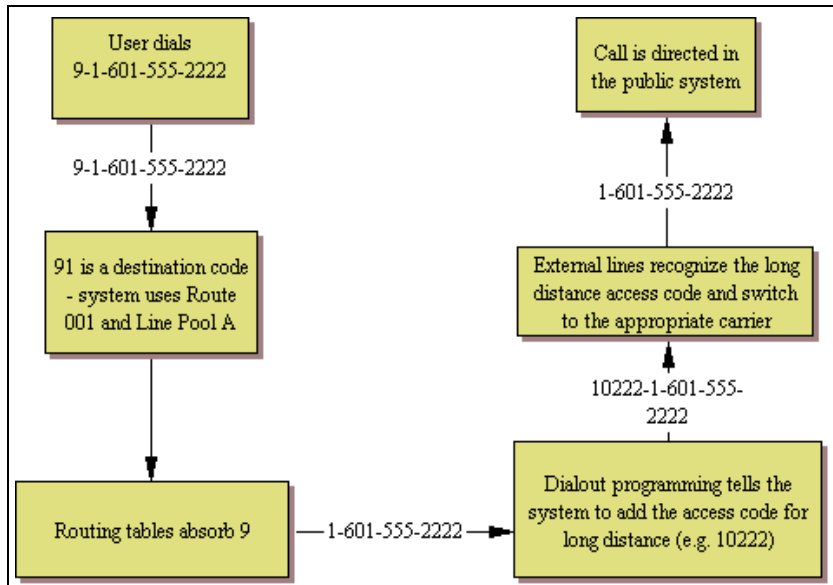Figure 68 Carrier code call numbering sequence

Tips: The destination codes 9 and 91 used in the examples cannot be used together. If you need the destination code 91 to direct long distance calls, you must create a separate set of codes that use local calling routes. These codes would be, for example, 90, 92, 93, 94, 95, 96, 97, 98 and 99. You can also use 9 A. (A represents a wildcard “Any”.)

Routing schedules and alternate routes

It can be less expensive to use another long distance carrier at a different time of day. Continuing with the example used in the previous flowchart, the lines that supply local service in normal mode are also used for long distance service after 6 p.m. because that is when rates become competitive. For the system to do this automatically, you must build another route.

All the lines used by a route specified by a destination code are busy when a call is made, you can program other routes that the system automatically flows the calls to, or you can allow the call to overflow directly to the Normal route schedule (usually the most expensive route). However, this only takes effect if an active routing schedule is applied to the line. Overflow routing is not available in Normal mode.

You must create overflow routes for each destination code for which you want to allow overflow routing.

When a user dials, and the telephone cannot capture the preferred line (First Route), the system tries each successive defined route (Second Route, then Third Route). If none of these routes have available lines, the call reverts to the Normal mode. When the call switches from the preferred routing mode (First Route, Second Route, Third Route) to Normal mode, the telephone display flashes an “expensive route” warning. VoIP trunking uses a similar process for setting up fallback from the VoIP trunk to a PSTN line.



Note: Overflow routing directs calls using alternate line pools. A call can be affected by different line filters when it is handled by overflow routing.

Setting up VoIP trunks for fallback

Fallback is a feature that allows a call to progress when a VoIP trunk is unavailable or is not providing adequate quality of service (QoS).


Refer to [“Setting up VoIP trunks for fallback” on page 383](#) for details about setting up fallback for VoIP trunks.

By enabling **PSTN fallback** on the Local Gateway IP Interface panels for H.323 trunks, you allow the system to check the availability of suitable bandwidth for a VoIP call, then switch the call to a PSTN line if the VoIP trunk is not available or cannot produce the expected quality. The Local Gateway IP Interface panel is accessed at Configuration>Resources>Telephony Resources>IP Trunks or H.323 Trunks.

You use scheduling and destination codes to allow the call to switch from H.323 line pools to a PSTN line without requiring intervention by the user.

Use the dialing plan worksheet in the Programming Records to plan your dialing requirements so you can pinpoint any dialing issues before you start programming. If you are programming an existing system, you can look at what numbers the users are familiar with dialing, and you can attempt to accommodate this familiarity into your destination codes plan.

[Figure 69](#) shows how a fallback network would be set up between two sites.

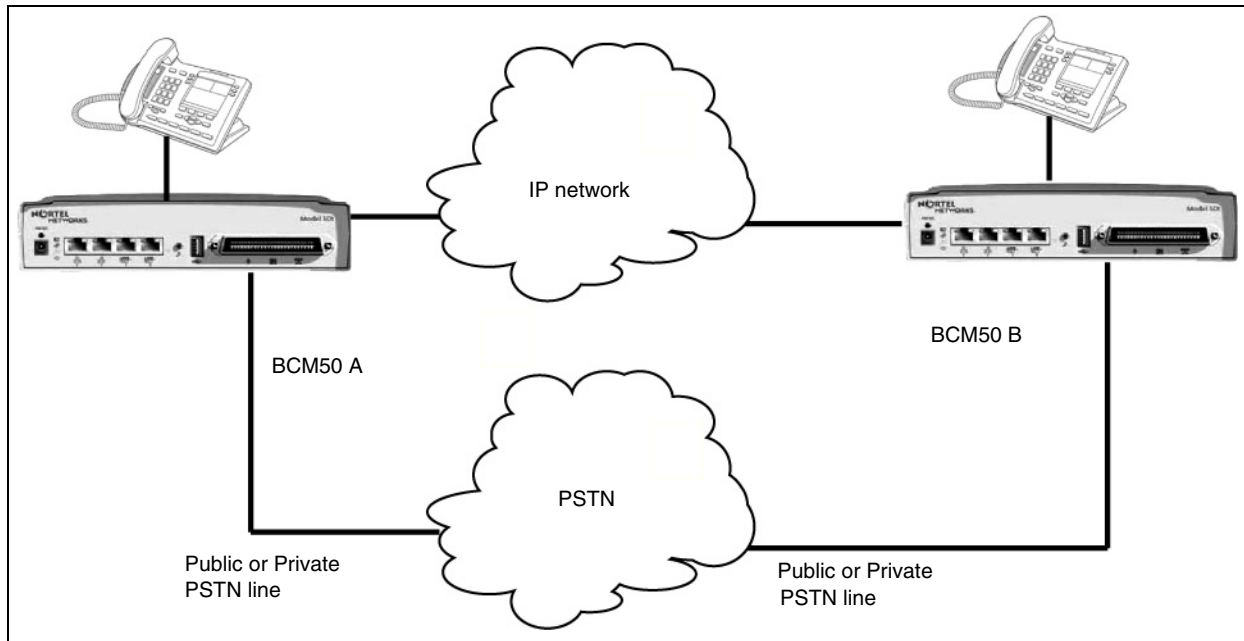Figure 69 PSTN fallback diagram

In a network configured for PSTN fallback, there are two connections between a BCM50 and a remote system.

- One connection is a VoIP trunk connection through the IP network.
- The fallback line is a PSTN line, which can be the public lines or a dedicated T1, BRI, PRI or analog line, to the far-end system.

When a user dials the destination code, the system checks first to see if the connection between the two systems can support an appropriate level of QoS. If it can, the call proceeds as normal over the VoIP trunk. If the minimum acceptable level of QoS is not met, the call is routed over the second route, through the PSTN line.

For PSTN fallback to work, you must ensure that the digits the user dials will be the same regardless of whether the call is going over the VoIP trunk or the PSTN. In many cases, this involves configuring the system to add and/or absorb digits.

Chapter 23

Dialing plan: Routing and destination codes

A large system usually requires a number of destination codes to ensure that calls are directed to the correct trunks, either on the private or public network.

The following paths indicate where to access destination codes in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Dialing Plan>Routing
- Telset interface: **CONFIG>Services>Routing Services>Routes

The following panels allow you to:

- create routes
- create destination codes for the routes, and the Normal schedule
- create alternate routing schedules

Click one of the following links to connect with the type of information you want to view:

| Panels | Tasks | Feature notes |
|--|--|---|
| "Routes" on page 236 | "Grouping destination codes using a wild card" on page 247 | |
| "Destination codes" on page 238 | "Using the MCDN access codes to tandem calls" on page 253 "Programming the PRI routing table" on page 251 "Setting up a destination for local calling" on page 245 "Setting up a route through a dedicated trunk" on page 246 "Adding Carrier access codes to destination codes" on page 252 | "Routing work flow" on page 243 |
| "Alternate routes for routing schedules" on page 240 | "Programming for least-cost routing" on page 248 "Using multiple routes and overflow routing" on page 249 | |

| Panels | Tasks | Feature notes |
|--------|-------|---------------|
|--------|-------|---------------|

See also:

- “Setting up VoIP trunks for fallback” on page 383
- “Configuring lines” on page 117
- “BRI ISDN: BRI T-loops” on page 175
- “Dialing plan: System settings” on page 255
- “Dialing plan: Public network” on page 263
- “Dialing plan: Private network settings” on page 269
- “Dialing plan: Line pools and line pool codes” on page 345
- “Public networking: Tandem calls from private node” on page 281
- “Private networking: Using destination codes” on page 327
- “Private networking: PRI and VoIP tandem networks” on page 311
- “Private networking: MCDN over PRI and VoIP” on page 285
- “Private networking: DPNSS network services (UK only)” on page 319
- “Configuring centralized voicemail” on page 339

Click the navigation tree heading to access general information about DN records.

Routes

The first step to setting up call routing is to define line pools into uniquely named routes. A route can be used with more than one destination code, but a line pool should only be used with one route.

Figure 70 illustrates the Routes tab.

Figure 70 Routes table

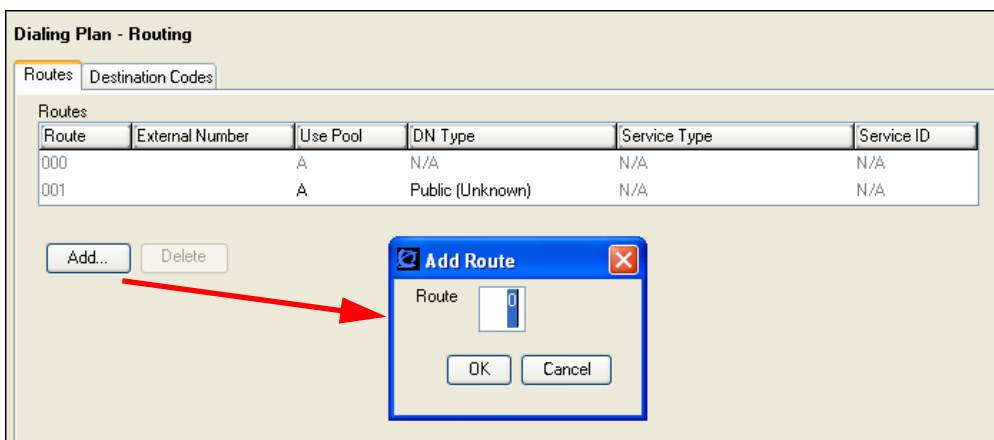


Table 40 describes the fields on the top frame.

Table 40 Route settings (Sheet 1 of 2)

| Attribute | Value | Description |
|-----------------|--|---|
| Route | <001-999> | This number is unique to each route. |
| External Number | <a maximum of 24 digits> | Enter the external or dial-out number for the route you want the assigned telephone to use. The external number is a digit or group of digits that get inserted in front of your dialed digits. If all the required numbers are defined in the destination code/dial string, this box can be left empty. Optional entries: F78: 1.5 second pause (counts as one digit in the dialing string) F804: wait for dial tone (counts as two digits in the dialing string) |
| Use Pool | Pool A to Pool O or BlocA to BlocF | Select a line pool for the route. The Bloc pools only display if you have PRI or VoIP trunks. |
| DN Type | Public Private Local (Subscriber) National Special (International) | This setting tells the system what type of line protocol the route uses to process the dial string. Refer to “PRI route types” on page 238 . MCDN private networks: Local, National and Special are special designators used to route calls from Meridian 1 systems, through BCM50 systems, out to the public network. The codes for these settings are defined under Telephony>Dial plan>General>Private Networks tab. Also refer to “Using the MCDN access codes to tandem calls” on page 253 . When the BCM50 receives outgoing calls from the Meridian 1, it recognizes the call type and appends the appropriate access code to the Meridian dial string. This code then matches to a route that uses the same DN type, passing the call along, either to another node (the route would have the same DN type) or to the public network (the route would have a Public DN type), depending on the routing information. |
| Service Type | Public Private TIE Foreign exchange (FX) OUTWATS Switched Digital (SDS) | This setting tells the system what type of line protocol the route uses to process the dial string. These protocols are used for lines connected to DMS100, DMS250 and 4ESS switches. Refer to “PRI route types” on page 238 . |
| Service ID | <digits> | If you choose a service, type in the identification number for the service. |
| Note: | Outgoing call display: If you have the trunks set up to send called number information, and the DN type is set to anything, except Private, the system sends the Public OLI number you specified under line programming. If the DN type is set to Private, the system sends the Private OLI number. Refer to “Line Access tab” in the <i>BCM50 Device Configuration Guide</i> (N0027146). | |

Table 40 Route settings (Sheet 2 of 2)

| Attribute | Value | Description |
|-------------------|---|-------------|
| Actions: | | |
| Add | 1. Under the routes table, click Add . 2. Enter a route number in the dialog box. 3. Click OK to save the new route. | |
| Delete | 1. On the routes table, select the route you want to delete. 2. In the Routes pane, click Delete . 3. Click OK . | |
| Modifying routes: | <p>Warning: Modifying some route settings may result in dropped calls. Ensure that you modify the destination codes Absorbed Length setting, if required, if you add or change the External Number entry.</p> <p>Changing the Use Pool or DN Types/Service Types values will result in dropped calls if the lines in the line pool do not support the DN/Service Type selected.</p> <ol style="list-style-type: none"> 1. On the routes table, select the route you want to change. 2. Click the field you want to change for that route and enter the new value. 3. Press Tab on your keyboard to save the change. | |

PRI route types

Table 41 lists the service/DN type choices available for PRI lines.

Table 41 PRI Service type/DN type values

| PRI Protocol | Type | Values |
|--------------|---------|--|
| SL-1 | DN | Public, Private, Local, National, Special |
| ETSI Euro | DN | None, Overlap |
| ETSI QSIG | N/A | |
| NI | Service | Public, TIE, Foreign Exchange (FX), OUTWATS |
| DMS100 | Service | Public, Private, TIE, Foreign Exchange (FX), OUTWATS |
| DMS250 | Service | Public, Private, TIE, Foreign Exchange (FX), OUTWATS |
| 4ESS | Service | TIE, OUTWATS, Switched Digital (SDS) |

Destination codes

Once you have the routes configured, set up the dialing plan destination codes that allow users to access the routes. You can use a route for more than one destination code, as you may require different codes for the same route to define restrictions or special call designators.

Figure 71 illustrates the Destination codes panel.

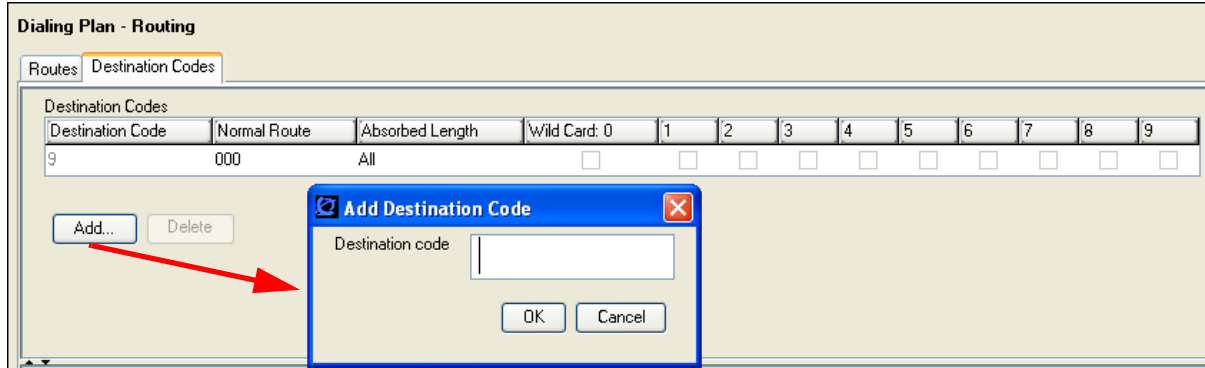
Figure 71 Destination codes table panel

Table 42 describes the fields on the destination codes frame.

Table 42 Destination codes table

| Attribute | Value | Description |
|------------------|--|---|
| Destination Code | <max. 12 digits> | This number precedes a telephone number to tell the system where the call needs to be routed. An <i>A</i> in the destination code represents an <i>any</i> character designation. The <i>A</i> code is a wildcard. |
| Normal Route | <configured route #> | This is the route that the system will use when the destination code is added to the dial string. |
| Absorbed Length | All, None, 1-X | This indicates how much of the destination code gets removed before the system sends the dial string to the network. |
| Wild Card 0 - 9 | Included, Excluded, Unavailable | If you enter the wild card character <i>A</i> at the end of a destination code, then the following applies: Included: This number can be dialed as part of the destination code. Excluded: This number will not be accepted as part of a destination code string because it is already used in the system. Unavailable: This number is already defined in another destination code and cannot be used. |
| Actions | | |
| Add | <ol style="list-style-type: none"> 1. Under the Destination Codes table, click Add. 2. Enter the new destination code. 3. Click OK to save the route settings. 4. On the Destination Codes table, select the fields beside the route you just created, and modify them, as required. 5. Test the route. | |
| Delete | <ol style="list-style-type: none"> 1. On the Destination Codes table, select the destination code you want to delete. 2. In the Destination Codes pane, click Delete. 3. Click OK. | |



Note: The destination codes must not conflict with the following:

- park prefix
- external code
- direct dial digit
- Auto DN
- DISA DN
- Private access code
- line pool codes
- telephone DN
- public target line received digits
- other routing codes

Alternate routes for routing schedules

When you select a route on the Destination Codes panel, the alternate schedules for that route appear in a separate table. You only need to fill out this panel if your system is using routing schedules.

Note that in these schedules you can configure three routes. The second route acts as fallback route for the first route if it is unavailable. If the second route is also unavailable, the system will try the third route. The dialing sequence for these routes needs to be the same from the user perspective, as fallback occurs automatically and is not controlled by the user. If all three routes fail, the default normal route is used.

Figure 72 illustrates the Alternate Routes panel.

Figure 72 Alternate routing schedules

| Alternate Routes for Destination Code: 9 | | | | | | |
|--|-------------|-----------------|--------------|-----------------|-------------|-----------------|
| Alternate Routes | | | | | | |
| Schedule | First Route | Absorbed Length | Second Route | Absorbed Length | Third Route | Absorbed Length |
| Night | | All | | All | | All |
| Evening | | All | | All | | All |
| Lunch | | All | | All | | All |
| Sched 4 | | All | | All | | All |
| Sched 5 | | All | | All | | All |
| Sched 6 | | All | | All | | All |

Table 43 describes the fields on the Destination codes frame.

Table 43 Destination codes schedules

| Attribute | Value | Description |
|-----------------|--|---|
| Schedule | Defaults: Night, Evening, Lunch, Weekend, Sched. 5, Sched. 6 | If you use a different carrier at different times of the day or week, you can set the destination code to use that route and provide two more backup routes. The user does not experience any difference in dialing sequence. |
| First Route | <configured route #> | This is the route that the system will use, during the indicated schedule, when the destination code is added to the dial string. |
| Absorbed Length | All, None, 1-X | This indicates how much of the destination code gets removed before the system sends the dial string to the network. |
| Second Route | <configured route #> | This is the route the system will use if the first route is unavailable. |
| Absorbed Length | All, None, 1-X | This indicates how much of the destination code gets removed before the system sends the dial string to the network. |
| Third Route | <configured route #> | This is the route the system will use if the first and second route are unavailable. |
| Absorbed Length | All, None, 1-X | This indicates how much of the destination code gets removed before the system sends the dial string to the network. |

Chapter 24

Dialing plan: Routing configurations

This section describes how you can configure the lines and loops to allow system users to dial out of the system over a public or private network.

The following paths indicate where to access the route lines and loops in Element Manager and through Telset Administration:

- Element Manager: Configuration >Telephony>Dialing Plan>Routing
- Telset interface: **CONFIG>System Programming

Task: Set up routing for various call scenarios:

- [“Prerequisites” on page 243](#)
- [“Routing work flow” on page 243](#)
- [“Destination code numbering in a network” on page 245](#)
- [“Setting up a destination for local calling” on page 245](#)
- [“Setting up a route through a dedicated trunk” on page 246](#)
- [“Grouping destination codes using a wild card” on page 247](#)
- [“Programming for least-cost routing” on page 248](#)
- [“Using multiple routes and overflow routing” on page 249](#)
- [“Using the MCDN access codes to tandem calls” on page 253](#)

Prerequisites


Complete the following prerequisites checklist before configuring the modules.

| | |
|---|--|
| Media bay modules/VoIP trunks are installed and configured. | |
| Create an access code/route map to understand how the numbering works for the system. | |

Routing work flow

[Figure 73](#) shows an overview task flow for the areas in programming that affect how routes are set up.

Figure 73 Routing workflow

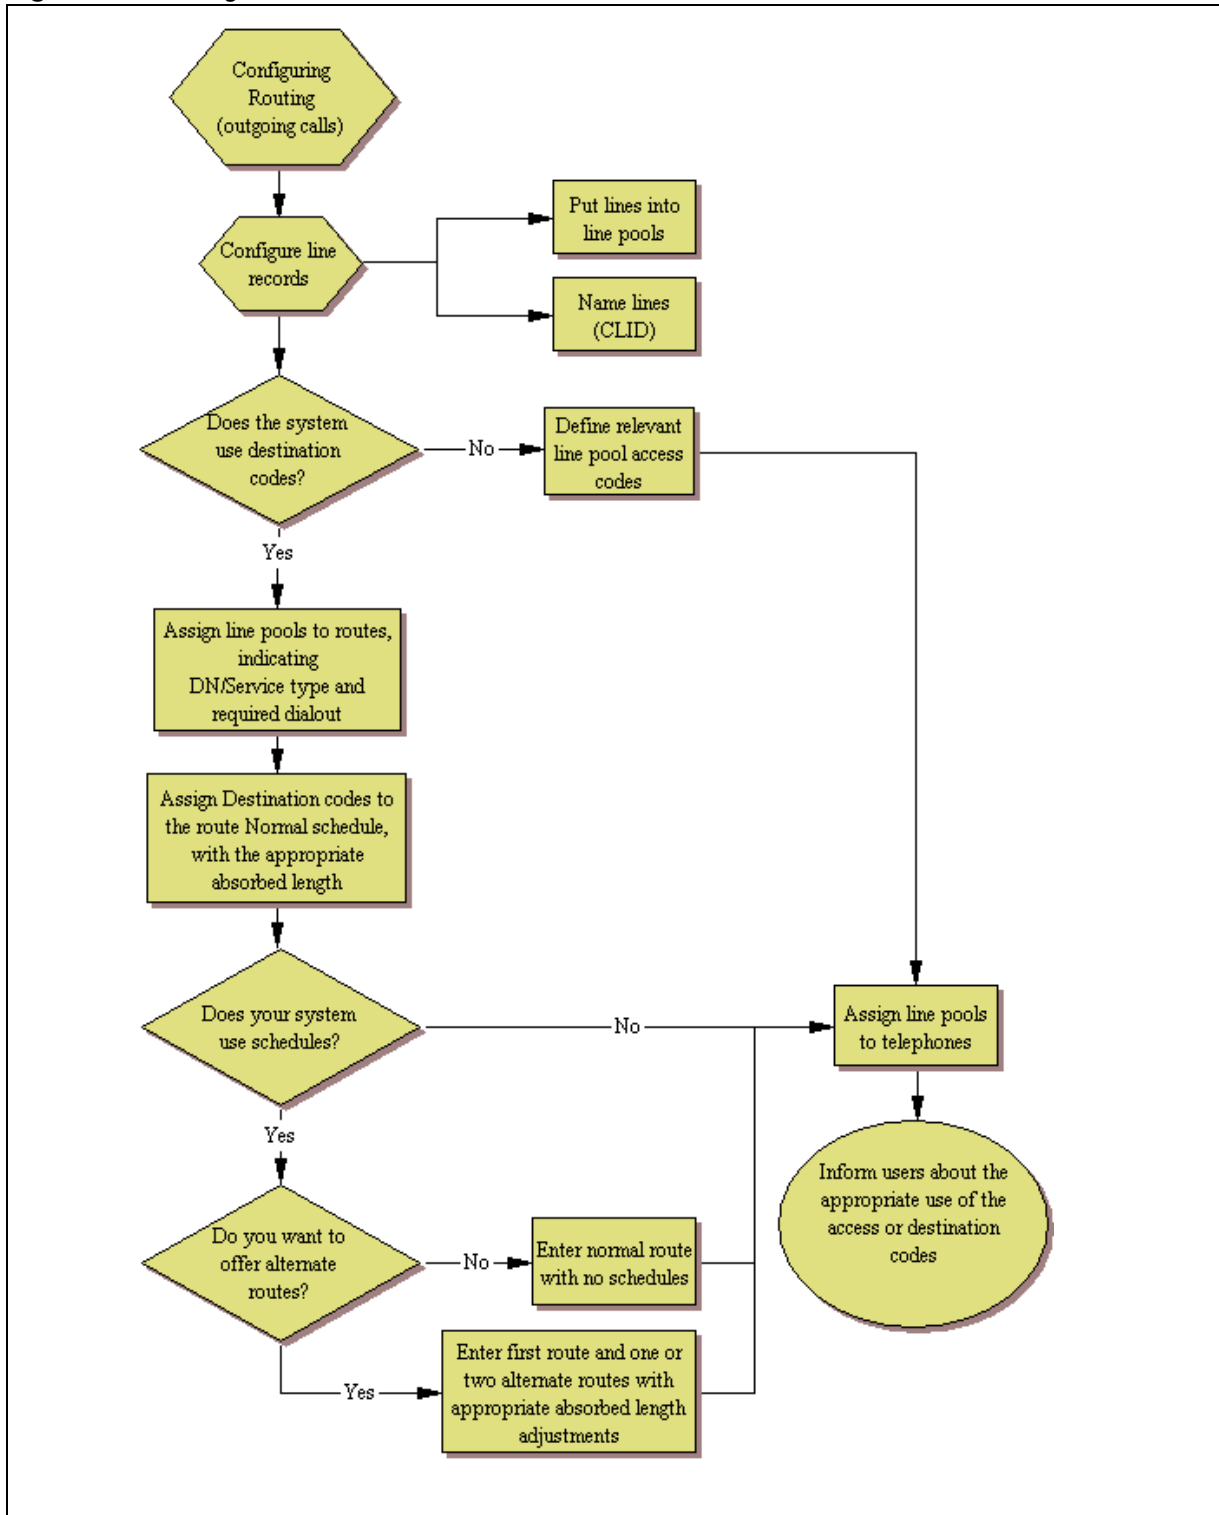

Destination code numbering in a network

Because the system checks the initial digits of a call against the routing tables, each type of internal or external call must begin with a unique pattern of digits. [Table 44](#) gives a sample plan for how initial digits are assigned in a network of systems with three-digit intercom numbers.

Table 44 Destination code leading digits

| Leading Digits | Use |
|----------------|--------------------------|
| 0 | Network Direct Dial |
| 221-253 | Intercom calls |
| 4 | Coordinated Dialing Plan |
| 5 | Unused |
| 6 | Unused |
| 1 | Call Park Prefix |
| 9 | All PSTN Calls |
| 7 | Unused |

In [Table 44](#), 4 is used as the initial digit for the coordinated dialing plan, but 5, or 6 can also be used for this purpose.



Tips: When programming a button to dial an external number automatically (autodial), private network calls must be programmed as external autodial numbers, even though they resemble internal extension numbers.

Routes generally define the path between the BCM50 system and another switch in the network, not other individual telephones on that switch.

Setting up a destination for local calling

An office can have different suppliers for local and long distance telephone service. By programming a destination code, any call that begins with 9, which is the most common dial-out digit, automatically uses lines dedicated to local service.

To build a route to allow local calls

- 1 Create a route that uses the line pool you assigned for the PSTN trunks. Refer to [“Routes” on page 236](#).
- 2 Create a destination code record and enter a destination code, such as 9, which is a common local call code. Refer to [“Grouping destination codes using a wild card” on page 247](#).

For local calls only, there are no dial out numbers. Compare with [“Setting up a route through a dedicated trunk” on page 246](#).

The destination code can use a different route, depending on what schedule is assigned. In the current example, the route you define is used when someone dials 9 during Normal mode, when the other Schedules are turned off.

- 3 Set up the Normal schedule with the route number you defined in step 1.

Figure 74 Routing Service programming example

| Routing Service (Services: Routing Service) | | |
|---|---|-------------------------------|
| Route # (000-999) | Dial out (if required) (max. 24 digits or characters) | Use Pool |
| 001 | none | A B C D E F G H I J K L M N O |
| 002 | none | A B C D E F G H I J K L M N O |

Figure 75 shows an example of a destination codes programming record filled out.

Figure 75 Destination codes for call routing

| Destination codes (Services; Routing service; Destination codes) | | | | | | | | |
|--|---------------------|---------------|---------------------|---------------|---------------------|---------------|---------------------|---------------|
| Service Schedule (max. 7 char) | Normal Rte | | Route schedule | | | | | |
| DestCode (max. 7 digits) | Use route (000-999) | Absorb Length | 1st route (000-999) | Absorb Length | 2nd route (000-999) | Absorb Length | 3rd route (000-999) | Absorb Length |
| 9 | 003 | All | | | | | | |
| 1 | 002 | 0 | | | | | | |

An office can have leased lines or private network trunks that provide cheaper to long distance calls by routing through the dedicated lines to remote systems, then using the local PSTN from that system to make the call. The routing should take place automatically when the number of the outgoing call begins with 1.

Setting up a route through a dedicated trunk

If your long distance is supplied by an alternate service or if you want to use different trunks at different times of the day, you can configure a route to use a specific trunk.

To set up a route through a dedicated trunk

- 1 Create a route that uses the line pool containing the discounted lines for long distance calling. Refer to [“Routes” on page 236](#).
- 2 Create a destination code record and enter a valid destination code (maximum of 12 digits). Refer to [“Grouping destination codes using a wild card” on page 247](#).

You must use a valid destination code, such as 91 (9, indicating PSTN; 1, indicating a long distance). View existing destination codes before entering a new code. The destination code can use a different route depending on the Schedule.

- 3 Under the **Normal** schedule for the destination code, enter the route you specified in step 1.

Grouping destination codes using a wild card

If you have a number of destinations that have the same route and digit absorb length, you can group these codes under one destination code to maximize your destination code table. In this case, the start digits will be the same, but the last character will be the wild card, and indicates any digit between 0 and 9. However, if there is a conflict with other digits already programmed or used by other destination codes, an error message appears.

For instance, you might use the same route (555) to a number of remote sites. Each site is accessed with the same external # (dial out string), except for the last digit, which is unique to each site. The exception to this is a site with a totally different access number and line pool requirement (route 565). This example is shown in [Table 45](#).

Table 45 Establishing routes and dialout requirements

| Route | Dial Out (external #) | Line Pool |
|-------|---|-------------|
| 555 | 0162 237 625<unique number from 0 to 9> | Line Pool C |
| 565 | 0173 133 2211 | Line Pool A |

If you do not use wild cards, you would need to create a separate destination code for each unique dialout, as shown in [Table 46](#).

Table 46 Destination codes not using a wild card

| Destination codes | Route | Absorb Length | Dial Out |
|-------------------|-------|---------------|---------------|
| 5621 | 555 | 3 | 0162 237 6251 |
| 5622 | 555 | 3 | 0162 237 6252 |
| 5623 | 555 | 3 | 0162 237 6253 |
| 5624 | 555 | 3 | 0162 237 6254 |
| 5625 | 555 | 3 | 0162 237 6255 |
| 5626 | 555 | 3 | 0162 237 6256 |
| 5627 | 565 | All | 0173 133 2211 |
| 5628 | 555 | 3 | 0162 237 6258 |
| 5629 | 555 | 3 | 0162 237 6259 |

If you use the wild card character A (ANY), you can reduce the number of destination codes you require to two, as shown in [Table 47](#).

Table 47 Destination codes using the ANY character

| Destination codes | Route | AbsorbLength | Dial Out |
|-------------------|-------|--------------|---|
| 562A | 555 | 3 | 0162 237 625X where X is the last digit of the destination code dialed out, from 1 to 9, but not 7 |
| 5627 | 565 | All | 0173 133 2211 |



Tips: To minimize the effort involved in preparing destination codes, set the digit absorption to 0. When digital absorption is set to 0, the actual digits dialed by a caller are preserved in the dial-out sequence. The need to program a dial out sequence as part of the route depends on the required dialout.

Programming for least-cost routing

It can be less expensive to use another long distance carrier at a different time of day. Continuing with the example used in [Figure 73](#), the lines that supply local service in normal mode are also used for long distance service after 6 p.m. because that is when rates become competitive. For the system to do this automatically, you must build another route.

To build a route for a secondary carrier

- 1 Create a route for the trunks and assign it to the Normal schedule. Refer to [“Setting up a route through a dedicated trunk” on page 246](#).
- 2 Choose **No number** for the dial-out.
- 3 Choose the line pool that contains the local service carrier lines.
- 4 Now you need to create a destination code and assign the route to the Night schedule. In this case, the change in route uses the start and stop times for Night Schedule.
- 5 Create 91 as a **Destination code**.
- 6 Make sure **Absorbed length** is set at 1.
- 7 Under **Night schedule**: enter the route you defined in step 1.

Calls that begin with the digits 91 travel out without using the access code when the Night schedule becomes active or when you turn it on at a control telephone.

Using multiple routes and overflow routing

If all the lines used by a route specified by a destination code are busy when a call is made, you can program other routes that the system automatically flows the calls to, or you can allow the call to overflow directly to the Normal route schedule (usually the most expensive route). However, this only takes effect if an active schedule is applied to the line. Overflow routing is not available in Normal mode.

You must create overflow routes for each destination code for which you want to allow overflow routing.

To set up the multiple routing overflow feature

- 1 You assign the preferred routes in a destination code schedule. Refer to [“Alternate routes for routing schedules”](#) on page 240.
 - a Pick a schedule when you want these routes to be in effect.
 - b In the **First Route** field enter the route number for the preferred route for the call.
 - c Choose the absorb length for the first route that is appropriate for the dialout numbers you entered for the route.
 - d Repeat steps b and c for **Second Route** and **Third Route** fields.
 - e Define the start/stop time as 0100 under the equivalent Routing Services schedule. This setting means that the schedule is active 24 hours a day. Refer to “Configuring schedule names and timers” in the *BCM50 Device Configuration Guide* (N0027146).
- 2 Assign an overflow route, usually the most expensive route, to the same Destination Code, but for the Normal schedule. Refer to [“Destination codes”](#) on page 238.
- 3 On the Scheduled Services table, choose auto for Service Setting, and enable Overflow. Refer to “Configuring scheduled service” in the *BCM50 Device Configuration Guide* (N0027146).
- 4 Use a control telephone to activate or override the feature on the telephones on which you want preferred routing to be active.



Note: You must also ensure that the route correctly absorbs or passes dialed digits so that the number dialed for each line is the same from the user perspective.

When a user dials, and the telephone cannot access the preferred line (First Route), the system tries each successive defined route (Second Route, then Third Route). If none of these routes have available lines, the call reverts to the Normal mode. When the call switches from the preferred routing mode (First Route, Second Route, Third Route) to Normal mode, the telephone display flashes an “expensive route” warning.



Note: Overflow routing directs calls using alternate line pools. A call can be affected by different line filters when it is handled by overflow routing.

VoIP trunking uses a similar process for setting up fallback from the VoIP trunk to a PSTN line. This section deals with applying the programming in network situations.

- “Dialing plan using public lines” on page 250
- “Destination code numbering in a network” on page 245

Dialing plan using public lines

Figure 76 and Figure 77 provide examples of how you can record dialing plan information in a spreadsheet. The example shows dialing plan information for a Toronto system in a network of three offices: Toronto, Halifax and Vancouver. Without routing, a BCM50 user in Toronto would have to select a line pool and dial 1-902-585-3027 to reach extension 27 in Halifax (902). By creating a destination code of 30 and creating a route that uses the proper line pool and dial out number, the user simply dials 3027. The same feature is available for Vancouver (604).

In the column Dial-out, P stands for pause, a host system signaling option. Press **FEATURE 78** to insert a 1.5-second pause in the dialing string.

Figure 76 Routing service record: use pool

| Routing Services (Services: Routing Service) | | |
|--|--|----------|
| Route # (000-999) | Dial-out (if required) (max. 24 digits or characters) | Use Pool |
| 100 | 902-585 | ABC |
| 101 | 902-585 | ABC |
| 102 | 604-645 | ABC |
| 103 | 604-645 | ABC |

Create unique route number Specify dial-out digits Route through Pool A

Figure 77 Routing service record: Destination code

| Routing service (continued) | | | | | | | | |
|--|------------------------|------------------|------------------------|------------------|------------------------|------------------|------------------------|------------------|
| Dest code (Services: Routing Services: Dest Codes) | | | | | | | | |
| Service Schedule | Normal | | Schedule | | | | | |
| DestCode (max. 12 digits) | Use route (001-999) | Absorb Length | 1st route (001-999) | Absorb Length | 2nd route (001-999) | Absorb Length | 3rd route (001-999) | Absorb Length |
| 30 | 100 | 0 | 000 | All | 000 | All | 000 | All |
| 31 | 101 | 0 | 000 | All | 000 | All | 000 | All |
| 32 | 102 | 0 | 000 | All | 000 | All | 000 | All |
| 33 | 103 | 0 | 000 | All | 000 | All | 000 | All |

Create unique code Specify which route to use Add Destination code to dialout out string

Programming the PRI routing table

The dialing plan must be thoroughly planned out in advance before programming the information into the BCM50 system.

To program the PRI routing table

- 1 Click Configuration>Telephony>Dialing Plan>Routing.
- 2 Click the route number record you want to use.
- 3 In the External Number column, type a dialout number (up to 24 digits).
- 4 Under Use Pool, select a PRI line pool.

The Bloc pools that are displayed depend on how you allocate PRI lines into pools in the line programming. It is possible to have only pool BlocA, or only pool BlocB, even if there are two DTMs configured as PRI in the system.

- 5 Choose a Service Type or DN type:
 - **DN type:** displays for PRI lines with protocol set to SL-1 (MCDN, ETSI Euro).
 - **Service type:** displays for PRI lines with protocol set to NI, DMS100, DMS250, 4ESS.
 - **Service ID:** N/A appears where the service requires an ID.


Adding Carrier access codes to destination codes

In some cases, long distance service uses the same lines as local service but is switched to a specific carrier using an access number, which is sometimes referred to as a carrier access code (CAC). Route programming can include the access number so the users do not have to dial it every time they make a long distance call. Figure 78 shows an example of how the system interprets what the user dials into a valid outgoing call.



Note: Carrier code service must be supported from the Central Office.

Figure 78 Carrier code call numbering sequence

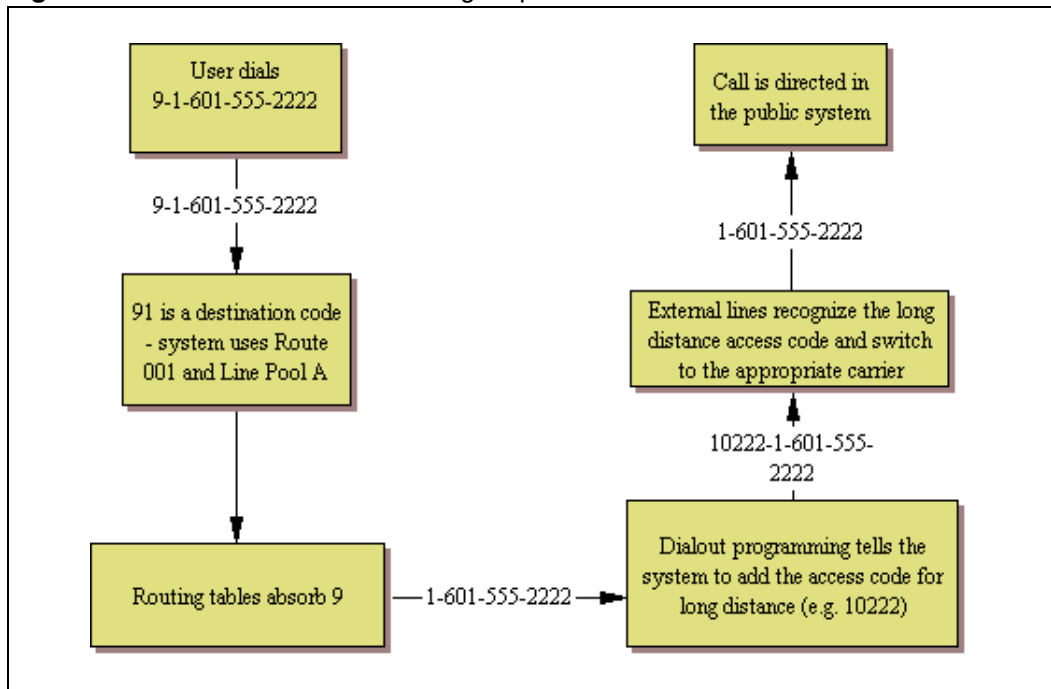

To program a long distance carrier access code into a destination code

- 1 Create a route that uses a line pool containing local lines only. (“Routes” on page 236)
- 2 Program a route to use a line pool containing the lines used to access the long distance carriers.
- 3 Type the dialout digits, which are the same as the access digits. For example, if the access code is 10222, the dialout digits are 10222.
- 4 Create a destination code 91: 9 (for outside access) and 1 (for long distance). You must use a valid destination code.

5 Set Absorbed Length to 1.

The digit 9 is only used internally and should be dropped. The 1 is needed to direct the call to the public carrier network.



Tips: The destination codes 9 and 91 used in the examples cannot be used together. If you need the destination code 91 to direct long distance calls, you must create a separate set of codes that use local calling routes. These codes would be, for example, 90, 92, 93, 94, 95, 96, 97, 98 and 99. Refer to [“Grouping destination codes using a wild card” on page 247](#) for information on programming destination codes.

Using the MCDN access codes to tandem calls

Three special access codes exist specifically for programming calls over PRI and VoIP trunks that are using the MCDN protocol, and which connect to a call servers that use specific call codes for special call types, such as the Meridian 1 (M1). The purpose of the codes is to allow easier programming of the call servers when calls are tandemed through a BCM50 system to the local PSTN. Refer to [“Private Network Settings” on page 270](#) for a description of these fields in context with the private dialing plan.

This is how the codes relate:


| Meridian 1 access codes | BCM50 access codes | Sample code |
|----------------------------|----------------------|-------------|
| Network/long distance code | Private access code | 6 |
| | National access code | 61 |
| Local code | Local access code | 9 |
| | Special access code | 9 |

Calls tandeming to the public network through the private network need to retain their dialing protocol throughout network. This means that a call from an M1 node tagged as a local call gets received by the local node and is recognized as a call intended for the public network, but also as a call that needs to maintain the local tag until it gets to the local node that is directly connected to the PSTN. This is accomplished by ensuring that the destination code, which starts with this access code, passes the call on using the route designated with the correct DN type. Refer to [“Setting up a route through a dedicated trunk” on page 246](#).

Calls coming in from the public network need to be translated to their private network destination before routing/tandeming through the private network. In this case, the route used is defined with the DN type of Private.

[Figure 79](#) charts the process for a call tandeming through a BCM50 to the local public network.

Figure 79 Local call tandemed through private network nodes

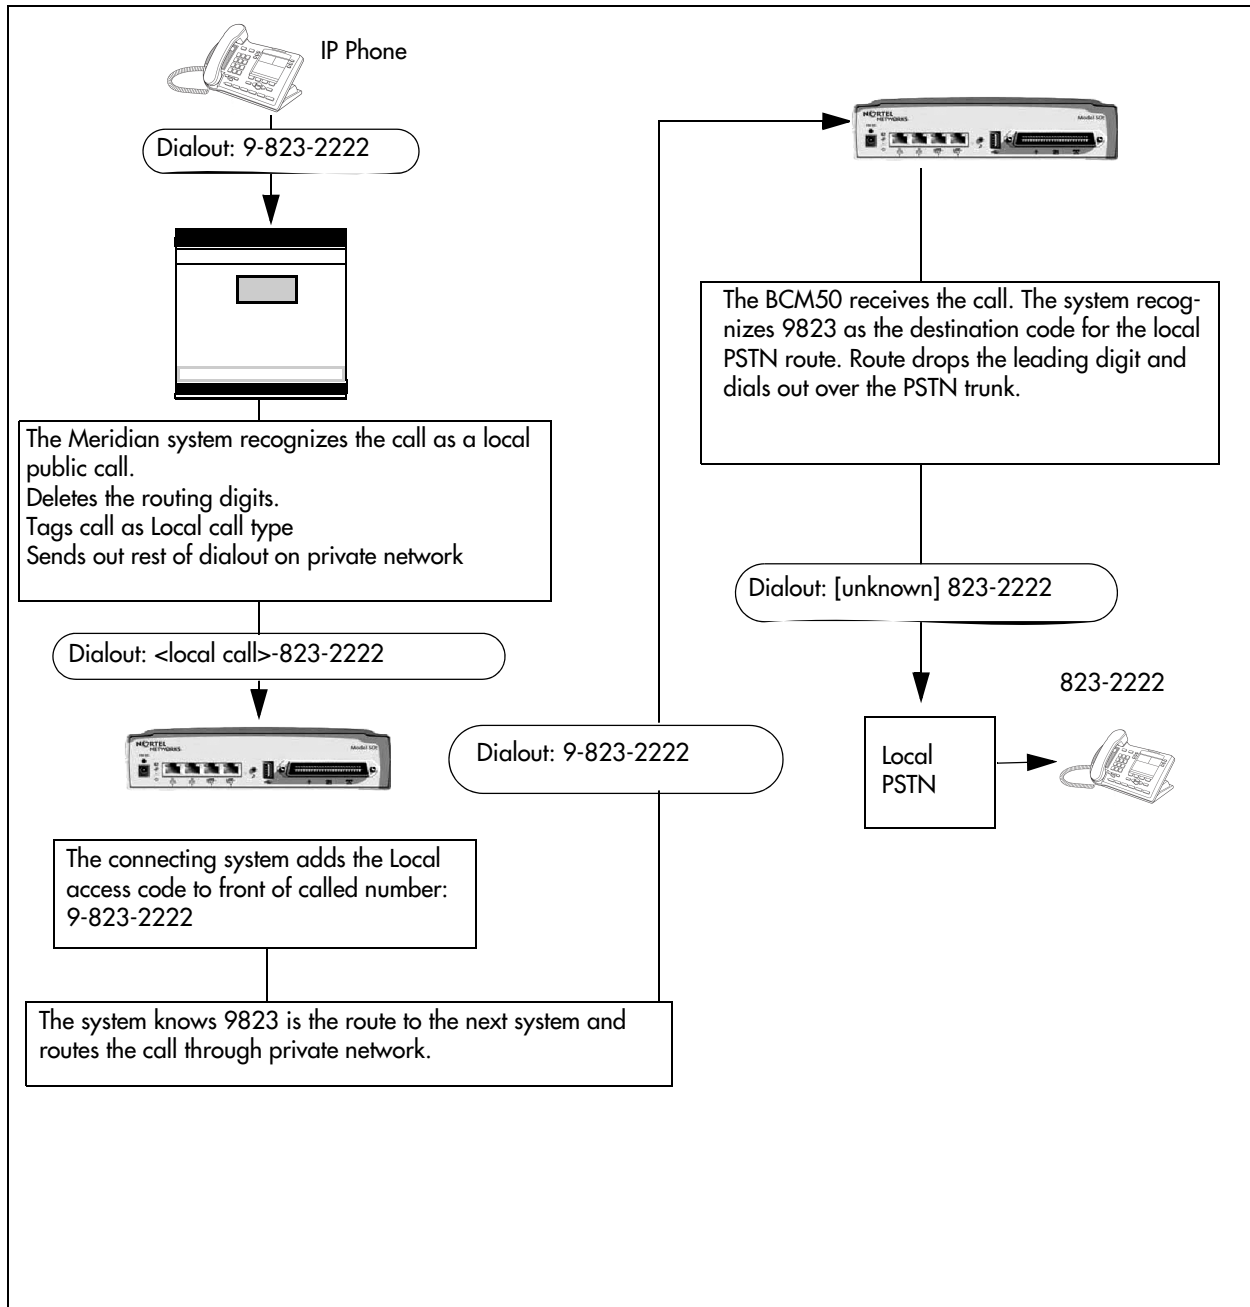

Chapter 25

Dialing plan: System settings

The panels described in this section define various common system settings that affect, or that are affected by, number planning.

The following paths indicate where to access system settings for dialing plans in Element Manager and through Terset Administration:

- Element Manager: Configuration>Telephony>Dialing Plan>General
- Terset interface: **CONFIG>System Programming>Access codes; System Programming>General>Direct Dial sets

| Panels/Subpanels | Tasks | Feature notes |
|---|--|---|
| “Common dialing plan settings” on page 255 <ul style="list-style-type: none"> • DN length • Dialing Time out • Park code • External code • Direct dial | “To define a direct dial set” on page 258 “Capabilities and Preferences - Capabilities tab” in the <i>BCM50 Device Configuration Guide</i> (N0027146) (assign direct dial set to a telephone) | “Configuring CLID on your system” on page 199 “DN length constraints” on page 258 “Received number notes” on page 259 “Tips about access codes” on page 259 “Call Park codes” on page 260 |
| Also refer to: <ul style="list-style-type: none"> • “Dialing plan: Public network” on page 263 • “Dialing plan: Private network settings” on page 269 • “Dialing plan: Line pools and line pool codes” on page 345 | | |
| Click the navigation tree heading to access general information about dialing plans. | | |

Common dialing plan settings

The fields on the Dialing Plan - General panel allow you to set some general system dialing features.

[Figure 80](#) illustrates the Dialing Plan - General panel.

Figure 80 Dialing Plan - General settings and Direct Dial devices

Dialing Plan - General

Global Settings

DN length (intercom)

Dialing timeout

Access Codes

Park prefix

External code

Direct Dial

Direct Dial digit

Direct Dial Sets

| Set | Type | Internal DN | External No. | Facility |
|-----|----------|-------------|--------------|----------|
| 1 | Internal | 221 | N/A | N/A |
| 2 | None | N/A | N/A | N/A |
| 3 | None | N/A | N/A | N/A |
| 4 | None | N/A | N/A | N/A |
| 5 | None | N/A | N/A | N/A |

Table 48 describes each field on this panel.

Table 48 Private and Public received numbers (Sheet 1 of 2)

| Attribute | Value | Description |
|------------------------|--------------------|--|
| Global Settings | | |
| DN length (intercom) | (3 to 7) | This is the length of the locally-dialed telephones. This field is set when the system is first configured. Warning: If this system is part of a private network, ensure that this value is compatible with the network requirements. This value is mirrored in the Private Received Number Length field for target lines. Refer to “Configuring lines: Target lines” on page 129 . Note: If the DN length is changed, it will cause VM/CC to be defaulted in order to work properly. |
| Dialing timeout | Default: 4 seconds | This is the maximum period allowed between user dialpad presses before the system decides that the dial string is complete. |

Table 48 Private and Public received numbers (Sheet 2 of 2)

| Attribute | Value | Description |
|---|---|---|
| Access Codes | | |
| Park prefix | None <one-digit number> | The Park prefix is the first digit of the call park retrieval code that a user enters to retrieve a parked call. If the Park prefix is set to None, calls cannot be parked. Refer to “Call Park codes” on page 260 before choosing a number. SWCA note: If this field is set to None , the system-wide call appearance (SWCA) feature will not work. Refer to “System Wide Call Appearances” in the <i>BCM50 Device Configuration Guide</i> (N0027146). |
| External code | None <one-digit number> | The External code setting allows you to assign the external line access code for 7100 and 7000 digital phones and analog telephones attached to ATA 2s or to analog modules to access external lines. Note: Model 7000 phones are supported in Europe only. When the caller picks up the handset, the system tone sounds. The caller then enters this number to access an external line. Note: This number is overridden by line pool or starting with the same digit(s). Refer to “Tips about access codes” on page 259 before choosing a number. |
| Direct Dial | | |
| Direct Dial digit | None <one-digit number> | The Direct dial digit setting allows you to specify a single system-wide digit to call a direct dial telephone. |
| Define Direct Dial Sets: Refer to “To define a direct dial set” on page 258. | | |
| Set | <1-5> | This tags the telephone to the system. |
| Type | Internal External None | This is the type of number for the direct-dial set. |
| Internal DN | DN | The DN number of the telephone to be designated as the direct dial set. (Internal sets). |
| External No. | <external dial string> | The actual phone number, including destination codes, of the direct dial set (External sets). |
| Facility | Line Pool (A-O) Use prime line Use routing table | The facility to be used to route the call to a direct dial set that you define with an external number. Note: If you choose Use prime line , ensure that prime line is not assigned to the intercom buttons for your telephones. When prime line is assigned as an intercom button, it chooses the first available line pool assigned to the telephone to make a call. If this line pool does not have the correct lines for routing the call, the direct dial call will fail. Refer to “Line Access tab” in the <i>BCM50 Device Configuration Guide</i> (N0027146). |

To define a direct dial set

- 1 On the Direct Dial table, click the fields beside the set number you want to configure and enter the appropriate values.
- 2 Press Tab on your keyboard to save the values.
- 3 Go to the DN records of the telephones where you want the direct dial set assigned and assign the set under “Capabilities and Preferences - Capabilities tab” in the *BCM50 Device Configuration Guide* (N0027146).



Note: The BCM50 cannot verify that the number you assign as an external direct dial set is valid. Check the number before assigning it as a direct dial set by calling the direct dial you have assigned.

Configuration notes and tips

The information in this section expands on some of the fields found on the tabs on the Dialing Plan - General panel.

- [“DN length constraints” on page 258](#)
- [“Received number notes” on page 259](#)
- [“Tips about access codes” on page 259](#)
- [“Call Park codes” on page 260](#)

DN length constraints



Warning: Do not change DN length immediately after a system startup. You must wait until the system is operational with two solid green status LEDs.



Warning: Increasing the DN length affects other areas of the system:

If the DN length change creates a conflict with the Park prefix, external line access code, direct-dial digit, or any line pool access code, the setting for the prefix or code changes to None, and the corresponding feature is disabled.

Optional applications affected by DN length changes:

Voicemail and **Call Center** applications are reset if you change the DN length after these services are installed.



Warning: If your system is running with a PBX telephony template, the Public and Private received number length are set to 3 (digits) at start-up. Increasing the DN length after system startup does not change these digits, so you will need to manually change the Public and Private received number length.

Private OLIs are automatically assigned to the DN records if the DN length and the Private received number length are the same. If this changes, the Private OLIs are cleared, or are not assigned (PBX template).

Network note: If your system is part of a private network, ensure that you confirm the dialing plan for the network before changing this length. If you change the length, ensure that you check all DN-related settings after the change.

Received number notes

- If you change the received number length for your system, the **Public number** entry for the target lines will clear if the new received # length is less than the number entered in this field.
- If the new received number length has more digits than the number entered in the target lines Public Number field, the entry remains, but does not update to the new DN length.
- A private OLI is automatically assigned to the DNs if the DN length and the Received number length are the same. If either changes so that they are not the same, the private OLI field is cleared or not assigned (PBX template).

Tips about access codes

Here are some pointers to assist you in planning the access codes for your system.



Note: The following values must not conflict:

- Park prefix
- external code
- direct dial digit
- Private access code
- Public/Private Auto DN
- Public/Private DISA DN
- line pool code/destination code
- telephone DN



Note: If the line pool code and the external code start with the same digit, the line pool code programming supersedes the external code.

- **External line access code:**

Example: If you enter the following selections:

Park Prefix - 1

Direct Dial digit - 0

Telephone DNs - 2000-2500

You wish to add a destination code of 2500 and 12. This cannot be accomplished as this would conflict with existing dialing numbers. To solve this you could modify the Park prefix and change the Telephone DN of 2500.

- If the DN length is changed, and the changed DNs conflict with the external line access code, the setting changes to None.
- **Direct dial telephone:** Another direct dial telephone, an extra dial telephone, can be assigned for each schedule in Services programming.
If the DN length is changed, and the changed DNs conflict with the Direct dial digit, the setting changes to None.
- **Public/Private Auto DN:** The length of the Auto DNs are the same as the Public or Private Received Number Lengths specified under Telephony>Dialing Plan>General. The public/private Auto DN is cleared if the corresponding Received Number Length is changed.
- **Public/Private DISA DN:** The length of the DISA DNs are the same as the Public or Private Received number length specified under Telephony>Dialing Plan>General. The public/private DISA DN is cleared if the corresponding Received number length is changed.

Call Park codes

When you park a call (**FEATURE 74**), the system assigns one of 25 codes for the retrieval of the call. You can then press the Page display key to announce the code that appears on the display.

These three-digit codes include the Call Park prefix, which can be any digit from 1 to 9, and a two-digit call number between 01 and 25. For example, if the Call Park prefix is 1, the first parked call is assigned Call Park retrieval code 101.



Note: The park prefix must not conflict with the following:

- park prefix
 - external code
 - Direct dial digit
 - Private access code
 - Public/Private Auto DN
 - Public/Private DISA DN
 - line pool code/destination code
 - telephone DN
-



Note: Other programmable settings may affect what numbers appear in the window during programming. Although the numbers 0 to 9 are valid Park prefix settings, some may already be assigned elsewhere by default or by programming changes. If the DN length changes, and the changed DNs conflict with the Park prefix, the setting changes to None.

The system assigns Call Park codes to calls in sequence, from the lowest to the highest, until all the codes are used. A round-robin method means the use of different of codes ensures a call reaches the right person, especially when more than one incoming call is parked.

The highest call number (the Call Park prefix followed by 25) is used by model 7000 and 7100 telephones, analog telephones, or devices connected to the system using an ATA2. Analog telephones or devices cannot use the other Call Park codes.



Note: Model 7000 phones are supported in Europe only.

Calls are retrieved by pressing the intercom button and dialing the retrieval code. On model 7000 and analog telephones, pick up the receiver, and then dial **<parkcode>25**.

You also need to program the delay timer that determines when external parked calls that are not answered return to the originating telephone. Refer to “Timers” in the *BCM50 Device Configuration Guide* (N0027146).

You can disable Call Park by setting the Park Code to None.

Chapter 26

Dialing plan: Public network

The panel described in this section defines the number planning required for calls exiting the system to the public telephone network.

The following paths indicate where to access the dialing plan for public network in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Dialing Plan>Public Network
- Telset interface: **CONFIG>System Settings>Dialing Plan>Public

| Panels/Subpanels | Tasks | Feature notes |
|--|--|---|
| “Public dialing plan settings” on page 263 | | |
| “Public Network Settings” on page 264 | | |
| “Public network DN lengths” on page 265 | “Adding a DN Prefix for public dialing” on page 266 “Modifying a DN prefix” on page 266 “Deleting a DN prefix” on page 267 | “Outgoing public calls routing” on page 267 |
| “Carrier Codes” on page 267 | “Adding a carrier code” on page 268 “Modifying a carrier code” on page 268 “Deleting a carrier code” on page 268 | |
| “Configuration notes and tips” on page 258 | | |

See also:

- [“Dialing plan: System settings” on page 255](#)
- [“Dialing plan: Private network settings” on page 269](#)
- [“Public networking: Setting up basic systems” on page 277](#)

Click the navigation tree heading to access general information about dialing plans.

Public dialing plan settings

The Dialing Plan - Public Network panel displays the fields that determine dialing information specific to dialing in or out to a public network from the host system.

This panel includes information about:

- “Public Network Settings” on page 264
- “Public network DN lengths” on page 265
- “Carrier Codes” on page 267

Public Network Settings

This section describes system settings that allow the system to determine if an incoming call is meant for the local system. These settings are used to determine how many digits the system needs to receive before sending the dial string over the trunk interface.

Figure 81 illustrates the Public Network Settings panel.

Figure 81 Public Network Settings panel

Table 49 describes each field in the Public Network Settings box.

Table 49 Private and Public received numbers (Sheet 1 of 2)

| Attribute | Value | Description |
|-------------------------------------|--|--|
| Public Received number length (max) | 2, 3, 4, 5, 6, 7 | The maximum number of digits (2, 3, 4, 5, 6, 7) that the system uses to determine if an incoming call tagged as public fits the system public DN numbering. Default: DID template, same as DN length; PBX template: 3 Also refer to “ Setting up a destination for local calling ” on page 245. |
| Public Auto DN | <DN digits to be received from the auto-answer trunk> | Public network calls answered without DISA require no password to access the BCM50. The type of service that applies to the call depends on the restrictions assigned to the trunk. |
| Public DISA DN | <DISA DN digits to be received from the auto-answer trunk> | For public network calls answered with DISA, the system presents a stuttered dial tone to prompt a caller to enter a valid password. The Class of Service (CoS) that applies to the call is determined by this CoS password. After a remote user accesses the BCM50, they can change the existing CoS using the DISA DN. This gives you greater flexibility when you create access privileges. For example, you may want to have a shared DN for remote access, but separate CoS passwords with different dialing out privileges for individuals. |

Table 49 Private and Public received numbers (Sheet 2 of 2)

| Attribute | Value | Description |
|-----------------------------|-----------------------------------|--|
| Public network dialing plan | National Local (subscriber) | Local dialing plan defines a seven-digit numbering scheme. National dialing plans define an extended number scheme. North America is set to 10 digits. However, systems in other countries may have a variable length. |
| Public network code | <1 to 8 digits> | This number concatenates with the Public OLI, which, by default, is the DN of the device. Note: In systems running the North American profile, if the Public OLI contains the public network code, that entry overrides any entry in this field. Refer to “Line Access tab” in the <i>BCM50 Device Configuration Guide</i> (N0027146). |

Public network DN lengths

The Public network DN length tells the system how long dialing strings will be when entering the network. For example, if you dial 18005551212 the public network DN length for 1, which is 11, tells the system to wait until 11 digits are entered before processing the call.



Note: If the values for Public Network DN length are set too short, digits will be stripped from the dialing string. Conversely, if the values are set too large, the dialing will take longer to process.

The Public Network DN Lengths/Carrier Codes panel allows you to define DN prefixes and define the length of the prefixes for public dialing. [Figure 82](#) illustrates this panel.

Figure 82 Public Network DN Lengths/Carrier Codes panels

| DN Prefix | DN Length |
|-----------|-----------|
| 0 | 11 |
| 00 | 12 |
| 01 | 17 |
| 1 | 11 |
| 011 | 18 |
| 411 | 3 |
| 911 | 3 |
| Default | 7 |

| Code Prefix | ID Length |
|-------------|-----------|
| 10 | 3 |
| 101 | 4 |

Table 50 describes each field on this panel.

Table 50 Public network DN values

| Attribute | Values | Description |
|-----------|--------|--|
| DN Prefix | <XXXX> | This is the number that must precede a dial string exiting the system to the public network. Each prefix defines a specific destination or type of call. |
| DN Length | <1-24> | This number indicates how many numbers, starting from the front of the dial string, the system will wait before sending to the public network. |

About the Public Network DN lengths table

In the public Network DN lengths table:

- You can define up to 30 entries.
- Each entry consists of a DN prefix string (1 to 10 digits) and a length value (two digits, 1 - 25).
- Several entries are predefined in the North America profile. These defaults can handle most regions in North America without the need for additional programming. If required, you can remove or modify these entries.
- The table always contains one default entry. You cannot remove this entry. You can only modify the length parameter associated with this entry. The default entry specifies the length of any dialing string that does not match one of the other table entries.

Adding a DN Prefix for public dialing

The Default DN prefix cannot be deleted. The DN length for this prefix varies, depending on the country profile running on the system.

To add a new Prefix, follow these steps.

- 1 In the Public Network DN Lengths box, click **Add**.
- 2 Enter the new parameters:
 - DN Prefix
 - DN Length
- 3 Click **Save**.

Modifying a DN prefix

You can only change the DN length for a prefix. To change the prefix itself, delete the existing prefix and enter a new one.

- 1 On the Public Network DN Lengths panel, click the DN prefix you want to modify.
- 2 Click in the DN length field for that prefix and enter the new value.
- 3 Press Tab on your keyboard to save the setting.

Deleting a DN prefix



Note: Dialing prefixes are used system-wide for users to make calls. Delete prefixes with caution.

- 1 On the Public Network DN Lengths panel, click the DN prefix you want to delete.
- 2 Click **Delete**.
- 3 Click **OK** on the confirmation dialog.

Outgoing public calls routing

Outgoing public calls from within the system typically have the routes set to Public. Refer to [“Setting up a destination for local calling” on page 245](#). The NPI/TON gets sent as Unknown/Unknown. The public called number length is based on the Public DN lengths table in the Public networks dialing plan.

MCDN trunks also allow public call types when tandeming calls from another system on the private network. Some of these systems use specific call types that the BCM50 needs to recognize to pass on correctly. Also refer to [“Using the MCDN access codes to tandem calls” on page 253](#).

| Type of call | NPI/TON | BCM50 prepend access code | BCM monitor display |
|--|-----------------|---------------------------|---------------------|
| Local | E164/Local | Local access code (9) | E.164/Subscriber |
| National | E164/National | National access code (X1) | E.164/National |
| Special calls (international, 911, etc.) | Private/Special | Special access code (9) | |

Carrier Codes

The Carrier Codes table allows you to enter a maximum of five carrier code prefixes.

- You can define up to five carrier codes.
- Entries may be predefined for a specific country profile, but you can remove these defaults.
- Each entry consists of an equal access identifier code prefix (one to six digits) and a carrier identification code length (one digit, 1 to 9).
- Each entry is identified by the prefix digits themselves.

Table 51 describes each field on this panel.

Table 51 Carrier Code values

| Attribute | Values | Description |
|-------------|------------------------------------|---|
| Code Prefix | <one to six digits> (Read-only) | This value defines the prefix that will be used to access the carrier code. |
| ID Length | 1, 2, 3, 4, 5, 6, 7, 8, or 9 | This value defines the carrier ID length. |

Adding a carrier code

- 1 Click **Add**.
- 2 Enter the required code and ID:
 - Code Prefix
 - ID length
- 3 Click **Save**.

Modifying a carrier code

- 1 Click the line for the Carrier Code where you want to change information.
- 2 Click the field that you want to change, and enter the new value.

Deleting a carrier code

- 1 Click the line for the carrier code that you want to delete.
- 2 Click **Delete**.
- 3 Click **OK**.

Chapter 27

Dialing plan: Private network settings

The panels described in this section define various system settings that affect or that are affected by number planning for private networks.

The following paths indicate where to access the dialing plan for private networks in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Dialing Plan>Private Network
- Telset interface: **CONFIG>System Prgrming>Dialing Plan>Public Network

| Panels/Subpanels | Tasks/Features |
|--|--|
| “Private Network dialing plan settings” on page 269 | |
| “Private Network Settings” on page 270 | “Outgoing private calls routing” on page 274 |
| “Private Network - MCDN network (PRI SL-1, PRI ETSI, VoIP)” on page 271 | |
| “ETSI-specific network features” on page 274 | |
| “Configuration notes and tips” on page 258 | |
| Also refer to: | |
| <ul style="list-style-type: none"> • “Dialing plan: System settings” on page 255 • “Dialing plan: Public network” on page 263 • “Private networking: Basic parameters” on page 303 • “Private networking: Using shared line pools” on page 379 • “Private networking: Using destination codes” on page 327 • “Private networking: PRI Call-by-Call services” on page 331 • “Private networking: PRI and VoIP tandem networks” on page 311 • “Private networking: MCDN over PRI and VoIP” on page 285 • “Private networking: MCDN and ETSI network features” on page 307 • “Private networking: DPNSS network services (UK only)” on page 319 | |
| Click the navigation tree heading to access general information about dialing plans. | |

Private Network dialing plan settings

The boxes on the Private Network Settings panel have fields that apply specifically to private network configurations. Network configurations can be set up between BCM50 systems, between BCM50 systems and other call servers such as the Business Communications Manager, Meridian 1, or Succession 1000.

Some of the settings on this panel also depend on the market profile of the system.

- “Private Network Settings” on page 270
- “Private Network - MCDN network (PRI SL-1, PRI ETSI, VoIP)” on page 271
- “ETSI-specific network features” on page 274

Private Network Settings

The settings on the Private Network Settings panel describe the numbering that the system uses to assess an incoming call to determine if the call is destined for your system or needs to be routed elsewhere on the private or public network. This panel is illustrated in [Figure 83](#).

Figure 83 Private Network Settings panel

[Table 52](#) describes each field on this panel.

Table 52 Private Network Settings (Sheet 1 of 2)

| Attribute | Value | Description |
|---------------------------------|--|--|
| Private Network Settings | | |
| Private Received number length | 2, 3, 4, 5, 6, 7 | The number of digits of an incoming dial string that the system uses to determine if a call tagged as Private fits the system private DN numbering. Default: DID template, same as DN length; PBX template: 3 |
| * Private Auto DN | Digits to be received from a private auto-answer trunk> | Private network calls answered without DISA require no password to access the BCM50. The type of service that applies to the call depends on the restrictions assigned to the trunk. |
| * Private DISA DN | <DISA DN digits to be received from the auto-answer trunk> | For private network calls answered with DISA, the system presents a stuttered dial tone to prompt a caller to enter a valid password. The Class of Service (CoS) that applies to the call is determined by this CoS password. After a remote user accesses the BCM50, they can change the existing CoS password using the DISA DN. This gives you greater flexibility when you create access privileges. For example, you may want to have a shared DN for remote access, but separate CoS passwords with different dialing out privileges for individuals. |

Table 52 Private Network Settings (Sheet 2 of 2)

| Attribute | Value | Description |
|--|--|---|
| Private access code | <systemcode> MCDN: coordinate with National access code | This code identifies this system to the private network. It comes in as the first digit in a dial string defined as private and is read based on the private DN length. Example: if the dialed number is 7880, and the private DN length is 4, the system scans the four digits from the right, recognizing the 7 as the private access code for this system. |
| Private network type | CDP, UDP, None | You can specify if your Private network uses a coordinated dialing plan (CDP) or a universal dialing plan (UDP). If you choose None, the private networking supplementary services are not available. |
| Private Network ID (CDP/UDP networks) | 1-127 | This is the unique number that identifies the system to the Meridian PRI-MCDN network. Both end points must match on a PRI-MCDN network. On a VoIP trunking-MCDN network, this ID must be the same on all nodes. This number is supplied by the private network administrator. |
| Location code | <unique three-digit number> | This code identifies this particular system for calls within the network for a UDP dialing plan. This number must be unique. Note: The system uses the Private Access Code length, plus the Location code length, plus the DN length to determine the DN length required to determine that a call is a private network call. |
| *Private DN length | 3-14 | The Private DN length parameter specifies the length of a dial string that the system uses to determine that the call is a private network call, when the route uses DN Type: Private. |
| <p>* CDP and UDP private DN lengths are determined this way:</p> <p>CDP: the system uses the telephone DN length</p> <p>UDP: the system combines the private access code length + location code length + telephone DN length. When a call comes in, the system recognizes the leading digits as a private call and removes (truncates) them, leaving the telephone DN, which is recognized as the private DN length.</p> | | |

Private Network - MCDN network (PRI SL-1, PRI ETSI, VoIP)

If your system is part of a private network using the MCDN protocol, you may need to configure these special dialing access codes and network settings.

Figure 84 illustrates the MCDN panel.

Figure 84 MCDN network values

The screenshot shows a configuration window titled "MCDN". It contains the following fields and options:

- Local access code: A text input field.
- National access code: A text input field.
- Special access code: A text input field.
- Network ICCL: A checkbox, currently unchecked.
- TRD: A checkbox, currently checked.
- TAT: A checkbox, currently unchecked.

Table 53 describes the values for these fields.

Table 53 Private network values (Sheet 1 of 2)

| Attribute | Values | Description |
|--|-----------------------------|--|
| <p>Private networking also provides access to tandem calling and toll bypass functionality to users calling into the system.</p> <p>For example, a PSTN user in Toronto could call a PSTN user in Ottawa and have the call routed over the private network connection from the Toronto office to the Ottawa office and then out to the PSTN from the Ottawa office. This bypasses any long distance toll charges.</p> <p>BCM50 to BCM50 to PSTN: Calls are routed as private over the private network, and then flagged as public to go out to the end node PSTN.</p> <p>Meridian to BCM50 to PSTN: Special call codes from the Meridian (Local, National and Special access codes) need to be recognized by the BCM50 and correctly passed to the local PSTN.</p> | | |
| Local access code | <code to access local PSTN> | MCDN connections only. This number is prepended to an incoming M1 local dial string and designates the call as a Local call type (typically 9). Refer to “Using the MCDN access codes to tandem calls” on page 253. |
| National access code | <private access code + 1> | MCDN connections only. This number is prepended to an incoming call marked as a long distance call, and designates the call as a National type call (private access code + 1). |
| Special access code | <code to access local PSTN> | MCDN connections only. This number is prepended to an incoming international (011....) or special-case dial string (911, 411) and designates the call as a special type call (9011...., 9911, 9411). |
| Incoming and tandem calls (Also refer to “Dialing plan: Routing and destination codes” on page 235). | | |
| Network ICCL | <check box> | ISDN Call Connection Limitation is part of the call initiation request. This feature acts as a check at transit PBX points to prevent misconfigured routes or calls with errors from blocking channels. |


Table 53 Private network values (Sheet 2 of 2)

| | | |
|---|-------------|---|
| TRO | <check box> | Trunk Route Optimization occurs during the call setup. This feature finds the most direct route through the network to send a call between nodes. |
| TAT | <check box> | Trunk anti-tromboning works during an active call to find the optimum routing. |
| These features require compatible programming on the remote system. | | |

VoIP-specific private network dialing

The features contained in the VoIP subpanel are required for installations like the Survivable Remote Gateway (SRG), where the remote call server requires bandwidth management to handle calls.

Figure 85 illustrates the VoIP panel.

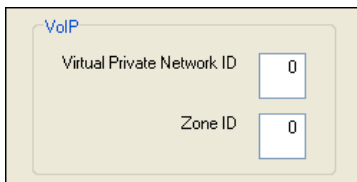Figure 85 VoIP special dialing plan settings

Use Table 54 to determine the settings you want to define network services feature availability.


Table 54 VoIP special dialing plan values

| Attribute | Values | Description |
|----------------------------|----------|--|
| Virtual Private Network ID | <digits> | Default: 0 This is the VPN ID for a remote system, such as Succession 1000/M. In some applications, such as for the Survivable Remote Gateway (SRG) acting as a Branch Office, this ID is required to ensure that Bandwidth Management is handled correctly for calls coming into the Succession 1000/M from your system. See “VPN overview” on page 501 for more information on VPN. |
| Zone ID | <digits> | Default:0 A remote system, such as Succession 1000/M, may configure your system into a separate zone to accommodate specific dialing requirements, such as for an SRG system acting as a Branch Office to a Succession 1000/M system. The system administrator of the Succession 1000/M system provides the Zone ID. Enter that number here and include it in any destination codes directed to, or through, that system so that the remote system can correctly direct incoming calls. |

ETSI-specific network features

The features contained in the ETSI subpanel are service provider-based network services available for some PRI-ETSI lines. This subpanel is illustrated in [Figure 86](#).

Figure 86 ETSI private network settings

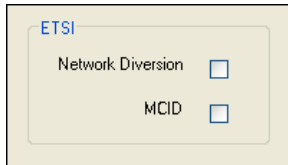

Use [Table 55](#) to determine the settings you want to define network services feature availability.

Table 55 ETSI, MCDN, and VoIP trunk private network settings fields

| Attribute | Values | Description |
|-------------------|-------------|---|
| Network Diversion | <check box> | Allows you to choose if you want to allow calls to be redirected to an outside network. |
| MCID | <check box> | If you select this check box, the called party can use FEATURE 897 to request the service provider network to record the identity of an incoming call. Including: <ul style="list-style-type: none"> called party number calling party number local time and date of the activity calling party sub-address, if provided by the calling user |
| | MCID note: | The feature code must be entered within 25 seconds of the caller hanging up (a 25-second busy tone occurs). If the called party hangs up first, there is no opportunity to use the feature. Note: The call identification comes from your service provider, not the local system. You must have the service activated by the CO before the feature is active for the user, regardless of the setting in this field. |

Outgoing private calls routing

When you set up routing for private calls, the route is set to Private. Refer to [“Setting up a route through a dedicated trunk”](#) on page 246.

How the system identifies the call depends on the type of trunk chosen for the route. Refer to the table below.

| Dialing plan setting | NPI/TON | Private called number length based on |
|--|--------------------|--|
| MCDN trunks send private calls in this way: | | |
| None | Private/Subscriber | Private DN length (set on Private Network panel) |

| Dialing plan setting | NPI/TON | Private called number length based on |
|---|--------------------|--|
| UDP | Private/UDP | private access code + home location code (LOC) + private received digits |
| CDP | Private/CDP | private received digit |
| DMS100/DMS250/ETSI-QSIG trunks send private calls in this way: | | |
| None | Private/Subscriber | Private DN length (set on Private Network panel) |
| UDP | Private/Subscriber | private access code + home location code (LOC) + private received digits |
| CDP | Private/Subscriber | private received digit |

Chapter 28

Public networking: Setting up basic systems

Public networks are the connection between the BCM50 and the public network (PSTN network).

This section gives examples of two basic types of systems.

- “Public networks: PBX system setup” on page 277
- “Public network: DID system” on page 278


Public networks: PBX system setup

PBX is Short for Private Branch Exchange, a private telephone network used within an enterprise. Users of the PBX share a certain number of outside lines for making telephone calls external to the PBX. Dialing within the PBX is typically 3 to 4 digit dialing between local and remote networked nodes.

This setup is for a larger offices which have fewer CO lines than there are telephones. In this case the lines are pooled, and the line pool is assigned to all telephones. As well, there is a designated attendant with a telephone that has all lines individually assigned.

Figure 87 illustrates an example of a PBX system.

Figure 87 PBX system

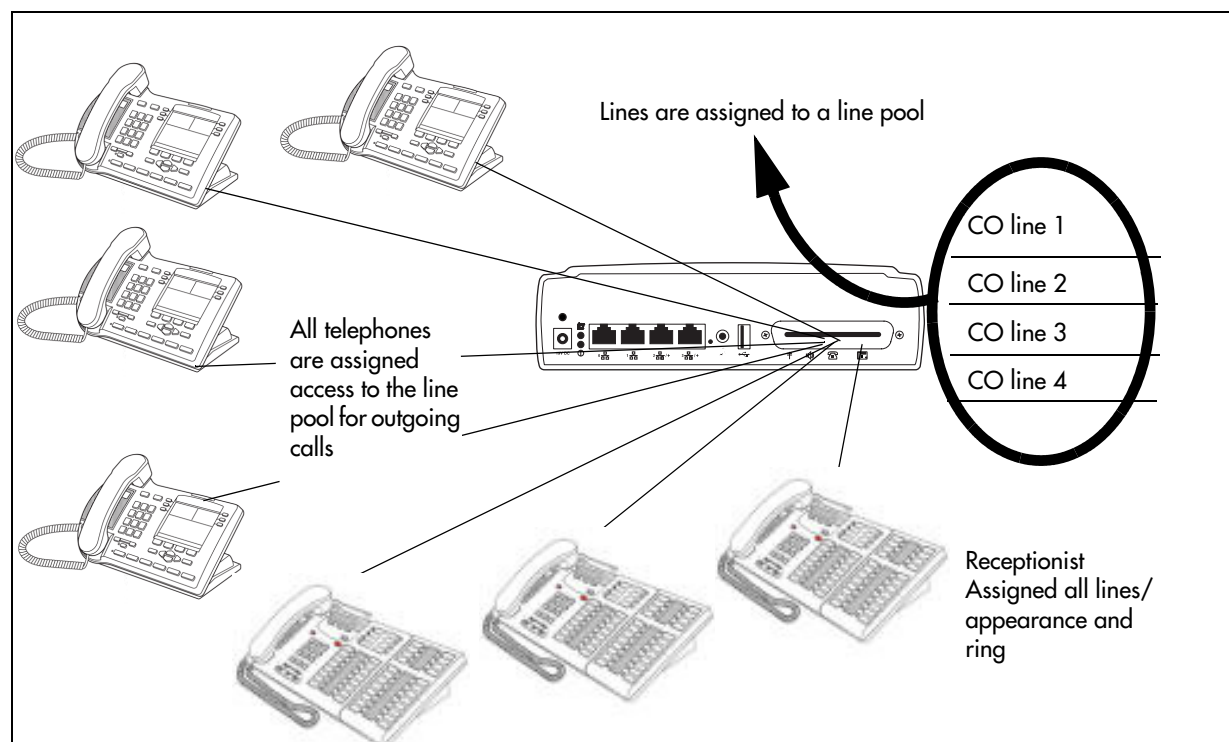

Programming:

Lines

- Set lines to manual answer.
- Configure into a line pool.

Telephones


- Line pools are assigned to general office telephones.
- The Prime line is set to the line pool.
- Lines are assigned individually and as a line pool to the central answer position (set to appear and ring).

Public network: DID system

Direct Inward Dialing (DID): A call is received over the DID circuit (for example, PRI) and is preceded by a packet of information (Receive Digits) containing the number that was dialed. The BCM50 decodes this information and routes the call to the extension that has been programmed with the designated Target Line. The benefit to the customer is a pooled access group for incoming calls so that dedicated lines are not required to be terminated on the system for each user.

This setup allows you to assign a dedicated phone number to each telephone. The CO assigns a list of available numbers for each DID line. You can change your DN range to match these numbers, or you can use target lines to match each number with a DN.

[Figure 88](#) illustrates an example of a DID system.

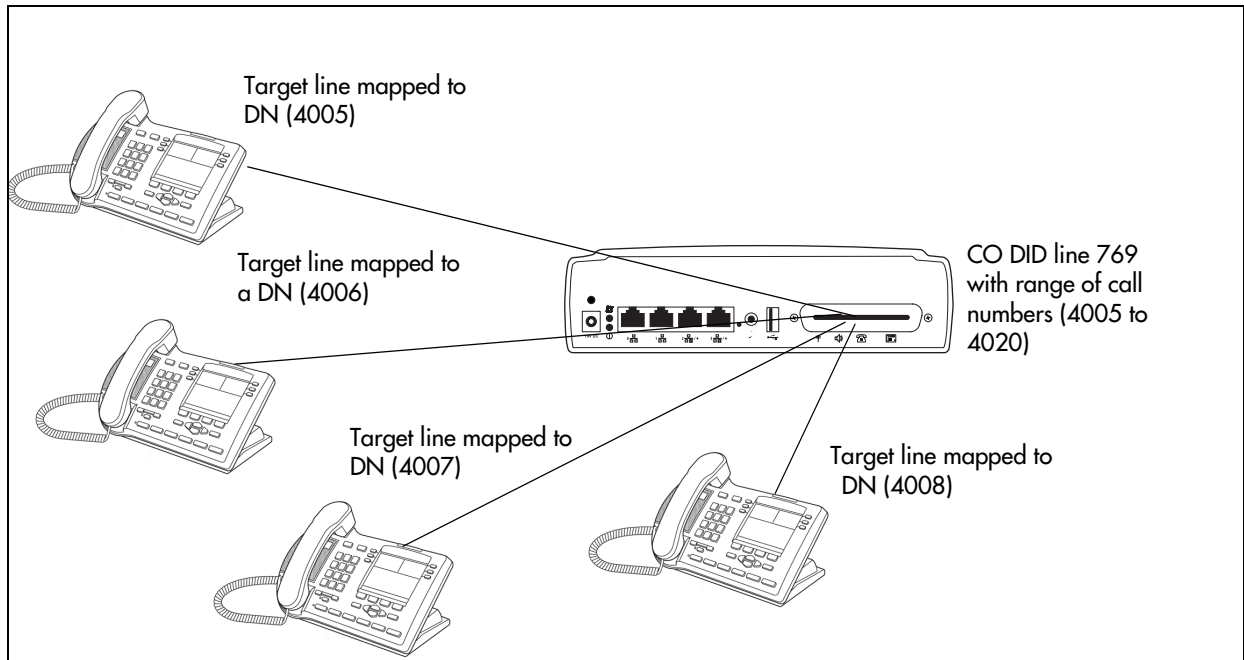Figure 88 DID system**Programming:****Lines**

- Assign lines as auto-answer. Note: DID lines are incoming only. PRI lines can be used for both directions.
- Configure target lines for each telephone, indicating public received number (769-4006 in the example above).

Routing

- Create line pool access code to outgoing line pool.

Telephones

- Assign target line to each telephone.
- Assign outgoing line pool to telephones.
- Set call forward no answer and call forward on busy to attendant or voicemail system, if available.


Chapter 29

Public networking: Tandem calls from private node

If your system is connected by a private network to another system that does not have PSTN line access, or which is not located within the local dialing range, you can set up a routing plan that allows the users of the private network to dial into your system, and through your system to the PSTN network. This type of call feature is referred to as tandem dialing. Refer to [“Programming for tandem dialing”](#) on page 281.

The reverse is also true. You can set up routing so that calls from the PSTN can be passed through your system and over the private network to the remote node. Also refer to [“Private networking: PRI and VoIP tandem networks”](#) on page 311.

Figure 89 Tandem dialing through a BCM50 to or from a private network

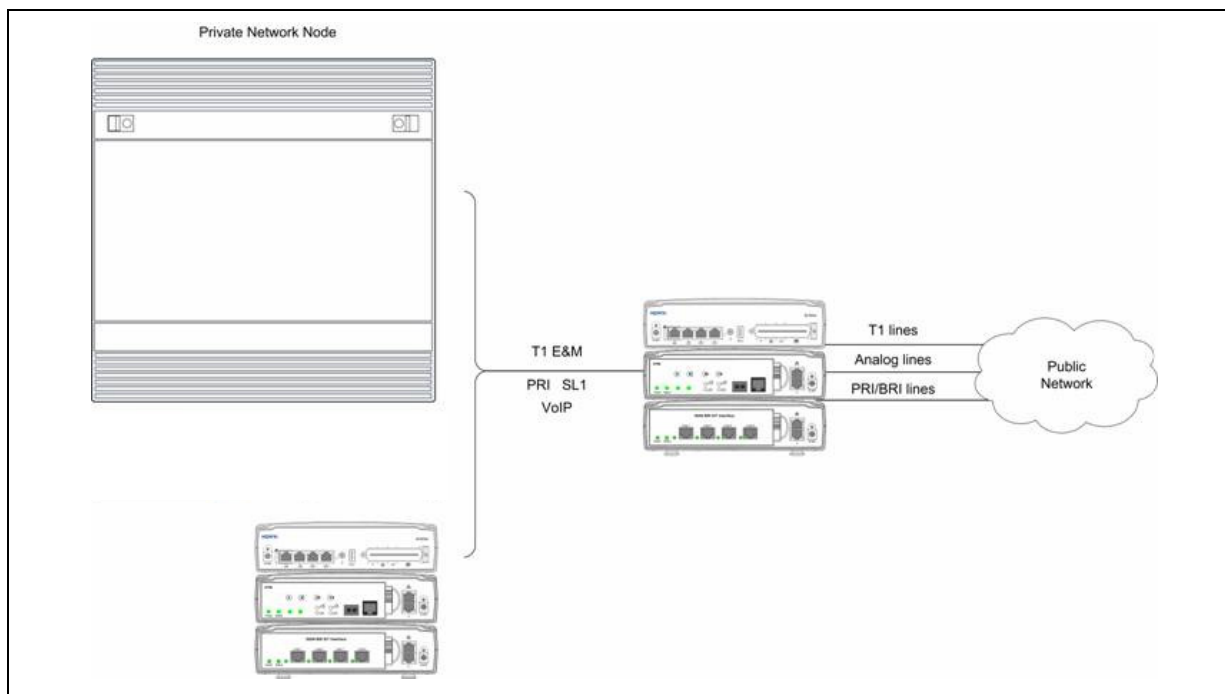

Programming for tandem dialing

Since incoming lines terminate within the system, you need to set up routing to pass the calls along to the required destination.

Lines:

- Set up private network lines as auto answer (if applicable).
- Put private and public lines into separate line pools.

- Assign lines to configured Remote Access Packages.

Dialing plan/Routing:

- Coordinate Dialing plan with private network node.
- Assign each line pool to a route
- Create destination codes for the private network node, and the public network, using the appropriate routes. On public route, drop the public network access code off the dial string. On the private route, drop the private network access code off the dial string.

Telephones:

- System telephones are not involved in tandem transactions. However, for calls destined for the system, ensure that the telephones have the appropriate line/line pool assignments to receive calls from both the public and private networks.

Caller access on a tandem network

In this type of configuration, there are three types of callers:

Each type of caller has a specific method of accessing the other two systems.

Callers using BCM50

These callers can:

- call directly to a specific telephone
- select an outgoing line to access a private network
- select an outgoing line to access features that are available on the private network
- select an outgoing central office line to access the public network
- use all of the BCM50 features

Callers in the public network

These callers use the public lines to:

- call directly to one or more BCM50 telephones
- call into BCM50 and select an outgoing TIE line to access a private network
- call into BCM50 and select an outgoing central office line to access the public network
- call into BCM50 and use remote features

Callers in the private network node

These callers use private lines to:

- call directly to one or more BCM50 telephones
- call into BCM50 and select an outgoing TIE line to access other nodes in a private network
- call into BCM50 and select an outgoing central office line to access the public network
- call into BCM50 and use remote features

Chapter 30

Private networking: MCDN over PRI and VoIP

This section describes how to network BCM50s together in a private network using PRI lines with MCDN protocol. When BCM50s are networked with other call services, such as Meridian 1, using the MCDN protocol, the network can also support centralized voicemail.

This chapter discusses MCDN networking based on North American trunks (PRI SL-1). ETSI-QSIG private networking is configured very similarly, although network features may be supported slightly differently.

The following section describe the different aspects of MCDN private networking.

- [“Using MCDN to network with a Meridian system” on page 285](#)
- [“Configuring fallback over a VoIP MCDN network” on page 298](#)
- [“Networking with ETSI QSIG” on page 300](#)

Refer to [“Private networking: Basic parameters” on page 303](#) for general requirements and directions for setting up non-PRI private networks.

Using MCDN to network with a Meridian system

When you connect your BCM50 systems through the MCDN protocol to a Meridian 1, the Meridian system manages several aspects of the network, including voicemail, auto attendant services, and system timing.

Programming note: For information about networking voice over IP (VoIP) trunks, which also can be set to use MCDN. For networks running BCM50 1.0 software or newer, the trunk protocol for Meridian 1 IPT connection should be set to CSE.

This section includes the follow information about setting up an MCDN network:

- [“Meridian system requirements”](#)
- [“MCDN networking checklist” on page 290](#)

For ann example of an MCDN system and the BCM50 programming to support it, refer to [“An example of a private network with Meridian 1” on page 295](#).

Meridian system requirements

When setting up networking with Meridian, the Meridian systems must provide the following:

- provide the correct software version to allow MCDN features. If your Meridian system administrator cannot confirm this, call your technical support center (TSC) or 1-800-4NORTEL.

The Meridian must provide the following:

- end-to-end signaling (option 10)
 - message center (option 46) and an IVMS link (option 35)
 - Meridian Mail link (options 77 and 85)
 - basic Attendant Console Directory features (options 40, 45, and 83)
 - ISDN PRI or ISDN Signaling link (options 145 and 146 or 145 and 147)
 - advanced ISDN features (option 148)
 - network message services (option 175)
- act as the timing master for the private network connections
 - use descending mode for PRI B-channel selection
 - recognize dial codes for all nodes in the network
 - provide routing tables that direct incoming calls to the correct nodes on the network, including DID calls from the public network
 - recognize the destination code (usually 9) that indicates a public network call, regardless of where in the network the number was dialed from



Note: For MCDN over VoIP trunks, the Meridian uses the IPT trunk card. Both systems must have remote gateways pointed to correct system types and protocols. Refer to [“Configuring VoIP trunk gateways” on page 369](#) for information about Remote Gateways for the BCM50 system.

Software requirements

These additional software packages may be required to activate all the options on the Meridian.

For a new M1 (option 81C, 61C or 51C) on X11 Rls 25, the following additional packages are required to provide the software options listed above:

- SW0059B
- SW0052D
- SW0221C
- SW0051B

For a new M1 Option 11C or 11C Mini or X11 Rel. 25, order one of the following:

- Enterprise software package
- NAS/VNS software package

Meridian MCDN call features over PRI SL-1 lines

Besides the general MCDN features described in “Using the MCDN access codes to tandem calls” on page 253, an MCDN connection with a Meridian 1 voicemail system, also provides some special call features, which are listed in Table 56.

Table 56 MCDN feature enhancements

| | |
|-----------------------|---|
| Centralized messaging | <ul style="list-style-type: none"> • Message Waiting Indication |
| Centralized Attendant | <ul style="list-style-type: none"> • “Camp-on” on page 288 • “Break-in” on page 289 |


Message Waiting Indication

MWI allows the voicemail host system (Meridian 1) that is designated to receive messages to notify a target telephone on the BCM50 of a call waiting using the native MCDN MWI or MIK/MCK message indicators on the Meridian telephones. This feature works for both Nortel and third-party voicemail systems. Messages are received at a centralized location, to a predetermined telephone, where they are processed and forwarded to the target telephone.

MWI allows the user to reply or call back to the message center. The procedure for retrieving messages is described in the Telephone Features Handbook.

Figure 90 demonstrates how the Meridian responds when a call is forwarded to a CallPilot mailbox.

Figure 90 Message waiting indication message

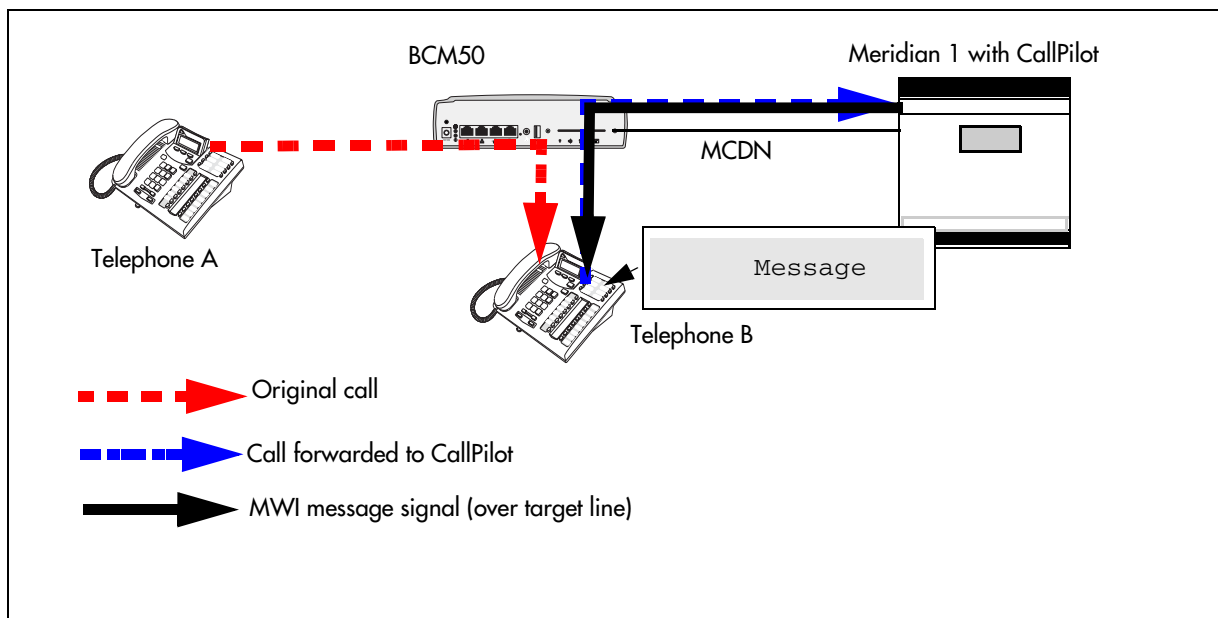

Programming notes

| BCM50 programming | M1 programming |
|---|---|
| To select Remote Capability for MWI on a per-loop basis for PRI: Resources, Media Bay Modules, Bus XX, Modules on bus, Module X: Remote Capability MWI = select (if M1 has MWI package, with RCAP set to MWI) | <ol style="list-style-type: none"> 1. Disable the PBX D-channel associated with IPT (LD96). 2. Add MWI to the RCAP of the D-channel (LD 17 RCAP MWI) 3. Ensure the RLS ID is a minimum of 25 (RLS ID 25). 4. Re-enabled the PBX D-channel. <p>Note: Package 219 is required on the Meridian PBX to allow RCAP MWI.</p> <p>Note: If IP routing is being used, you must complete this procedure on all the D-channels in the private network.</p> |
| Turning on the service for IP trunks: Services, General Settings, IP Trunking: Remote Capability MWI = select (if M1 has MWI package, with RCAP set to MWI) | |
| Telco features, VMsg Ctr Tel Numbers: <ul style="list-style-type: none"> • Voice Message Center 1 set to destination code plus M1 voicemail DN | |
| Lines (target line), Telco features: <ul style="list-style-type: none"> • choose Voice message Center 1 | |
| System DNs, Active set DNs, Line access, Line assignment: <ul style="list-style-type: none"> • assign target line to each set • in target line, select VMsg | |


Camp-on

A call received by the Meridian attendant can be assigned to a telephone anywhere in the MCDN network, when the following situations are valid:

- the target telephone rings busy when the attendant calls
- no free keys on target telephone
- DND regular feature is inactive
- DND on busy feature is inactive

The target user sees that there is a call camped on the telephone. The called user can then clear a busy lines and take the call, or the user can choose to reject the call, using F814, or the user can indicate Do Not Disturb, using F85.


[Figure 91](#) demonstrates the call path for a Meridian attendant to camp a call on a telephone in the system.

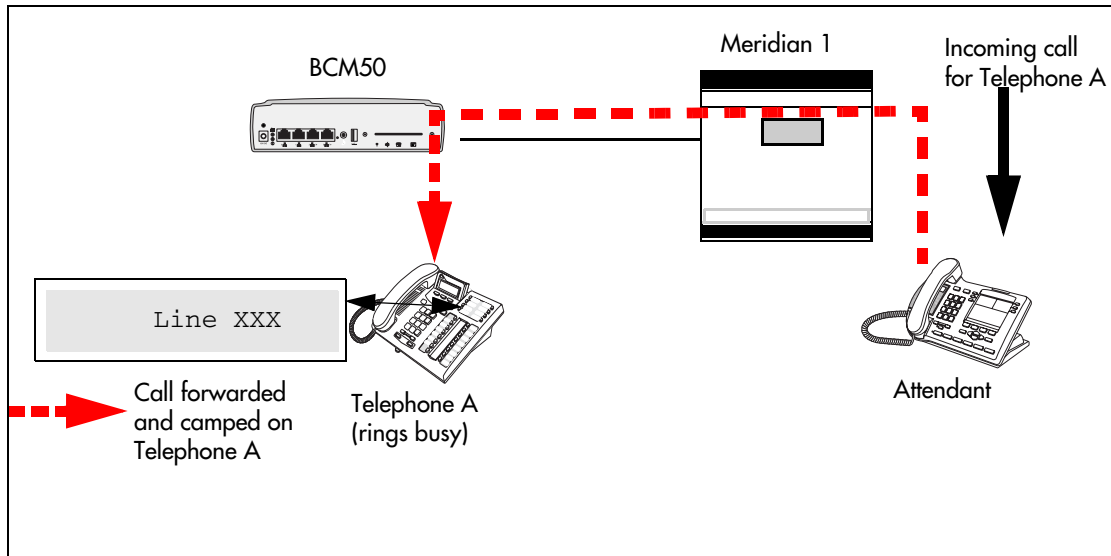Figure 91 Camping a call

Break-in

The Meridian attendant can use the break-in feature to interrupt an ongoing call from a telephone in the system.

Figure 92 demonstrates the call path for a Meridian attendant to break into a call between telephones in the system.

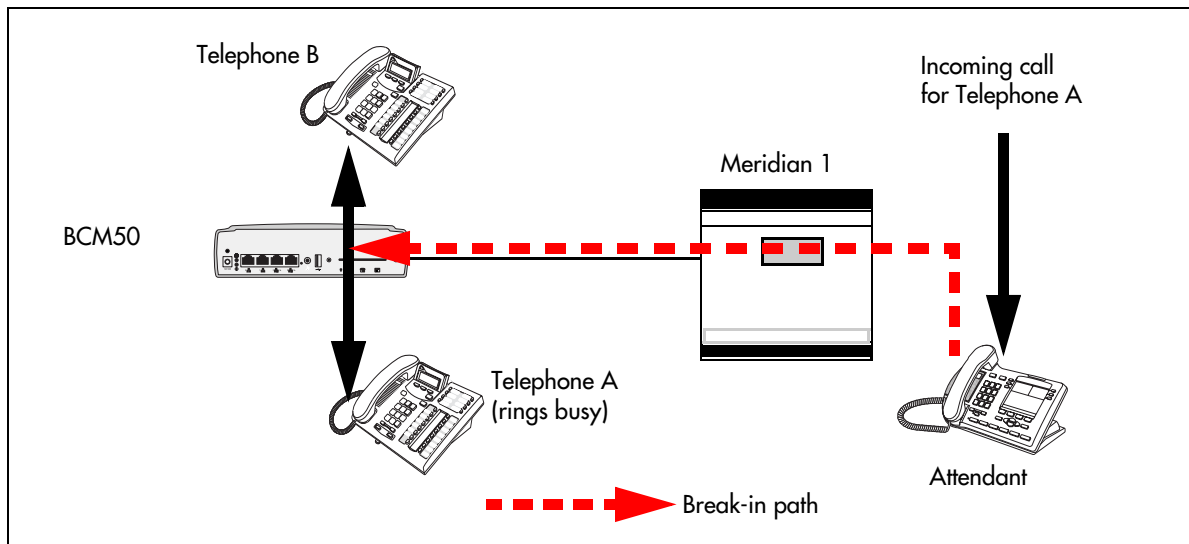Figure 92 Breaking into a local system call path

Break-in can occur when these situations are valid:

- Target system telephone is busy but still has a free intercom or line key.

- There is no camped call on the target telephone.
- DND on busy is turned on.
- prime set is also busy, with no free key, and with DND turned on.
- Attendant capability is high (2), and higher than either the target telephone or the caller the target telephone owner is busy with.

Only post-dial break-in is supported by MCDN:

- 1 Attendant dials destination number.
- 2 If a busy tone is heard, the attendant presses the BKI button.
Attendant is given access to the conversation.

You can set a level of priority that will determine if a telephone will allow an attendant to break in. This is referred to as setting the Intrusion level. Use the following rules to configure the break-in feature.

- Set the Intrusion level for each telephone (under Capabilities on the DN record). Refer to “Capabilities and Preferences - Capabilities tab” in the *BCM50 Device Configuration Guide* (N0027146).

How the intrusion hierarchy works:

- Break-in is allowed if Attendant telephone is High and caller telephone is Medium.
- Break-in is not allowed if Attendant telephone is Medium and caller telephone is high.

MCDN networking checklist

The following points provide a quick check for the system prerequisite settings for MCDN networking.

Select the dialing plan to be used:

- **UDP (Universal Dialing Plan)**
 - DNs on the same node are dialed directly.
 - DNs on other nodes are called by first dialing an Access Code and an ESN.
 - Each node has its own ESN.
- **CDP (Coordinated Dialing Plan)**
 - DNs on all nodes are dialed directly.

Ensure the following common programming is configured:

- **BCM50 Programming**
 - Configure the system DN length to match the DN length used in the rest of the private network.
 - Program the private Route: Type=Private, Dial=None.
 - Program the public Route: Type=Public, Dial=None.

- Enable the MCDN Supplementary Services; TRO=selected, ICCL=selected, TAT=selected.
- Program telephones with a target line that specifies the system DN of the telephone in the **Private received number** field.



Note: If you have public DNs set up for your telephones that are different from the system-assigned DN, each telephone needs to use the public and private received digits on the target line.

- **Meridian 1 Programming**

- Program the system PNI and the PNIs for the routes.
- Program the Meridian voicemail mailboxes (if required).
- Enable the MCDN Supplementary Services; RCAP=[ND2,TRO,MWI], NASA=YES.

Set up the specific programming the system requires for the dialing plan. Refer to the following tables.

UDP-specific programming

| BCM50 UDP programming | |
|---|--|
| • Private Dialing Plan: | Type=UDP, HomeLoc=<three-digit prefix> |
| • Private Access Code | <unique code> |
| • Private DN length | <total of Private Access Code + Location Code + DN length> Example: if dialing string is 6 393 2222, then set private DN to 8 |
| • Program the DestCodes for the other nodes | AccessCode plus the ESN, absorb the AccessCode. Example: For AccessCode=6; DestCode=6393[Absorb=1] |

| M1 UDP programming | | |
|-------------------------------|---|--|
| • Private Access Code | Overlay 86, LD 86 REQ: PRT CUST: 0 FEAT: ESN | To change Private Access Code: Overlay 86, LD 86 REQ: CHG CUST: 0 FEAT: ESN, keep pressing until you reach the AC1 prompt At the AC1 prompt, make your choice |
| • Check UDP programming | Overlay 90, LD 90 REQ: PRT CUST: 0 FEAT: NET TYPE: LOC LOC: press enter, all the programmed location codes are listed HLOC is the home location of the M1 | |
| • Program UDP values to route | Overlay 90, LD 90 REQ: CHG CUST: 0 FEAT: NET TYPE: AC1 LOC: (enter a number) RLI: (enter the RLI corresponding to the route) | |

CDP-specific programming

| BCM50 CDP programming | |
|--|---|
| • Private Dialing Plan: Private Access Code <unique code>. | Type=CDP |
| • Private DN length | <system DN length> |
| • PNI | <number assigned from M1 (1-127)> |
| • Program the DestCodes for the other nodes | use Steering code as part of dial string |
| M1 CDP programming | |
| • PNI | LD 16, RDB - PNI in M1 programming LD 15 - Net - PNI in M1 programming set to PNI of switch |
| • Distant Steering Codes | Overlay 87, LD 87 REQ: PRT CUST: 0 FEAT: CDP TYPE: DSC (Distant Steering Code) DSC: press enter (lists all DSC programmed) |
| • Check RLI (Route Line Index) | Overlay 86, LD 86 REQ: PRT CUST: 0 FEAT: RLB PLI: press enter (displays all the RLIs) |
| • Program new CDP value to route | Overlay 87, LD 87 REQ: CHG CUST: 0 FEAT: CDP TYPE: DSP DSC: enter number (enter common BCM50 system number, for example if DNs are 4XX, enter 4) RLI: enter the RLI that corresponds to the route |

VM programming with Meridian 1

If you are using the centralized voice message system from a Meridian 1 system, you require the following programming on the M1:

M1 programming in LD 17

- NASA selected
- NCRD selected

| | | | |
|--|--|---|---|
| Verifying NASA is Active <ul style="list-style-type: none"> • Overlay 22, LD 22 • REQ: PRT • TYPE: ADAN DCH (slot number) • NASA should be selected | | | |
| If NASA is not on: | Disable the D channel <ul style="list-style-type: none"> • Overlay 96, LD 96 • REQ: CHG • TYPE:DISDCH | Disable the loop <ul style="list-style-type: none"> • Overlay 60, LD 60 • REQ: CHG • TYPE: DISL (slot number) | Program the D channel <ul style="list-style-type: none"> • Overlay 17, LD 17 • REQ: CHG • TYPE: ADAN • ADAN: CHG DCH (slot number) • Keep pressing enter until you get to NASA • TYPE: yes • TYPE: end |
| Verifying NCRD <ul style="list-style-type: none"> • Overlay 20, LD 20 • REQ: PRT • TYPE: TIE • CUST: 0 • Route: Enter the route defined in LD 20 • Keep pressing enter until all values are displayed. Check if NCRD is yes. | | If NCRD is set to no <ul style="list-style-type: none"> • Overlay 16, LD 16 • REQ: CHG • TYPE: RDB • CUST: 0 • ROUT: (route number) from LD 20 • Keep pressing enter until you get NCRD and type Yes • Keep pressing enter until you get the REQ prompt again • TYPE: end | |

Meridian TRO programming


If you are using a Meridian 1 system as part of the network, you need the following programming for each system:

```
M1 TRO set to yes for BCM50 route:
LD 16
TYPE: RDB
Cust: xx
Rout: 0-511
TRO: Yes
```

An example of a private network with Meridian 1

[Figure 93](#) shows a private network composed of one central Meridian 1, and two sites with BCM50 systems all connected by SL-1, with MCDN activated on all sites. This example uses a coordinated dialing plan (CDP). The DNs consist of four digits. The first digit is a destination code which is specific to each system. The last three digits are unique to each telephone within that system. Refer to [“Dialing plan: Private network settings” on page 269](#) for a description of the dialing plans available to private networks.

Figure 93 MCDN networking, with a common public network connection

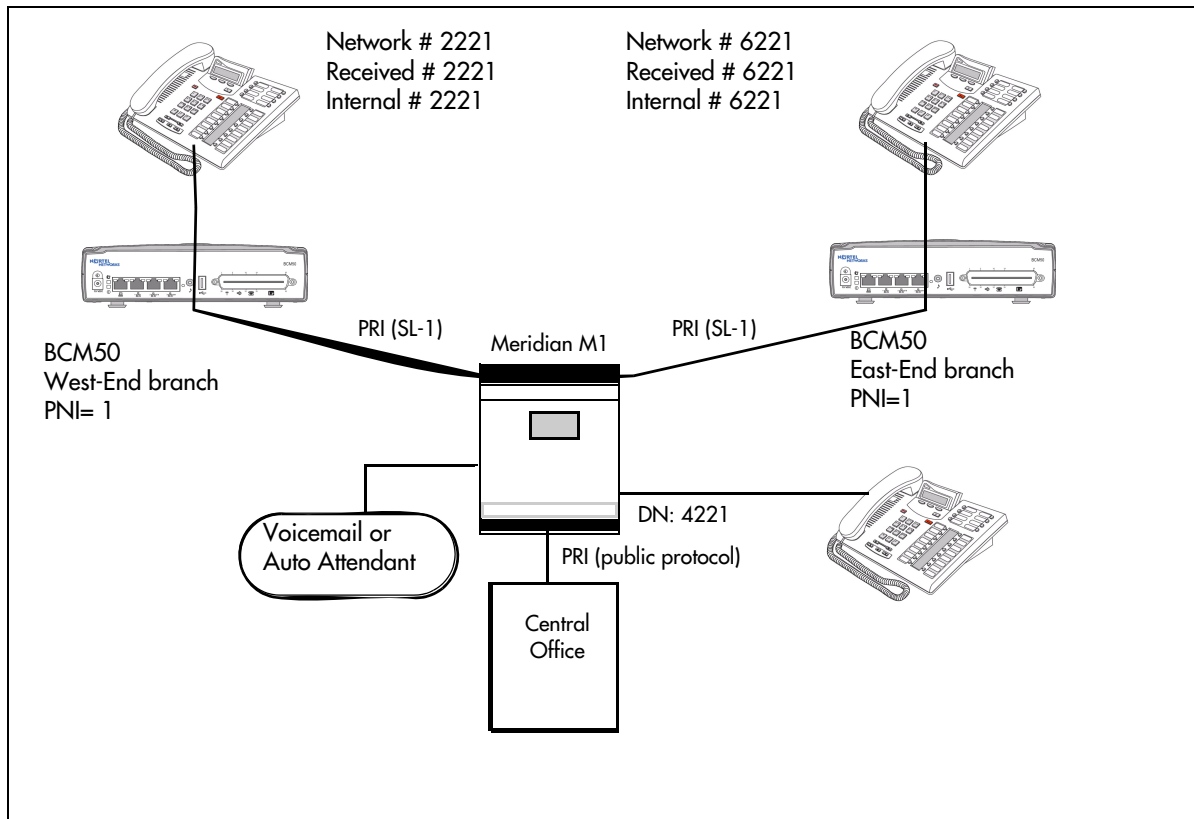

This example could represent a large head office (the Meridian 1) connected to several smaller branch offices (the two BCM50s). In this network, only the head office has trunks connected to the public network.

The branch offices access the public network through the PRI to the head office. This configuration allows for cost savings by consolidating the public access trunks. Users at all three locations access the public network by dialing 9, followed by the public number. For example, a user in the West End branch might dial 9-555-1212 (for a local call) or 9-1-613-555-1212 (for a long distance call). These public calls are routed to the Meridian 1 by the BCM50 routing table. Routing tables at the Meridian 1 will then select an appropriate public facility for the call.

Note that the Private Network Identifier (PNI) is programmed at each end of the links. The PNI identifies the BCM50 to the Meridian 1 system.

Routing is set up such that network calls are made by dialing a four-digit private network DN. For example, if a user in the West End branch wishes to call a user in the East End branch within the private network, they dial 6221. [Figure 93](#) illustrates this example.

The implications on the configuration on each node to access the PSTN through one network node:

- Each node must have the Private Network Access Code set to the value 9.
- Each node must have destination codes that match the Private Network Access Code plus digits corresponding to calls terminating in the local PSTN. For example, if the Private Network Access Code is 9, the node in Ottawa would require a destination code of 91613. Similarly, Toronto would require the following destination code: 91416.

BCM50 module settings: [Table 57](#) lists the module settings that are required to set up the network described in [Figure 93](#).

Table 57 Module settings for MCDN network

| | | |
|-------------------------|----------|---------|
| West End office: | | |
| Module programming | DTM | PRI |
| | Protocol | SL-1 |
| | BchanSeq | Ascend |
| | ClockSrc | Primary |
| East End office: | | |
| Module programming | DTM | PRI |
| | Protocol | SL-1 |
| | BchanSeq | Ascend |
| | ClockSrc | Primary |

BCM50 dialing plan settings: Table 58 lists the dialing plan settings that are required to set up the network described in the figure in the previous section.

Table 58 MCDN dialing plan settings

| West End office: | | |
|--------------------------|--------------------|-----|
| Dialing Plan programming | Type | CDP |
| | Private Network ID | 1 |
| | Private DN Length | 4 |
| | Public DN Length | 7 |
| East End office: | | |
| Dialing Plan programming | Type | CDP |
| | Private Network ID | 1 |
| | Private DN Length | 4 |
| | Public DN Length | 7 |

BCM50 routing information: Table 59 lists the lines and routing information required to set up the network shown in Figure 93.

Table 59 Network routing information (Sheet 1 of 2)

| West End office: | | | |
|----------------------------------|----------------------------|-------------------------|----------------|
| Trunk/Line Data | Line 125 | Target line | |
| | Private Received # | 2221 | |
| Line Access | DN 2221 | L125:Ring only | |
| | Line pool access | Line pool BlocA | |
| Routing Services | Private Network | | Public Network |
| | Head Office and East end | | |
| Route | 001 | 002 | |
| External # | No number | No number | |
| Use | Pool BlocA | Pool BlocA | |
| DN type | Private | | Public |
| Destination codes for routes to: | Head office to M1 | Head office to East End | |
| Destination Code | 4 (includes location code) | 6 | 9 |
| Normal route | 001 | 001 | 002 |
| Absorb | 0 | 0 | 0 |

Table 59 Network routing information (Sheet 2 of 2)

| East End office: | | | |
|-------------------------|----------------------------|-------------------------|-----------------------|
| Trunk/Line Data | Line 125 | Target line | |
| | Private Received # | 6221 | |
| Line Access | DN 6221 | L125:Ring only | |
| | Line pool access | Line pool BlocA | |
| Routing Services | Private Network | | Public Network |
| | Head Office to West End | | |
| Route | 001 | 002 | |
| Dial out # | No number | No number | |
| Use | Pool BlocA | Pool BlocA | |
| DN type | Private | | Public |
| | Head Office to M1 | Head Office to West End | Call terminates at M1 |
| Destination Code | 4 (contains location code) | 2 | 9 |
| Normal route | 001 | 001 | 002 |
| Absorb | 0 | 0 | 0 |


Configuring fallback over a VoIP MCDN network

The Voice over IP (VoIP) MCDN networking protocol between a Meridian 1 and one or more BCM50s works the same way as it does over PRI lines. You still require the MCDN and IP telephony software keys and compatible dialing plans on all networked systems.

The one difference between MCDN over PRI and MCDN over VoIP is that the VoIP trunks require specific Remote Gateway settings, unless there is a Gatekeeper configured to route traffic on the IP network. You must also ensure that your PSTN fallback line is a PRI SL-1 line, to maintain MCDN features on the network.

Refer to [Figure 94](#) for an example.

Figure 94 M1 to BCM50 network diagram

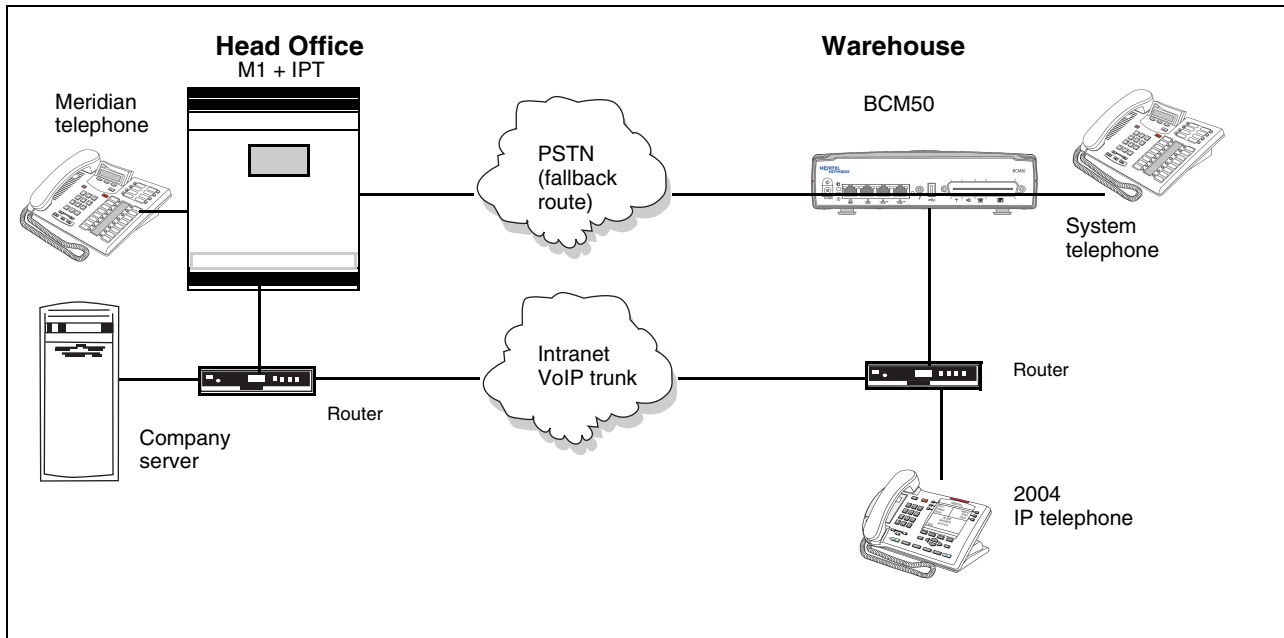

To set up the M1 in a BCM50 network

- 1 Make sure the M1 IPT meets the following requirement:
 - IPT version 3.0 or newer
- 2 Ensure that the M1 ESN programming (CDP/UDP) is compatible. For information about this, refer to your M1 documentation.
- 3 On the BCM50 Element Manager:
 - Set up outgoing call configuration for the VoIP gateway.
 - Set up a remote gateway for the Meridian 1.
 - Ensure the dialing rules (CDP or UDP) are compatible with the M1.
 - Configure the PSTN fallback, and enable QoS on both systems.
 - If target lines have not already been set up, configure the telephones to receive incoming calls through target lines.

MCDN functionality on fallback PRI lines

To enable MCDN functionality over PRI fallback lines

- Check MCDN PRI settings on the M1. For information on this, refer to the M1 documentation.
- Ensure SL-1 (MCDN) keycodes are entered on the BCM50 and the PRI line is set up for SL-1 protocol.

For a detailed description of setting up fallback, refer to [“Setting up VoIP trunks for fallback” on page 383](#).

Networking with ETSI QSIG

(International systems only)

ETSI QSIG is the European standard signaling protocol for multi-vendor peer-to-peer communications between PBX systems and/or central offices.


Also refer to [“Configuring ETSI Euro network services” on page 309](#).

[Figure 95](#) illustrates an ETSI QSIG network. Note that this is exactly the same setup as that shown in the MCDN section for North America, in [“An example of a private network with Meridian 1” on page 295](#), which describes PRI SL-1 networking. The exception in the configuration is for the hardware configuration because the trunk lines are different. The hardware programming for ETSI QSIG is described below the following diagram. All other configurations are the same as those shown in the MCDN section for North America, in [“Using MCDN to network with a Meridian system” on page 285](#).



Note: Features for ETSI Q.sig are basic compared to MCDN. Only basic call and calling number is supported as opposed to the many MCDN features.

Figure 95 ETSI QSIG networking

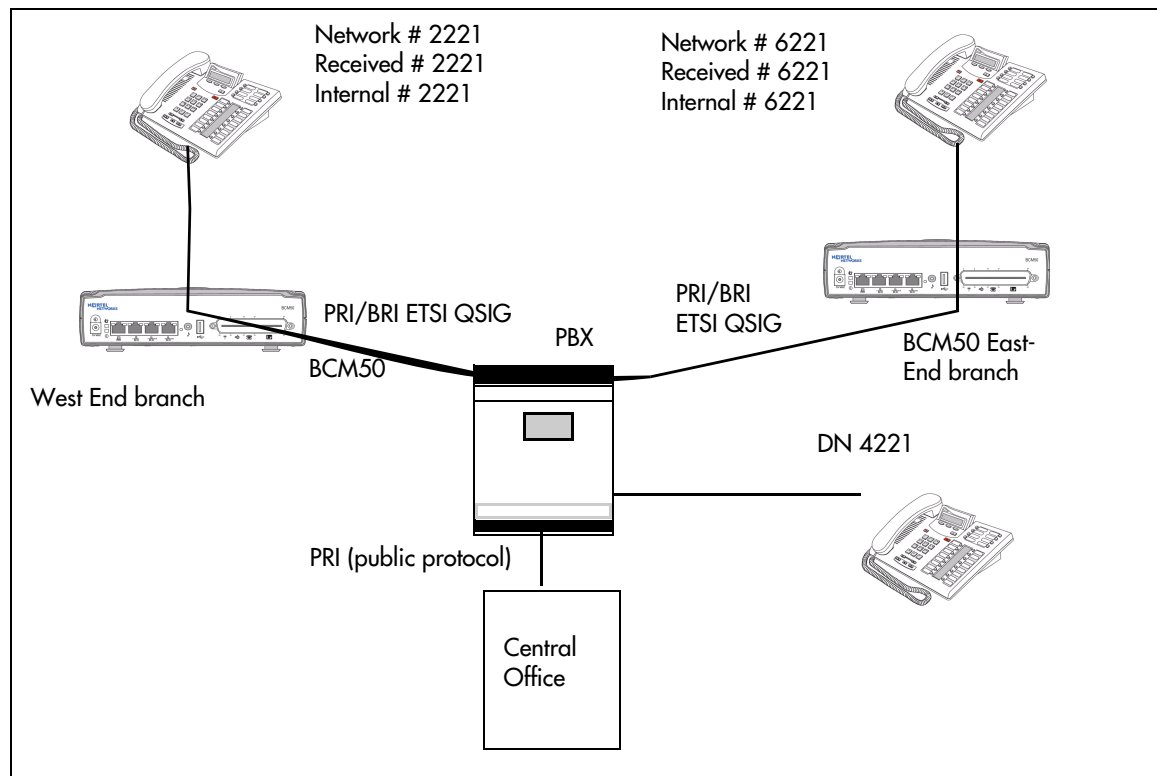

Settings for some of the hardware parameters for the ETSI QSIG networking example shown above are as follows.

| West End office: | | |
|-------------------------|----------|-------------------|
| Hardware programming | DTM/BRIM | PRI/BRI |
| | Protocol | ETSI QSIG |
| | BchanSeq | Ascend (PRI only) |
| | ClockSrc | Primary |

| East End office: | | |
|-------------------------|----------|-------------------|
| Hardware programming | DTM/BRIM | PRI/BRI |
| | Protocol | ETSI QSIG |
| | BchanSeq | Ascend (PRI only) |
| | ClockSrc | Primary |

Chapter 31

Private networking: Basic parameters

The following section provides an overview of the values in the system that affect private networking, including:

- [“Private networking protocols” on page 303](#)
- [“Keycode requirements” on page 303](#)
- [“Remote access to the network” on page 304](#)
- [“Other programming that affects private networking” on page 304](#)
- [“Types of private networks” on page 304](#)

Private networking protocols

These are the protocols that the BCM50 supports for private networking:

- PRI: ETSI QSIG, MCDN, DPNSS
- BRI: ETSI QSIG
- T1: E&M
- VoIP : MCDN

BCM50 systems can be networked together using TIE lines or E&M connections. Larger networks, or networks that are geographically spread out, can be chained together through faster PRI SL-1 connections or with voice over IP (VoIP) trunk lines. SL-1 lines and VoIP trunks also offer the opportunity to use the MCDN protocol, which provides enhanced trunking features and end-to-end user identification. If a Meridian 1 is part of the MCDN network, the network can also provide centralized voicemail and auto attendant off the Meridian.

MCDN note: MCDN networking requires all nodes on the network to use a common Universal Dialing plan (UDP) or a Coordinated Dialing Plan (CDP). Refer to [“Dialing plan: Public network,” on page 263](#) and [“Dialing plan: Private network settings,” on page 269](#).

Keycode requirements

Keycodes are required to activate the protocols that are used to create private networking, including:

- IP trunks, if you want additional IP trunks
- an MCDN keycode, if you want to use the MCDN protocol between the systems

You must purchase and install these keycodes before you can create any of the networks described in this chapter. Consult with your Nortel distributor to ensure you order the correct keycodes for the type of network you want to create.

Remote access to the network

Authorized users can access TIE lines, central office lines, and BCM50 features from outside the system. Remote users accessing a private network configured over a large geographical area, can potentially also place long-distance calls through the network and avoid toll charges. Also refer to [“Call security and remote access” on page 403](#).



Note: You cannot program a Private DISA DN or Private Auto DN to a VoIP trunk, as they act as auto-answer trunks from one private network to the next. However, you can configure VoIP line pools with remote access packages so that callers can access telephones or the local PSTN on remote nodes on a tandemed network that use VoIP trunks between systems.

Other programming that affects private networking

Besides the line programming, these links connect to other programming that affects or is affected by private networks.

- [“Dialing plan: System settings,” on page 255](#) (Received Number Length)
- [“Module configuration: Trunk modules,” on page 71](#)
- [“Configuring lines” on page 117](#)
- [“Configuring lines: Target lines,” on page 129](#)
- [“Dialing plan: System settings,” on page 255](#)
- [“Dialing plan: Routing and destination codes,” on page 235](#)
- [“Call security: Restriction filters,” on page 421](#)
- [“Call security: Remote access packages,” on page 427](#)
- [“Configuring CLID on your system,” on page 199](#)
- [“Line Access tab” in the *BCM50 Device Configuration Guide* \(N0027146\) \(Private OLI\)](#)

Types of private networks

There are several ways you can create private networks. Configuration can be based on such things as cost of trunks, proximity of network nodes, size of the private network, and business requirements for communications.

VoIP-based networking also requires an understanding of IP features such as codecs, jitter buffers, Quality of Service (QoS) function, and silence compression.

The services provided within networks is based on the type of trunks and the protocols assigned to the trunks. All trunks within the network should be running the same protocols, to provide a consistent look and feel to the users.

These are the main types of private networking, listed from the simplest to the more complex PRI/ETSI and VoIP routing using MCDN protocols:

- [“Private networking: Using destination codes,” on page 327](#)
- [“Private networking: Using shared line pools,” on page 379](#)
- [“Private networking: PRI Call-by-Call services,” on page 331](#)
- [“Private networking: PRI and VoIP tandem networks,” on page 311](#)
- [“Private networking: MCDN over PRI and VoIP,” on page 285](#)
- [“Private networking: DPNSS network services \(UK only\),” on page 319](#)

Chapter 32

Private networking: MCDN and ETSI network features

This section describes how to configure MCDN and ETSI network features.

If the MCDN protocol is added to a PRI SL-1 or VoIP private network, the network provides additional network management features, as well as allowing centralized voicemail features to be available to all nodes on the network.

ETSI lines (UK profile) also have network features available from the central office that can be enabled or disabled.

The following section describe the different aspects of SL-1 and MCDN private networking.

- [“Configuring MCDN network features” on page 307](#)
- [“Configuring ETSI Euro network services” on page 309](#)

Configuring MCDN network features

When you connect your BCM50 systems through PRI SL-1 or VoIP trunks, and activate the MCDN protocol, your network provides a number of network call features. You can use this protocol to network other BCM50 systems, Norstar systems, Meridian 1 systems, Succession systems, DMS 100 systems.

[Table 60](#) lists the MCDN features that are provided by all SL-1/VoIP networks where MCDN is active. The features affect call redirection and trunking functions.

Table 60 MCDN network features

| | |
|-----------------------|---|
| Centralized messaging | <ul style="list-style-type: none"> • “Configuring Network Call Redirection Information” on page 307 (NCRI) |
| Centralize trunking | <ul style="list-style-type: none"> • “ISDN Call Connection Limitation” on page 308 (ICCL) • “Trunk Route Optimization (TRO)” on page 308 (TRO) • “Trunk Anti-tromboning (TAT)” on page 308 (TAT) |

Configuring Network Call Redirection Information

NCRI provides call information in the network when calls are redirected from one system to another. NCRI builds on the following BCM50 features:

- External Call Forward
- Call Transfer
- Call Forward

ISDN Call Connection Limitation

The ICCL feature piggybacks on the call initiation request and acts as a check at transit PBX points to prevent misconfigured routes or calls with errors from blocking channels.

To configure ICCL

- 1 Navigate to the Private Network panel: Configuration>Telephony>Dialing Plan.
- 2 Locate the Private Network/MCDN subpanel.
- 3 Select the Network ICCL check box.
- 4 Navigate to the Telephony Resources panel: Configuration>Resources.
- 5 From the Modules table, select the required module.
- 6 Locate the Details for Module subpanel.
- 7 Click the Trunk Module Parameters tab.
- 8 Enter the Maximum transits in the Maximum transits field.

Trunk Route Optimization (TRO)

TRO finds the most direct route through the network to send a call between nodes. This function occurs during the initial alerting phase of a call.

To enable TRO

- 1 Navigate to the Private Network panel: Configuration>Telephony>Dialing Plan.
- 2 Locate the MCDN subpanel.
- 3 Select the TRO check box.

Trunk Anti-tromboning (TAT)

TAT is a call-reroute feature that works to find better routes during a transfer of an active call. This feature acts to prevent unnecessary tandeming and tromboning of trunks.



Note: TAT is not applicable for alerting calls.

To enable TAT

- 1 Navigate to the Private Network panel: Configuration>Telephony>Dialing Plan
- 2 Locate the MCDN subpanel.

- 3 Select the TAT check box.

Configuring ETSI Euro network services

If your system has ETSI ISDN BRI/PRI lines, you can activate the malicious call identification (MCID) and Network Diversion features. Advice of Charge-End of Call (AOCE) is active if your service provider has activated that service on the line.

When the features are activated, users can:

- display a call charge
- redirect calls over the ETSI ISDN BRI/PRI line to the outside network
- tag malicious calls

Advice of Charge-End of Call (AOCE) — AOCE is a supplementary service available from your service provider on ETSI ISDN BRI/PRI links. This feature allows the BCM50 user to view the charges for an outgoing call once the call completes. This information is also reported to the Call Detail Reporting Application. The information can be provided in currency or charging units, depending on how the feature is set up by your service provider.

To invoke the feature, the user presses **FEATURE 818**.

To enable MCID and network diversion


- 1 Navigate to the Private Network panel: Configuration>Telephony>Dialing Plan.
- 2 Locate the ETSI subpanel.

Select the check boxes of the required options.

[Table 61](#) lists the possible values for ETSI.

The **Description** column of the table describes the feature and how the user activates each feature from their telephone.

Table 61 ETSI network values

| Attribute | Values | Description |
|------------------|---|---|
| Netwrk Diversion | <check box> | Allows calls to be redirected to an outside network. |
| MCID | <check box> | Malicious Call Identification When selected, the called party can use FEATURE 897 to request the network to record the identity of an incoming call. including: <ul style="list-style-type: none"> • called party number • calling party number • local time and date of the activity • calling party sub-address, if provided by the calling user |
| MCID note |  | The feature code must be entered within 25 seconds of the caller hanging up. (A 25-second busy tone occurs.) If the called party hangs up first, there is no opportunity to use the feature. Note: The call identification comes from your service provider, not the BCM50. You must have the service activated by the CO before the feature is active for the user, regardless of the setting in this field. |

Chapter 33

Private networking: PRI and VoIP tandem networks


PRI trunks and VoIP trunks can be used to create a private network between other BCM50s. This tandem network provides you with the benefits of end-to-end name display and toll-free calling over the PRI or VoIP private link. Each BCM50 becomes a node in the network.

This section includes the following information about tandem networks:

- [“Routing for tandem networks” on page 311](#)
- [“Routing calls through a tandem network” on page 313](#)
- [“Using VoIP to tandem systems” on page 315](#)

Figure 96 demonstrates a tandem configuration.

Figure 96 Private tandem network of BCM50s

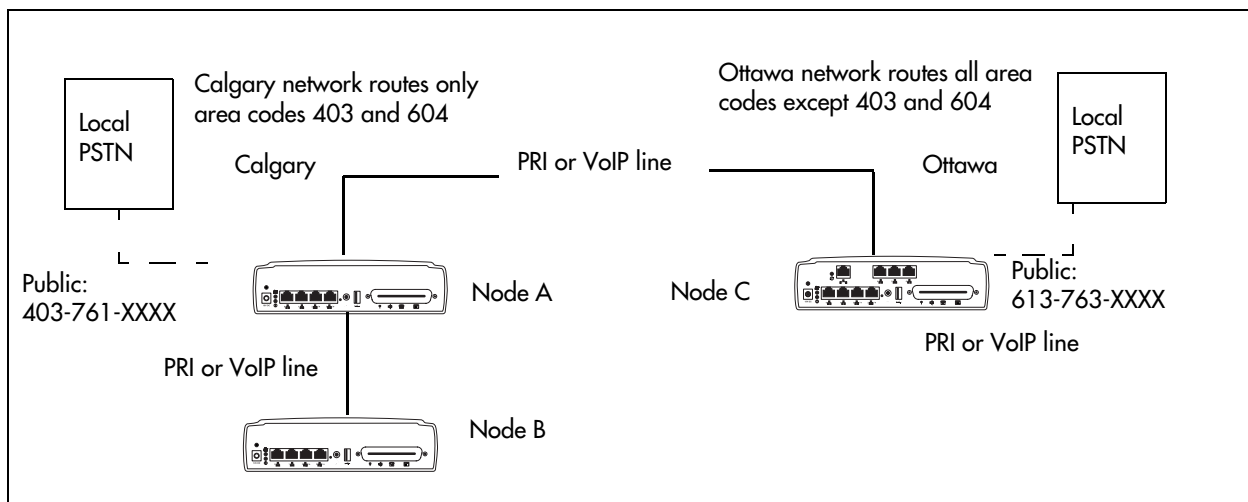

Also refer to [“Using VoIP to tandem systems” on page 315](#) for other examples of tandem systems using VoIP trunks.

Routing for tandem networks

In this type of network, each Business system node is set up to route calls internally as well as to other nodes on the system. Each node must have a unique identification number, which is determined by the type of dialing plan chosen for the network.

VoIP trunks require local gateway configuration and either remote gateway or Gatekeeper configurations that identify the other nodes in the network.

If the node is also connected to the public network, the usual routing is required for that connection.

The following tables show the routing tables for Node A and Node C for external and internal terminating calls.

Table 62 Node A destination code table, external termination

| Route | Absorb length | Destination code (public DNs) |
|------------|---------------|---|
| 4 (PSTN) | 1 | <u>9</u> 1604 |
| 3 (Node B) | 0 | 91403762 (Node B) |
| 4 (PSTN) | 1 | <u>9</u> 140376* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 14037* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 1403* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> * (not internal network) |

* This wild card represents a single digit.

Table 63 Node A destination code table, internal termination

| Route | Absorb length | Destination code (private DNs) |
|------------|---------------|--------------------------------|
| 3 (Node B) | 0 | 392 (Node B) |
| 5 (Node C) | 0 | 393 (Node C) |

Table 64 Node C destination code table, external termination

| Route | Absorb length | Destination code (Public DNs) |
|------------|---------------|---|
| 3 (Node B) | 0 | <u>9</u> 1613764 (Node D) |
| 3 (Node B) | 0 | <u>9</u> 1613766 (Node F) |
| 4 (PSTN) | 1 | <u>9</u> 161376* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 16137* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 1613* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 161* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 16* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> 1* (not internal network) |
| 4 (PSTN) | 1 | <u>9</u> (not internal network) |

Table 65 Node C destination code table, internal termination

| Route | Absorb length | Destination code (Private DNs) |
|------------|---------------|--------------------------------|
| 5 (Node A) | 0 | 391 (Node A) |
| 5 (Node A) | 0 | 392 (Node B) |

Routing calls through a tandem network

This section provides a step-by-step description of how calls network through a tandem network.

- [“Calls originating from the public network” on page 313](#)
- [“Calls originating in the private network” on page 314](#)

Calls originating from the public network

[Table 66](#) describes how each node handles calls originated from the public network into the system.

Table 66 Call originating from the public network to a tandem network (Sheet 1 of 2)

| Received | Destination | Description |
|----------|-------------|---|
| Node A | Node A | <p>User in Calgary dials 761-xxxx number Incoming interface: Public DN type: Public</p> <p>Node A receives the call and identifies it as terminating locally. Uses target line to route call (Public received #). Destination: Local (target line)</p> |
| Node A | Node B | <p>User in Calgary dials a 762-xxxx number DN type: Public</p> <p>Node A receives it and identifies it as being for node B. Uses private trunk to route it to B. Incoming interface: Public Destination: Remote Node Outgoing interface: Private</p> <p>Node B receives the call and identifies it as terminating locally. Uses target line to route call (Private received #). Incoming interface: Private Destination: Local (target line)</p> |
| Node A | Node C | <p>An external user in Calgary dials a 761-xxxx number which is answered with DISA. Incoming interface: Public DN type: Public Destination: Local (DISA DN)</p> <p>User enters a CoS password and a private DN for Node C 6 + 393-xxxx DN type: Private</p> <p>Node A receives it and identifies it as being for C. Uses the private trunk to route the call to C. Incoming interface: (DISA user) Destination: Remote node</p> <p>Node C receives the call and identifies it as terminating locally. Uses target line to route call. (Private received #) Incoming interface: Private Destination: Local (target line)</p> |

Table 66 Call originating from the public network to a tandem network (Sheet 2 of 2)

| Received | Destination | Description |
|----------|-------------|--|
| Node A | Ottawa PSTN | <p>An external user in Calgary dials a 761-xxxx number which is answered with DISA. User enters a CoS password and an Ottawa public network number.</p> <p>Incoming interface: Public DN type: Public Destination: Local (DISA DN)</p> <p>Node A receives it and identifies it as being for C. Uses the private trunk to route the call to C.</p> <p>Incoming interface: Local (DISA user) Destination: Remote PSTN</p> <p>Node C receives the call and identifies it as a public number and routes it out over the local PSTN.</p> <p>Incoming interface: Private Destination: Local PSTN</p> |

Calls originating in the private network

Table 67 describes who each node handles calls originated in the public network.

Table 67 Calls originating from the private network within a tandem network (Sheet 1 of 2)

| Received | Destination | Description |
|----------|--------------|---|
| Node B | Node B | <p>DN is internal, therefore no trunk routing is required.</p> <p>Incoming interface: Intercom DN type: Local Destination: Local</p> |
| Node A | Ottawa PSTN | <p>User in Node A dials the private network access code for Node C, followed by an Ottawa public number.</p> <p>Incoming interface: Intercom DN type: public Destination: Remote PSTN</p> <p>Node C receives the call and identifies it as being for the public network. Node C routes the call over the local public network.</p> <p>Incoming interface: Private DN type: Public Destination: Local PSTN</p> |
| Node B | Calgary PSTN | <p>User on Node B dials a public DN.</p> <p>Node B recognizes it as being the responsibility of Node A and uses private trunk to route the call to A.</p> <p>Incoming interface: Intercom Destination: Remote node</p> <p>Node A receives the call and identifies it as being for the public network. Node A routes the call over the local public network.</p> <p>Incoming interface: Private Destination: Remote PSTN</p> |


Table 67 Calls originating from the private network within a tandem network (Continued) (Sheet 2 of 2)

| Received | Destination | Description |
|----------|-------------|--|
| Node B | Node A | <p>User in Node B dials a private DN for a user on A. DN type: Private</p> <p>Node B recognizes it as being for Node A. Uses the private trunk to route the call to A. Incoming interface: Intercom Destination: Remote node</p> <p>Node B receives the call and identifies it as terminating locally. Uses target line to route call. (Private received #) Incoming interface: Private Destination: Local (target line)</p> |
| Node B | Node C | <p>User on Node B dials a private DN for a user on C. DN type: Private</p> <p>Node B recognizes it as being the responsibility of Node A and routes the call over the private trunk to A. Incoming interface: Intercom Destination: Remote node</p> <p>Node A receives it and identifies it as being for C. Uses IP trunk to route call to C. Incoming interface: Private Destination: Remote node</p> <p>Node C receives the call and identifies it as terminating locally. Uses target line to route call. (Private received #) Incoming interface: Private Destination: Local (target line)</p> |

Using VoIP to tandem systems

You can connect multiple offices with BCM50s across your company Intranet. This installation allows for CallPilot to direct calls throughout the system or for one system to support voicemail for the network. Full toll bypass occurs through the tandem setup, meaning that any user can call any DN without long distance charges being applied. Users have full access to system users, PSTN connections.

[Figure 97](#) demonstrates a multiple-BCM50 network. The network diagram shows two BCM50s, but additional base units can be added.

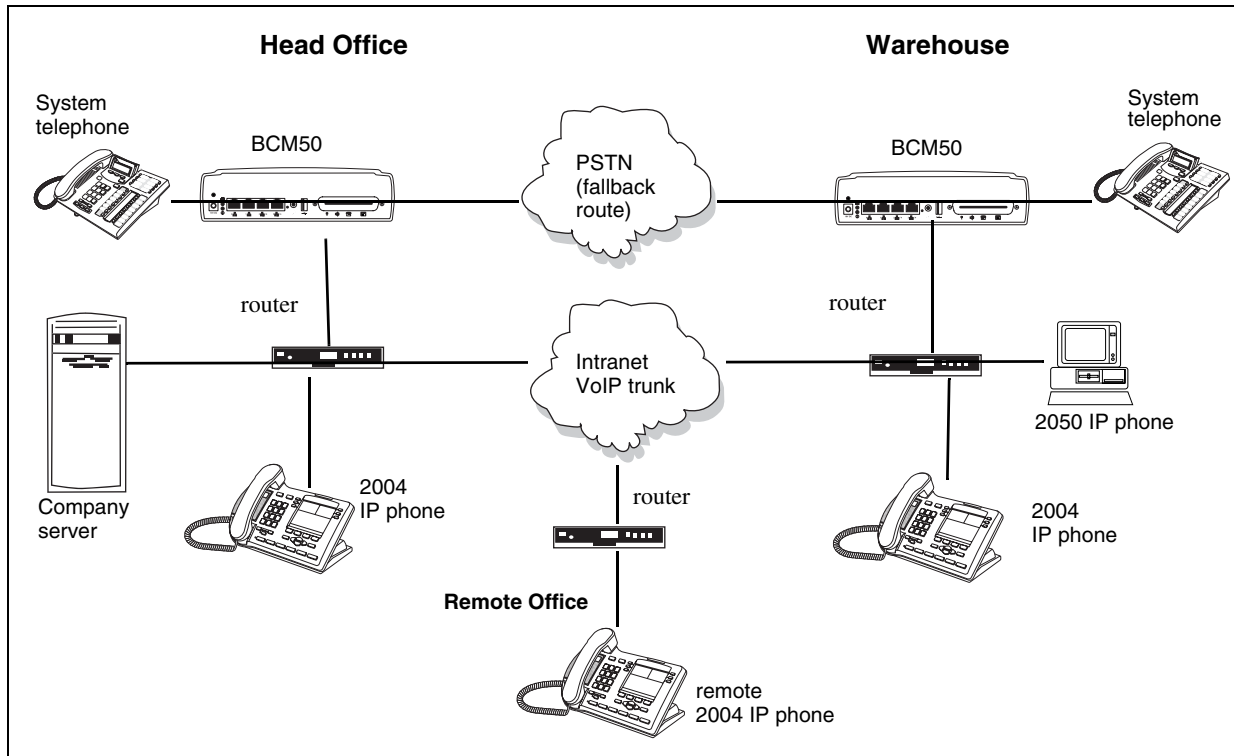Figure 97 Multiple BCM50s network diagram

To set up a network of BCM50s

- 1 Ensure that the existing network can support the additional VoIP traffic.
- 2 Coordinate a Private dialing plan between all the systems.
- 3 On each BCM50:
 - Set up outgoing call configuration for the VoIP gateway.
 - Set telephones to receive incoming calls through target lines.
 - Configure the PSTN fallback and enable QoS on both systems.


This system uses fallback to PSTN so calls can be routed across the PSTN connection if VoIP traffic between the BCM50s becomes too heavy.

If only one of the BCM50s in a network has a line to the PSTN network, all public calls from other systems are funneled through the system with the PSTN connection and all communication between the systems occurs over VoIP trunks. To facilitate this system, you need to ensure that the destination codes on the non-PSTN system point to the system connected to the PSTN, and then, to the PSTN. On the PSTN-connected system, the system and destination codes must be configured to recognize and pass public calls from the other system out into the PSTN network. Since the receiving PSTN sees the calls as remote dial-ins, ensure that the correct remote access packages have been established for the VoIP trunks.

This also means that if the VoIP trunks are inaccessible between the systems, there is no provision for a fallback route.

Figure 98 demonstrates an example of routing all public calls through one BCM50.

Figure 98 Routing all public calls through one BCM50

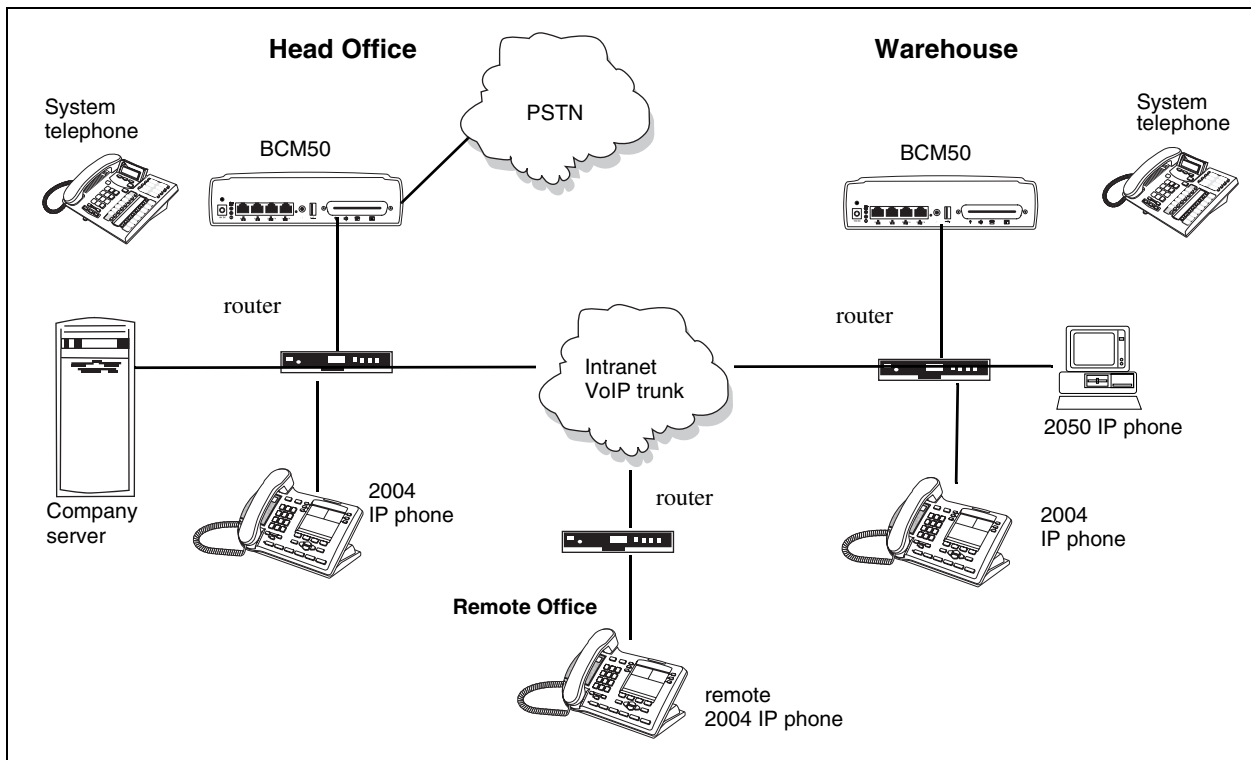

Chapter 34

Private networking: DPNSS network services (UK only)

This section describes how to configure DPNSS 1 features.

Programming note: software keys are required to enable DPNSS 1. DPNSS 1 is not available on all profiles.

The following features are available and can be programmed over DPNSS lines:

- Diversion ([“Using the diversion feature” on page 319](#))
- Redirection ([“Using the Redirection feature” on page 321](#))
- [“Executive intrusion, Intrusion protection level” on page 321](#)
- [“Call offer” on page 322](#)
- [“Route optimization” on page 323](#)
- [“Loop avoidance” on page 323](#)
- MWI is discussed with central voice mail setup ([“Configuring centralized voicemail” on page 339](#))

Using the diversion feature

Diversion is a DPNSS 1 feature for BCM50 that allows users to forward their calls to a third party on the DPNSS 1 network. This feature is similar to call forward on BCM50, but takes advantage of the broader capabilities of DPNSS.

There are five variations of Diversion: Call Diversion Immediate, Call Diversion On Busy, Call Diversion On No Reply, Bypass Call Diversion, and Follow-me Diversion. These variations are described below:

- Diversion Immediate diverts all calls to an alternate telephone. This function is programmed by the user at their telephone.
- Diversion On Busy diverts all calls to an alternate telephone when a telephone is busy. This feature is programmed in the Element Manager.
- Diversion On No Reply diverts calls that go unanswered after a specified amount of time. This feature is programmed in the Element Manager.
- Bypass Call Diversion overrides all call forward features active on a telephone over a DPNSS line. An incoming call to the telephone will not be forwarded; instead, the telephone will continue to ring as if call forward were not active. This feature is used to force a call to be answered at that location. Bypass Call Diversion is a receive-only feature on BCM50, and cannot be used from a BCM50 telephone.

- Follow-me Diversion is also a receive-only feature. It allows the call forwarded destination to remotely change the BCM50 call forwarding programming (Call Forward All Calls (CFAC) feature) to a different telephone.



Note: BCM50 CFAC must be active and the destination set/PBX system must support the feature.

For example, user A forwards all calls to telephone B, a temporary office. Later, user A moves on to location C. The user does not have to be at telephone A to forward calls to location C. Using telephone B and Follow-me Diversion, the user can forward calls from A to location C.

Follow-me diversion can be cancelled from the forwarded location.

- Diversion on Busy and Diversion on No Reply cannot be cancelled from the forwarded telephone. These are programmable only by an installer and not by the user.
- If multiple telephones are programmed to take a call, the first telephone to respond will act. All other telephones responding are ignored. Therefore, if the first telephone to respond has Diversion enabled, this feature will be invoked.

Restrictions by telephone type

- all variations supported on BCM50 digital and IP telephones
- ATA2/ASM8+—all variations supported on an ATA
- ISDN—all variations supported on ISDN telephones, except Diversion on Busy and CFWD Busy

Setting Diversion

You set Diversion for DPNSS in the same way as call forward. You will need to enter the end DN when prompted. You may also need to include the DPNSS 1 routing number.

DPNSS to Embark connections

DPNSS lines connected to an Embark switch perform call redirection/diversion using the Call Forward feature to create a tandem link back to the switch. Since this is different from other switches, you must select the type of switch DPNSS will be connecting to when you do module programming. Refer to [“Configuring the trunk module parameters” on page 73](#).

Before you program Call Forwarding ensure that:

- Both real channels and virtual channels are provisioned.
- Destination or line pool codes are programmed for the DPNSS to Embark link.

Also, during programming for Call Forward No Answer and Call Forward on Busy, when you enter the **Forward to:** digits, the system does a validation check with the switch on the number. (Configuration//Telephony//Sets, All DNs panel, Line Access tab, double-click the required field to enter the DN).

Using the Redirection feature

Redirection is a DPNSS 1 feature similar to BCM50 Transfer Callback. Redirection lets a call awaiting connection, or re-connection, be redirected by the originating party to an alternate destination after a time-out period. Failed calls can also be redirected. Priority calls are not redirected.

Diversion on No Reply feature takes precedence over Redirection.

Restrictions by telephone type

- For telephones with single line displays, the # key acts as MORE and the * key acts as VIEW
- ATA2/ASM8+—not supported
- ISDN—all variations supported on ISDN telephones

Setting redirection

The timer used for the network Callback feature is also used for redirection.

Executive intrusion, Intrusion protection level

Executive Intrusion (EI) is a DPNSS 1 feature that allows an operator, or other calling party, to intrude on a line when it is busy. An example of the use of this feature is to make an important announcement when the recipient is on another call.

EI is implemented on the BCM50 using Intrusion protection level (IPL). IPL has four settings, from None to High. A telephone set has the ability to break-in when the other telephone set has a lower IPL. The default setting is None and a setting of High prevents intrusion.

Restrictions by telephone type

- ATA2/ASM8+—supported
- ISDN—not supported

Programming IPL on a telephone

To program IPL

- 1 Navigate to the All DN's panel: Configuration//Telephony//Sets.
- 2 On the panel, locate and click the Capabilities and Preferences tab.
- 3 Select the DN of the telephone set being programmed.
The Details subpanel for that DN appears in the lower portion of the panel.
- 4 Click the Capabilities tab.
- 5 Locate the Intrusion protection level and select the required option from the drop-down menu.

Call offer

Call Offer over DPNSS 1 allows a calling party to indicate to the wanted party that there is an incoming call available, even though there is no answer button available to present the call on the telephone.

Restrictions by telephone type

- model 7000 telephone — associated LED or LCD flashes, and a tone is heard
- ATA2/ASM8+—Call Offer is supported as a Camp On feature, and a tone is heard
- ISDN—not supported

Note the following general conditions and restrictions:

- DND on busy must be programmed as N (**DN ##/Capabilities**) for a telephone to accept Call Offer.
- If CF on busy is programmed for the telephone, Call Offer is not accepted.
- The target line for the telephone must be set to: If **busy: busy tone**, which is the default. Refer to [“Configuring lines: Target lines” on page 129](#).
- Call Offer does not work if sent over Manual answer lines. It is recommended that the lines be left at the default: **Auto**.



Note: Forward on Busy takes priority over DND on Busy. Call Offer cannot be accepted by putting an active call on hold.

Route optimization

Route Optimization is a DPNSS 1 feature for BCM50 that allows calls to follow the optimum route between two end PBXs. This allows efficient use of network resources.

There is no system programming required for the feature when BCM50 is working as a terminating PBX system. However, BCM50 must have a private access code programmed that maps to a valid destination code or line pool code on DPNSS lines. Further, Allow redirect must be set to selected. For more information, see “Capabilities and Preferences - Capabilities tab” in the *BCM50 Device Configuration Guide* (N0027146).

Loop avoidance

To set Loop avoidance during hardware configuration

- 1 Click the keys beside Resources, Media Bay Modules, Bus 02 - 07, Modules on Bus.
- 2 Select Module 1.
- 3 Choose **Module type DPNSS**.
- 4 Type a value (0-25) in the Maximum transits box.
The default value is 25.

Private networking with DPNSS

(International only)

DPNSS supports the Universal Dialing Plan (UDP), an international standard for sending and receiving private numbers over networks. The UDP requires that a dialing number includes the following:

- a Private Access Code, programmed into the system as part of the destination code table to prevent conflicts with the internal numbering system. (**Access Codes**)
- a Home Location Code (HLC) assigned to each PBX system, and configured as part of the destination code (a maximum of seven digits). For each HLC, a destination code must be programmed in the system. (Dialing plan, UDP, Location code)
- a Directory Number (DNs) assigned to each extension as a line appearance. The DN appears as the last string segment in a dialed number. In the number 244-1111, 1111 is the DN.

A typical Private Number, using a private access code and dialed from another site on the network, appears below.

| Private Access Code | + Home Location Code | + Directory Number | = Calling Party Number |
|---------------------|----------------------|--------------------|------------------------|
| 6 | + 848 | + 2222 | = 6-848-2222 |

In this networking example, a private network is formed when several systems are connected through a Meridian M1 and a terminating BCM50 system. Each site has its own HLC and a range of DNs. [Figure 99](#) illustrates this example.

Calls are dialed and identified to the system as follows:

- To reach a telephone inside the Private Network, at the BCM50 site, the user dials the DN of choice.
 - To reach a telephone inside the Private Network, from another site, the user dials HLC + DN.
 - To reach a telephone outside the Private Network, the user dials an Access Code + HLC + DN
- Each node has its own destination (dest) codes which includes the appropriate access and HLC codes to route the call appropriately.

[Table 68](#) shows examples of the construction of numbers used when dialing within the example network. Note that 6 is the Private Access code.

Table 68 Calling numbers required for DPNSS network example

| Calling Site | LOC/HLC | Calling Party Number | Called Site | Dialing String | Called Party Number |
|--------------|---------|----------------------|-------------|----------------|---------------------|
| Site A | 244 | 244 1111 | Site B | 6 668 2222 | 668 2222 |
| Site B | 668 | 668 2222 | Site D | 6 848 2222 | 848 2222 |
| Site D | 848 | 2222 | Site D | 2229 | 2229 |
| Site C | 496 | 496 3333 | Public DN | 9 563 3245 | 563 3245 |

Figure 99 DPNSS networking

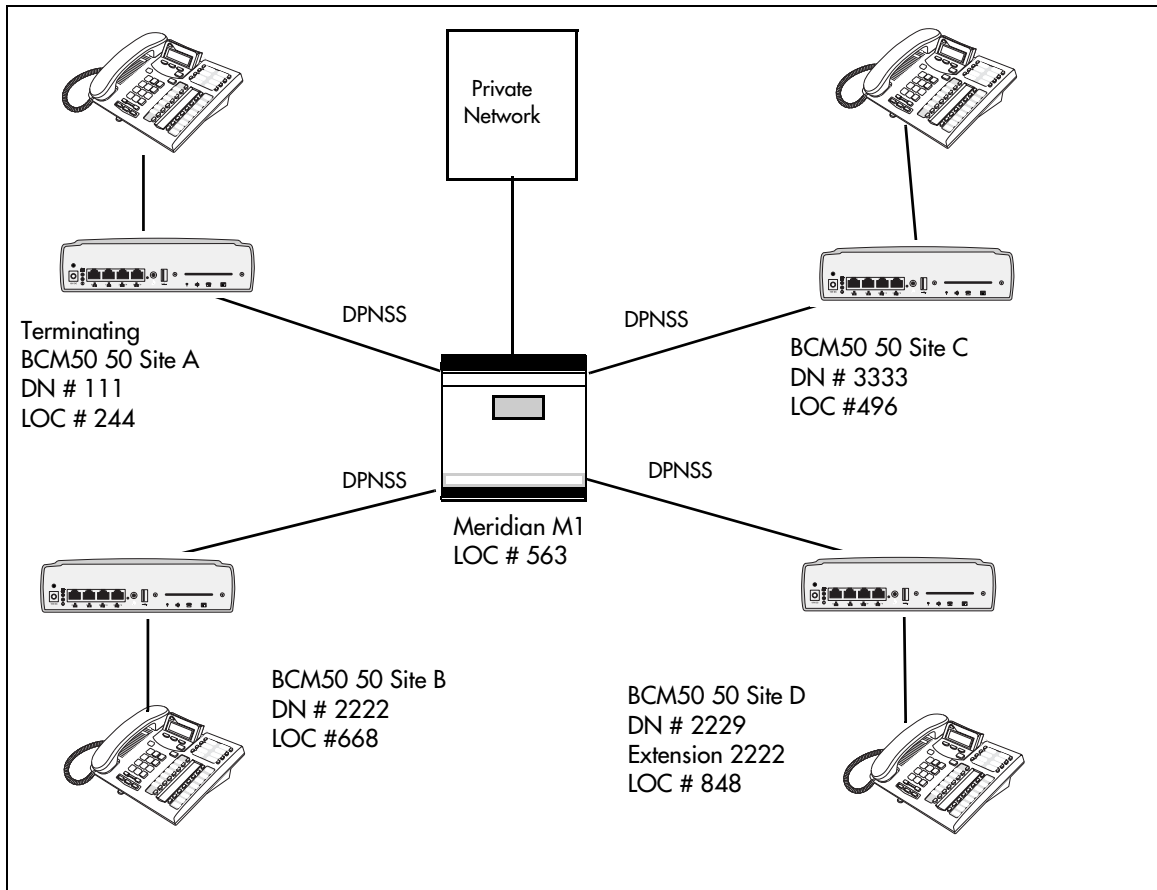


Table 100 shows examples of the routing required to set up the network shown in Figure 99. Note that 6 is the Private Access code.

Figure 100 Routing for DPNSS network

| Private Network: (for each branch BCM50) | | |
|--|---|----------------|
| Routing service to | Private network | Public network |
| Route | 001 | 002 |
| Dial out # | No number | No number |
| Use | Pool N | Pool N |
| DN type | none (private access code 6 is programmed) | public |
| Destination Code | 6 | 9 |
| Normal route | 001 | 002 |
| Absorb | 1 | 1 |

Guidelines for creating a private dialing plan with DPNSS

Use the following guidelines when creating a private dialing plan with DPNSS.

- When creating HLCs for the nodes in your system, avoid numbering conflicts between network nodes and internal DNs, Hunt group DNs.
- Program a Private Access Code into your destination routing tables to avoid conflicts with your internal HLC and dest code dialing plan. For example, if a dialout HLC is 848, but this number already exists in the BCM50 system for an extension, the routing tables should add a Private Access Code to the dest code. If the code is programmed as 6, the dest code becomes 6848. 6848 uses a route to dial out 848 using the DPNSS line pool, allowing the call to be placed.

Note that a Private Access Code is required only for specific DPNSS features such as Diversion, Route Optimization, and Redirection.

Customizing the DPNSS routing service

You can customize the routing service using the following restrictions:

- Direct Inward Access (DIA) lines allow incoming calls on private circuits to be directed to telephones without going through the normal call reception. Each DIA line is assigned to one or more extensions and is given a distinct Private Received number. When someone on another system on the network dials the Private Received number on a DPNSS line, the BCM50 system checks all received digits, compares the digits to an internal table and routes the call to the appropriate DIA line. All extensions programmed to have access to that DIA line will then alert for the incoming call.
- Dialing restrictions can be added to lines in line pools. Filters can restrict the use of the line to specific area codes.
- You can use host system signaling codes (“External call codes” in the *BCM50 Device Configuration Guide* (N0027146)) as part of the dial out for a route. Routing can also be used as an alternate method for a direct-dial digit. For example, create a destination code 0 and program the number of the internal or external destination as the dial out. Digit absorption should be set to 1. Because overflow routing directs calls using alternate line pools, a call may be affected by different line restrictions when it is handled by overflow routing.


Chapter 35

Private networking: Using destination codes

By properly planning and programming routing tables and destination codes, an installer can create a dialing plan where VoIP lines between BCM50 are available to other systems in the network.

Figure 101 shows a network of three BCM50s. Two remote systems connect to a central system.

Figure 101 Dialing plan for VoIP routing network

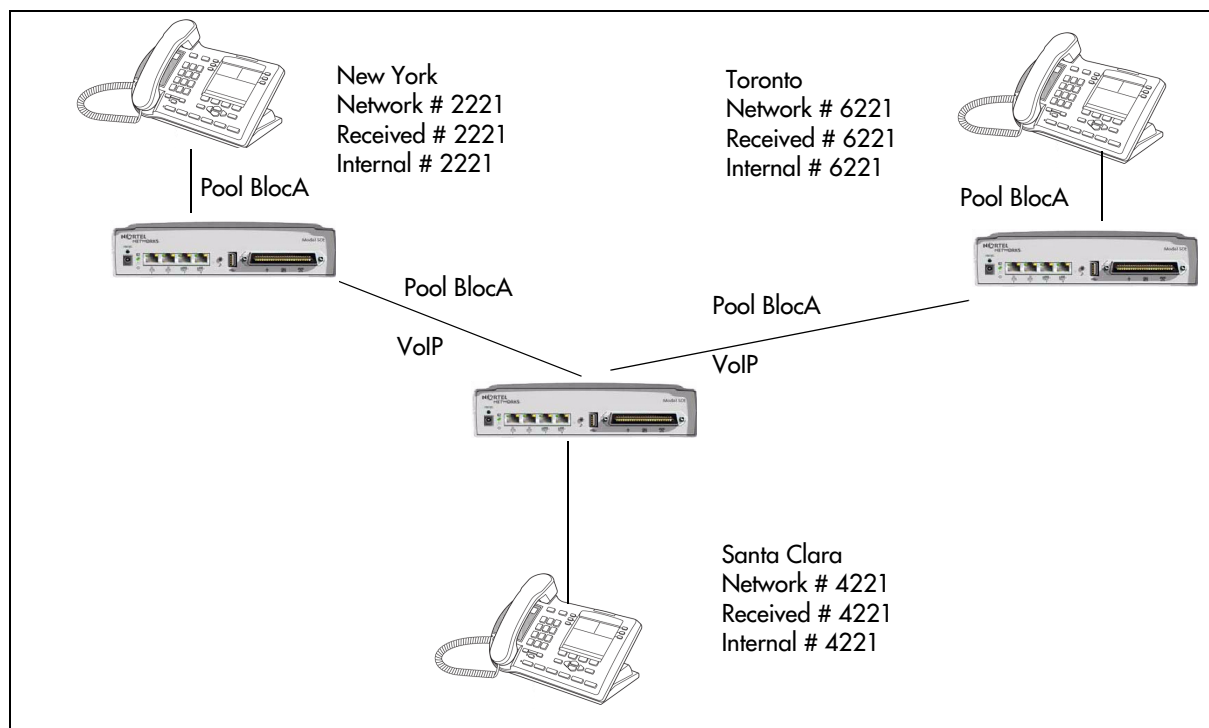

Each system must be running BCM50 software. Each system must be equipped with target lines and a VoIP keycodes with at least one IP Trunk line. Programming information for this network is shown in Table 69.

Table 69 VoIP routing for a BCM50 network (Sheet 1 of 3)

| New York office: | |
|-------------------------|---------|
| Parameter | Setting |
| Line Programming | |
| Network line (external) | |
| Line 001-004 | VoIP |
| Line type | BlocA |

Table 69 VoIP routing for a BCM50 network (Sheet 2 of 3)

| | | |
|---|-------------------------|------------------|
| Target line (internal) | | |
| Line 125 | Target line | |
| Private Received # | 2221 | |
| Line Access (set) | | |
| Set 2221 | L125: Ring only | |
| Line pool access | Line BlocA | |
| Routing service | | |
| Route | 001 | |
| Use | BlocA | |
| External # | None | |
| Routing Destinations | Office #1 | Office #2 |
| Routing to | Santa Clara | Toronto |
| Destination Code | 4 | 6 |
| Normal route | 001 | 001 |
| Absorb | None | None |
| Dialed number: | 4221 | 6221 |
| Santa Clara office: | | |
| Parameter | Setting | |
| Network line (external to New York) | | |
| Line 001-004 | VoIP | |
| Line type | BlocA | |
| Target line (internal to Santa Clara telephone) | | |
| Line 125 | Target line | |
| Private Received # | 4221 | |
| Line Access | | |
| DN 4221 | L125: Ring only | |
| Line pool access | Line BlocA | |
| Routing Destinations | Office #1 and #2 | |
| Routing to | New York/Toronto | |
| Route | 001 | |
| Use | BlocA | |
| External # | None | |
| Destination Code | 2 | 6 |
| Absorb | None | None |
| Normal route | 001 | 001 |

Table 69 VoIP routing for a BCM50 network (Sheet 3 of 3)

| | | |
|-----------------------------|------------------|---|
| Remote access | | Note: All lines in BlocA and BlocB need to be assigned in Remote Access Package 1. This is done under the restrictions tab of the lines. |
| Rem access pkgs | 01 | |
| Line pool access | BlocA: ON | |
| Line pool access | BlocB: ON | |
| Toronto office: | | |
| Parameter | Setting | |
| Trunk/Line Data (external) | | |
| Line 001-004 | VoIP | |
| Line type | BlocA | |
| Target line (internal) | | |
| Line 125 | Target line | |
| Private Received # | 6221 | |
| Line Access | | |
| DN 6221 | L125: Ring only | |
| Line pool access | Line BlocA | |
| Routing Destinations | Office #1 | Office #2 |
| Routing to | New York | Santa Clara |
| Route | 001 | |
| Use | BlocA | |
| External # | None | |
| Destination Code | 4 | 2 |
| Absorb | None | None |
| Normal route | 001 | 001 |

If a user in New York wants to call Toronto within the network, they dial 6221. The local BCM50 checks the number against the routing tables and routes the call according to the destination code 6, which places the call using Route 001.

The call appears on the routing table on the BCM50 in Santa Clara as 6-221. Because 6 is programmed as a destination code for Toronto on the Santa Clara system, another call is placed using route 001 from Santa Clara to Toronto. At the Toronto system, the digits 6-221 are interpreted as a target line Private received number. The call now alerts at telephone 6221 in Toronto.



Note: Network calls that use routes are subject to any restriction filters in effect.

If the telephone used to make a network call has an appearance of a line used by the route, the call will move from the intercom button to the Line button.

The telephone used to make a network call must have access to the line pool used by the route.

Network calls are external calls, even though they are dialed as if they were internal calls. Only the features and capabilities available to external calls can be used.

When programming a button to dial a Network number automatically (autodial), network calls must be treated as external numbers, even though they resemble internal telephone numbers.

Routes generally define the path between your BCM50 and another call server in your network, not other individual telephones on that call server.

Chapter 36


Private networking: PRI Call-by-Call services

The example shown in [Figure 102](#) highlights the use of PRI Call-by-Call services. It shows two offices of a company, one in New York and one in Toronto. Each office is equipped with a BCM50 and a PRI line. Each office has to handle incoming and outgoing calls to the public network. In addition, employees at each office often have to call colleagues in the other office.



Note: Call by Call Services must be provided by the Central office for them to work in the BCM50.

Figure 102 PRI networking using Call-by-Call Services

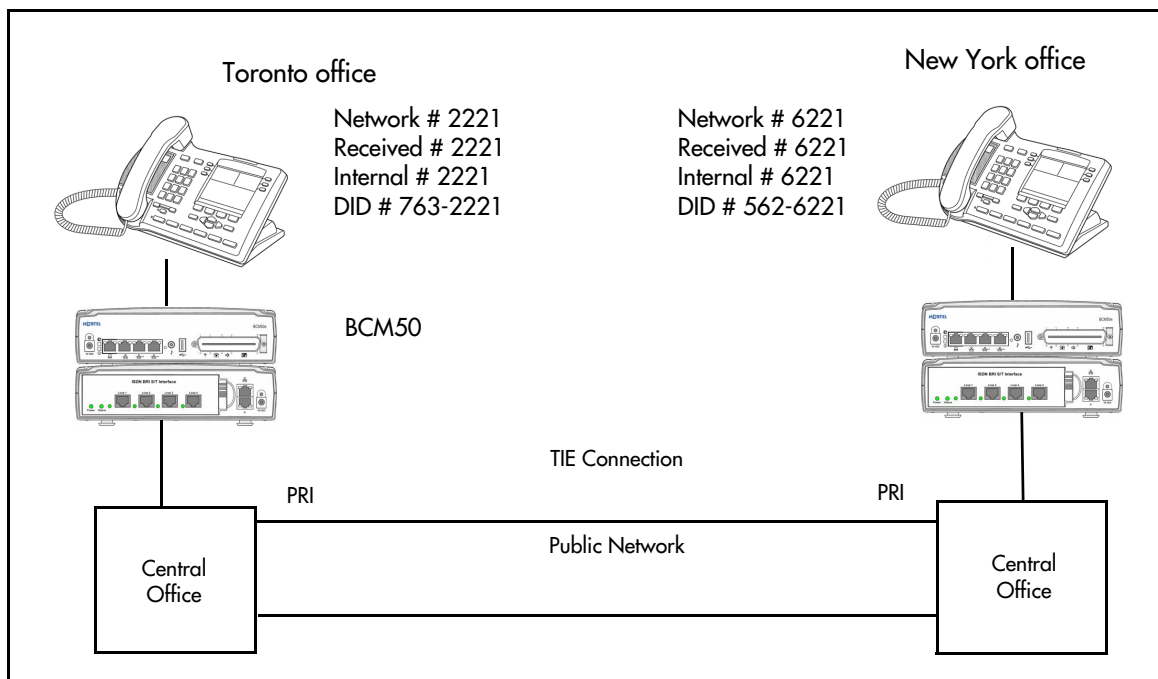

To reduce long distance costs, and to allow for a coordinated dialing plan between the offices, private lines are used to handle interoffice traffic. Refer to [“Dialing plan: Public network”](#) on page 263 and [“Dialing plan: Private network settings”](#) on page 269.

If Call-by-Call services were *not* used, each BCM50 system might have to be equipped with the following trunks:

- 12 T1 DID lines needed to handle peak incoming call traffic
- eight T1 E&M lines needed to handle inter-office calls
- eight lines needed to handle outgoing public calls

The total required is thus 28 lines. If the BCM50 systems were using T1 trunks, then two T1 spans would be required at each office. Note that the total of 28 lines represents the worst case value for line usage. In reality, the total number of lines in use at any one time will generally be less than 28. For example, during periods of peak incoming call traffic, the demand for outgoing lines will be low.

With PRI Call-by-Call services, it is not necessary to configure a fixed allocation of trunks. Each of the 23 lines on the PRI can be used for DID, private TIE, or outgoing public calls. This consolidation means that it may be possible for each office to use a single PRI span, rather than two T1 spans. With PRI Call-by-Call services, the only limitation is that there are no more than 23 calls in progress at any one time.

The dialing plan at each BCM50 site is configured to determine the call type based on the digits dialed by the user. If a user in Toronto wishes to dial a colleague in New York, they dial the four-digit private DN (such as 6221). The dialing plan recognizes this as a private network DN, and routes the call using TIE service with a private dialing plan.

Incoming TIE calls are routed to telephones based on the digits received by the network, which in this case will be the four-digit private DN.

If a user in either location wishes to dial an external number, they dial 9, followed by the number (such as 9-555-1212). The dialing plan recognizes this as a public DN, and routes the call using Public service.

Incoming DID calls will be routed to telephones, based on the trailing portion of the digits received by the network. For example, if a public network user dials an employee in the Toronto office, the network will deliver digits 4167632221. The BCM50 will route the call using the last four digits, 2221, to the BCM50.

Refer to [Table 70](#) for a description of the settings required for this type of routing service.

Table 70 PRI Call-by-Call services routing information (Sheet 1 of 2)

| Parameter | Home System Settings | |
|---------------------------|----------------------|----------------|
| Hardware | | |
| DTM | PRI | |
| Protocol | NI-2 | |
| Trunk/Line Data | | |
| Line 125 | Target line | |
| Private/Public Received # | 2221 | |
| Line Access | | |
| DN 2221 | L125:Ring only | |
| Line pool access | Line pool BlocA | |
| Routing Services | Private Network | Public network |
| | New York: | Public network |
| Route | 001 | 002 |
| External # | No number | No number |
| Use | Pool BlocA | Pool BlocA |
| Service type | TIE | Public |

Table 70 PRI Call-by-Call services routing information (Sheet 2 of 2)

| | | |
|---------------------------|-----------------------------|-----------------------|
| ServiceID | 1 | N/A |
| DN type | Private | N/A |
| Destination Code | 6 | 9 |
| Normal route | 001 | 002 |
| Absorb | 0 | ALL |
| New York office: | | |
| Parameter | Home System Settings | |
| Hardware | | |
| DTM | PRI | |
| Protocol | NI-2 | |
| Trunk/Line Data | | |
| Line 125 | Target line | |
| Private/Public Received # | 6221 | |
| Line Access | | |
| DN 6221 | L125:Ring only | |
| Line pool access | Line pool BlocA | |
| Routing Services | Private Network | Public Network |
| | Toronto | Public Network |
| Route | 001 | 002 |
| External # | No number | No number |
| Use | Pool BlocA | Pool BlocA |
| ServiceType | TIE | Public |
| ServiceID | 1 | N/A |
| DN type | Private | N/A |
| Destination Code | 2 | 9 |
| Normal route | 001 | 002 |
| Absorb | 0 | ALL |

Chapter 37

Configuring voice messaging

You can have either an internal voice message service, or you can connect your system to an external voice message service, either over the PSTN network to a message center at the central office or through a private network to another system. This panel allows you to choose the type of voice messaging service you want to use. If you choose an external service, you can enter the contact numbers to the Centralized Voice Messaging table.

The following paths indicate where to access the loop start trunks through Element Manager and through Telset Administration:

- Element Manager: Configuration>Applications>Voice Messaging>Call Center
- Telset interface: **CONFIG>Telco features


Assign external numbers to System Speed dial codes.

| Panels/Subpanels | Tasks/features |
|---|--|
| “Centralized Voice Messaging (external voicemail)” on page 335 | “Configuring centralized voicemail” on page 339 |
| “Local voice messaging access (CallPilot Manager)” on page 337 | Refer to the CallPilot documentation for task and feature details. |
| Click the navigation tree heading to access general information about Hospitality services. | |

Centralized Voice Messaging (external voicemail)

This panel allows you to record on the system the dial strings that allow users on your system to access a remote voice messaging service. Note that public or private trunks need to be properly configured for these numbers to work.

Figure 103 Voice Message Centers table

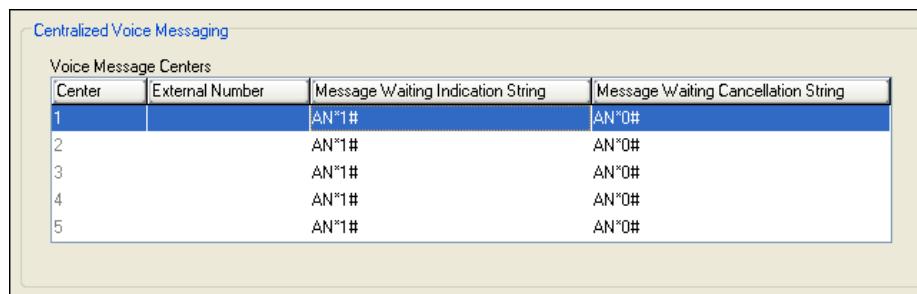

The screenshot shows a configuration window titled "Centralized Voice Messaging" with a sub-section "Voice Message Centers". It contains a table with four columns: "Center", "External Number", "Message Waiting Indication String", and "Message Waiting Cancellation String". The table has five rows, with the first row highlighted in blue.

| Center | External Number | Message Waiting Indication String | Message Waiting Cancellation String |
|--------|-----------------|-----------------------------------|-------------------------------------|
| 1 | | AN*1# | AN*0# |
| 2 | | AN*1# | AN*0# |
| 3 | | AN*1# | AN*0# |
| 4 | | AN*1# | AN*0# |
| 5 | | AN*1# | AN*0# |

Table 71 describes each field on this panel.

Table 71 Voice Message Centers Table

| Attribute | Values | Description |
|--|---------------|---|
| Center | <read-only> | You can define a maximum of five external voice message centers. Note that any one user can only be connected to one center. |
| External Number | <dial string> | This is the number for the external voice message center. Ensure that you add the appropriate routing information. |
| Message wait indicate string (MWI) | <string> | Indicates that the message center has a message in the mailbox. This is a default NSI string for message waiting. Refer to “Programming MWI and MWC strings” on page 336 . |
| Message wait cancellation string (MWC) | <string> | Indicates that the voice messages have been retrieved. This is a default NSI string for message waiting. |

Programming MWI and MWC strings

MWI and MWC information is received from the network in the form of NSI strings.

The default MWI and MWC strings are default NSI strings for Message Waiting.

*58B*AN*1# – Message Waiting Indication

*58B*AN*0# – Message Waiting Cancellation

This provides the information required to program the strings as:

AN*1# for MWI, and

AN*0# for MWC

Private network strings will differ with different message centers. These should only be changed on the advice of your customer service representative.

DPNSS: The NSI strings in DPNSS are dependent on the supplier of the PBX. Therefore, the strings vary depending on the originating PBX system.

Each string has the following default structure: *58XYYYYY.*

Table 72 describes each part of the NSI string.

Table 72 Parts of the NSI string

| String Component | Description |
|------------------|---|
| *58 | Identifies that it is an NSI string. |
| X | Any letter from A to Z, or nothing. |
| YYYYY.. | Manufacturer specific string, which can contain any sequence of alphanumeric digits or *. |
| # | Marks the end of the identifier. |

Only the YYYYY. . # portion of the string must be programmed for MWI and MWC. The procedure is similar to Set Name/Line Name.


The following criteria must be met when programming NSI strings for MWI/MWC:

- No spaces are allowed, including spaces at the end of the string.
- A # must be present at the end.
- A # or a * cannot be present in the first character.

Local voice messaging access (CallPilot Manager)

Local voice messaging is configured using a client application. This CallPilot application is explained in detail in the CallPilot documentation.

Click the Launch CallPilot Manager button to access the application from which you can set up your local voice messaging system.

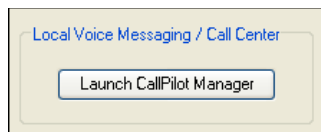

Chapter 38

Configuring centralized voicemail

This section describes how to set up the BCM50 to support centralized voicemail or call attendant over a private network.

The BCM50 supports voicemail configuration either from the local source or by accessing a remote voicemail system located on another BCM50, a Business Communications Manager, or attached to a Meridian 1 system. The system can be configured to more than one voicemail system. However, each telephone can only be configured to one system.

This section includes this information:

- [“Local system as host” on page 339](#)
- [“Meridian system as host” on page 340](#)
- [“System set up for host system” on page 340](#)
- [“System set up for satellite systems” on page 342](#)
- [“Configuring the system for centralized voicemail” on page 344](#)

DMS100/SL100 centralized voicemail: The BCM50 can also support centralized voicemail on a DMS100/SL100 switch through a PRI-DMS100 connection. The system also supports centralized voicemail on the switch through an indirect connection through an M1, where the DMS100/SL100 is connected by PRI-DMS100 to the M1 and the M1 is connected to a BCM50 through a PRI-MCDN connection. The DMS100/SL100 can use either the Public number or Private number of a BCM50 telephone to designate the mailbox number on the voicemail system.

To configure centralized voicemail, the system must be using a CDP dialing plan and be running on a private network created using either DPNSS (UK profile), PRI SL-1 or VoIP trunking set up with MCDN. Private network configuration and features are discussed in [“Private networking: MCDN over PRI and VoIP” on page 285](#).



Note: For centralized voicemail from a DMS100/SL100 system, configure the BCM50 dialing plan as either CDP or UDP.

Local system as host

A local system that acts as a central voicemail location must be able to support MCDN. You can add up to 1000 mailboxes on BCM50 voicemail, providing you have entered adequate keycodes.

CallPilot constraints:

- To allow use of the auto attendant feature, you must ensure that the **Allow Network Transfers** check box is selected in the CallPilot Manager.

- To allow use of voicemail, you must ensure that the **Enabled Redirected DN** check box is selected in the CallPilot Manager.

For details about setting up the CallPilot parameters and features, refer to the *CallPilot Manager Set Up and Operations Guide* and the other CallPilot supporting documentation.

Meridian system as host

If you are using a voicemail system connected to a Meridian 1 as a host system, ensure that the systems are set up to be compatible with each other.

CallPilot compatibility

If you are planning to use M-1 based CallPilot software for the voicemail system, there are no compatibility issues.

Meridian Mail compatibility issues

If you are using Meridian Mail as the host system, ensure that the Meridian has the following:

- Meridian Mail rel. 7 (MM7) or above
- the appropriate number of PRI cards and D-channel handlers to support the PRI links to all the BCM50s using the system.

Special requirements:

- Over a PRI SL-1 line: Meridian 1 must be on Release 19 or greater.
- Over VoIP: Meridian one must be installed with an IPT card version 3.0 or newer
- Meridian 1 requires the network ID of the BCM50, which is defined under Configuration>Telephony>Dialing Plan>Private Network in the Element Manager. This is a number between 1 and 27, and is defined by the Meridian system administrator.

Also refer to [“System set up for satellite systems” on page 342](#) for specific call features available from a Meridian 1-based voicemail system.

System set up for host system

The system that hosts the voicemail needs to ensure that incoming calls are directed to the voicemail service.

Process assumptions:

- Private network has been set up, with MCDN, between any nodes that need to access voicemail on this system.

- All systems are using the CDP dialing plan, and you have set up the correct routing to these systems.
- CallPilot or auto attendant is set up and is running for the local system.
- You have obtained a list of DNs from the remote systems that require mailboxes.

To configure the host system

- 1 Obtain the voicemail DN by pressing **FEATURE 985** on a system telephone.
- 2 If this setting matches the DN scheme for your system dialing plan, go to step 3.
If this setting does not match the DN scheme for your system dialing plan:
 - a Navigate to the DNs panel: Configuration>Telephony>Dialing Plan.
 - b In the All DNs table, locate the DN to be changed.
 - c Double click the number in the DN column.
 - d Enter the number obtained in step 1.
- 3 Navigate to the Target Lines panel: Configuration>Telephony>Lines.
- 4 In the Target Lines table, locate the target line to be assigned.
- 5 In the Details for Line subpanel, click the Assigned DNs tab.
- 6 Click **Add**.
- 7 Enter the required DN in the DN field.
- 8 Click **OK**.

CallPilot programming:

- 9 Set up CallPilot for voicemail or auto attendant answering:
 - **Voicemail:** In CallPilot Manager click **Configuration** and **System Properties**. Ensure that the **Enable Redirected DN** box is selected.
 - **Auto-Attendant:** Under the **Auto-Attendant** heading, click the line record you specified in step 4 and set the Auto-Attendant to answer after 0 (zero) rings.
- 10 To activate these settings, reboot the system when it is convenient for your users.

VoIP networking note: If you are using H.323 VoIP trunks for central voicemail, you need to set the following:

- Ensure that the local gateway protocol is set to SL-1 or CSE, based on the version of the satellite systems.
- Ensure that the remote gateways are programmed to route using CDP.
- Ensure that the remote gateway protocols are set to SL-1 or CSE, based on the version of the satellite system.

System set up for satellite systems

Systems that are remote to the voicemail system need to ensure that outgoing calls are correctly directed to the voicemail service on the host system.

Process assumptions:

- Private network has been set up, with MCDN, between the satellite and host system.
- The correct routing to the host system is set up and working.
- You have supplied a list of DNs to the host system administrator that require mailboxes.

To set up a satellite system for voicemail

- 1 Navigate to the Centralized Messaging Call Center panel: Configuration>Applications.
- 2 Click the voice center number that you want to assign to the remote voicemail system.
- 3 In the External Number field, enter the voicemail DN assigned by the host system. Ensure that you include any appropriate routing codes to the string.

Also refer to Centralized Voice Messaging (external voicemail) in the *BCM50 Device Configuration Guide* (N0027146).

DPNSS process: Type the new target number, starting with an access code, if required, or **None**. For example: **65142222**.

- 4 Enter the Message Waiting Indication String that is expected from the particular message center.
- 5 Program the Message Waiting Cancellation String that is expected from the message center.



Note: The line must be programmed to Appear and/or Ring at the telephone.

Configuring the Target lines:

- 6 If the telephone does not already have a target line assigned:
 - a Navigate to the Target Lines panel: Configuration>Telephony>Lines>Target Lines.
 - b In the Target Lines table, locate the target line to be assigned.
 - c In the Details for Line subpanel, click the Assigned DNs tab.
 - d Click **Add**.
 - e Enter the required DN in the DN field.
 - f Click **OK**.
 - g Click the Preferences tab.
 - h In the Voice message center field, enter the center number chosen in step 2.
- 7 Repeat step 6 for all the target lines you want to change.

Configuring the telephone records:

- 8 Navigate to the DNs panel: Configuration>Telephony>Dialing Plan.
- 9 In the All DNs table, click the DN you associated with the voicemail target line.
- 10 In the Details for DN subpanel, click the Line Assignment tab.
- 11 Add the line number of the target line programmed for the telephone.
- 12 Select the Vmsg check box.

MWI note: If you require answer DNs to provide messaging waiting indicators (MWI), the telephone with the DN must be assigned with a target line, and Vmsg set must be selected on the telephone record.

Configuring Call forward to go to voicemail:

- 13 For the same DN:
 - a Click the Capabilities and Preferences tab.
 - b In the Details for DN subpanel, select the Allow redirect check box.
 - c Click the Line Access tab.
 - d Double-click the Fwd No Answer field.
 - e Enter the voicemail DN.
 - f Double-click the Fwd Busy field.
 - g Enter the voicemail DN.
- 14 Repeat step 13 for each of the DNs you want to assign to the remote voicemail.
- 15 Test the system.

VoIP networking note: If you are using H.323 VoIP trunks for central voicemail, you need to set the following:

- Ensure that the local gateway protocol is set to CSE, based on the version of the satellite systems.
- Ensure that the remote gateways are programmed to route using CDP.
- Ensure that the remote gateway protocols are set to CSE, based on the version of the satellite system.

- 16 Repeat for each center you want to identify.

TIPS:

- A telephone does not show that external voice messages are waiting unless you enable **VMSG set** for the lines assigned to each telephone under **Line Assignment**. Refer to “Capabilities and Preferences - Capabilities tab” in the *BCM50 Device Configuration Guide* (N0027146).

- Analog telephones connected to an GASM can receive message waiting indicators if the analog line supports CLID. MWI indicator settings for analog telephones or for analog telephones attached to ATA2s, are set under the ATA heading. Refer to “Configuring an analog telephone” in the *BCM50 Device Configuration Guide* (N0027146).
- You can program up to five voice message center numbers, but many systems require only one.

Configuring the system for centralized voicemail

MCDN is supported over a PRI (SL-1) line or VoIP trunks between your BCM50 and other systems, such as Meridian 1, or Business Communications Manager systems. This section describes the specific programming for remote voicemail over PRI lines.

Apart from line configuration, MCDN over VoIP has the same system configuration.

To set up a PRI connection on the system

- 1 Ensure that the remote voicemail system is set up to accommodate your system on the network.
- 2 Ensure that your dialing plan coordinates with what the other nodes on the network are using. (Configuration>Telephony>Dialing Plan, Private Network panel, Private network type)
- 3 Enter the network system identifier the Meridian system administrator supplied (between 1 and 27), if you are networked with a Meridian 1 somewhere in the network. (Configuration>Telephony>Dialing Plan, Private Network panel, Private network type)
- 4 Install a DTM module to connect to the appropriate PRI SL-1 trunk, or enter the keycode for the required number of VoIP trunks.
- 5 Configure the lines you plan to use, assigning them to the same line pool. Refer to [“Configuring lines: PRI” on page 133](#) and [“Configuring VoIP lines” on page 374](#).
- 6 Enter the MCDN keycode.
- 7 Choose the MCDN network features that you want to use. (Configuration>Telephony>Dialing Plan, Private Network panel, MCDN subpanel)
- 8 Set up routing to target the PRI or VoIP line pool you set up.
- 9 Set up your dialing plan to recognize the network system identifiers of the other nodes on the system, so your system can pass them along, as required.
- 10 Assign the pool to any telephones you want to allow to use this line.
- 11 Program target lines and assign to telephones.
- 12 Set up the voicemail DN for the system that is being used as the host voicemail system for your network.
- 13 Test the link.
- 14 Refer to the CallPilot documentation to set up the mail boxes or auto attendant features and other voicemail parameters.

Chapter 39

Dialing plan: Line pools and line pool codes

The Line Pools panels allow you to:

- assign access codes to line pools
- add lines to line pools
- assign lines pools to telephones (and view which telephones have line pool assigned)
- set Call by Call limits for PRI service types

The following paths indicate where to access line pools settings in Element Manager and through Telsat Administration:

- Element Manager: Configuration>Telephony>Dialing Plan>Line Pools
- Telsat interface: **CONFIG>System Prgmng>Access Codes>Line pool codes

Click one of the following links to connect with the type of information you want to view:

| Panels | Tasks | Features and notes |
|--|-------|--|
| “Line pools (and access codes)” on page 345 “Line pools: DNs tab” on page 347 “Line pools: Call-by-Call Limits tab (PRI only)” on page 348 | | “Line pool access code notes:” on page 347 |

Also refer to:

- [“Configuring lines” on page 117](#)
- [“Dialing plan: Routing and destination codes” on page 235](#)
- [“Private networking: Using shared line pools” on page 379](#)
- [“Line Access - Line Pool Access tab” in the *BCM50 Device Configuration Guide* \(N0027146\)](#)

Click the navigation tree heading to access general information about DN records.

Line pools (and access codes)

The panel in the top frame displays settings that are configured on other panels. The only setting you can modify on this table is the access code number. [Figure 104](#) illustrates this panel.

Figure 104 Dialing Plan - Line Pools table

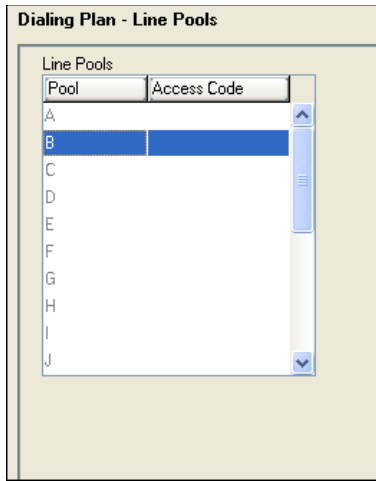


Table 73 describes the fields on the top frame.

Table 73 Line Pools table fields

| Attribute | Value | Description |
|-------------|-----------|--|
| Pool | Read-only | These are the available line pools. Program only the ones for which you have actually assigned lines. Line pools are configured on the Lines panel |
| Access Code | <XXX> | Use access codes if you are not using destination codes on the system. These codes serve the same purpose, without the ability to define dialing sequences and multiple codes per route. |

Line pool access code notes:



Note: You cannot assign Bloc line pools with a line pool access code. You must define Bloc line pools under routing, and create destination codes for the routes.



Note: A line pool access code cannot conflict with the following table.



Note: The line pool number must not conflict with the following:

- park prefix
- external code
- direct dial digits
- private access code
- Public/Private Auto DN
- Public/Private DISA DN
- Telephone DN

If the line pool code and the external code start with the same digit, the line pool code programming supersedes the external code.

Line pools: DN's tab

The DN's tab shows you which DN's have this line pool assigned.

Programming note: A line pool must be assigned to a telephone before the user can use the line pool access code (or destination code) to make a call.

Figure 105 illustrates the DN's tab.

Figure 105 DN access to line pools

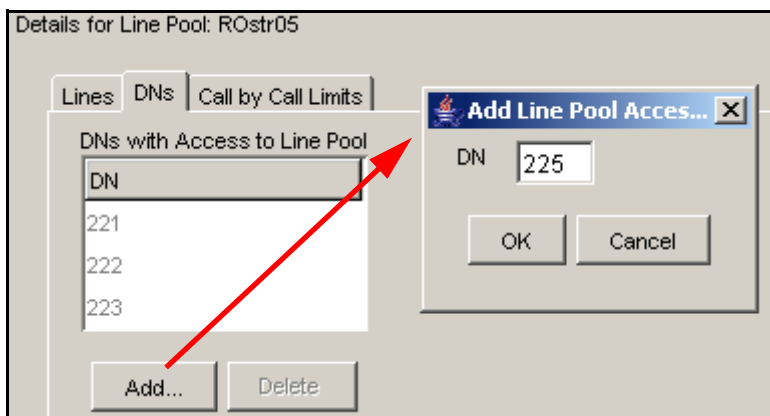


Table 74 describes the fields on the DN's tab.

Table 74 Line Pools: DN access to line pools fields

| Attribute | Value | Description |
|-----------------|---|---|
| DNs | Read-only | The telephones assigned to the line pool. Also refer to: "Line Access - Line Pool Access tab" in the <i>BCM50 Device Configuration Guide (N0027146)</i> |
| Actions: | | |
| Add | <ol style="list-style-type: none"> 1. On the Line Pools table, select the line pool you want to modify. 2. Under the DN's tab table, click Add. 3. Enter the DN you want to assign to the line pool. 4. Click OK to save. | |
| Delete | <ol style="list-style-type: none"> 1. On the Line Pools table, select the line pool you want to modify. 2. On the DN's tab table, select the DN you want to delete. 3. Under the DN's tab table, click Delete. 4. Click OK. | |

Line pools: Call-by-Call Limits tab (PRI only)

For PRI lines that provide Call-by-Call services, Bloc line pools have an additional configuration that allows you to configure service type limitations. For information on PRI protocols, refer to Table 39.

Figure 106 illustrates the Call by Call Limits tab.

Figure 106 Line Pools: Call by call Limits fields

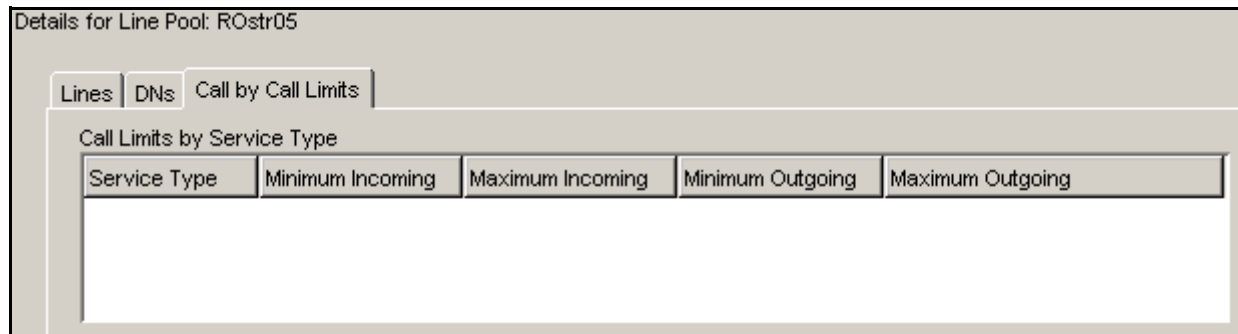


Table 75 describes the fields on the Lines tab.

Table 75 Line Pools: Call by call limits fields

| Attribute | Value | Description |
|------------------|-------------|--|
| Service Type | <read-only> | This is the type of CbC service provided on the PRI trunks in the line pool. |
| Minimum Incoming | Default: 2 | Note: The total of the minimum values for incoming or outgoing PRI services cannot exceed the total number of lines in the Blocpool. The maximum value for an incoming or outgoing PRI service cannot exceed the total number of lines in the Bloc pool. |
| Maximum Incoming | Default: 23 | |
| Minimum Outgoing | Default: 4 | |
| Maximum Outgoing | Default: 23 | |

Chapter 40

VoIP overview

On the BCM50, the LAN configuration consists of two components: Router LAN configuration, which determines how the router communicates with devices on the LAN, and Main Module LAN configuration, which determines how the Main Module of the BCM50 communicates with other devices on the LAN.

IP telephones

IP telephones offer the functionality of regular telephones, but do not require a hardwire connection to the BCM50. Instead, they must be plugged into an IP network, which is connected to the LAN or WAN on the BCM50. Calls made from IP telephones through the BCM50 can pass over VoIP trunks or across a Public Switched Telephone Network (PSTN).

Nortel provides two types of IP telephones. The IP telephones are wired to the IP network using Ethernet, in the case of the i2002 and the i2004, or are accessed through your desktop or laptop computer, as in the case of the Nortel i2050 Software Phone.

VoIP trunks

VoIP trunks allow voice signals to travel across IP networks. A gateway within the BCM50 converts the voice signal into IP packets, which are then transmitted through the IP network to a gateway on the remote system. The device at the other end reassembles the packets into a voice signal. The BCM50 uses IP Sec Tunnels to create VoIP trunks.

Creating an IP telephony network

An IP telephony network consists of telephones, gatekeepers, IP networks, and access to a PSTN.

Networking with BCM50

The BCM50 is a key building block in creating your communications network. It interoperates with many devices, including the Meridian 1 system and H.323 devices. The BCM50 system can be connected to devices through multiple IP networks, as well as through the PSTN. Multiple BCM50 systems also can be linked together on a network of VoIP trunks and/or dedicated physical lines.

Telephones

The BCM50 can communicate using digital telephones (7000, 7100, 7100N, T7208, 7208, 7208N, 7316, 7316E, 7316E+KIMs, 7310), cordless telephones (7406), and IP telephones and applications (Nortel IP Phone 2001, IP Phone 2002, IP Phone 2004, Nortel i2050 Software Phone). With this much flexibility, the BCM50 can provide the type of service you require to be most productive in your business.



Note: Model 7000 phones are supported in Europe only.

While analog and digital telephones cannot be connected to the BCM50 system with an IP connection, they can make and receive calls to and from other systems through VoIP trunks. Calls received through the VoIP trunks to system telephones are received through the LAN or WAN card and are translated within the BCM50 to voice channels.

Gatekeepers

A gatekeeper tracks IP addresses of specified devices, and provides routing and (optionally) authorization for making and accepting calls for those devices. A gatekeeper is not required as part of the network to which your BCM50 system is attached, but gatekeepers can be useful on networks with a large number of devices.

When planning your network, be sure to consider all requirements for a data network. Consult your network administrator for information on network setup and how the BCM50 fits into the network.

IP Network

WAN

A Wide Area Network (WAN) is a communications network that covers a wide geographic area, such as state or country. For BCM50, a WAN is any IP network connected to a WAN card on the BCM50 system. This may also be a direct connection to another BCM50 system.

If you want to deploy IP telephones that will be connected to a LAN outside of the LAN that the BCM50 is installed on, you must ensure the BCM50 has a WAN connection. This includes ensuring that you obtain IP addresses and routing information that allows the remote telephones to find the BCM50, and vice versa.

The *BCM50 IP Telephone Installation and Configuration Guide* (N0027269) has a data section that describes the internet protocols and data settings that the BCM50 requires or is compatible with. Ensure that this connection is correctly set up and working before you attempt to deploy any remote IP devices.

LAN

A Local Area Network (LAN) is a communications network that serves users within a confined geographical area. For BCM50, a LAN is any IP network connected to a LAN card on the BCM50 system. Often, the LAN can include a router that forms a connection to the Internet. A BCM50 can have up to two LAN connections.

Key VoIP concepts

This section explains a few commonly used VoIP terms.

QoS

QoS (Quality of Service) is technology that determines the maximum acceptable amount of latency, and balances that with the quality of the VoIP connection. Using QoS, you can ensure that the system will not insist on receiving 100% of the IP packets, which can avoid significant latency.

Silence compression

Silence compression technology identifies the periods of silence in a conversation, and stops sending IP speech packets during those periods. Telco studies show that in a typical telephone conversation, only about 36% to 40% of a full-duplex conversation is active. When one person talks, the other listens. This is half-duplex. There are important periods of silence during speaker pauses between words and phrases. By applying silence compression, average bandwidth use is reduced by the same amount. This reduction in average bandwidth requirements develops over a 20-to-30-second period as the conversation switches from one direction to another. Also refer to [“Silence compression” on page 505](#).

Codecs

Equipment or circuits that digitally code and decode voice signals. Software that provides compression/decompression algorithms for voice traffic over IP networks and VoIP trunks. For IP telephones, the BCM50 supports both a-law and mu-law variants of the G.711 Codec, as well as the G.729 and G.723 Codecs.

- The G.711 Codec samples the voice stream at a rate of 64Kbps (Kilo bits per second), and is the Codec to use for maximum voice quality. Choose the G.711 Codec with the companding law (alaw or ulaw) that matches your system requirements.
- The G.729 Codec samples the voice stream at 8 kbps. The voice quality is slightly lower using a G.729 but it reduces network traffic by approximately 80%.
- The G.723 Codec should be used only with third party devices that do not support G.729 or G.711.

Codecs with Silence Compression, also referred to as VAD (Voice Activity Detection), make VAD active on the system, which performs the same function as having silence suppression active.



Note: You can only change the codec on a configured IP telephone if it is online to the BCM50, or if Keep DN Alive is enabled for an offline telephone.

Chapter 41

VoIP trunk gateways

A VoIP trunk allows you to establish communications between a BCM50 and a remote system across an IP network. Each trunk is associated with a line record (lines 001-012), and are configured in the same way that other lines are configured.

However, VoIP trunks have additional programming to support the IP network connection.

This system supports an H.323 (version 4) trunk protocol. H.323 trunks support connections to other BCM50s, a central call server such as Succession 1000/M, and trunk-based applications.

The following path indicates where to access the Voice over IP (VoIP) trunk gateway in Element Manager:

Element Manager: Configuration >Telephony Resources>IP Trunks>Remote Gateways Tab

Configuring a VoIP trunk requires the following:

- [“Pre-installation system requirements” on page 355](#)
- [“Keycodes” on page 356](#)
- [“H.323 network applications considerations” on page 356](#)

VoIP trunks can be used for calls originating from any type of telephone within the BCM50 system. Calls coming into the system over VoIP trunks from other systems can be directed to any type of telephone within the system.

You cannot program Auto DN or DISA DN for VoIP trunks; therefore, you cannot use CoS passwords to remotely access features on your system. The exception to this would be a tandemmed call, where a call comes into system A over the PSTN, then tandems to system B over a VoIP trunk. In this case, the remote access package on the line will determine which system features are available to the caller.



Note: If you are using the BCM50 with a Meridian 1 (M1-IPT) system or a Succession 1000/1000M system for Survivable Remote Gateway (SRG) applications, there are also interoperability settings to interact with these systems that need to be taken into consideration.

Pre-installation system requirements

Ensure that you have obtained the following information or familiarize yourself with the requirements before continuing with VoIP trunk configuration:

Keycodes

Before you can use VoIP, you must obtain and install the necessary keycodes. See the *BCM50 Keycode Installation Guide* (N0016865) for more information about installing the keycodes. Talk to your BCM50 sales agent if you need to purchase VoIP keycodes.

Each keycode adds a specific number of VoIP trunks. You must reboot your BCM50 after you enter VoIP keycodes to activate trunking.

If you want to use the MCDN features on the VoIP trunks, you will need an MCDN keycode. If you have already deployed MCDN for your SL-1 PRI lines, you do not require an additional keycode.

H.323 network applications considerations


In order to maintain a level of quality during call setup, QoS monitor must be enabled and configured.

If your network uses a gatekeeper (H.323 trunks only), there are also specific settings that must be set on the Local Gateway panel to recognize the gatekeeper, and also within the gatekeeper application, so that VoIP lines are recognized. Also refer to gatekeeper configuration [“VoIP interoperability: Gatekeeper configuration”](#) on page 377.

If you plan to use H.323 trunking and you have a firewall set up, ensure that the ports you intend to use have been allowed.

How VoIP trunks make a network

[Figure 107](#) shows a simple private networking configuration of three systems connected by VoIP trunks. As in all private networking, each system has direct routing configurations to the directly adjacent systems. As well, the dialing plans are configured to ensure that remote calls are correctly routed to the receiving system, such as, if Node A called someone in Node C.

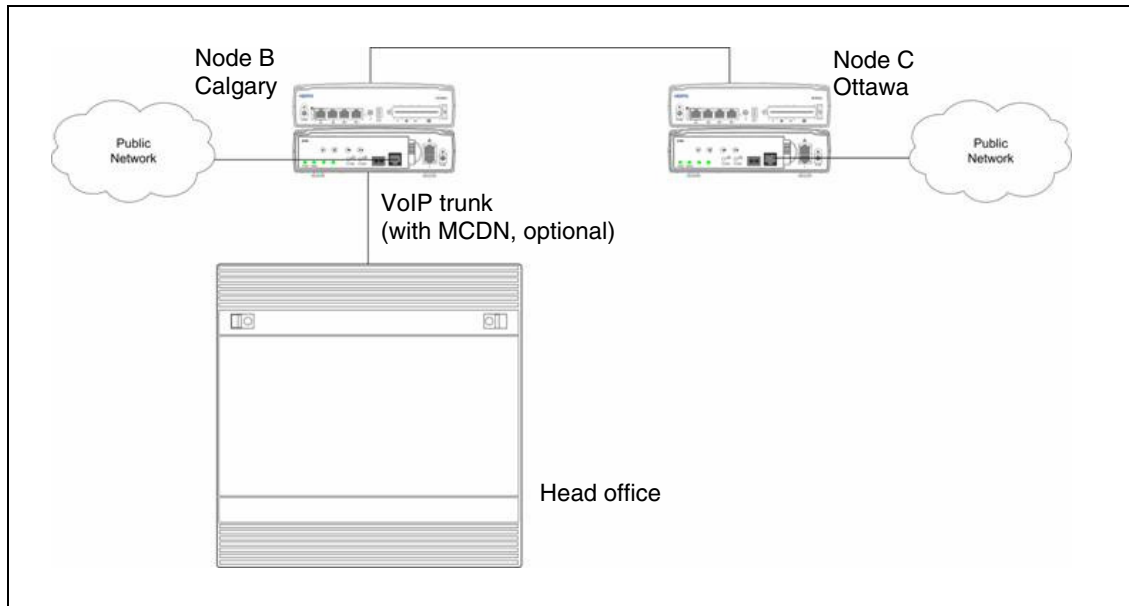Figure 107 Internal call from Meridian 1 tandems to remote PSTN line

Since the VoIP trunks are configured into line pools, you can assign line pool codes to users who have been assigned access to the VoIP trunks. However, if you intend to set up your system to use fallback, so that calls can go out over PSTN if the VoIP trunks are not available, you must use routes and destination codes to access the VoIP trunk line pools.

Local gateway programming

The VoIP trunk access point at each system is called a gateway. The gateway to your system, the local gateway, determines how incoming and outgoing calls will be handled.

The media parameters determine a number of system settings. These values need to be coordinated with the other systems on the network to ensure that all features work consistently across the network. Media parameters include setting:

- the order of preferred codecs
- silence compression availability
- jitter buffer size
- codec payload size
- IP fax transmission availability on the network

The local gateway parameters define how the BCM50 prefers call signaling information to be directed through VoIP trunks. Call signaling establishes and disconnects a call.

If the network has a gatekeeper (H.323 trunks only), the BCM50 can request a method for call signaling, but whether this request is granted depends on the configuration of the gatekeeper. Ultimately, the gatekeeper decides which call signaling method to use.

Local gateway settings include:

- fallback to circuit switched availability and scope
- type of call signaling, either directly to the far end system or through a network gatekeeper
- if there is a gatekeeper, the relevant IP information is noted
- a KeepAlive signal timer
- the protocol the system will use for the gateway (must be compatible with remote system or gatekeeper)
- allowing/disallowing VoIP gateway tunnel H.245 messages within H.225
- being able to identify unique call signaling and RAS ports

Notes about NPI-TON aliases for H.323 trunks

NPI-TON aliases store dialed number prefixes as well as information about the type of number. A dialed number can be qualified according to its TON (type of number), as well as its NPI (numbering plan identification). Nortel recommends this format over the E.164 format, for encoding dialed numbers and aliases registered with a gatekeeper.

When using a gatekeeper, and attempting to place an outgoing VoIP trunk call, ensure that the route and dialing plan configuration matches the NPI-TON aliases registered, by the destination, with the gatekeeper. These requirements are summarized in [Table 76](#).

Table 76 Route and Dialing Plan configurations for NPI-TON

| Route (DN type) | Dialing Plan used by calling gateway | Alias configured for calling gateway (“alias name” in Element Manager) |
|-----------------|--------------------------------------|--|
| Public | Public | PUB:<dialedDigitsPrefix> |
| Private | Private (Type = None) | PRI:<dialedDigitsPrefix> |
| | Private (Type = CDP) | CDP:<dialedDigitsPrefix> |
| | Private (Type = UDP) | UDP:<dialedDigitsPrefix> |

Remote gateways

Since VoIP trunks are point-to-point channels, besides the local gateway information on your system, you need to tell your system about the gateway at the remote end.

However, if the network has a gatekeeper, the gatekeeper handles call traffic, so remote gateway programming is not required.

To configure a remote gateway, you need to define the following information:


- a name that identifies the destination system
- the IP address of the destination system
- whether QoS monitor is enabled (this is required if you plan to use PSTN fallback)
- transmit threshold so that the system knows when to activate the fallback feature
- the remote gateway system type
- the gateway protocol
- the unique digit that identifies the remote system to the network. This becomes part of the destination code

PSTN call to remote node

Making a call to a remote node requires any BCM50 systems between the calling and receiving nodes to have the correct routing to pass the call on to the next node. This is the same if you use PSTN lines or VoIP trunks for the network.

[Figure 108](#) shows a call tandeming from the public network (PSTN), through System A (Santa Clara) and being passed to System B (Ottawa) over a VoIP trunk network. In this case, it might be a home-based employee who wants to call someone in Ottawa.


You cannot program DISA for VoIP trunks, therefore, your system cannot be accessed from an external location over a VoIP trunk. The exception to this is if the call comes into a tandemed system (system A) from a PSTN, and the call is then sent out across a VoIP trunk to system B, as in this example. In this case, system A is controlling remote access through remote access packages and routing, transferring the outside call to a VoIP trunk, which is accessed by an allowed dial sequence. The VoIP trunk connects directly to system B, where the dialing sequence is recognized as directed to an internal DN. In this scenario, all remote call features are available to the caller.

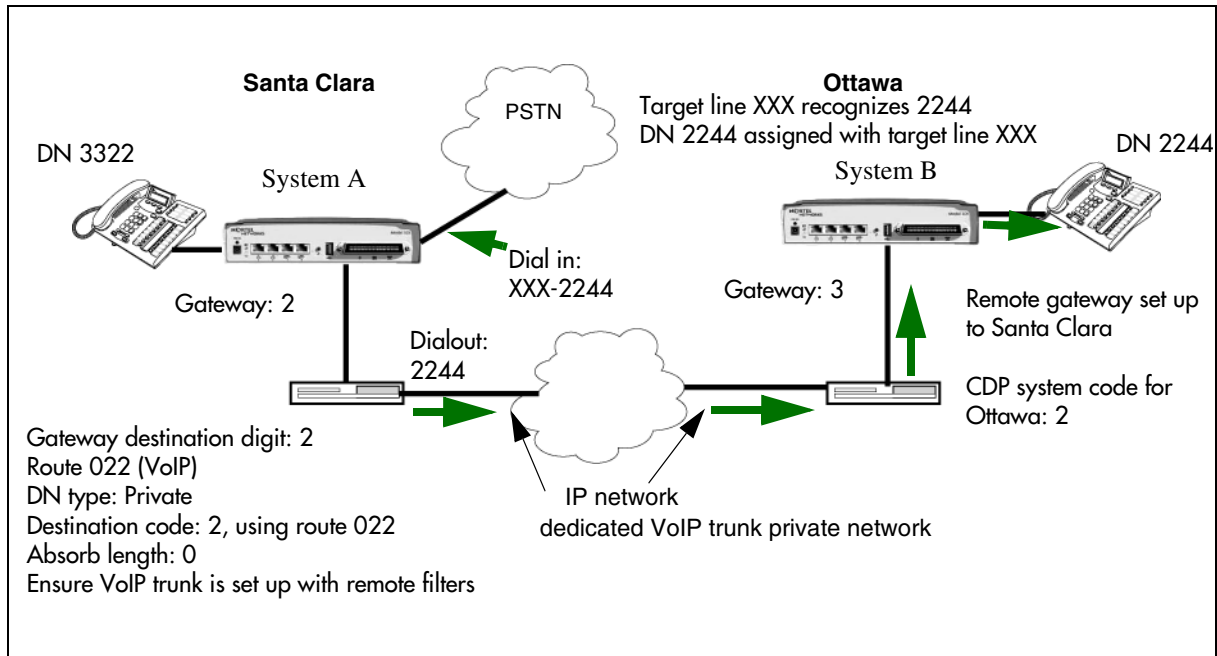Figure 108 Calling into a remote node from a public location


Call process

Based on [Figure 108](#), this is how the call would progress:


- 1 A home-based employee in Santa Clara wants to call someone in Ottawa, so they dial into the local BCM50 network using the access code for an unsupervised trunk (not VoIP trunks) and the destination code and DN for the person they want to reach on System B.

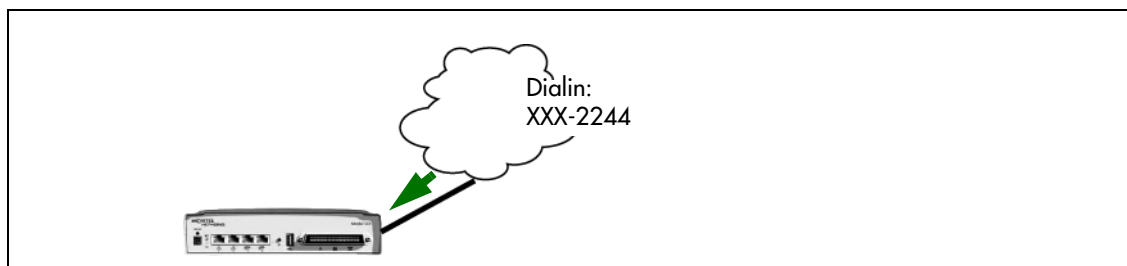

- 2 When the call is received from the public network at System A (Santa Clara), the system recognizes that the received number is not a local system number. The call is received as a public call.
- 3 System A has a route and destination code that recognizes the received number and destination code as belonging to the route that goes to System B (Ottawa). System A passes the call to System B over a dedicated trunk, in this case, a VoIP trunk. This call is now designated as a private call type.

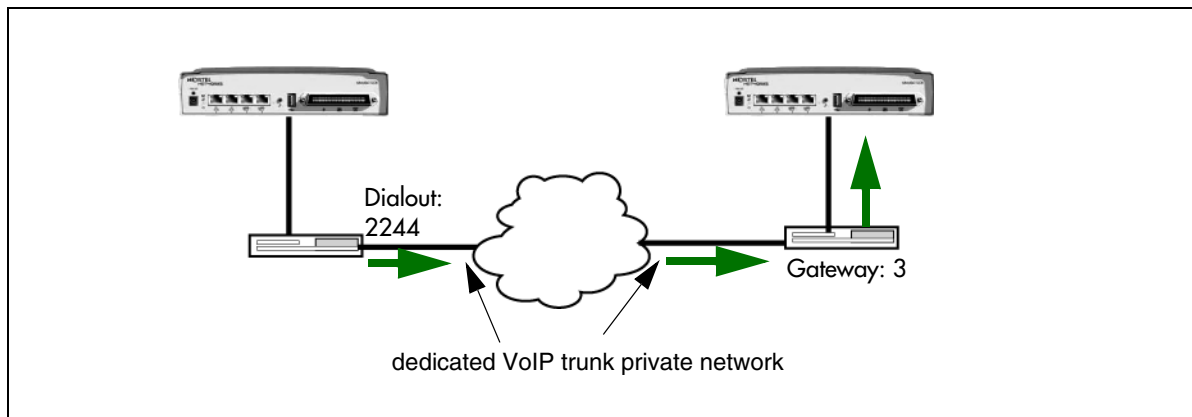

- 4 System B recognizes the code as its own, and uses a local target line to route the call to the correct telephone.

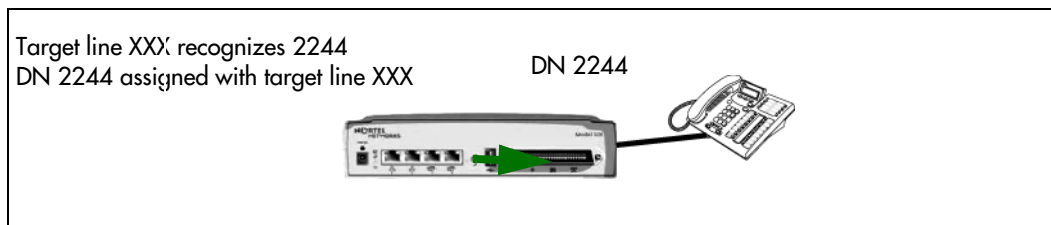

Fallback to PSTN from VoIP trunks

Fallback is a feature that allows a call to progress when a VoIP trunk is unavailable or is not providing adequate quality of service (QoS).

Refer to the information under [“Describing a fallback network” on page 362](#) for details about setting up fallback for VoIP trunks.

By enabling **PSTN fallback** on the Local Gateway IP Interface panels for H.323 trunks, you allow the system to check the availability of a VoIP trunk, then switch the call to a PSTN line. For the PSTN fallback to work on a suitable bandwidth, QoS monitor must be enabled and a transmit threshold must be set. For QoS and transmit threshold settings refer to [Table 82](#).

You use scheduling and destination codes to allow the call to switch from H.323 to a PSTN line without requiring intervention by the user.

Use the dialing plan worksheet in the Programming Records to plan your dialing requirements so you can pinpoint any dialing issues before you start programming. If you are programming an existing system, you can look at what numbers the users are familiar with dialing, and you can attempt to accommodate this familiarity into your destination codes plan.

On any IP gateway for which you want to allow fallback based on network quality, you need to ensure that QoS monitor is enabled.




Warning: QoS monitor must be turned on at both endpoints. To enable the QoS Monitor go to Configuration>Telephony Resources>IP trunk>Remote gateway panel.

Describing a fallback network

Figure 109 shows how a fallback network would be set up between two sites.

Figure 109 PSTN fallback diagram

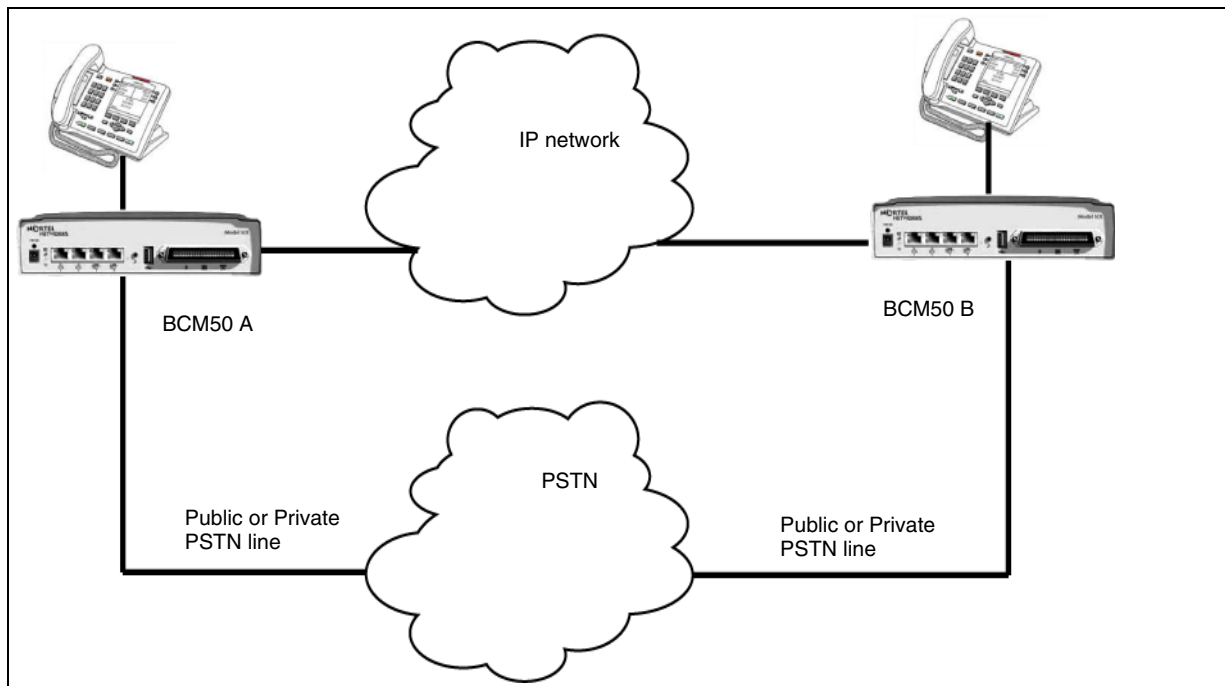

In a network configured for PSTN fallback, there are two connections between a BCM50 and a remote system.

- One connection is a VoIP trunk connection through the IP network.
- The fallback line is a PSTN line, which can be the public lines or a dedicated T1, BRI, PRI or analog line, to the other system.


When a user dials the destination code, the system checks first to see if the connection between the two systems can support an appropriate level of QoS (if enabled). If it can, the call proceeds as normal over the VoIP trunk. If the minimum acceptable level of QoS is not met, the call is routed over the second route, through the PSTN line.

In many cases, this involves configuring the system to add and/or absorb digits.

For detailed information about inserting and absorbing digits, see [“Dialing plans” on page 205](#).

How fallback routing works

CDP network: User dials 2233 (remote system DN: 2233; remote identifier/destination digit: 2). The system absorbs the 8, no other digits are absorbed and the system dials out 2233. If the call falls back to PSTN line, the system still only absorbs the 8. If the PSTN line is on a private network, the system dials out 2233. If the PSTN line is a public line, the system dials out the public access number to the remote system in front of the 2233. Refer to [Figure 110](#).

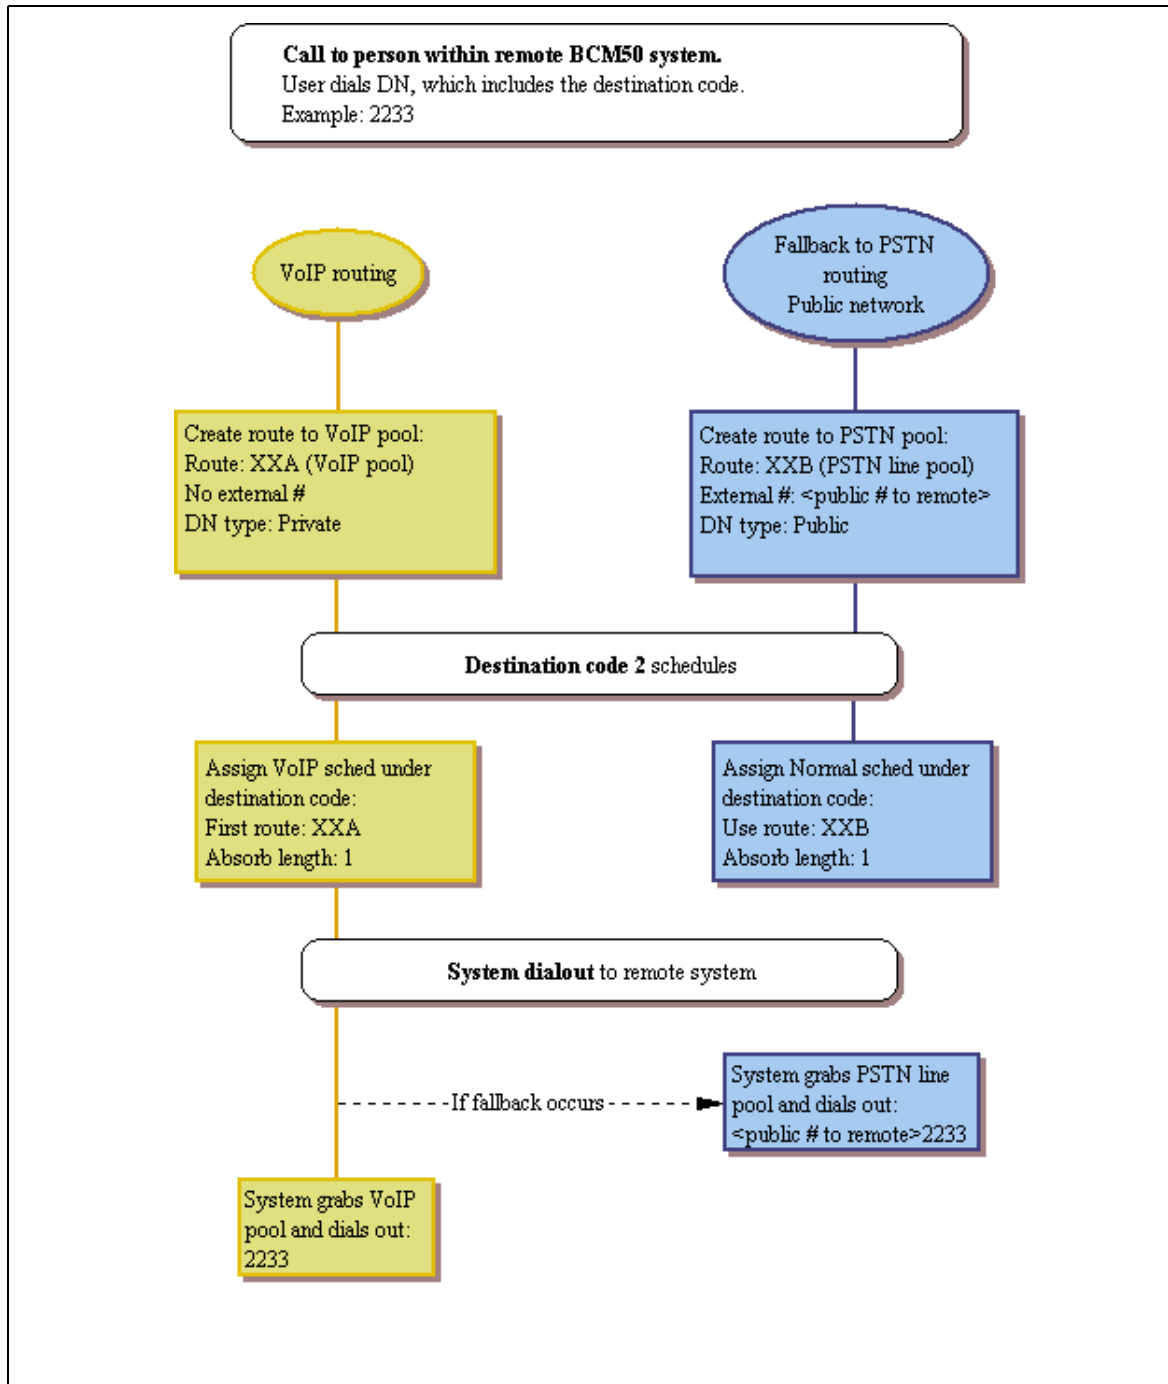Figure 110 Setting up routes and fallback for call to remote system (CDP dialing code)

UDP network: The user dials 2233 (remote system DN: 2233; destination digits/private access code: 555). The system then adds the private access code to the dialout digits. If the call falls back to PSTN line, the system then dials out the private access code (private network PSTN line) or public access number (public PSTN) to the remote system in front of the 2233.

Optional VoIP trunk configurations

There are a number of VoIP trunk features that are optional to setting of VoIP trunk functions. The following section briefly describes these features:

- **Port settings (firewall):** In some installations, you may need to adjust the port settings before the BCM50 can work with other devices.

Firewalls can interfere with communications between the BCM50 and another device. The port settings must be properly configured for VoIP communications to function properly. Using the instructions provided with your firewall, ensure that communications using the ports specified for VoIP are allowed.

A Nortel IP telephone uses ports between 51000 and 51200 to communicate with the system. The system, by default, uses ports 28000 to 28255 to transmit VoIP packets.

BCM50 uses UDP port ranges to provide high priority to VoIP packets in existing legacy IP networks. You must reserve these same port ranges and set them to high priority on all routers that an administrator expects to have QoS support. You do not need to reserve port ranges on DiffServ networks.

You can select any port ranges that are not used by well-known protocols or applications.

Each H.323 or VoIP Realtime Transfer Protocol (RTP) flow uses two ports, one for each direction. The total number of UDP port numbers to be reserved depends on how many concurrent RTP flows are expected to cross a router interface. In general:

- Include port number UDP 5000 in the reserved port ranges, for the QoS monitor.
 - The port ranges reserved in a BCM50 system are also reserved by the remote router.
 - You must reserve two ports for each voice call you expect to carry over the IP network.
 - You can reserve multiple discontinuous ranges. BCM50 requires that each range meet the following conditions: Each range must start with an even number; each range must end with an odd number; no more than 256 ports can be reserved.
- **Gatekeepers:** The BCM50 supports the use of an ITU-H323 gatekeeper. A gatekeeper is a third-party software application residing somewhere on the network, which provides services such as:
 - address translation
 - call control
 - admission control
 - bandwidth control
 - zone management
 - IP registration

A single gatekeeper manages a set of H.323 endpoints. This unit is called a Gatekeeper Zone. A zone is a logical relation that can unite components from different networks (LANS). These Gateway zones, such as the BCM50, are configured with one or more alias names that are registered with the gatekeeper. The gatekeeper stores the alias-IP mapping internally and uses them to provide aliases to IP address translation services. Later, if an endpoint IP address changes, that endpoint must re-register with the gatekeeper. The endpoint must also re-register with the gatekeeper during the time to live (TTL) period, if one is specified by the gatekeeper. Refer to the gatekeeper software documentation for information about changing IP addresses.




Note: A gatekeeper may help to simplify IP configuration or the BCM50 dialing plan; however, it will not simplify the network dialing plan.

Gatekeeper call scenarios

This section explains how a call would be processed for the two types of gatekeeper configurations. [Figure 111](#) shows a network with three BCM50s and a gatekeeper.

Figure 111 BCM50 systems with a gatekeeper

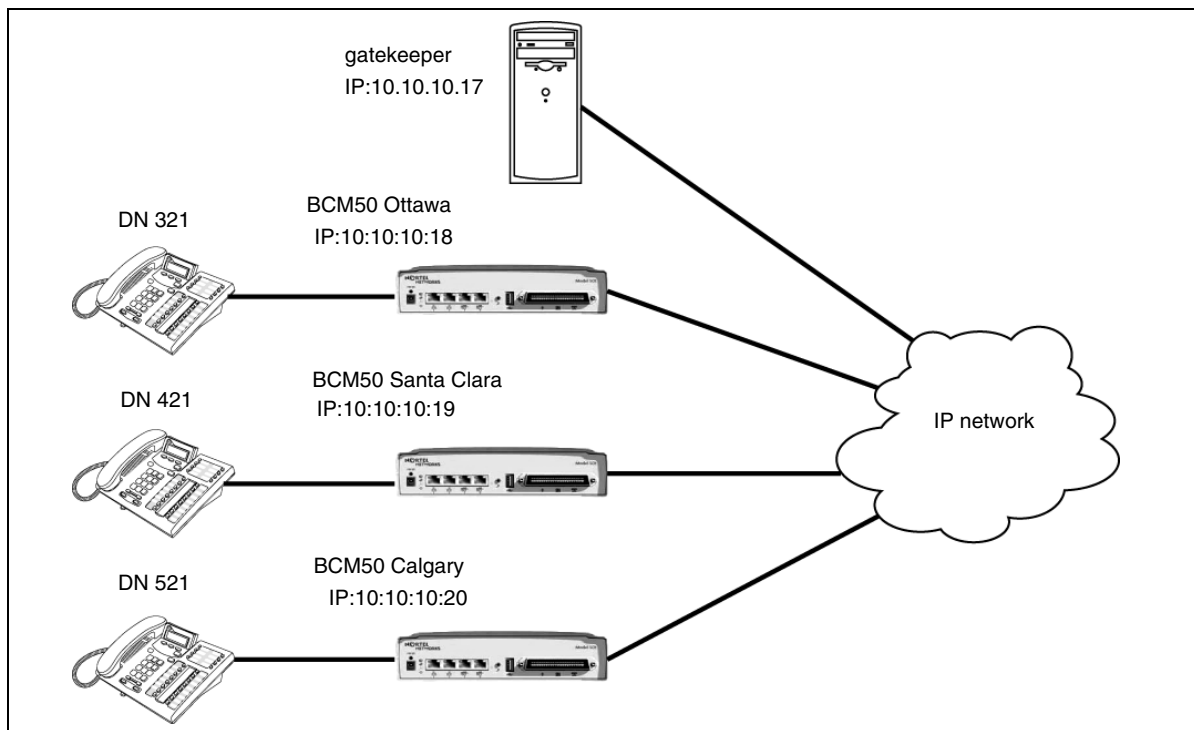

This example explains how a call from DN 321 in Ottawa would be made to DN 421 in Santa Clara. It assumes that call signaling is set to Gatekeeper Resolved and no pre-granted AdmissionRequest (ARQ) has been issued:

- 1 BCM50 Ottawa sends an ARQ to the gatekeeper for DN 421.
- 2 The gatekeeper resolves DN 421 to 10.10.10.19 and returns this IP in an AdmissionConfirm to the BCM50 Ottawa.

- 3 BCM50 Ottawa sends the call Setup message for DN 421 to the gateway at 10.10.10.19, and the call is established.

If call signaling is set to Gatekeeper Routed and no pre-granted ARQ has been issued:

- 1 BCM50 Ottawa sends an ARQ to the gatekeeper for DN 421.
 - 2 The gatekeeper resolves DN 421 to 10.10.10.17.
 - 3 BCM50 Ottawa sends the call Setup message for DN 421 to the gatekeeper (10.10.10.17), which forwards it to the gateway at 10.10.10.19.
 - 4 The call is established.
- Faxing over VoIP trunks: You can assign VoIP trunks to wired fax machines if you have T.38 fax enabled on the local gateway. The BCM50 supports this IP fax feature between BCM50s, BCM200/400/1000 running BCM 3.5 and subsequent up-level versions of software, and a Meridian 1 running IPT 3.0 (or newer) software, or a CS 1000/M.

The system processes fax signals by initiating a voice call over the VoIP line. When the T.38 fax packets are received at the remote gateway, the receiving system establishes a new path that uses the T.38 protocol. Both the endpoints must be running a software version that supports the T.38 fax.



Caution: Operations note: Fax tones that broadcast through a telephone speaker will disrupt calls at other telephones using VoIP trunks in the vicinity of the fax machine. Here are some suggestions to minimize the possibility of your VoIP calls being dropped because of fax tone interference:

- Locate fax machine away from other telephones.
- Turn the speaker volume on the fax machine to the lowest level, or off.

Fax tones recorded in a voicemail box: In the rare event that fax tones are captured in a voicemail message, opening that message from an telephone using a VoIP trunk will cause the connection to fail.

For a list of limitations and requirements for using T.38 fax, refer to [“Operational notes and restrictions” on page 367](#).

Operational notes and restrictions

Some fax machines will be unable to successfully send faxes over VoIP (T.38) trunks to the following destinations:

- CallPilot mailboxes
- CallPilot mailboxes (accessed through auto-attendant)
- Fax Transfer (calls transferred to a system fax device through the auto-attendant)
- Use the following tips to avoid this problem:

- Avoid the use of manual dial on the originating fax machine. In some fax machines, manually dialing introduces a much shorter call time-out.
- If manual dial must be used, then the user should wait until the call is answered before starting the fax session.
- If manual dial must be used, then the user should enter the digit **8** before initiating the fax session. This ensures that the fax session is initiated by CallPilot before the fax machine's timer is started.
- The call duration can be increased by adding a timed pause to the end of dialing string (for example: 758-5428,,). This allows the call to ring at the destination before the fax machine call duration timer starts.
- Since the problem is related to the delay in initiating the fax session, the number of rings for fax mailboxes Call Forward No Answer (CFNA) should be minimized.

Table 77 is a list of restrictions and requirements for the T.38 fax protocol.

Table 77 T.38 restrictions and requirements

Supported

only UDP transport

only UDP redundancy

T.38 version 0

on H.323 VoIP trunks between BCM50s, between BCM50s and legacy BCMs, or between BCM50 and Meridian 1-IPT and CS 1000/M

Not supported

TCP

Forward Error Correction (FEC)

Fill removal

MMR transcoding

JBIG transcoding

Chapter 42

Configuring VoIP trunk gateways

This section explains how to configure voice over IP (VoIP) trunks on a BCM50 system for incoming traffic. A VoIP trunk allows you to establish communications between a BCM50 and a remote system across an IP network.

The following path indicates where to where to configure VoIP trunks in Element Manager:

- Element Manager: Configuration>Resources>Telephony Resources

Task: Set up VoIP gateway parameters

- Set up the media parameters for the gateway. ([“Configuring VoIP trunk media parameters” on page 370](#))
- Set up the local gateway parameters, including gatekeeper information, if a gatekeeper exists on the network. ([“Setting up the local gateway” on page 371](#))
- Set up the remote gateway parameters, if they are required. ([“Setting up remote gateways” on page 373](#))
- Configure the line parameters. ([“Configuring VoIP lines” on page 374](#))

Prerequisites

Ensure that you have obtained the following information or familiarize yourself with the requirements before continuing with VoIP trunk configuration:

- **Keycodes:** Obtain and install the necessary keycodes for the number of VoIP trunks you want to support on the system. See the *BCM50 Keycode Installation Guide* (N0016865) for more information about installing the keycodes. Talk to your BCM50 sales agent if you need to purchase VoIP keycodes.

Each keycode adds a specific number of VoIP trunks. You must reboot your BCM50 after you enter VoIP keycodes to activate trunking.

If you want to use the MCDN features on the VoIP trunks, you will need an MCDN keycode. If you have already deployed MCDN for your SL-1 PRI lines, you do not require an additional keycode.

- **Media gateway parameters:** Ensure that the gateway parameters are set correctly for the IP trunks.
- **H.323 network applications considerations:**

- If your network uses a gatekeeper (H.323 trunks only), there are also specific settings that must be set on the your system to recognize the gatekeeper, and also within the gatekeeper application, so that VoIP lines are recognized. Refer to [“VoIP interoperability: Gatekeeper configuration” on page 377](#). If there is a gatekeeper on the network, you do not have to configure remote gateway settings.
- If you plan to use H.323 trunking and you have a firewall set up, ensure that the ports you intend to use have been allowed.

[“Using VoIP to tandem systems” on page 315](#), and [“Configuring fallback over a VoIP MCDN network” in the BCM50 Device Configuration Guide \(N0027146\)](#).

Configuring VoIP trunk media parameters

The VoIP trunk media parameters allow you to specify the order in which the trunk will select IP telephony system controls for codecs, jitter buffers, silence suppression and payload size.

The following path indicates where to access the VoIP trunk media parameters in Element Manager:

Element Manager: Configuration>Resources>Telephony Resources>IP trunk

For details about the fields on this panel, refer to [“Media Parameters” on page 98](#).

- 1 On the Modules panel, in the Module type column, select the IP Trunks line.
- 2 In the bottom panel, select the Media Parameters tab.
- 3 Enter the information that supports your system. Ensure that these settings are consistent with the other systems on the network:
 - Preferred Codecs: Choose codecs in the same order for all remote equipment.
 - Settings:
 - Enable silence compression: (VAD - Voice activity detection)(other systems) Disable or enable this feature, based on network requirements. Also refer to [“Silence compression” on page 505](#).
 - Jitter buffer - Voice: Either choose auto to let the system determine resource availability, or choose a buffer size.
 - Payload Size: Change the defaults to coordinate with other systems on the network.
 - Incremental payload size - When enabled, the system advertises a variable payload size (40, 30, 20, 10 ms).
 - T.38 fax enabled: If you want the VoIP trunks to support fax messages, ensure this check box is selected. Also refer to [“T.38 Fax constraints” on page 101](#).

Operations note: Fax tones that broadcast through a telephone speaker will disrupt calls at other telephones using VoIP trunks in the vicinity of the fax machine. Here are some suggestions to minimize the possibility of your VoIP calls being dropped because of fax tone interference:

- Locate fax machine away from other telephones.
- Turn the speaker volume on the fax machine to the lowest level, or off, if that option is available.

- Force G.711 for 3.1k audio - When enabled, the system forces the VoIP trunk to use the G.711 codec for 3.1k audio signals such as modem or TTY machines.
- 4 Set up the local gateway parameters. ([“Setting up the local gateway” on page 371](#))

Setting up the local gateway

The call signaling method used by the local gateway defines how the BCM50 prefers call signaling information to be directed through VoIP trunks. Call signaling establishes and disconnects a call. You set this information in the local gateway panels.

For details about the panel headings, refer to [“Local Gateway” on page 94](#).

If the network has a gatekeeper (H.323 trunks, only), the BCM50 can request a method for call signaling, this request is granted depending on the configuration of the gatekeeper. Ultimately, the gatekeeper decides which call signaling method to use. Refer to [“VoIP interoperability: Gatekeeper configuration” on page 377](#).

The following path indicates where to access the local gateway in Element Manager:

Element Manager: Configuration >Resources>Telephony Resources

- 1 On the Modules panel, in the Module type column, select the IP Trunks line.
- 2 In the bottom panel, select the Local Gateway tab.
- 3 Choose the settings that you need for your system:
 - Fallback to circuit-switched: define how you want the system to handle calls that the system fails to send over the VoIP trunk.



Note: Enabled-TDM enables fallback for calls originating on digital telephones. This is useful if your IP telephones are connected remotely, on the public side of the BCM50 network, because PSTN fallback is unlikely to result in better quality of service in that scenario.

- Forward redirected OLI - If the box is selected, the OLI of an internal telephone is forwarded over the VoIP trunk when a call is transferred to an external number over the private VoIP network. If the box is cleared, only the CLID of the transferred call is forwarded.
- Send name display - When selected, the telephone name is sent with outgoing calls to the network.
- Remote capability MWI - This setting must coordinate with the functionality of the remote system hosting the remote voicemail.
- Call Signaling: Determine how the calls are delivered over the network:
 - **Direct:** call signaling information is passed directly between endpoints.
Note: You will need to set up remote gateways ([“Setting up remote gateways” on page 373](#)).

- **Gatekeeper Resolved:** all call signaling occurs directly between H.323 endpoints. This means that the gatekeeper resolves the phone numbers into IP addresses, but the gatekeeper is not involved in call signaling.
- **Gatekeeper Routed:** uses a gatekeeper for call setup and control. In this method, call signaling is directed through the gatekeeper.
- **Gatekeeper Routed no RAS:** Use this setting for a NetCentrex gatekeeper. With this setting, the system routes all calls through the gatekeeper but does not use any of the gatekeeper Registration and Admission Services (RAS).
- Refer to [“Using CS 1000 as a gatekeeper” on page 377](#) for specific information about configuring the gatekeeper for H.323 trunks.

Network note: If your private network contains a Meridian 1-IPT, you cannot use Radvision for a gatekeeper.

- Call signaling port: If the VoIP applications that require non-standard call signaling ports, enter the port number here. 0 = the system uses the first available port.
- RAS port: If the VoIP application requires a non-standard RAS port, enter the port number here. 0 = the system uses the first available port.
- Enable H245 tunneling: Select or deselect the check box to allow or disallow H.245 messages within H.225. Note that the VoIP Gateway service must be restarted for any change to take effect.
- Gatekeeper Support: Fill out these fields if the network is controlled by a Gatekeeper: Also refer to [“VoIP interoperability: Gatekeeper configuration” on page 377](#).
 - Primary Gatekeeper IP: This is the IP address of the primary gatekeeper.
 - Backup Gatekeepers: NetCentrex gatekeeper does not support RAS, therefore, any backup gatekeepers must be entered in this field. Gatekeepers that use RAS can provide a list of backup gatekeepers for the end point to use in the event of the primary gatekeeper failure.
- In the Alias names field, enter all the alias names required to direct call signals to your system.
- Gateway protocol - Select SL1 for BCM 2.5 systems. Select CSE for BCM 3.0 and newer systems. Or select None.
- Registration TTLs: Specifies the KeepAlive interval
- Gateway TTLs: This protocol should match all other systems on the network.
- Status: This field displays the current status of the gatekeeper.

4 Suggested next steps:

- Ensure router settings, firewalls and system ports are set correctly to support IP traffic over the trunks.
- [“Configuring lines” on page 117](#)
- [“Configuring lines: Target lines” on page 129](#)
- [“Setting up VoIP trunks for fallback” on page 383](#)
- Ensure private network dialing plan and access settings matches the rest of the private network: [“Dialing plan: Private network settings” on page 269](#)
- Private networking: [“Private networking: Basic parameters” on page 303](#)

- Assigning the VoIP line pools to system telephones: “Line Access - Line Pool Access tab” in the *BCM50 Device Configuration Guide* (N0027146).

Setting up remote gateways

This section explains how to set up your system to place calls through VoIP trunks. The system at the other end of the call must be set up to receive VoIP calls. For information about this, refer to [“Configuring a remote gateway \(H.323 trunks\)”](#) on page 373.

Configuration note: If the VoIP network has a gatekeeper, you do not need to configure remote gateways, as they are not used.

Configuring a remote gateway (H.323 trunks)

This section explains how to configure the BCM50 to communicate with other BCM50s and/or other VoIP gateways such as Meridian IPT using H.323 trunks. The remote gateway list must contain an entry for every remote system to which you want to make VoIP call.

Gatekeeper note: If your system is controlled by a gatekeeper, you do not need to establish these gateways. Refer to [“VoIP interoperability: Gatekeeper configuration”](#) on page 377.

The following path indicates where to access the remote gateway in Element Manager:

Element Manager: Configuration>Resources>Telephony Resources

- 1 On the Modules panel, in the Module type column, select the IP Trunks line.
- 2 In the bottom panel, select the Remote Gateway tab.
- 3 Click **Add**.
- 4 The Add Remote Gateway dialog box appears.
- 5 Enter a Name and Destination Digits for the remote gateway.
- 6 Click **OK**.
- 7 Enter the appropriate information for the remote system:
 - Destination IP: Indicate the IP address of the device you want to connect with. This code will be part of your destination code programming.
 - GW Type: Choose the variable that identifies the type of system or application being connected to.
 - GW Protocol: Choose the protocol that supplies the required call features. None (default) supplies no feature. This setting is dictated by the type of remote system.
 - QoS Monitor: Enable this feature if you are using fallback to PSTN lines and the network supports QoS monitoring.
 - Tx Threshold: Indicate the level of transmission at which the signal must be maintained. If the signal falls below this level the call falls back to PSTN.

Configuring VoIP lines

VoIP lines require a keycode to activate. You also need to set gateway parameters and system IP parameters to enable the trunks.

You must also set up target lines when you use these trunks.

The following path indicates where to set up target lines in Element Manager:

- Element Manager: Configuration>Telephony>Lines>Target Lines

Prerequisites

Complete the following prerequisites checklist before configuring the modules.

| | |
|--|--|
| <p>The gateway and IP network is set up correctly. Refer to the following procedures:</p> <ul style="list-style-type: none"> • “Configuring VoIP trunk media parameters” on page 370 • “Setting up the local gateway” on page 371 • “Setting up remote gateways” on page 373 • “VoIP interoperability: Gatekeeper configuration” on page 377 | |
| <p>Obtain all relevant central office/service provider information for the type of trunk.</p> | |

Configuring VoIP line features

The following procedure describes the fields that need to be confirmed or set for these lines. For detailed field descriptions, refer to [“Configuring lines” on page 117](#).

- 1 Confirm or change the settings on the Line/Trunk main panel:
 - Line: Unique number
 - Trunk type: VoIP
 - Name: identify the line or line function
 - Control Set: identify a DN if you are using this line with scheduling.
 - Line Type: define how the line will be used. If you are using routing, ensure it is put into Bloc (A to F)
 - Prime Set: If you want the line to be answered at another telephone if the line is not answered at the target telephone, otherwise, choose None.
 - Pub. Received #: Not applicable
 - Priv. Received #: Not applicable
 - Distinct Ring: If you want this line to have a special ring, indicate a pattern (2, 3, 4, or None).
- 2 On the bottom panel, under the restrictions tab:
 - Use remote package: If this line is used for remote call-ins or is part of a private network, ensure you specify a valid remote package.

3 Configure the trunk/line data:

In the top panel ensure a loop trunk is selected. In the bottom panel, select the preferences tab.

- **Aux. ringer:** If your system is equipped with an external ringer, you can enable this setting to allow this line to ring at the external ringer.

4 Set the restriction and remote restrictions scheduling (Restrictions tab):

- **Line Restrictions:** Enter a valid restriction filter for the Normal schedule, and any other schedules that you want this line to be part of. (outgoing calls)
- **Remote Restrictions:** Enter a valid remote access package for the Normal schedule, and any other schedules that you want this line to be part of. (incoming calls from remote users or private networks)

5 Suggested next steps:

- “Configuring lines: Target lines and DASS2” in the *BCM50 Device Configuration Guide* (N0027146)
- Also refer to “Line Access - Line Pool Access tab” in the *BCM50 Device Configuration Guide* (N0027146)
- [“Dialing plan: Routing and destination codes” on page 235](#)
- [“Dialing plan: Private network settings” on page 269](#)

Chapter 43

VoIP interoperability: Gatekeeper configuration

This section describes the use of a gatekeeper for your H.323 VoIP trunks.

For detailed information about the gatekeepers that the BCM50 supports, refer to [“Using CS 1000 as a gatekeeper” on page 377](#).

Refer to the gatekeeper software documentation for information about changing IP addresses.

Gatekeeper notes:

- The BCM50 has been tested by Nortel to be compliant with CS 1000 gatekeeper applications.
- A gatekeeper may help to simplify IP configuration or the BCM50 dialing plan, however, it will not simplify the network dialing plan.



Note: The following information is for CS 1000, Release 3. For information on configuration to a newer release of software, please read the CS 1000 documentation.

Using CS 1000 as a gatekeeper

Both the BCM50 and the CS 1000 must be set to the parameters described in this section for the gatekeeper to work effectively.

The CS 1000 GK Admin tool is obtained from <http://<Gatekeeper IP>/gk/>.

Before an endpoint registers with the CS 1000 gatekeeper it must first be added to the gatekeeper configuration. Before a registered endpoint may make calls, it must have its dialing plan information assigned within the gatekeeper configuration. Before any of these configuration changes become part of the gatekeeper active configuration, they must be committed to the active database. Configuration and activation information is described in the following sections.

BCM50 requirements

Set the BCM50 Local Gateway IP interface to the following:

- Set **Call Signaling Method** to GatekeeperResolved.
- Set **Gatekeeper IP** to the IP address at which the CS 1000 gatekeeper operates.
- Set **Alias Names** to a single H.323 identifier that is unique across all endpoints registered with the gatekeeper. For example: “NAME:M50-OKATOKS”. This H.323 identifier must exactly match that in the CS 1000 gatekeeper configuration. This entry is case-sensitive.

Refer to the following sections for detailed information:

- [“CS 1000 configuration, adding an H.323 endpoint” on page 378](#)
- [“Configuring Codec compatibility” on page 379](#)

CS 1000 configuration, adding an H.323 endpoint

To add an H.323 endpoint in the Gatekeeper Admin tool

- 1 Select **GK standby DB admin**.
- 2 Select **H.323 Endpoints**.
- 3 Select **Add H.323 Endpoint**.

Ensure the following fields are set:

Table 78 CS 1000 H.323 endpoints

| Field | Value | Description |
|-----------------|-------------------------|--|
| H323AliasName | <unique name> | This is the unique name that identifies your BCM50 as an H.323 endpoint. |
| CDP Domain Name | <choose name from list> | If your system is using a CDP dialing plan, choose the CDP domain name for the BCM50. |
| Tandem Endpoint | <choose name from list> | This is the name of another H.323 endpoint. Picking a name in this field provides a tandem endpoint. |

- 4 Click **Create H323**.

Setting the H.323 Endpoint dialing plan

All dialing plan information must be consistent on all H.323 endpoints using the gatekeeper.

To set the dialing plan into the Gatekeeper Admin tool

- 1 Select **GK Standby DB Admin**.
- 2 Select **NumberPlanEntries**.
- 3 Select **Create**.
- 4 Ensure that the Endpoint you select is the one for which you want to create a dialing plan entry.
- 5 Click **Select**. Ensure that the fields listed in [Table 79](#) are set.

Table 79 CS 1000 H.323 dialing plans

| Field | Value | Description |
|-----------|--------------------|--|
| Number | <digits> | This is the unique number that identifies the BCM50. |
| Type | <choose from list> | This is the TON (Type of Number) or NPI (Numbering Plan Identifier) for the endpoint. |
| EntryCost | <digits (1-255)> | This value determines which destination the gatekeeper will deliver to if the leading digits are the same for more than one endpoint. The gatekeeper will select the endpoint with the lowest EntryCost value. |

6 Click **Create**.

Committing gatekeeper configuration changes

Gatekeeper changes occur in the standby database. For these settings to be used by the active gatekeeper, you must commit them to the active database from the Gatekeeper Admin tool.

To commit gatekeeper configuration changes

- 1 Select **GK Standby DB Admin**.
- 2 Select **Database Actions**.
- 3 Select **Single Step Commit and Crossover**.

Configuring Codec compatibility

The default codec settings for a CS 1000 are not compatible with those used by a BCM50 system. In order to successfully make IP trunk calls between a BCM50 and the CS 1000, the codec configuration on both the BCM50 and the CS 1000 must coincide, as shown in [Table 80](#). As well as any configured codecs on the CS 1000 must have their payload size set to 30 ms.



Caution: The CS 1000 can only register five codecs at once. This can include: G.711 mu-law, G.711 a-law, T.38, G.711CC, and either G.729A, G729AB, or G.723.1. It is important that you disable the unused codecs. This ensures that the required codecs get registered with the DSP. Failure to disable unused codecs could result in the wrong codecs being registered with the DSP, which would create call failures.

Table 80 CS 1000 codec compatibility with endpoints

| BCM50 preferred codec Refer to “Configuring VoIP trunk media parameters” on page 370. | CSE 1000 codec configuration |
|---|---|
| G.729 silence suppression is enabled | G.729 AB is enabled G.729A, and G.723 are disabled |
| G.729 silence suppression is disabled | G.729A is enabled G.729AB, and G.723 are disabled |
| silence suppression is enabled | Not supported on CSE 1000. |
| silence suppression is disabled G.711 ulaw, or G.711 alaw silence suppression has no effect | G.729A and G.729AB are disabled G.711 is always part of the CSE 1000 configuration, and cannot be removed. |

Setting Codecs on the CS 1000

Use the Element Manager tool to set the codec information for the CS 1000. This tool can be accessed at <http://<SignalingServerIP>/>.

To set Codecs

- 1 In the tool, select **Configuration**.
- 2 Select **IP Telephony**.
- 3 In the **Node Summary Window**, select the node to be configured, and click **Edit**.
- 4 Click **DSP Profile**.
- 5 On the list of codecs, enable or disable each by clicking on the check box beside the codec name.
- 6 To view or change the codec configuration, click the codec name.
- 7 Ensure the following fields are set:

Table 81 CS 1000 codec configuration

| Field | Value | Description |
|---|------------------|--|
| Codec Name | <codec name> | Name of the codec you selected. |
| Voice Payload Size | <msec per frame> | Choose the payload size for the codec. Use 20 ms for interoperability with the BCM50. |
| Voice Playout (Jitter Buffer) Nominal Delay | <digits> | Choose the minimum jitter buffer value you want to allow. |
| Voice Playout (Jitter Buffer) Maximum Delay | <digits> | Choose the maximum jitter buffer value you want to allow. |
| VAD | <check box> | Check (enable) or uncheck box (disable) to determine silence suppression availability for the codec. |

- 8** Click **Submit**.
- 9** Click **Transfer** for the node that you modified.

Chapter 44

Setting up VoIP trunks for fallback

This section explains how to set up your system so that calls can be made from your BCM50 system to other systems over VoIP trunks by identifying those systems to the BCM50.

The following path indicates where to access setting VoIP trunks for fallback in the Element Manager:

Element Manager: Configuration >Resources>Telephony Resources>Local Gateway tab (bottom panel)

Task: Configure VoIP trunks to allow fallback to PSTN lines

- [“Configuring routes for fallback” on page 383](#)
- [“Example: A private network configured for fallback” on page 388](#)

Configuring routes for fallback

Configuring routes allows you to set up access to the VoIP and the PSTN line pools. These routes can be assigned to destination codes. The destination codes then are configured into schedules, where the PSTN line is assigned to the Normal schedule and the VoIP route is assigned to a schedule that can be activated from a control set.

For details about route and schedule configuration, refer to the information under the headings below:

- [“Adding routes for fallback” on page 384](#)
- [“Assigning the line pools to routes” on page 384](#)
- [“Adding the destination code for the fallback route” on page 385](#)
- [“Configuring the schedules for the destination codes” on page 386](#)
- [“Setting up the VoIP schedule to overflow” on page 387](#)

Pre-configuration requirements

- If you have not already done so, remember to define a route for the local PSTN for your own system so users can still dial local PSTN numbers.

- Ensure the PSTN and VoIP line pools have been configured before you continue with this section. For information about creating a VoIP line pool, see [“Configuring VoIP trunk gateways” on page 369](#). Configure PSTN lines under Telephony>Lines>Active Physical Lines.



Note: If you already have routes for your PSTN or VoIP line pools configured, you do not need to configure new routes, unless you cannot match the dialed digits.

Adding routes for fallback

Enter the routes you want to use for normal and fallback traffic.

Add routes under Telephony>Dialing Plan>Routing.

To add the PSTN route to other system

- 1 Type a number between 001 and 999.
This route defines the PSTN route to the other system. Only numbers not otherwise assigned will be allowed by the system.
- 2 Click **OK**.

To add the PSTN route to the local PSTN lines

- 1 In the **Route** field, type a number between 001 and 999.
This route defines the PSTN route to your local PSTN.
- 2 Click **Save**.

To add the VoIP route

- 1 In the **Route** field, type a number between 001 and 999.
This route defines the VoIP route.
- 2 Click **Save**.

Assigning the line pools to routes

Assign the line pools to the routes you created in the previous section.

To assign PSTN line pool (to other system)

- 1 Click the route you created between the PSTN line and the other system.
- 2 In the **Use Pool** box, type the letter of the line pool for the PSTN lines to the other system.
- 3 In the **External Number** field:
If this is a public PSTN line, enter the dial numbers that access the other system through the PSTN. For example: 1<area code><local code>.

- 4 In the **DN Type** box, choose **Public**.

To assign PSTN line pool to local PSTN lines

- 1 Click the route you created for your local PSTN line.
- 2 In the **Use Pool** box, type the letter of the line pool for the PSTN line.
- 3 In the **External Number** field: leave this field blank.
- 4 In the **DN Type** box, choose **Public**.

To assign VoIP line pool

- 1 Click the route you created for the VoIP lines.
- 2 In the **Use Pool** field, type the letter of the line pool for the VoIP lines.
- 3 Leave the **External Number** field blank unless the destination digit you are using for the remote gateway is different than the number you want to use for the destination code.
- 4 In the **DN Type** box, choose **Private**.

Go to the next section: [“Adding the destination code for the fallback route” on page 385](#).

Adding the destination code for the fallback route

Create a destination code that includes the VoIP and PSTN routes that you created in [“Adding routes for fallback” on page 384](#) to respond to the same access number (destination code). When this code is dialed, the BCM50 will select the VoIP line, if possible. If the line is not available, the call will fall back to the PSTN line.

As well, you need to create, or ensure, that your destination code 9 includes a Normal and VoIP schedule that includes the route you created to the local PSTN.



Note: If you already have a line pool access code defined as 9, you will need to delete this record before you create the destination code.

To create destination codes for your fallback route

- 1 Open Telephony>Dialing Plan>Routing>Routes tab.
- 2 Click **Add**.
The Add Route dialog box appears.
- 3 Enter one or more digits for this destination code.
- 4 Click **OK** to close the dialog box.

Example:

Destination code digit: If it is available, you might want to use the same number that you used for the destination code of the gateway.

If you have multiple gateways, you could use a unique first number followed by the destination digits, to provide some consistency, such as 82, 83, 84, 85 to reach gateways with destinations digits of 2, 3, 4 and 5.

The number you choose will also depend on the type of dialing plan the network is using.

Networks with CDP dialing plans have unique system codes. However, with networks using UDP, this is not always the case, therefore, you need to be careful with the routing to ensure that the codes you choose are unique to the route. This will also affect the number of digits that have to be added or absorbed. It is helpful to use the Programming Records to plan network routing so you can determine if there will be any conflicts with the destination codes you want to use.

Configuring the schedules for the destination codes

Under the destination code heading you created in the previous section, click the **Schedules** key, then choose the appropriate schedules:

To configure the VoIP schedule for all fallback destination codes

- 1 Change **First Route** to the route you configured for your VoIP line.
- 2 Set the **Absorbed length** to absorb the amount of the destination code that is not part of the dialout for the trunk.

Normal schedule for all fallback destination codes:

- 1 Change **Use Route** to the route you configured for your PSTN fallback line (the line to the other system).
- 2 Set the **Absorbed length** to absorb the amount of the destination code that is not part of the DN for the other system.

Examples:

Absorbed length, VoIP schedule: If the remote gateway destination digit is 2, which is part of the remote system DN structure (CDP network), and you specified a destination code of 82, set this field to 1, so that the 2 is still part of the dialout.

If the destination code is different from the remote gateway destination digits, and you entered an External # into the route record (the destination digit for the remote system), set the absorbed length to the number of digits in the destination code. The system will dial out the External # you entered in front of the rest of the number that the user dialed. This would occur if the network is set up with a UDP dialing plan.



Note: Do not add alternative routes (second or third). Since fallback is active, the system immediately falls back to the Normal schedule if the first route is not available.

Absorbed length, Normal schedule: If this is a private network PSTN line, and the network uses a CDP dialing plan, and the remote system identifier is 2, which is part of the remote system DN structure, and you specified destination digit of 2 for the remote gateway, then configured a destination code of 82, set this field to 1, so that the 2 is still part of the dialout.

If the destination code is different from the private access code/destination digits for the remote system (UDP dialing plan) or this is a public PSTN, enter private access code or the public access number to the remote system into the External # field on the route record. In this case, set the absorbed length to the number of digits in the destination code. The system will dial out the External # you entered in front of the rest of the number that the user dialed.

Setting up the VoIP schedule to overflow

Once you have configured the routing and destination codes, ensure that the Routing Service schedule allows fallback (Overflow) and allows you to activate the service from a control set. You will note that the Routing Service does not have a Normal schedule. This is because the Normal schedule is the schedule that runs when no routing services are active.

To set up the VoIP schedule for routing services

- 1 Double-click Sched 4 and rename it **VoIP** (Configuration>Telephony>Scheduled Service>Schedule Column).
- 2 Click **VoIP**.
The VoIP schedule panel appears in the right frame.
- 3 Change the **Routing Svc** to **Manual**.
- 4 Select the **Overflow** check box.
- 5 Next steps:

The following sections describe some further actions you may need to take to ensure that fallback is working:

- [“Activating the VoIP schedule for fallback” on page 387](#)
- [“Deactivating the VoIP schedule” on page 388](#)

Activating the VoIP schedule for fallback

Before activating the VoIP schedule, calls using the destination code are routed over the PSTN. This is because the system is set to use the Normal schedule, which routes the call over the PSTN. Once the VoIP schedule is activated, calls made with the VoIP destination code are routed over the VoIP trunk.

The VoIP line must be activated (**FEATURE 873**) from the control set for the VoIP trunk, which is specified when the trunk is created (Configuration>Telephony>Lines>Active VoIP Lines).

To activate the VoIP line from the control set

- 1 Dial **FEATURE 873** from the control set for the VoIP trunk.
The phone prompts you for a password.
- 2 Type the password (default - admin: 23646).
- 3 Press OK.
The first schedule appears.
- 4 Scroll down the list until VoIP is selected.
- 5 Press OK.
The VoIP schedule stays active, even after a system reboot, and can only be manually deactivated.

Deactivating the VoIP schedule

To deactivate a schedule

- 1 Dial **FEATURE #873**. The phone prompts you for a password.
- 2 Type the password.
- 3 Press OK. The system returns to the Normal schedule.


Example: A private network configured for fallback

This section walks through a sample BCM50 configuration, including:

- [“Activating the VoIP schedule for fallback” on page 387](#)
- [“Deactivating the VoIP schedule” on page 388](#)

In this scenario, shown in [Figure 112](#), two BCM50s in different cities are connected through a WAN. One BCM50 resides in Ottawa, the other resides in Santa Clara. Both VoIP trunks and an PRI SL-1 line connect the system in a private network.

Figure 112 Example PSTN fallback

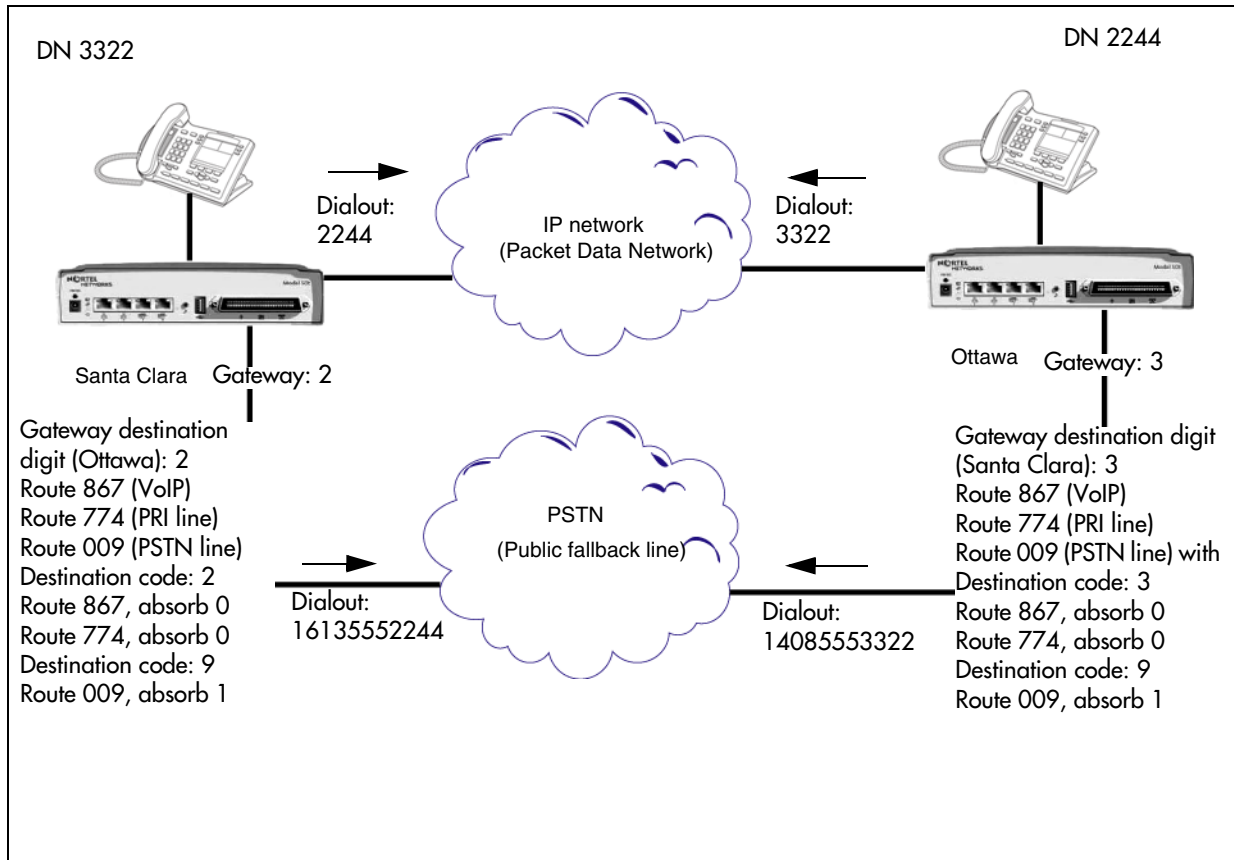

| BCM50 Santa Clara | BCM50 Ottawa |
|---|---|
| <ul style="list-style-type: none"> IP address: 47.62.84.1 | <ul style="list-style-type: none"> IP address: 47.62.54.1 |
| <ul style="list-style-type: none"> DNs 3000-3999 | <ul style="list-style-type: none"> DNs 2000-2999 |
| <ul style="list-style-type: none"> From this system, dial 9 to get onto PSTN | <ul style="list-style-type: none"> From this system, dial 9 to get onto PSTN |
| <ul style="list-style-type: none"> Dialing plan: CDP | <ul style="list-style-type: none"> Dialing plan: CDP, destination code is part of DN |

| Routing | Routing |
|---|---|
| <ul style="list-style-type: none"> Target DN 2244 (first digit is unique to system) | <ul style="list-style-type: none"> Target DN 3322 (first digit is unique to system) |
| <ul style="list-style-type: none"> Remote gateway destination digit: 2 | <ul style="list-style-type: none"> Remote gateway destination digit: 3 |
| <ul style="list-style-type: none"> Destination code: 2 | <ul style="list-style-type: none"> Destination code: 3 |
| <ul style="list-style-type: none"> VoIP/private network dialout: no external #, user dials 2244 (no absorbed digits) | <ul style="list-style-type: none"> VoIP/private network dialout: no external #, user dials 3322 (no absorbed digits) |

The systems already communicate through a PRI line, which will be configured to be used for fallback. Both systems already have all keycodes installed for eight VoIP lines, and resources properly allocated for VoIP trunking. For information about keycodes, see the *BCM50 Keycode Installation Guide* (N0016865).

Each BCM50 has 10 telephones that will be using VoIP lines. In this setup only eight calls can be sent or received over the VoIP trunks at one time. If all 10 telephones attempt to call at the same time, two of the calls will be rerouted to the PSTN or other alternate routes if multiple routing is set up in the destination code schedule.

System programming for networking and fallback routes

Table 82 provides the settings that are required for both systems to create a fallback network.

Table 82 Fallback configuration to create fallback between two systems (Sheet 1 of 2)

| Task | Settings for Santa Clara | Settings for Ottawa | Location in Element Manager |
|---|--|-------------------------------------|---|
| Set up a Control set for each VoIP line | 3321 | 2221 | Configuration>Telephony>All DNs |
| Set first preferred Codec | G.729 | | Configuration>Resources>Telephony Resources>IP Trunks, H.323 Trunks, Media Parameters tab. |
| Set Silence Compression | On | | |
| Set Jitter Buffer | Medium | | |
| Put 8 VoIP lines into the same line pool | BlocF | | |
| Give all system telephones access to the VoIP line pool | BlocO | | Configuration>Telephony>Dialing Plan>Line Pools |
| Confirm or assign target lines to all DNs or Hunt Groups t. | <targetline #> | | Configuration>Telephony>Lines>Target Lines |
| Configure the target lines that you assigned. | Control set: 3321 | Control set: 2221 | Configuration>Telephony>Lines>Target Lines>Line XXX |
| | Trunk/Line data: Line Type: Private If busy: To prime | | |
| | Prime set: DN 3321 | Prime set: DN 2221 | |
| | Received number: 3322 | Received number: 2244 | |
| Create remote gateway record for remote BCM50 | Destination IP: 47.62.54.1 | Destination IP: 47.62.84.1 | Configuration>Resources>Telephony Resources>IP Trunks, Remote Gateway Destination digits note: In this case, the systems use a Coordinated Dialing Plan (CDP) network, and the destination digit is included in the DN. |
| | QoS Monitor: Enabled Transmit Threshold: 3.5 (moderate quality) Gateway Type: BCM3.6 Gateway protocol: None | | |
| | Destination Digits (Ottawa): 2 | Destination Digits (Santa Clara): 3 | |
| | | | |

Table 82 Fallback configuration to create fallback between two systems (Sheet 2 of 2)

| Task | Settings for Santa Clara | Settings for Ottawa | Location in Element Manager |
|---|---|---------------------|--|
| Set up Scheduling to allow you to manually start and stop schedules. | Service setting: Manual Overflow: Selected | | Configuration>Telephony>Scheduled Services, VoIP (Schedule 4). |
| Confirm or set up a route using the line pool to access the local PSTN. | Route: 009 | | Configuration>Telephony>Dialing Plan>Routing. |
| | External # | External # | |
| | Line Pool: <publiclinepool> DN type: Public | | |
| Set up a route that contains the PRI fallback lines. | Route: 774 Dialout: N/A PSTN Line Pool: BlocA DN type: Private | | Configuration>Telephony>Dialing Plan>Routing. |
| Set up a route that contains the VoIP line pool. | Route: 867 Dialout: N/A VoIP Line: BlocF DN type: Private | | Configuration>Telephony>Dialing Plan>Routing. |
| Create a destination code that matches the Destination Digit(s). | Destination code: 2 | Destination code: 3 | |
| Define the Normal and VoIP schedules. | Normal: Route 774, Absorb 0 digits VoIP: Route 867, Absorb 0 digits | | Configuration>Telephony>Scheduled Services |
| Confirm or create a destination code for the PSTN. Define Normal and VoIP schedules. | Destination code: 9 Normal: Route 009, absorb All digits VoIP: Route 009, absorb All digits | | |
| Activate the VoIP schedule from the control set. | 3321 | 2221 | FEATURE 873 |

Making calls through a private VoIP network gateway

From a telephone on BCM50 Ottawa, a caller dialing to a telephone on BCM50 Santa Clara must dial the destination code, which includes the destination digits for the BCM50 Santa Clara remote gateway, and the DN of the telephone. For example, dialing 3322 would connect as follows:

- 3 is the destination code. If a suitable level of QoS is available, the call is routed through the VoIP trunks and through the remote gateway with a destination digit of 3. The call is sent across the PDN using the IP address of the Santa Clara BCM50.
- 3322 is linked to the target line associated with DN 3322.
- The call arrives at the phone with the DN 3322.

If a user in Santa Clara wanted to make a local call in Ottawa, they would dial 29, followed by the local Ottawa number. The digit 2 accesses the remote gateway for the VoIP line. The digit 9 accesses an Ottawa outside line.

Chapter 45

Port ranges overview

The Port Ranges panel provides a list of which Ports are currently being used for RTP/UDP, UDP, and Signaling. In the case of RTP over UDP and UDP, it allows changes to the ports being used.

For information on configuring port ranges, see [“Port Ranges Panel” on page 395](#).



Warning: Port configuration should not be changed unless absolutely necessary, such as in instances where port configurations are causing conflicts, or if a firewall is restricting communications over certain ports.

RTP over UDP

RTP over UDP is used by IP sets to connect to media gateways, and by IP trunks to connect to remote devices or PDM devices. All of these services require RTP over UDP. Each media gateway uses two ports. By default, RTP over UDP is set to use the port range 28000 - 28255. It's recommended that you keep 256 ports configured for RTP over UDP. The BCM50 requires a minimum of 110 ports to support necessary services. This includes 32 IP sets, 11 voicemail and callcenter voiceports, and 12 trunks. Each of these devices requires two RTP over UDP ports.

You can configure up to ten separate ranges of ports.

UDP

UDP is used for T.38 Fax over UDP. By default, it uses the Range 20000 to 20255. You can configure up to ten separate ranges of ports. While the system can function with 12 ports, it is recommended that 256 ports are reserved.

Signaling Ports

Signaling ports are used by the system and cannot be modified. They are provided to show where conflicts with UDP or RTP occur.

Chapter 46

Port Ranges Panel

The Port Ranges panel allows you to reserve ports for use by UDP (User Datagram Protocol). The Port Ranges panel consists of three tables: RTP over UDP, UDP, and Signaling.

| Panel tabs | Tasks | Features |
|--|---|----------|
| “RTP over UDP Port Ranges” on page 395 | “Adding new RTP over UDP Port Ranges” on page 396 | |
| “UDP Port Ranges” on page 397 | “Deleting RTP over UDP Port Ranges” on page 396 | |
| “Signaling Port Ranges” on page 398 | “Modifying RTP over UDP Port Ranges” on page 397 | |
| | “Adding new UDP Port Ranges” on page 397 | |
| | “Deleting UDP Port Ranges” on page 397 | |
| | “Modifying UDP Port Ranges” on page 398 | |



Warning: Do not change the ports unless necessary. If you do change the ports, make sure you review the minimum requirements for each protocol. As well, make sure that you configure your firewall to reflect any changes you make to the ports.

RTP over UDP Port Ranges

RTP (Real-time Transfer Protocol) over UDP ports are necessary for IP trunk traffic, such as for the transmission of audio and video signals across the Internet. These values should only be changed if you are interoperating with an unsupported product. The RTP over UDP table has two settings.

[Figure 113](#) illustrates the Port Ranges panel.

Figure 113 Port Ranges panel

The screenshot shows the 'Port Ranges' panel with three tables and two sets of buttons. The 'RTP over UDP' table has one row with 'Begin' 28000 and 'End' 28255. The 'UDP' table has one row with 'Begin' 20000 and 'End' 20255. The 'Signalling' table has six rows with 'Begin' values 0, 1718, 2216, 5000, 7000, and 60000, and 'End' values 1023, 1719, 2219, 5000, 7000, and 60000. Below the RTP over UDP and UDP tables are 'Add...' and 'Delete' buttons.

Table 83 RTP over UDP

| Attribute | Value | Description |
|-----------|------------------|-----------------------------------|
| Begin | <numeric string> | The first port in the port range. |
| End | <numeric string> | The last port in the port range. |

Adding new RTP over UDP Port Ranges

You can add up to ten port ranges.

To add new port ranges in the RTP over UDP table

- 1 On RTP over UDP table, click **Add**. The Add RTP Port Range dialog appears.
- 2 In the **Begin** field, type the first port in the range.
- 3 In the **End** field, type the last port in the range.
- 4 Press **OK**. The new RTP port range appears in the table.

Deleting RTP over UDP Port Ranges

You cannot delete all port ranges from the table. You must keep at least one port range at all times.

To delete port ranges from the RTP over UDP table

- 1 On the RTP over UDP table, select the range to delete by clicking the appropriate row in either column.
- 2 Press **Delete**. The range disappears from the table.

Modifying RTP over UDP Port Ranges

To modify an entry on the RTP over UDP table

- 1 On the RTP over UDP table, select the entry to modify.
- 2 Type in the new value, or use the arrow keys to raise or lower the value.

UDP Port Ranges

UDP (User Datagram Protocol) ports are necessary for certain types of network communications. The UDP table has two settings, as shown in [Table 84](#).

Table 84 UDP

| Attribute | Value | Description |
|-----------|------------------|-----------------------------------|
| Begin | <numeric string> | The first port in the port range. |
| End | <numeric string> | The last port in the port range. |

Adding new UDP Port Ranges

You can add up to ten port ranges.

To add new port ranges in the UDP table

- 1 On UDP table, press **Add**. The Add UDP Port Range dialog appears.
- 2 In the **Begin** field, type the first port in the range.
- 3 In the **End** field, type the last port in the range.
- 4 Press **OK**. The new RTP port range appears in the table.

Deleting UDP Port Ranges

You cannot delete all port ranges from the table. You must keep at least one port range at all times.

To delete port ranges from the RTP over UDP table

- 1 On the UDP table, select the range to delete by clicking the appropriate row in either column.
- 2 Press **Delete**. The range disappears from the table.

Modifying UDP Port Ranges

To modify an entry on the UDP table

- 1 On the UDP table, select the entry to modify.
- 2 Type in the new value, or use the arrow keys to raise or lower the value.

Signaling Port Ranges

Table 85 displays port ranges used for signaling. These port ranges cannot be modified. The Signaling Port Ranges table consists of two fields:

Table 85 Signaling

| Attribute | Value | Description |
|-----------|----------------------------|-----------------------------------|
| Begin | <read-only numeric string> | The first port in the port range. |
| End | <read-only numeric string> | The last port in the port range. |

Chapter 47

Media gateways overview

Certain types of IP communications pass through Media Gateways on the BCM50. You can control the performance of these communications by adjusting the parameters for echo-cancellation and UDP Redundancy.

For detailed information on configuring the Media Gateways, see [“Media Gateways panel” on page 401](#).

Chapter 48

Media Gateways panel

The Media Gateways panel allows you to set basic parameters that control IP telephony. The Media Gateways panel contains only two fields:

The screenshot shows a configuration panel titled "Media Gateways". It contains two settings:

- Echo cancellation:** A dropdown menu currently showing "Enabled w/NLP".
- T.38 UDP redundancy:** A text input field containing the number "2".

Table 86 General Settings

| Attribute | Value | Description |
|---------------------|--|---|
| Echo Cancellation | <drop-down menu> Enabled w/NLP Enabled Disabled | Enable or disable echo cancellation for your system. Default: Enabled w/NLP (check with your internet system administrator before changing this) Echo Cancellation selects what type of echo cancellation is used on calls that go through a Media Gateway. NLP refers to Non-Linear Processing. |
| T.38 UDP Redundancy | <numeric character string> | If T.38 fax is enabled on the system, this setting defines how many times the message is resent during a transmission, to avoid errors caused by lost T.38 messages. |

Chapter 49

Call security and remote access

System restrictions are required to ensure that your system is used appropriately and not vulnerable to unauthorized use.

Call security includes:

- restriction filters, which limit outbound call access
- remote access packages, which limit system call feature access for users calling in over the Private or Public network
- Class of Service codes, which require remote system users to enter a password before they can access the system. CoS passwords also can have restriction filters applied.

These topics are discussed under the following sections:

- [“Defining restriction filters” on page 403](#)
- [“Remote call-in programming” on page 408](#)
 - [“Creating Direct Inward System Access \(DISA\)” on page 408](#)
 - [“Defining remote access packages” on page 410](#)
 - [“Defining CoS passwords” on page 411](#)

Call security works in conjunction with your dialing plan. Refer to [“Dialing plans” on page 205](#).

Defining restriction filters

Restriction filters allow you to restrict the numbers that can be dialed on any external line within BCM50. Up to 100 restriction filters can be created for the system.

To restrict dialing within the system, you can apply restriction filters to:

- outgoing external lines (as line restrictions)
- telephones (as set restrictions)
- external lines on specific telephones (as line/set restrictions)

Restriction filters can also be specified in Restrictions service for times when the system is operating according to a schedule. Dialed digits must pass both the line restrictions and the set restrictions. The line per set (line/set) restriction overrides the line restriction and set restriction.

Notes about restriction filters

A restriction filter is a group of restrictions and overrides that specify the external numbers or feature codes that cannot be dialed from a telephone or on a line. The restriction filters setting allows you to assign restrictions in one step as a single package of dialing sequences that are not permitted.

In addition to restricting telephone numbers, you can prevent people from entering dialing sequences used by the central office (the public network) to deliver special services and features. Some of these features provide the caller with dial tone after they have entered the special code (which often uses # or *), therefore, users have an opportunity to bypass restrictions. To prevent this from happening, you can create filters that block these special codes.

You create a filter by defining the dialing sequences that are denied. There are also variations of each sequence that you want users to be able to dial, these are called overrides. Overrides are defined within each restriction package for each filter.

Once you create the filters, you can assign the restrictions to a telephone, to a line, to a particular line on a telephone, and to remote callers.



Note: Filter 00 cannot be changed. Filter 01 has a set of defaults. Filters 02 to 99 can be set to suit your special requirements. See [“Default filters \(North America\)”](#) on page 405.

- Each programmable filter can have up to 48 restrictions.
- There is no limit on the number of overrides that can be allocated to a restriction. However, there is a maximum total of 400 restrictions and overrides allocated to the 100 programmable filters.
- The maximum length of a restriction is 15 digits.
- The maximum length of an override is 16 digits.
- Entering the letter *A* in a dialing sequence indicates a wild card, and represents any digit from 0 to 9.
- You can use * and # in a sequence of numbers in either a restriction or an override. These characters are often used as part of feature codes for other systems or for features provided by the central office (the public network).
- When restricting the dialing of a central office feature code, do not forget to create separate restrictions for the codes used for DTMF and pulse lines (for example, *67 and 1167).
- Do not string together a central office feature code and a dialing sequence that you want to restrict. Create a separate restriction for each.
- You can copy restrictions and overrides from one filter to another. You can use a restriction or override in any number of filters. Each time you use a restriction or override, it counts as one entry. For example, if restriction 411 exists in filters 01, 02 and 03, it uses up three entries of the 400 entries available.

- Removing a restriction from a filter has no effect on the contents of other filters, even if the restriction was copied to them.
- You cannot delete a filter. Removing the restrictions programmed on a filter makes it an unrestricted filter but the filter itself is not removed.

Default filters (North America)

Filter 00 permits unrestricted dialing and cannot be changed.

Filter 01 is pre-programmed with 10 restrictions and some associated overrides. In Filter 01, Restriction 02 and Override 001 allow long distance toll free calls.

The dialing string 911, which is the number for emergency assistance in North America, is included as both a restriction and an override in Filter 01. This arrangement prevents anyone from blocking calls for emergency assistance on lines or sets using the default filter.

Table 87 Default restriction filters

| Filter | Restrictions (denied) | Overrides | |
|---------|--|-------------------------------------|--|
| 00 | Unrestricted dialing | | |
| 01 | 01: 0 | | |
| | 02: 1 | 001: 1800 002: 1877 003: 1888 | |
| | 03: 911 | 001: 911 | |
| | 04: 411 | | |
| | 05: 976 | | |
| | 06: 1976 | | |
| | 07: 1AAA976 | | |
| | 01 | 08: 1900 | |
| | | 09: 1AAA900 | |
| | | 10: 5551212 | |
| 02 - 99 | No restrictions or exceptions programmed | | |



Note: Default filters are loaded when the system is initialized. A cold start restores the default filters.

Filters 02, 03, and 04, although not preset with restrictions and overrides, are the default filters in these programming headings:

Table 88 Default filters for program headings

| Filter | Heading | Sub-heading |
|--------|------------|--------------------|
| 02 | System DNs | Set restrictions |
| 03 | Lines | Line restriction |
| 04 | Lines | Remote restriction |

Default filters (other)

Three profiles have global overrides which do not appear in Element Manager restriction programming and cannot be changed.

Australia: 000, 13144A

UK: 999, 112

Restriction filter examples

Line and set restrictions are shown in [Figure 114](#) and [Figure 115](#).

In [Figure 114](#), a caller using line 001 could only dial long-distance numbers to area codes 212 and 718. A caller using line 003 could not dial any long-distance numbers. A caller using line 005 could dial long-distance numbers to area codes 212, 718, and 415.



Tips: To restrict dialing from outside the system (once a caller gains remote access), apply restriction filters to incoming external lines (as remote restrictions).

Figure 114 Line restriction example


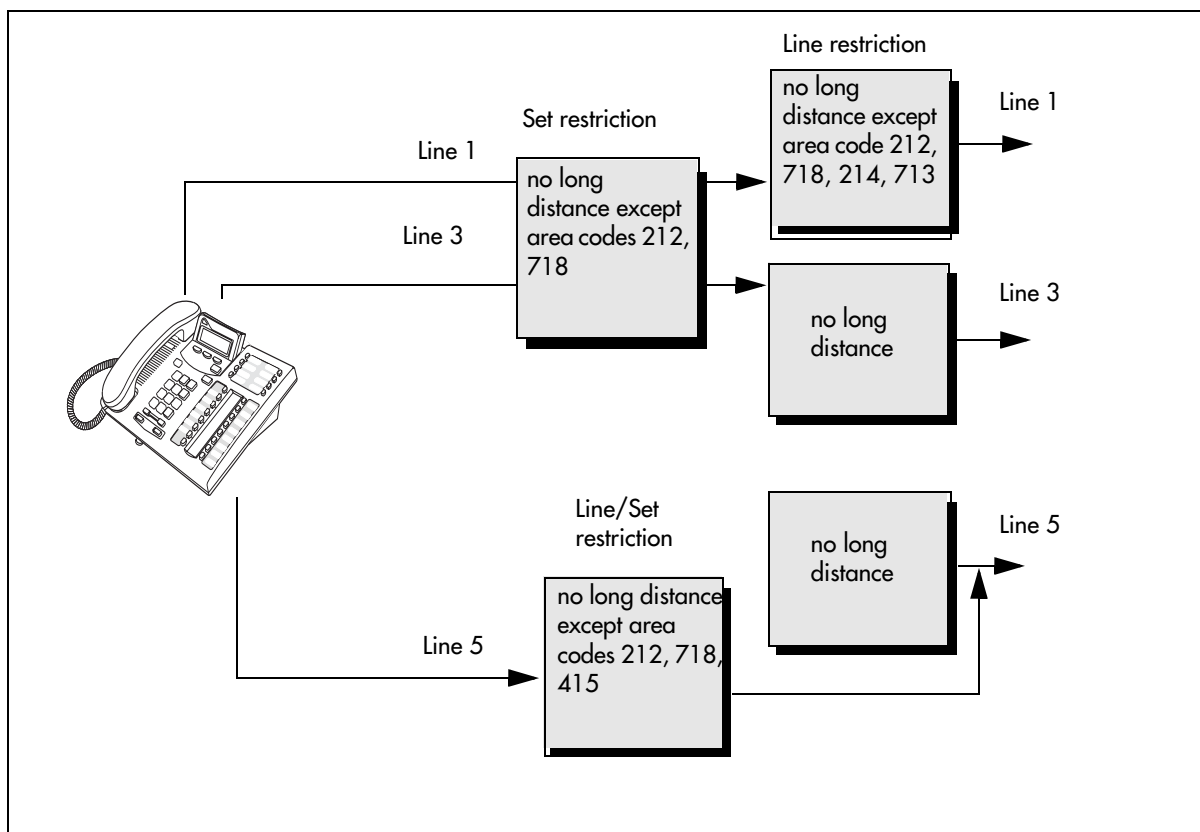


Figure 115, dialed digits must pass both the remote restriction and the line restriction. A remote caller can override these filters by dialing the DISA DN and entering a CoS password.

Figure 115 Remote line restriction example

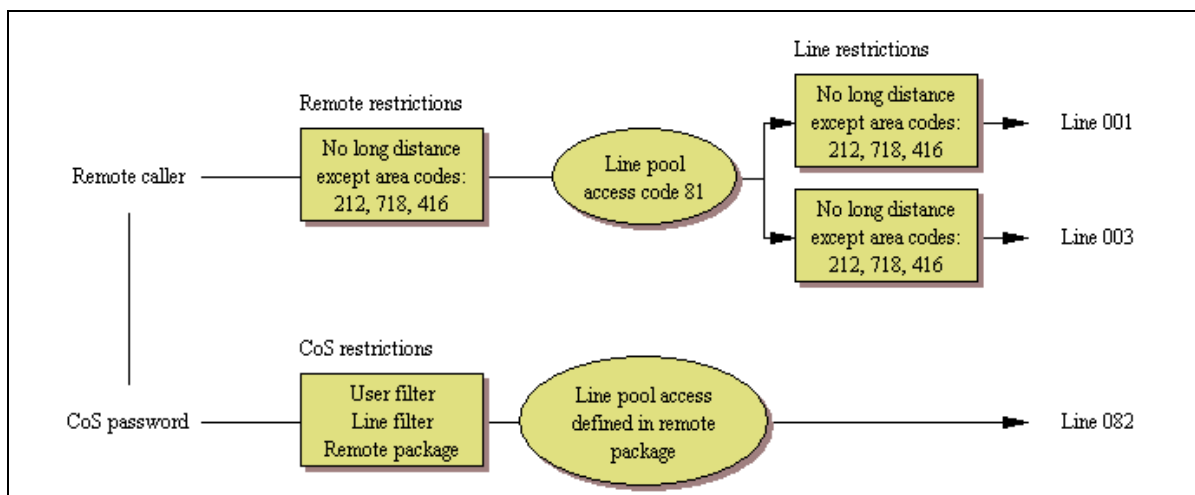

Remote call-in programming

There are three aspects to remote call ins:

- Setting up lines to allow users access to the system (“[Creating Direct Inward System Access \(DISA\)](#)” on page 408).
- Setting up Remote Access Packages that determine what services the remote users can access.
- Setting up CoS passwords for users calling in through the PSTN on lines programmed with DISA. (“[Defining CoS passwords](#)” on page 411)

Creating Direct Inward System Access (DISA)

To control access from the public or private network, you can configure auto-answer trunks to answer with DISA. Remote callers hear a stuttered dial tone and must then enter a CoS password that determines what they are allowed to do in the system.

- Auto-answer T1 loop start and T1 E&M trunks are configured to answer with DISA by default.
- T1 DID trunks: You cannot configure T1 DID trunks to answer with DISA. If you want incoming T1 DID calls to be answered with DISA, configure the system with a DISA DN. Incoming T1 DID calls that map onto the DISA DN are then routed to a line that has DISA.
- You cannot program a DISA DN or Auto DN to VoIP trunks, because they act as auto-answer lines for private networks. However, you still need to assign remote access packages to the VoIP trunks, to ensure that remote access restrictions are properly applied to incoming calls trying to access the system or the system network.

This section also includes information about:

- “[Remote access line settings](#)”
- “[Remote access on loop start trunks](#)” on page 409
- “[Remote access on T1 DID and PRI trunks](#)” on page 409
- “[Remote access on DPNSS lines](#)” on page 409
- “[Remote access on a private network](#)” on page 410

Remote access line settings

The remote access feature allows callers elsewhere on the private or the public network to access your BCM50 by dialing directly and not going through the attendant. After the remote user is in the system, they can use some of the system resources. You must enable remote access in programming before callers can use it.

BCM50 supports remote system access on a number of trunk types which may require the remote caller to enter a password for DISA.

The system resources, such as dialing capabilities, line pool access and feature access, that a remote user may access depends on the CoS password assigned to them. See [“Defining CoS passwords” on page 411](#).



Note: Callers remotely access the BCM50 remote features setting by pressing * and the appropriate page code. See the *BCM50 Device Configuration Guide* (N0027146) for a list of feature codes.

Remote access on loop start trunks

Loop start trunks provide remote access to BCM50 from the public network. They must be configured to be auto-answer to provide remote system access.

A loop start trunk **must** have disconnect supervision if it is to operate in the auto-answer mode. T1 E&M trunks always operate in disconnect supervised mode.

When a caller dials into the system on a line that has auto-answer without DISA, the system answers with system dial tone and no CoS password is required. In this case, the remote access package assigned to the line controls system capabilities.

When a caller dials in on a line that has auto-answer with DISA, the system answers with stuttered dial tone. This is the prompt to enter a CoS password that determines which system capabilities are available to the caller.

Remote access on T1 DID and PRI trunks

Remote system access on T1 DID trunks is similar to that of T1 E&M trunks connected to a private network. The main differences are:

- A remote caller is on the public network dialing standard local or long distance telephone numbers.
- DISA cannot be administered to a T1 DID and PRI trunk. You can program the dialed digits to match those of a specific target line DN, the DISA DN or the Auto DN. If you program the dialed digits to the DISA DN, only the incoming calls that match the programmed DN will receive a DISA dial tone. Incoming calls with other digits will route to a target line.

Remote access on DPNSS lines

A remote caller can access a BCM50 system dial tone, select a line pool that contains exchange lines or DPNSS lines, then dial a number. The procedure is identical to dialing an outside number from an extension in the local system. The main features are:

- Calls coming from another switch to the BCM50 system are routed in two ways, depending on the Answer mode that you program. If the **Answer mode** is set to **Manual**, and the line is assigned to ring at an extension, the incoming call automatically rings at the assigned extension. If **Answer mode** is set to **Auto**, BCM50 automatically answers the incoming call. Because most other DPNSS features are extension-specific, Nortel recommends that all DPNSS lines are configured as auto-answer lines.
- The Page feature is available to both remote callers and callers within the system. A remote caller must have DTMF capability to access the Page feature.
- The line redirection feature allows the originating party to redirect a call that is waiting a connection or re-connection to an alternate destination after a time-out period. Failed calls can be redirected. Priority calls cannot be redirected.

Remote access on a private network

Systems connected to the private network deliver the last dialed digits to the destination BCM50 system for interpretation. The destination BCM50 system matches the digits to a target line or interprets the digits as a remote feature request. BCM50 then routes the call to the specified target line or activates the remote feature.

- By default, T1 E&M trunks are set to answer with DISA. For auto-answer T1 E&M trunks connected to a private network, change the default so that the trunks are **not** answered with DISA. If an auto-answer T1 E&M trunk is configured to answer with DISA, the system tries to interpret any received digits as a CoS password.
- The DISA DN and the Auto DN allow auto-answer private network and DID calls, in the same way that calls on auto-answer loop start and auto-answer T1 E&M trunks can be answered, with or without DISA. These DNs are described in [“Understanding access codes” on page 217](#).
- Answer with DISA cannot be administered to a PRI trunk. Instead, you can program the dialed digits to match those of a specific target line DN, the DISA DN or the Auto DN on the other system.
- Answer with DISA cannot be administer to voice over IP (VoIP), since they do not connect systems outside the private network. However, a user calling in remotely on another system on the network can use the trunk to access the system or a user calling in on a PSTN line can use the trunk to access the private network. To provide control for this type of access, ensure that you specify remote access packages for the trunk.

Defining remote access packages

The Remote access packages setting allows you to control the remote access to line pools and remote page.

Create a remote access package by defining the system line pools remote users can access. You then assign the package to individual lines, and to a particular Class of Service password (see [“Defining CoS passwords” on page 411](#)).

Defining CoS passwords

CoS passwords permit controlled access to the system resources by both internal and remote users.

- When an internal user enters a CoS password at a telephone, the restriction filters associated with the CoS password apply instead of the normal restriction filters.
- Similarly, when a remote user enters a CoS password on an incoming auto-answer line, the restriction filters and remote package associated with their CoS password apply instead of the normal restriction filters and remote package.

Notes about CoS passwords

The CoS password can define the set of line pools that may be accessed and whether or not the user has access to the paging feature.

The class of service (CoS) that applies to an incoming remote access call is determined by:

- the filters that you apply to the incoming trunk
- the CoS password that the caller used to gain access to BCM50.
- in cases where DISA is not automatically applied to incoming calls, the remote caller can change the class of service by dialing the DISA DN and entering a CoS password.

Remote users can access system lines, line pools, the Page feature, and remote administration. The exact facilities available to you through remote access vary depending on how your installer set up your system.



Note: If the loop start line used for remote access is not supervised, auto-answer does not function and the caller hears ringing instead of a stuttered tone or the system dial tone.



Security Note:
CoS password security and capacity

- Determine the CoS passwords for a system randomly and change them on a regular basis.
- Users should memorize their CoS passwords and keep them private. Typically, each user has a separate password. However, several users can share a password or one user can have several passwords.
- Delete individual CoS passwords or change group passwords when employees leave the company.
- A system can have a maximum of 100 six-digit CoS passwords (00 to 99).

To maintain the security of your system, the following practices are recommended:

- Warn a person to whom you give the remote access number to keep the number confidential.
 - Change CoS passwords often.
 - Warn a person to whom you give a CoS password, to memorize the password and not to write it down.
 - Delete the CoS password of a person who leaves your company.
-



Security Note: Remote users can make long distance calls. Remember that a remote user can make long distance calls that are charged to your company. They can also access line pools and make page announcements in your office.

External access tones

You can hear some of the following tones when accessing BCM50 from remote location. [Table 89](#) shows the different types of tones and what they mean.

Table 89 External access tones

| Tone | What it means |
|---------------------|--|
| System dial tone | You can use the system without entering a CoS password. |
| Stuttered dial tone | Enter your CoS password. |
| Busy tone | You have dialed a busy line pool access code. You hear system dial tone again after five seconds. |
| Fast busy tone | You have done one of the following: <ul style="list-style-type: none">• Entered an incorrect CoS password. Your call disconnects after five seconds.• Taken too long while entering a CoS password. Your call disconnects after five seconds.• Tried to use a line pool or feature not permitted by your Class of Service. You hear system dial tone again after five seconds.• Dialed a number in the system which does not exist. Your call disconnects after five seconds. |

IP trunk lines do not produce tones when accessed from a remote location.

Chapter 50

Call Security: Configuring Direct Inward System Access (DISA)

This section describes the telephony configuration that allows users to call from a remote site into the system to access system features.

The following paths indicate where to access DISA settings in Element Manager and through Telset Administration:

- Element Manager: Configuration>Resources>Telephony Resources; Configuration>Telephony>Dialing Plan>Public Network; Configuration>Telephony>Dialing Plan>Private Network
- Telset interface: **CONFIG>Hardware; System>Access codes

Task: Configuring DISA DNs, Auto DNs, Answering with DISA

- Set up the system parameters for system users to call into the from a remote location. Note that Remote Access Packages are required for private network trunks, as well.
-

This section contains the following information:

- [“Remote access overview” on page 415](#)
- [“Setting up remote access on lines” on page 418](#)

Remote access overview


To control access from the public or private network, you can configure auto-answer trunks to answer with DISA. Remote callers hear a stuttered dial tone and must then enter a CoS password that determines what they are allowed to do in the system.

- Auto-answer T1 loop start and T1 E&M trunks are configured to answer with DISA by default.
- T1 DID trunks: You cannot configure T1 DID trunks to answer with DISA. If you want incoming T1 DID calls to be answered with DISA, configure the system with a DISA DN. Incoming T1 DID calls that map onto the DISA DN are then routed to a line that has DISA.
- You cannot program a DISA DN or Auto DN to VoIP trunks, because they act as auto-answer lines for private networks. However, you still need to assign remote access packages to the VoIP trunks, to ensure that remote access restrictions are properly applied to incoming calls trying to access the system or the system network.

For specific line programming, refer to the sections under [“Setting up remote access on lines”](#) on [page 418](#).

[Figure 116](#) provides an overview of the remote access configuration process.

Figure 116 Remote access task overview

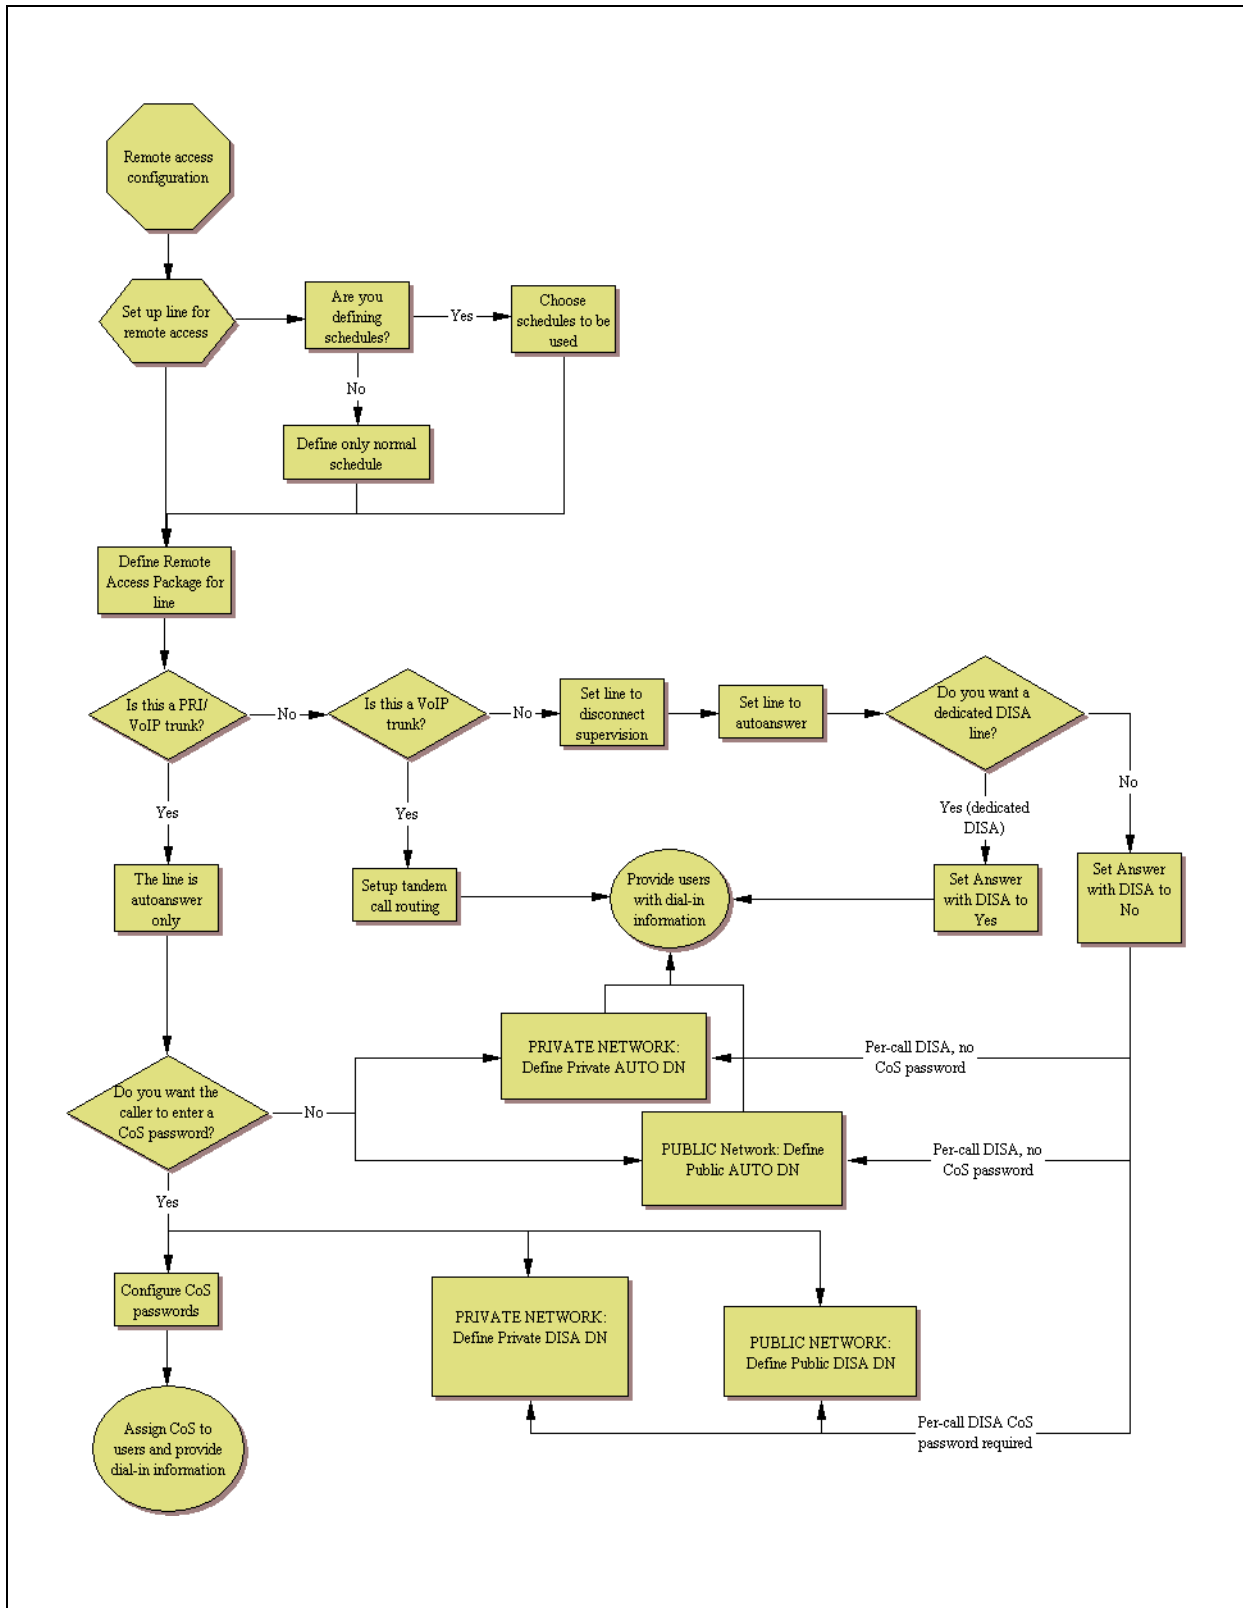

Setting up remote access on lines

Setting up remote access on different types of trunks requires you to understand the trunk properties and how you want the system to answer the dial-in calls.

This section includes information about:

- [“Remote access on loop start trunks” on page 418](#)
- [“Remote access on T1 DID trunks” on page 418](#)
- [“Remote access on PRI” on page 419](#)
- [“Remote access on DPNSS lines” on page 419](#)
- [“Remote access on a private network” on page 420](#)
- [“Other programming:” on page 420](#)

Remote access on loop start trunks

Loop start trunks provide remote access to BCM50 from the public network. They must be configured to be auto-answer to provide remote system access. Refer to [“Configuring lines: T1-Loop start” on page 145](#).

A loop start trunk **must** have disconnect supervision if it is to operate in the auto-answer mode. T1 E&M trunks always operate in disconnect supervised mode.

When a caller dials into the system on a line that has auto-answer without DISA, the system answers with system dial tone and no CoS password is required. In this case, the restriction filters assigned to the line control system capabilities available to the caller.

When a caller dials in on a line that has auto-answer with DISA, the system answers with stuttered dial tone. This is the prompt to enter a CoS password that determines which system capabilities are available to the caller.

Remote access on T1 DID trunks

Remote system access on T1 DID trunks is similar to that of T1 E&M trunks connected to a private network.

The main differences are:

- A remote caller is on the public network dialing standard local or long distance telephone numbers.
- The digits received are delivered by the central office.
- DISA cannot be administered to a T1 DID trunk. You can program the dialed digits to match those of a specific target line DN, the DISA DN or the Auto DN. If you program the dialed digits to the DISA DN, only the incoming calls that match the programmed DN will receive a DISA dial tone. Incoming calls with other digits will route to a target line.

Refer to [“Configuring lines: T1-E&M” on page 139](#), [“Configuring lines: T1-DID” on page 157](#).

Remote access on PRI

Remote system access on PRI trunks is similar to that of T1 E&M trunks connected to a private network.

The main differences are:

- A remote caller is on the public network dialing standard local or long-distance telephone numbers.
- The digits received are delivered by the central office.
- Answer with DISA cannot be administered to a PRI trunk. Instead, you can program the dialed digits to match those of a specific target line DN, the DISA DN or the Auto DN.
- North America: Use incoming Call by Call (CbC) Service routing to map the call type to the DISA DN.

With FX, INWATS, 900, and SDS service types, either a Service Id (SID) or a CDN is mapped to Target Line Receive Digits. This is programmed under [“Configuring PRI Call-by-Call services” on page 136](#). DISA may be accessed by having the SID or CDN map to the DISA DN. This example has a Receive Digit Length = 4, DISA DN = 1234, and CbC Routing with (Service Type = FX, Map from SID = 2, Map to digits = 1234).

A call presented to the BCM50 system with service type FX and SID 2 will be handled as follows:

- The ISDN setup message will specify FX with SID = 2
- The FX SID = 2 will be mapped to DISA DN digits 1234
- The call will be answered with DISA.

Refer to [“Configuring lines: PRI” on page 133](#).

Remote access on DPNSS lines

A remote caller can access a BCM50 system dial tone, select a line pool that contains exchange lines or DPNSS lines, then dial a number. The procedure is identical to dialing an outside number from an extension in the local system. The main features are:

- Calls coming from another switch to the BCM50 system are routed in two ways, depending on the Answer mode that you program. If the **Answer mode** is set to **Manual**, and the line is assigned to ring at an extension, the incoming call automatically rings at the assigned extension. If **Answer mode** is set to **Auto**, BCM50 automatically answers the incoming call. Because most other DPNSS features are extension-specific, Nortel recommends that all DPNSS lines are configured as auto-answer lines.
- The Page feature is available to both remote callers and callers within the system. A remote caller must have DTMF capability to access the Page feature.

- The line redirection feature allows the originating party to redirect a call that is waiting a connection or re-connection to an alternate destination after a time-out period. Failed calls can be redirected. Priority calls cannot be redirected.

Refer to [“Private networking: DPNSS network services \(UK only\)” on page 319](#).

Remote access on a private network

Systems connected to the private network deliver the last dialed digits to the destination BCM50 system for interpretation. The destination BCM50 system matches the digits to a target line or interprets the digits as a remote feature request. BCM50 then routes the call to the specified target line or activates the remote feature.

- By default, T1 E&M trunks are set to answer with DISA. For auto-answer T1 E&M trunks connected to a private network, change the default so that the trunks are **not** answered with DISA. If an auto-answer T1 E&M trunk is configured to answer with DISA, the system tries to interpret any received digits as a CoS password.
- The DISA DN and the Auto DN allow auto-answer private network and DID calls, in the same way that calls on auto-answer loop start and auto-answer T1 E&M trunks can be answered, with or without DISA. These DNs are described in [“Dialing plan: Private network settings” on page 269](#).
- Answer with DISA cannot be administered to a PRI trunk. Instead, you can program the dialed digits to match those of a specific target line DN, the DISA DN or the Auto DN on the other system.
- Answer with DISA cannot be administer to voice over IP (VoIP), since they do not connect systems outside the private network. However, a user calling in remotely on another system on the network can use the trunk to access the system or a user calling in on a PSTN line can use the trunk to access the private network. To provide control for this type of access, ensure that you specify remote access packages for the trunk. This type of call is called a tandem call.

Other programming:

- [“Call security: Remote access packages” on page 427](#)
- [“Configuring CoS passwords for remote access” on page 431](#)

Chapter 51

Call security: Restriction filters

This section describes the panels that are used to enter restriction filters and restriction overrides. You can have a maximum of 100 restriction filters on the system.

The following paths indicate where to access restriction filter settings in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Call Security>Restriction Filters
- Telset Interface: ****CONFIG>Terminals and Sets**, or ****CONFIG>Lines**

Click one of the following links to connect with the type of information you want to view:

| Panels | Tasks | Feature notes |
|---|---|---|
| "Restriction filters" on page 421 | "Adding a restriction filter and exceptions" on page 423 | "Default filters" on page 424 |
| Using restriction filters: | "Restrictions (Line and Remote)" on page 125 "Restrictions main tab" in the <i>BCM50 Device Configuration Guide</i> (N0027146) "Class of Service table" on page 431 "Configuring scheduled service" in the <i>BCM50 Device Configuration Guide</i> (N0027146) "Hospitality - General" in the <i>BCM50 Device Configuration Guide</i> (N0027146) | |

Click the navigation tree heading to access general information about restriction filters.

Restriction filters

Restrictions are used to restrict outbound dialing. For example, restrictions can be applied to restrict dialing 1-900 numbers.

The restriction filters panel contains three list boxes. You progress from left to right as you populate the information.

Figure 117 Restriction Filters panels

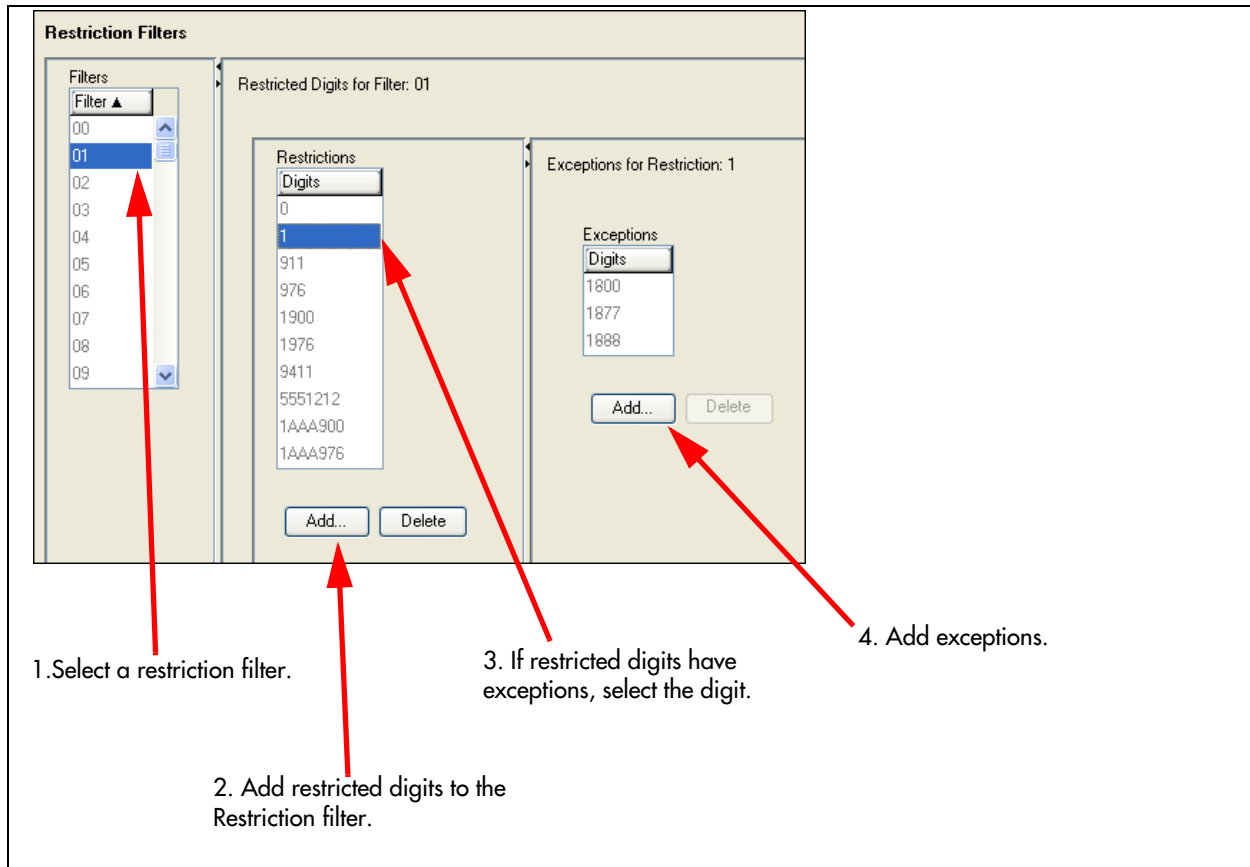


Table 90 provides a description of the fields on the Restriction filters panel.

Table 90 Restriction filters and exceptions fields (Sheet 1 of 2)

| Attribute | Value | Description |
|---------------------------|---|--|
| Filters table | | |
| Filter | <00-99> | This is the list number for the filter. This is the number that you will use on the configuration panels that require restriction filter entries. |
| Restrictions table | | |
| Digits | <dialstring digit(s)> | For each filter, enter the restriction digit dial string, based on what the restriction is for. The dial string is the number that is restricted from being dialed on the system. Also refer to “Default filters” on page 424 . Note: The wildcard A (Any) can be used as part of the dialstring. |
| Actions: | | |
| Add | Refer to “Adding a restriction filter and exceptions” on page 423 . | |

Table 90 Restriction filters and exceptions fields (Sheet 2 of 2)

| Attribute | Value | Description |
|-------------------------|-----------------------|---|
| Delete | | <ol style="list-style-type: none"> 1. On the Filters table, select the filter where you want to delete information. 2. On the Restrictions table, select one or more restrictions to delete. 3. Click Delete. 4. Click OK. |
| Exceptions table | | |
| Digits | <dialstring digit(s)> | <p>For each restriction digit, enter any numbers that should dial out, despite the restriction.</p> <p>Note: The wildcard A (Any) can be used as part of the dialstring.</p> |
| Actions: | | |
| Add | | Refer to “Adding a restriction filter and exceptions” on page 423 |
| Delete | | <ol style="list-style-type: none"> 1. On the Filters table, select the filter where you want to delete information. 2. On the Restrictions table, select the restriction filter that has the exception that you want to delete. 3. On the Exceptions table, click one or more of the exceptions. 4. Under the Exceptions table, click Delete. 5. Click OK. |

The default values for restriction filters are based on country profile. Refer to [“Default filters” on page 424](#) and [“Default filters for other common profiles” on page 425](#).

Adding a restriction filter and exceptions

To add a restriction filter

- 1 On the Filters table, select the number for the Restriction Filter where you want to add filters.
- 2 Under the Restrictions table, click **Add**.
- 3 Enter the digits that you want to restrict if they precede a dial string going out of the system.
- 4 Click **OK**.
- 5 Repeat steps 3 and 4 for all filters you want to add.
- 6 If you need to apply overrides to a filter, on the Restricted table, click the restricted digit to which you want to add overrides.
- 7 Under the Exceptions table, click **Add**.
- 8 Enter the number that you want to allow when this restriction is in effect.
- 9 Repeat steps 7 and 8 for all overrides you want to add to this filter.
- 10 Repeat steps 6 to 9 for all the filters to which you want to add overrides.

11 Click **OK**.

12 Next steps: Assign filters to lines, DN records and class of service (CoS) passwords for remote access.

Default filters

This section lists the default restriction filters for North America and other common profiles:

- [“Default filters for the North America profile” on page 424](#)
- [“Default filters for other common profiles” on page 425](#)

Default filters for the North America profile

Filter 00 permits unrestricted dialing and cannot be changed.

Filter 01 is pre-programmed with 10 restrictions and some associated overrides. In Filter 01, Restriction 02 and Override 001 allow long distance toll free calls.

The dialing string 911, which is the number for emergency assistance in North America, is included as both a restriction and an override in Filter 01. This arrangement prevents anyone from blocking calls for emergency assistance on lines or sets using the default filter.

Table 91 Default restriction filters

| Filter | Restrictions (denied) | Overrides |
|---------|--|-------------------------------------|
| 00 | Unrestricted dialing | |
| 01 | 01: 0 | |
| | 02: 1 | 001: 1800 002: 1877 003: 1888 |
| | 03: 911 | 001: 911 |
| | 04: 411 | |
| | 05: 976 | |
| | 06: 1976 | |
| | 07: 1AAA976 | |
| | 08: 1900 | |
| | 09: 1AAA900 | |
| | 10: 5551212 | |
| 02 - 99 | No restrictions or exceptions programmed | |



Note: Default filters are loaded when the system is initialized. A cold start restores the default filters.

Filters 02, 03, and 04, although not preset with restrictions and overrides, are the default filters in these programming headings:

| Filter | Heading | Sub-heading |
|--------|------------|--------------------|
| 02 | System DNs | Set restrictions |
| 03 | Lines | Line restriction |
| 04 | Lines | Remote restriction |

Default filters for other common profiles

Three profiles have global overrides which do not appear in Element Manager restriction programming and cannot be changed.

Australia: 000, 13144A

UK: 999, 112

Chapter 52

Call security: Remote access packages

This panel describes the telephony configuration that is used to control access to system lines by calls coming in from outside the system. The remote access package also allows remote paging capabilities.



Note: Callers dialing into the system over private network lines are also considered remote callers.

The following paths indicate where to access remote access packages in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Call Security>Remote Access Packages
- Telset interface: **CONFIG>System prgrming>Remote Access

This is a two-table panel, where you select a Remote Access Package number on the first panel and then add or delete the line pools from the second table.

| Panels/Subpanels | Tasks |
|---|--|
| “Configuring remote access packages” on page 427 Also refer to: | “Restrictions (Line and Remote)” on page 125 (lines) “Call Security: Configuring Direct Inward System Access (DISA)” on page 415 “Configuring CoS passwords for remote access” on page 431 |
| Click the navigation tree heading to access general information about Hospitality services. | |

Configuring remote access packages

Use these panels to add allowed line pools to up to 99 remote access packages.

Remote access packages are assigned to lines and class of service (CoS) passwords. Lines used for private networking need remote access packages because calls coming from other nodes on the network are considered remote call-ins by your system.

Figure 118 Remote Access Packages tables

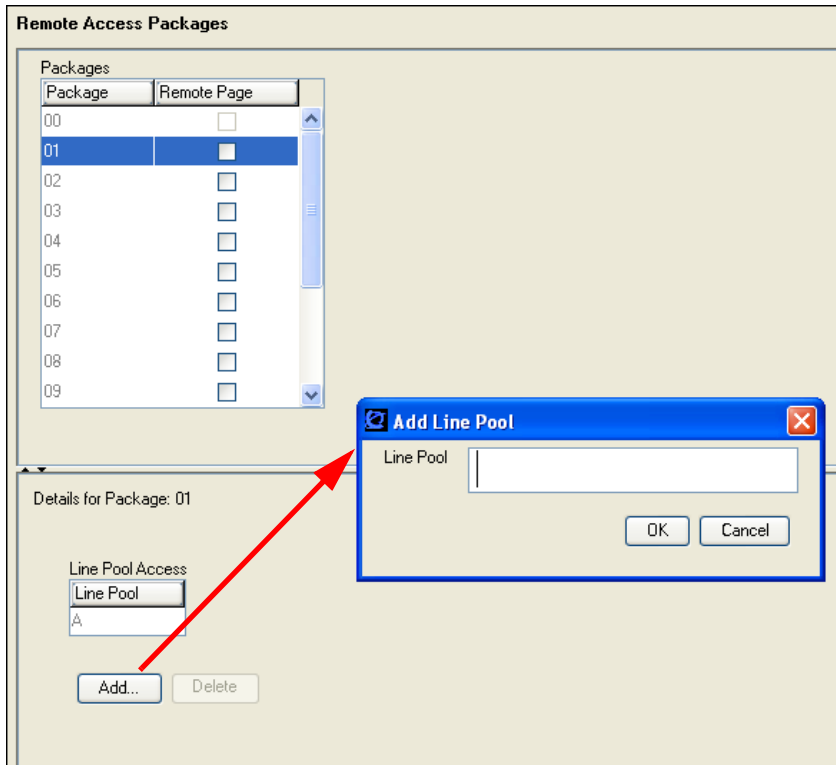


Table 92 describes each field on this panel.

Table 92 Remote Access Packages (Sheet 1 of 2)

| Attribute | Values | Description |
|-------------------------------|------------------------------------|---|
| Packages table | | |
| Package | <00-99> | This designates the package number. This is what is entered in the fields for lines programming for remote access. |
| Remote Page | <check box> | Select check box if you wish to allow remote callers access to paging. Note: Remote paging is not supported on IP trunks. |
| Line Pool Access table | | |
| Line pool | <A to O>/BlocA to F (PRI and VoIP) | Choose the line pool for which you want this package to be available. |
| Actions | | |

Table 92 Remote Access Packages (Sheet 2 of 2)

| | |
|--------------------|--|
| Add (line pool) | <p>Package 00 is the default package and cannot be deleted. It provides no access to any line pools.</p> <ol style="list-style-type: none"> 1. On the Packages table, select the remote package number that you want to configure. 2. Under the Line Pool Access table, click Add. 3. In the Add dialog, enter a line pool. 4. Click OK to save the pool. 5. Next steps: Add remote access packages to lines and CoS passwords. |
| Delete (line pool) | <ol style="list-style-type: none"> 1. On the Packages table, select the remote package number where you want to delete line pools. 2. On the Line Pool Access table select one or more line pools to delete. 3. Click Delete. 4. Click OK. |

The following is an example of how a remote access package works.

- Inbound PRI calls are on line pool BlocA
- Outbound calls are on analog lines using Pool A

If users coming in on the PRI are to be able to access outbound trunks on Pool A then the lines in BlocA must be in a remote package that allows access to Pool A

Chapter 53

Configuring CoS passwords for remote access

The Class of Service panel allows you to configure passwords for system users who will be dialing into the system over a PSTN/private network to use system features, or for users who must bypass local restrictions on telephones.

The following paths indicate where to access the Class of Service settings in Element Manager and through Telset Administration:

- Element Manager: Configuration>Telephony>Call Security>Class of Service
- Telset interface: **CONFIG>Passwords>

Click one of the following links to connect with the type of information you want to view:

| Panel tabs | Tasks/Features |
|--|---|
| “Class of Service table” on page 431 | “CoS examples” on page 435 |
| | “External access tones” on page 435 |
| Also refer to: | “Call security: Restriction filters” on page 421 |
| | “Call Security: Configuring Direct Inward System Access (DISA)” on page 415 |
| | “Call security: Remote access packages” on page 427 |

Click the navigation tree heading to access general information about user management.

CoS passwords permit controlled access to the system resources by both internal and remote users.

- When an internal user enters a CoS password at a telephone, the restriction filters associated with the CoS password apply instead of the normal restriction filters.
- Similarly, when a remote user enters a CoS password on an incoming auto-answer line, the restriction filters and remote package associated with their CoS password apply instead of the normal restriction filters and remote package.

Class of Service table

This section also contains the following information:

- [“Notes about CoS passwords” on page 433](#)
- [“CoS examples” on page 435](#)

- [“External access tones” on page 435](#)



Security Note: Change passwords frequently to discourage unauthorized access.

Figure 119 Class of Service table panel

| Class of Service Passwords | | | | |
|----------------------------|----------|------------------------|-------------------------|----------------|
| CoS | Password | Set Restriction Filter | Line Restriction Filter | Remote Package |
| 00 | | | | |
| 01 | | | | |
| 02 | | | | |
| 03 | | | | |
| 04 | | | | |
| 05 | | | | |
| 06 | | | | |
| 07 | | | | |
| 08 | | | | |
| 09 | | | | |

[Table 93](#) describes the fields on this panel.

Table 93 CoS password values

| Attribute | Values | Description |
|-------------------------|---|---|
| CoS | <CoS 00- CoS 99> Read-only | These numbers identify the password position to the system. |
| Password | <six digits> | Enter a combination of numbers that the user needs to dial to get into the system. Refer to “Notes about CoS passwords” on page 433 . |
| Set Restriction Filter | None Filter <plus a two-digit user filter> | Assign a restriction filter to a Class of Service password. The user filter associated with the Class of Service password replaces any normally-applicable set restriction, line/set restriction, and remote restriction. The default setting (None), means that any normally-applicable filters (set restriction, line/set restriction, or remote restriction) still apply. |
| Line Restriction Filter | None Filter <plus a two-digit line filter> | Assign a specific line restriction to a Class of Service password. The line filter associated with the Class of Service password replaces any normally applicable line restriction. The default setting (None), means that any normally applicable line filter still applies. |
| Remote Package | None Package <plus a two-digit remote package> | Refer to “Call security: Remote access packages” on page 427 for more information. |

Adding or modifying a CoS password values

Programming references:

- [“Notes about CoS passwords” on page 433](#)
- [“CoS examples” on page 435](#)
- [“External access tones” on page 435](#)



Note: You can add a maximum of 99 CoS Passwords.

To add or modify a CoS password

- 1 On the Class of Service table, click the CoS line to which you want to add or modify a password.
- 2 Select the field you want to change and enter the appropriate information:
 - Name: Enter a descriptive name for the password or user
 - Password: Enter a set of six digits that are unique from any other CoS password
 - Set Restriction Filter: If you want the user to be able to override set and line/set restrictions for the number being called, enter the allowed filters.
 - Line Restriction Filter: If you want the user to be able to override the line restrictions that the call uses to access the system, enter the allowed filters here.
 - Remote Package: Enter the remote package that you want the system to use to determine the level of access the user will have to system features.

Notes about CoS passwords

The CoS password can define the set of line pools that may be accessed and whether or not the user has access to the paging feature. The password all defines which restrictions are applied.

The class of service (CoS) that applies to an incoming remote access call is determined by:

- the filters that you apply to the incoming trunk
- the CoS password that the caller used to gain access to BCM50.
- in cases where DISA is not automatically applied to incoming calls, the remote caller can change the class of service by dialing the DISA DN and entering a CoS password.

Remote users can access system lines, line pools, the Page feature, and remote administration. The exact facilities available to you through remote access vary depending on how your installer set up your system.



Note: Remote paging is not available on IP trunks.



Security Note:
CoS password security and capacity

- Determine the CoS passwords for a system randomly and change them on a regular basis.
- Users should memorize their CoS passwords and keep them private. Typically, each user has a separate password. However, several users can share a password or one user can have several passwords.
- Delete individual CoS passwords or change group passwords when employees leave the company.
- A system can have a maximum of 100 six-digit CoS passwords (00 to 99). CoS passwords must be unique.

To maintain the security of your system, the following practices are recommended:

- Warn a person to whom you give the remote access number to keep the number confidential.
 - Change CoS passwords often.
 - Warn a person to whom you give a CoS password, to memorize the password and not to write it down.
 - Delete the CoS password of a person who leaves your company.
-



Security note: Remote users can make long distance calls. Remember that a remote user can make long distance calls that are charged to your company. They can also access line pools and make page announcements in your office.

CoS examples

Example: Using the CoS feature to access a restricted line.

A sales representative out of the office needs to make long distance calls to the European office. Your system has a leased line to Europe with reduced transatlantic charges. You provide the sales representative with a Class of Service password that gives access to the transatlantic line. The sales representative can telephone into the system (DISA DN) from a hotel, enter the Class of Service password, and then use a destination code to access the leased transatlantic line to make calls.

To access the system over a public network

- 1 Dial the system remote access number.
- 2 When you hear a stuttered dial tone, enter your CoS password.
- 3 Wait for the system dial tone.

To bypass the restriction filters on a telephone

- 1 Press **FEATURE 68**.
- 2 Enter the six-digit CoS password that allows the required type of call.
- 3 Enter the number to be dialed.

Example: Remote access over the public network bypassing the restrictions on a telephone

To use the system at a distance, you must use a telephone with tone dialing to call the system. Remote access is possible only on lines that your installer programs to auto-answer calls.

To use paging on a remote system, press * followed by the feature code. When you are calling from within BCM50, press * instead of **FEATURE**.

In some conditions, you can experience lower volume levels when using the system from a distance.

External access tones

You can hear some of the following tones when accessing BCM50 from a distance. [Table 94](#) shows the different types of tone and what they mean.

Table 94 External access tones (Sheet 1 of 2)

| Tone | What it means |
|---------------------|--|
| System dial tone | You can use the system without entering a CoS password. |
| Stuttered dial tone | Enter your CoS password. |
| Busy tone | You have dialed a busy line pool access code. You hear system dial tone again after 5 seconds. |

Table 94 External access tones (Sheet 2 of 2)

| | |
|----------------|---|
| Fast busy tone | You have done one of the following: <ul style="list-style-type: none">• Entered an incorrect CoS password. Your call disconnects after five seconds.• Taken too long while entering a CoS password. Your call disconnects after five seconds.• Tried to use a line pool or feature not permitted by your Class of Service. You hear system dial tone again after five seconds.• Dialed a number in the system which does not exist. Your call disconnects after five seconds. <p>IP trunk lines do not produce tones when accessed from a remote location.</p> |
|----------------|---|

Chapter 54

LAN overview

On the BCM50 main unit, the LAN configuration determines how the Core Module of the BCM50 communicates with other devices on the LAN. For the BCM50 with Router, the LAN configuration also includes Router LAN configuration, which determines how the router communicates with devices on the LAN.

This module explains the concepts of the LAN on the BCM50. It contains the following sections:

- [“What is a LAN?” on page 437](#)
- [“LAN settings” on page 437](#)
- [“DHCP configuration” on page 437](#)

For information on Configuring LAN settings, see [“IP settings” on page 443](#).

What is a LAN?

The LAN (Local Area Network) is a group of IP devices that can all communicate directly with each other over an IP network. Generally, all of these devices are in a small geographic range, such as a single office or building. The BCM50 allows you to connect several IP devices together on a LAN, and then connect to the Internet or other LANs over a router.

LAN settings

LAN settings include determining IP and DNS settings, and subnet settings. The LAN control how the BCM50 behaves as a device on the IP network.

To modify the LAN settings, refer to [“IP settings” on page 443](#).

DHCP configuration

By default, the BCM50 is set as a DHCP client. When the BCM50 is started, it sends a request for an address to a DHCP server. If no server responds, it determines that there is no DHCP server on the LAN, and it sets a static IP address of the last IP address received from the DHCP server. (The default IP address is 192.168.1.2)

Chapter 55

LAN configuration tasks

This module describes configuration tasks for setting up the LAN component of the BCM50.

Configuring the BCM50 with a DHCP address

To configure the BCM50 with a DHCP address

- 1** Set up your DHCP server, if it is not already configured on your network. If you are using a BCM50a or BCM50e, consult the router documentation for information on configuring the DHCP network.
- 2** On your DHCP server, set a reserved address for the BCM50. This requires the BCM50 MAC address, which you can find on the IP Settings panel or is printed on the stock tag for box the BCM50 ships in as well since it's the system identifier. If you do not set a reserved IP address for the BCM50, Element Manager clients need to be changed every time the IP address is reset.
- 3** Connect the BCM50 to the network. By default, the BCM50 detects the presence of a DHCP server, and set itself up as a client of this DHCP server.
If you plug in the BCM50 when the DHCP is not available, it will default to a static IP address. You can recover by unplugging the BCM50 and reconnecting once the DHCP server is available.

Chapter 56

Data networking overview

The BCM50 is a converged voice product, and can be connected to virtually any data network, to provide Voice over Internet Protocol (VoIP) support in either a Local Area Network (LAN) or Wide Area Network (WAN) environment. The BCM50 is also available with an integrated Broadband Ethernet or ADSL Router, which is intended to provide basic data networking and services, as well as Virtual Private Network (VPN) connectivity for small sites. Refer to [“VPN overview” on page 501](#) for more information. With the router, the BCM50 can handle all data networking needs, including both VoIP and basic IP networking. The BCM50 is also available without a router, to provide VoIP capabilities to networks that already have an existing IP network.

What is data networking?

On the BCM50, data networking refers to both standard IP data networks, as well as VoIP. These two types of networks are closely intertwined, and connect a wide range of IP devices - including IP telephones and computers - with the BCM50 and with external networks. The BCM50 with router can also handle all routing requirements.

For an more information about setting up networks, [“System telephony networking overview” on page 33](#).

About the BCM50 VoIP capability

The BCM50 provides VoIP functionality both within a LAN (Local Area Network), and across a WAN. It can contain IP telephones, which act similar to a traditional phone, but send their signals across data networks in the form of IP packets. The BCM50 can also contain IP trunks which connect offices together across an IP network.

For an more information about VoIP, [“VoIP overview” on page 351](#).

Network routing

The BCM50 is available with and without an internal router. With the router, it can handle all external connections necessary for a data-network, as well as control security on these connections. The standalone version of the BCM50 does not handle routing, but is suitable for IP networks where a router is already in place. For information on the BCM50 router, [“Router overview” on page 453](#).

Configuring the BCM50 with data networks

To configure the BCM50 to work with a data network, go through each of the following steps:

- Complete the pre-installation checklist. This will make sure that you've made all necessary preparations for connecting the BCM50. For information on completing the pre-installation checklist, [“Data network prerequisites checklist” on page 449](#).
- Configure your router. If you already have a router already on your system, you must make some modifications to its configuration for use with the BCM50. If you have the BCM50a or BCM50e, you must use the configuration guides for each of those products to set up your router. For information on configuring the Router, refer to the *BCM50a Integrated Router Configuration Guide* (N0027181) or the *BCM50e Integrated Router Configuration Guide* (N0027182).
- Configure IP settings on the BCM50. For information on configuring IP settings on the BCM50, [“LAN overview” on page 437](#).
- Configure DHCP on the BCM50. For information on configuring DHCP on the BCM50, [“DHCP overview” on page 457](#).

Chapter 57

IP settings

The IP Settings define the basic and advanced IP address and DNS configuration for the BCM50 main unit.

The panel tabs links provide a general description of each panel and definitions of each panel field.

Click one of the following links:

Panel tabs

[“Main panel tabs: General settings”](#)
on page 443

[“Main panel tabs: Internal subnets”](#)
on page 446

Main panel tabs: General settings

The General Settings panel displays the basic IP settings for the BCM50 main unit. It contains:

- [“IP settings options”](#) on page 444
- [“DNS Settings options”](#) on page 445
- [“MTU option”](#) on page 445

| | |
|-------------|--|
| System name | <input type="text" value="bcm_m50r1"/> |
| MAC address | <input type="text" value="00:11:58:ff:9b:8d"/> |

The General Settings panel has two general settings fields.

Table 95 General Settings

| Attribute | Value | Description |
|-------------|--|---|
| System name | <alphanumeric characters>, no limit specified. | This is a name for the M50 that will help identify it. |
| MAC address | read-only field | This is the physical address of the BCM50 core (Not the integrated router). |

IP settings options

The IP settings options include settings for modifying the IP address information for the BCM50.

Table 96 IP Settings

| Attribute | Value | Description |
|-------------------------------|--------------------------------|--|
| Obtain IP address dynamically | <check box> | If this is selected, the BCM50 attempts to take IP address information from a DHCP server. |
| IP address | <Read-only, IP address format> | The IP address of the BCM50 main unit. |
| IP subnet mask | <Read-only, IP address format> | The subnet mask used by the BCM50. |
| Default gateway | <Read only, IP address format> | The gateway used by the BCM50. |

Modifying IP address information



Warning: Modifying the IP address information for the BCM50 may cause the BCM50 to temporarily lose connectivity to the network.

The IP address fields are read-only. However, you can modify their values using the Modify button.



Warning: If any of the IP settings are changed in the modify window for IP settings, the Element Manager will disconnect.

To modify an IP address

- 1 Press the **Modify** button.
- 2 Select the appropriate values. Press **OK** to continue.

- 3 You may need to restart your Element Manager to reconnect with the BCM50.

DNS Settings options

The DNS Settings options need to be completed for the BCM50 to obtain domain name information from a DNS server.

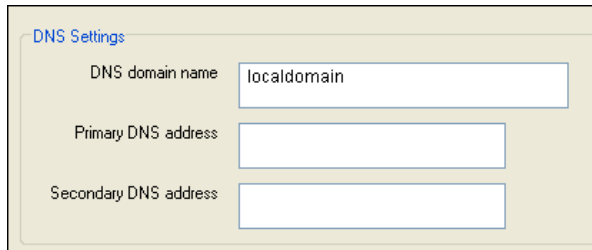


Table 97 DNS Settings

| Attribute | Value | Description |
|-----------------------|--|--|
| DNS domain name | <alphanumeric characters, no specified length> | A name for the local domain. You must enter information in this field only if the Obtain DNS Settings Dynamically check box is not activated. |
| Primary DNS address | <IP address, format 10.10.10.10> | The IP address of the server that will provide DNS information to the system. This information is generally provided by the ISP. This field needs to be completed only the Obtain DNS Settings Dynamically check box is not activated. Provided by your ISP or IS department. In small office settings a DNS may not be necessary. |
| Secondary DNS address | <IP address, format 10.10.10.10> | Used if the primary DNS is unavailable. The IP Address of the server that will provide DNS information to the system. This information is generally provided by the ISP. This field needs to be completed only if the Obtain DNS Settings Dynamically check box is not selected. It can be provided by your ISP or IS department. In small office settings a DNS may not be necessary. |

MTU option

BCM50 allows you to change the MTU based upon your network architecture.




Table 98 MTU settings

| Attribute | Value | Description |
|-----------|------------------|---|
| MTU size | <numeric string> | Maximum Transmission Unit. This is the largest packet, measured in bytes, that the BCM50 can send. Note: 1500 is the default setting and should not be changed unless instructed by a network administrator. |

Main panel tabs: Internal subnets

The Internal subnets tab contains two options:

- [“Internal Subnet settings” on page 446](#)
- [“Internal Subnet Details” on page 447](#)


Internal Subnet settings

The Internal Subnets tab contains a table describing the two internal subnets. The OAM LAN provides an interface where administrators can connect directly to the BCM50 by plugging their laptop into the OAM port.

The Internal LAN is an interface that is used internally by the BCM50 for digital signal processing.



Warning: Only modify a subnet if the address the subnets are currently set to are in-use elsewhere on the network.

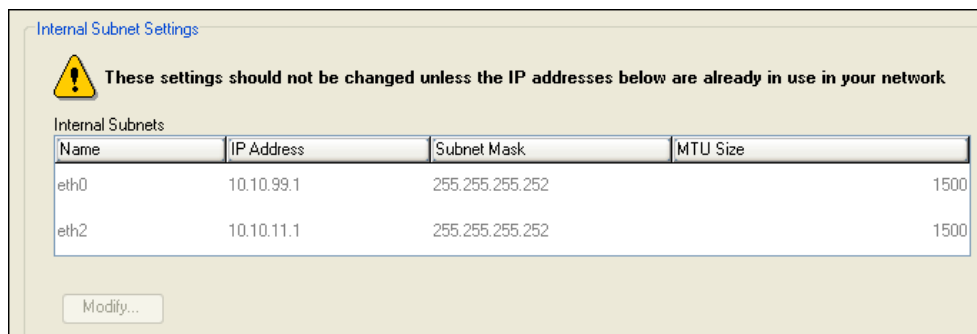**Table 99** Internal Subnet Table

| Attribute | Value | Description |
|------------|----------------------------------|-------------------------------|
| Name | <dropdown box> | A name for the subnet. |
| IP Address | <IP Address, format 10.10.10.10> | An IP address for the subnet. |

Table 99 Internal Subnet Table

| Attribute | Value | Description |
|-------------|----------------------------------|--|
| Subnet Mask | <IP Address, format 10.10.10.10> | A mask for the subnet. |
| MTU Size | <numeric string> | Maximum Transmission Size. This is the largest packet, measured in bytes, that the BCM50 can send. |

Modifying a Subnet



Warning: You should modify a subnet only if the address the subnets are currently set to are in-use elsewhere on the network.

To modify a subnet

- 1 Select the subnet from the Internal Subnet table.
- 2 Click **Modify**.
The Subnet Settings dialog appears.
- 3 Change the settings.
- 4 Press **OK**.

Internal Subnet Details

The Internal Subnet Details panel contains a table showing the OAM LAN Subnet Details. The details panel displays the DHCP lease of any PC that connects to the OAM port. This is a read-only table.

Internal Subnet Details

OAM LAN Subnet Details

| IP Address | MAC Address | Client Name | Lease Start | Lease Expiration |
|------------|-------------------|--------------------|-------------|------------------|
| 10.10.11.1 | 00:11:58:FF:9B:6E | Microprocessor NIC | Static | Static |

Chapter 58

Data network prerequisites checklist

Before you set up voice over IP (VoIP) trunks or IP telephones on a BCM50, complete the following checklists to ensure the system is correctly set up for IP telephony. Some items in the checklist do not apply to all installations.

Network diagram

To aid in installation, a network diagram provides a basic understanding of how the network is configured. Before you configure IP functionality, create a network diagram that captures all of the information described in [Table 100](#). If you are configuring IP telephones but not VoIP trunks, you do not need to answer the last two questions.

Table 100 Network diagram prerequisites

| Prerequisites | Yes |
|--|-----|
| 1.a Are you using the BCM50a or BCM50e, and has a network diagram been developed? (If you are not using the BCM50a or BCM50e, it is assumed that the BCM50 is being installed on an existing network). | |
| 1.b Does the network diagram contain any routers, switches or bridges with corresponding IP addresses and bandwidth values for WAN or LAN links? | |
| 1.c Does the network diagram contain IP Addresses, netmasks, and network locations for all BCM50 systems and other BCM products? | |
| 1.d Answer this if your system will use IP trunks; otherwise, leave it blank: Does the network diagram contain IP addresses and netmasks of any other VoIP gateways to which you must connect? | |
| 1.e Answer this only if your system will use a gatekeeper; otherwise, leave it blank: Does the network diagram contain the IP address for any Gatekeeper that may be used? | |

Network devices

[Table 101](#) contains questions about devices on the network such as firewalls, NAT devices, and DHCP servers.

- If the network uses public IP addresses, complete 2.d.

- If the network uses private IP addresses, complete 2.e. to 2.f.

Table 101 Network device checklist

| Prerequisites | Yes | No |
|---|-----|----|
| 2.a Is the network using DHCP? | | |
| 2.b If so, are you using the DHCP server on the BCM50 Router? | | |
| 2.c Is the network using private IP addresses? | | |
| 2.d Are there enough public IP addresses to accommodate all IP telephones and the BCM50? | | |
| 2.e Does the system have a firewall/NAT device, or will the BCM50 be used as a firewall/NAT device? | | |
| 2.f If the BCM50a/BCM50e is to be used as a firewall/NAT device, do the firewall rules fit within the 10 input rules and the 10 output rules that the BCM50 provides? | | |

Network assessment

Answer the questions in [Table 102](#) to ensure that the network is capable of handling IP telephony and that existing network services are not adversely affected.

Table 102 Network assessment

| Prerequisites | Yes | No |
|--|-----|----|
| 3.a Has a network assessment been completed? | | |
| 3.b Has the number of switch ports available and used in the LAN infrastructure been calculated? | | |
| 3.c Does the switch use VLANs? If so, get the VLAN port number and ID. | | |
| 3.d Have the used and available IP addresses for each LAN segment been calculated? | | |
| 3.e Has DHCP usage and location been recorded? | | |
| 3.f Has the speed and configuration of the LAN been calculated? | | |
| 3.g Has the estimated latency values between network locations been calculated? | | |
| 3.h Have the Bandwidth/CIR utilization values for all WAN links been calculated? | | |
| 3.i Has the quality of service availability on the network been calculated? | | |

Keycodes

All elements of VoIP trunks and IP telephony are locked by the BCM50 keycode system. Answer the questions in [Table 103](#) to ensure you have the appropriate keycodes. You can purchase keycodes for the amount of access you want for your system. Additional keycodes can be added later, provided there are adequate resources to handle them. For information on determining the number of keycodes required, see the *BCM50 Keycode Installation Guide* (N0016865).

Table 103 Keycodes

| Prerequisites | Yes | No |
|---|-----|----|
| 4.a Complete this question only if you are using VoIP trunks: Do you have enough VoIP keycodes? H.323 trunks use VoIP keycodes. | | |
| 4.b Complete this question only if you are using IP telephones: Do you have enough IP client keycodes? (Note: IP clients and IP telephones are a 1:1 ratio. As soon as an IP telephone is registered, it occupies an IP client, whether it is active or not.) | | |
| 4.c If you are using VoIP trunks, do you need to activate MCDN features? Note: If MCDN is already configured on your system for private networking over PRI lines, you do not need a separate MCDN keycode for VoIP trunks. | | |

System configuration for IP telephony functions

Several sections of the BCM50 must be properly configured prior to IP telephony activation. Connect the BCM50 to the network before completing this checklist. Answer the questions in [Table 104](#) to determine if your BCM50 has been correctly configured.

Table 104 BCM50 system configuration

| Prerequisites | Yes | No |
|---|-----|----|
| 5.a Is the LAN functioning correctly with the BCM50? You can test this by pinging other addresses around the network from the BCM50. | | |
| 5.b Is the WAN functioning correctly with the BCM50a/BCM50e? | | |
| 5.c Have you determined the published IP address for the system? | | |
| 5.d Have the necessary media gateway, IP client, and IP trunks resources been set? | | |
| 5.e Has a dialing plan been created, taking into account special considerations for IP telephony and private and public networking? | | |

VoIP trunks

Answer the questions in [Table 105](#) if you are configuring VoIP trunks.

Table 105 VoIP trunk provisioning

| Prerequisites | Yes | No |
|---|-----|----|
| 6.a Have you confirmed the remote gateway settings and access codes required? | | |
| 6.b Have you determined the preferred codecs required for each type of trunk and destination? | | |
| 6.c Have you set up line parameters, determined line pools for H.323 trunks, and set up destination codes? Have you determined which system telephones will have access to these routes? | | |
| 6.d If you have not already assigned target lines, have you defined how you are going to distribute them on your system? | | |
| 6.e Have you decided if you are going to employ the fallback feature? If yes, ensure that your routing and scheduling are set up. Ensure that QoS is activated. If either of these conditions are not met, your H.323 trunks will not work correctly. | | |

IP telephone records

Answer the questions in [Table 106](#) if you are installing i-series telephones.

Table 106 IP telephone provisioning

| Prerequisites | Yes | No |
|--|-----|----|
| 7.a Are IP connections and IP addresses available for all IP telephones? | | |
| 7.b If DHCP is not being used, has all telephone configuration been documented and made available for telephone installers? Hint: Use the Programming Record form. | | |
| 7.c If DHCP is not being used, or if you want to enter the port manually, has the VLAN port number been supplied, if one is being used on the switch? | | |
| 7.d Have telephone power and connectors been provisioned? | | |
| 7.e Do computers that will be using the Nortel Software Phone i2050 meet the minimum system requirements, including headset? Note: Additional details available on client page for BCM50 | | |
| 7.f Have DN records been programmed for the corresponding IP clients? (Use when manually assigning DNs to the telephones.) | | |

Chapter 59

Router overview

This section introduces the Router, available with the BCM50, and explains the two different types of routers available. As well, it introduces the key features you must configure on your router.

For more information on the router, see your router documentation.

The router is a fully functional and powerful device that connects your LAN to an external data network. In addition to configuring and connecting your LAN and WAN, it provides a wide range of data services including NAT (network address translation), DHCP (Dynamic Host Configuration Protocol), firewalls, and VPN (Virtual Private Networks) See [“VPN overview” on page 501](#) for more information.

ADSL and Ethernet configurations

The BCM50 with router is available in two versions:

- BCM50a: The BCM50 with an ADSL Modem. This version connects to external networks over an ADSL modem within the router.
- BCM50e: The BCM50 with Ethernet. This version connects to external networks over an Ethernet connection.

Router features

The router offers a wide range of features ranging from DHCP, Firewall, NAT and VPN, which you can find more information on in the *BCM50a Integrated Router Configuration Guide* (N0027181) and the *BCM50e Integrated Router Configuration Guide* (N0027182).

Chapter 60

Router panel

The router panel allows you to launch the router on your BCM50a/BCM50e.

For information on configuring the router, consult the router documentation.



Note: The Launch Router button will only appear if you have a BCM50a/BCM50e.



Accessing your router

To access your router

- 1 Press the Launch Router Configuration Tool button. The Contivity Router interface appears in a new window.



Note: The BCM50 uses the default gateway setting as your router IP address to launch the router WebGUI tool from Element Manager. If the default gateway is not set to the router IP address, you must access the router WebGUI directly from a web browser.

Chapter 61

DHCP overview

On the BCM50, DHCP can be set up in a variety of configurations, based on your needs, your existing network, and the version of the BCM50 that you have.

This module explains the various ways that DHCP can be configured on the BCM50 (including router and main configuration).

Understanding DHCP

Dynamic Host Configuration Protocol (DHCP) is a protocol used to assign IP addresses to devices on an IP network dynamically. With DHCP, each device obtains a new IP address every time it connects to the network. DHCP allows a server to keep track of the IP addresses for all IP devices on the network.

On the BCM50, DHCP reduces the complexity of configuring IP devices, particularly IP phones. Not only do IP phones receive an IP address through DHCP, they also receive additional information such as gateway and port information.

DHCP on the BCM50

The BCM50 uses DHCP in a variety of ways. The core of the BCM50 has a DHCP server. In addition to providing IP addresses to devices on the LAN, this DHCP server also provides a DHCP address to the OAM port and to the DSP LAN.

If you have a BCM50 with a router, the router also has a DHCP server that provides addresses to devices on the LAN. If the DHCP server on the embedded router is enabled, you will not be able to configure the DHCP settings on the BCM50. This prevents situations where the two DHCP servers might conflict with one another.

In addition to these two DHCP components, the BCM50 is also designed to work with other DHCP devices that may already be on the network.

Router DHCP Server

The BCM50a or a BCM50e both have a with DHCP server.

If you intend to use the BCM50a or BCM50e as a DHCP server, configure the router to be the DHCP server, as described in the *BCM50a Integrated Router Configuration Guide* (N0027181) or the *BCM50e Integrated Router Configuration Guide* (N0027182). The main module disables its own DHCP server if the router embedded DHCP server is active.

Main Module DHCP client

The main module can act as a DHCP client. As a DHCP client, the Core Module gets an IP address from another DHCP server on the network. If no other DHCP server is available, the Main Module uses a static IP address, if one is provided.

Main Module DHCP Server

The main module has a DHCP Server that provides DHCP and vendor-specific information to IP sets. It also provides DHCP information to other devices on the LAN, in the event that there is no other DHCP Server, such as a router.

DHCP network scenarios

These network scenarios explain the BCM50 DHCP functionality.

No external DHCP server

With the DHCP Status set to **Enabled (Automatic)**, which is the default, the BCM50 first attempts to get a dynamic IP address from a DHCP server. When it does not get a response, it uses the IP address 192.168.1.2/255.255.255.0. The system goes through the process of looking for a dynamic IP address each time it reboots. By default, the DHCP server is setup to give out an address range of 192.168.1.200 - 192.168.1.254.

The BCM50 DHCP Server will service all devices requesting DHCP information, such as Nortel IP phones and PCs. This is equivalent to setting the DHCP Status to Enabled (All Devices).

In this situation, the default VoIP settings are:

- S1 IP address: 192.168.1.2
- S1 Port: 7000
- S1 Action: 1
- S1 Retry count: 1
- S2 IP address: 192.168.1.2
- S2 Port: 7000
- S2 Action: 1
- S2 Retry count: 1

With external DHCP server

With the DHCP Status set to **Enabled (Automatic)**, which is the default, the BCM50 first attempts to get a dynamic IP address from a DHCP server. The external DHCP server responds with an IP address, for example 47.166.50.108/255.255.255.192, as well as domain information such as europe.nortel.com.

If it receives an address assignment from a DHCP server, the BCM50 DHCP Server will service only Nortel IP Phones requesting DHCP information. It will not service PCs. This is equivalent to setting the DHCP Status to Enabled (IP Phones only).

The VoIP settings allow any Nortel IP telephone using DHCP to get the BCM address and connect to the system:

- S1 IP address: 47.166.50.108
- S1 Port: 7000
- S1 Action: 1
- S1 Retry count: 1
- S2 IP address: 47.166.50.108
- S2 Port: 7000
- S2 Action: 1
- S2 Retry count: 1

BCM50 is unable to reach external DHCP server

In an instance where a BCM50 is unable to connect the DHCP server it had previously been using, it uses configuration information that exists from the previous lease. After the BCM50 is unable to get a dynamic IP address from a server, it uses the IP address saved from the previous lease. The VoIP information remains unchanged, since the IP address for the BCM50 LAN has not changed. The BCM50 still attempts to renew its dynamic IP address each time it reboots, so if the external DHCP server becomes available again, it will get a new dynamic IP address.

BCM50 using a dynamic address is changed to a static address

If a BCM50 had been using a dynamic IP address, and is manually changed to use a static IP address, the VoIP information for the BCM50 LAN changes as well.

For example, the BCM50 LAN IP address, S1 and S2 IP address were all set to 47.166.50.80. When the BCM50 LAN IP address is changed to a static IP address 47.166.50.114, the S1 and S2 IP addresses also change to 46.166.50.114. If the S1 or S2 IP addresses have been set manually and are different from the BCM50 customer LAN address, these addresses will not be updated.

DHCP server on BCM50a and BCM50e

The BCM50a and BCM50e include a router with a DHCP server. By default, this DHCP server will provide a dynamic IP address to the BCM50 Customer LAN. The embedded router will recognize the MAC address of the BCM50 and reserve an IP address (192.168.1.2 is the default address).

When the BCM50 requests a dynamic IP address, the embedded router sends the reserved IP address, and disables the DHCP server on the BCM50.

The embedded router supplies DHCP information as well as the vendor information for IP sets. If the reserved IP address for the BCM50 matches the S1 or S2 address and is changed, the VoIP information changes as well. If the S1 or S2 IP address have been set manually and are different from the BCM50 address, these address are not updated.

For example, a system has a BCM50 LAN IP address of 47.166.50.108, an S1 IP address of 47.50.22.34, and an S2 IP address of 47.166.50.108. If the BCM50 LAN IP address is changed, the S2 IP address changes as well, because it had matched the BCM50 LAN IP address. The S1 IP address does not change, because it had been set manually.

Whenever the BCM50 LAN IP address changes, the IP sets eventually detect this and reset themselves if they are using DHCP. If they are manually configured, then each set must be re-configured to point to the new BCM50 IP address. They will get the new VoIP information from the embedded router, which provides them with the new IP address for the BCM50.

Default configurations

The DHCP component is designed with an automatic configuration that should work in most environments.

If the BCM50 includes a router, this router is by default the DHCP Server.

The core module is by default set up as a DHCP client. It attempts to obtain its IP address over DHCP.

The core module DHCP Server setting is by default set to 'automatic'. The result of the DHCP client's request determines the functionality of the DHCP Server.

If it is successful in obtaining an IP address, the BCM50 turns on its DHCP Server to supply addresses to IP sets only. It will ignore DHCP requests from other IP devices, allowing those requests to be handled by the other DHCP Server on the network.

If it is unsuccessful in obtaining an IP address, the BCM50 turns off its DHCP client, and turns on its DHCP Server to supply addresses to all devices that request IP addresses.

Additional settings to configure

In addition to these default settings, you must also configure several other settings, including DNS and WINS server settings, and IP set information.

Chapter 62

VLAN overview

A virtual LAN (VLAN) is a logical grouping of ports, controlled by a switch, and end-stations, such as IP telephones, configured so that all ports and end-stations in the VLAN appear to be on the same physical (or extended) LAN segment even though they may be geographically separated. VLAN IDs are determined by how the VLAN switch is configured. If you are not the network administrator, you must ask whoever manages the switch what the VLAN ID range is for your system.

VLANs aim to offer the following benefits:

- VLANs are supported over all IEEE 802 LAN MAC protocols, and over shared media LANs as well as point-to-point LANs.
- VLANs facilitate easy administration of logical groups of stations that can communicate as if they were on the same LAN. They also facilitate easier administration of move, add, and change in members of these groups.
- Traffic between VLANs is restricted. Bridges forward unicast, multicast, and broadcast traffic only on LAN segments that serve the VLAN to which the traffic belongs.
- For IP telephony, VLANs provide a useful technique to separate and prioritize the telephony traffic for L2 switches.
- VLAN also provides a shield from malicious traffic that may be targeted at the IP phone in order to steal or disrupt service.
- Reuse IP addresses in different VLANs.
- As far as possible, VLANs maintain compatibility with existing bridges and end stations.
- If all bridge ports are configured to transmit and receive untagged frames, bridges will work in plug-and-play ISO/IEC 15802-3 mode. End stations are able to communicate throughout the Bridged LAN.

Choosing DHCP for VLAN

By using the BCM50 DHCP server, you can configure DHCP to auto-assign a VLAN ID to each IP telephone that registers. With this configuration, you can also choose to manually enter VLAN IDs, if you choose. The BCM50 DHCP server becomes the default VLAN that everyone can reach. The server provides the network configuration information in the default VLAN, and it also provides the VLAN information for the network.

Refer to the LAN Settings Panel for information on setting DHCP VLAN settings.

Specifying the site-specific options for VLAN

The BCM50 DHCP server resides in default VLAN and is configured to supply the VLAN information to the IP phones. The DHCP server will supply site-specific option in the DHCP offer message.

The following definition describes the Nortel i2004 specific, Site Specific option. This option uses the **reserved for site specific use** DHCP options (DHCP option values 128 to 254) and must be returned by the DHCP server as part of each DHCP OFFER and ACK message for the i2004 to accept these messages as valid. The i2004 will pull the relevant information out of this option and use it to configure the IP phone.

Format of field is: Type, Length, Data.

Type (1 octet):

- Five choices 0x80, 0x90, 0x9d, 0xbf, 0xfb (128, 144, 157, 191, 251).
- Providing a choice of five types allows the i2004 to work in environments where the initial choice may already be in use by a different vendor. Pick only one TYPE byte.

Length (1 octet): (variable depends on the message content)

Data (length octets):

- ASCII based
- format: VLAN-A : XXX , YYY . ZZZ .

where VLAN-A : uniquely identifies this as the Nortel DHCP VLAN discovery.

- -A signifies this version of this spec. Future enhancements could use -B, for example.
- ASCII , (comma) is used to separate fields.
- ASCII . (period) is used to signal end of structure.
- XXX, YYY and ZZZ are ASCII-encoded decimal numbers with a range of 0-4095. The number is used to identify the VLAN Ids. A maximum of 10 VLAN Ids can be configured. NONE means no VLAN (default VLAN).

The DHCP Offer message carrying VLAN information has no VLAN tag when it is sent out from the DHCP server. However, a VLAN tag is added to the packet at the switch port. The packets are untagged at the port of the IP phone.

Chapter 63

DHCP Server Settings panel

The DHCP Server Settings contains fields for configuring the BCM50 core as a DHCP server.



Note: The DHCP settings panel is unavailable for the BCM50a or BCM50e if DHCP is enabled on the embedded router. In that case, the DHCP Server Settings panel is replaced by a single button that opens the GUI for the embedded router.

The DHCP Server Settings panel is a multi-layered, multi-tabbed panel.

The panel tabs links provide a general description of each panel and definitions of each panel field.

Click one of the following links:

Panel tabs

[“Main panel tabs: General Settings” on page 464](#)


[“Main panel tabs: IP phone settings” on page 465](#)

[“Main panel tabs: Address Ranges” on page 467](#)

[“Main panel tabs: Lease Info” on page 469](#)

Main panel tabs: General Settings

The General Settings tab controls the main DHCP settings including WINS and DNS settings.

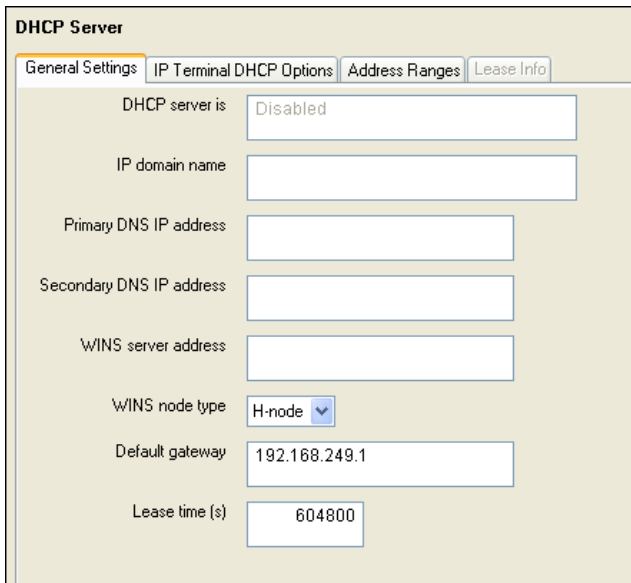

DHCP Server

General Settings | IP Terminal DHCP Options | Address Ranges | Lease Info

DHCP server is: Disabled

IP domain name:

Primary DNS IP address:

Secondary DNS IP address:

WINS server address:

WINS node type: H-node

Default gateway: 192.168.249.1

Lease time (s): 604800



Warning: Whenever you make changes to the default gateway, the DHCP server may become unavailable to clients for a brief period of time. When making changes, consider doing so at a time that will minimize the effect on users.

Table 107 General Settings

| Attribute | Value | Description |
|--------------------------|----------------------------------|--|
| The DHCP Server is | <drop-down menu> | Determines whether the enabled or disabled. |
| IP Domain Name | <alphanumeric character string> | The domain name of the network. |
| Primary DNS IP Address | <IP Address, format 10.10.10.10> | The IP address of the primary DNS to be used by DHCP clients. |
| Secondary DNS IP Address | <IP Address, format 10.10.10.10> | The IP address of the secondary DNS to be used by DHCP clients. |
| WINS Server Address | <IP Address, format 10.10.10.10> | The address of the Windows Internet Server, which resolves IP addresses on a DHCP network. |

Table 107 General Settings

| Attribute | Value | Description |
|-----------------|----------------------------------|---|
| WINS Node Type | <drop-down menu> | The type of WINS node: <ul style="list-style-type: none"> • B-node: The BCM50 first checks the HMHOSTS cache, then uses broadcast for name registration and resolution. • P-node: The BCM50 registers with a NetBIOS Name server at startup. • M-node: Mixes B- and P-node. The BCM50 the B-node method, and if that fails, uses the P-node method. H-node: Uses both B- and P-node methods. B-node is used only as a last resort. |
| Default Gateway | <IP Address, format 10.10.10.10> | The gateway through which DHCP clients connect to an external network. Generally, this is the IP address of the BCM50 router. |
| Lease Time(s) | <numeric string> | The amount of time in seconds before a DHCP lease expires and the device must request a new IP address. |


Main panel tabs: IP phone settings

The IP phone settings must be enabled for the IP Phones to function properly. If the system does not use IP Phones or if partial DHCP is enabled, this tab does not need to be configured.

The IP Phone Settings tab has two subpanels: Primary Terminal Proxy Server and Secondary Terminal Proxy Server.

Primary Terminal Proxy Server options

The Primary Terminal Proxy Server settings specify information that is sent with the DHCP lease, giving additional information to IP telephones.

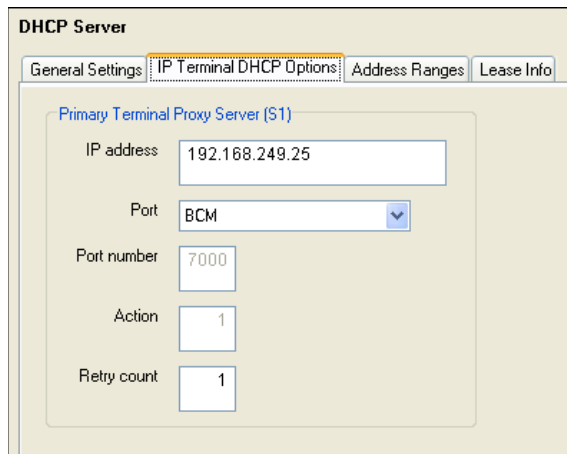

DHCP Server

General Settings | **IP Terminal DHCP Options** | Address Ranges | Lease Info

Primary Terminal Proxy Server (S1)

IP address: 192.168.249.25

Port: BCM

Port number: 7000

Action: 1


Retry count: 1

Table 108 Primary Terminal Proxy Server

| Attribute | Value | Description |
|-------------|----------------------------------|--|
| IP Address | <IP Address, format 10.10.10.10> | The IP address of the Proxy Server for IP phones. |
| Port Number | <Number> | The port number on the terminal through which IP phones connect. |
| Action | <Read-only String> | |
| Retry Count | <Number> | The delay before an IP phone retries connecting to the proxy server. |

Secondary Terminal Proxy Server options

The Secondary Terminal Proxy Server settings control a fallback option in the event that an IP phone is unable to connect with the Primary Terminal Proxy Server. The settings for the Secondary Terminal Proxy Server are the same as those for the Primary Terminal Proxy Server, described in [“Primary Terminal Proxy Server options” on page 465](#).

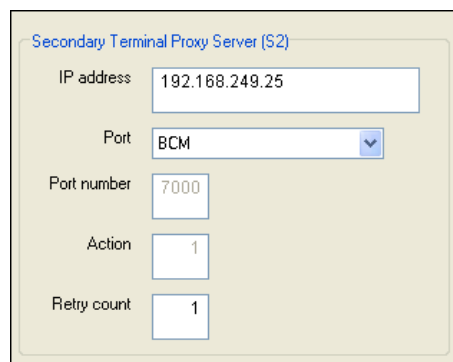

Secondary Terminal Proxy Server (S2)

IP address: 192.168.249.25

Port: BCM


Port number: 7000

Action: 1

Retry count: 1

VLAN options

If you are using a router that supports VLAN, you can configure the BCM50 as a VLAN member by entering a VLAN string into this field. This identifier is sent out to all IP terminals along with their DHCP information.

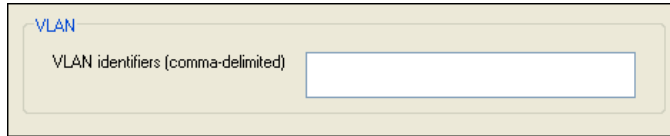


The screenshot shows a configuration window titled "VLAN" with a text input field labeled "VLAN identifiers (comma-delimited)". The field is currently empty.

Main panel tabs: Address Ranges



Warning: Whenever you make changes to the address range, the DHCP server may become unavailable to clients for a brief period of time. When making changes, consider doing so at a time that will minimize the effect on users.

The Address Ranges tab specifies IP addresses to be provided to DHCP clients. The Address Ranges tab has two tables: Included Address Ranges and Reserved Addresses. The Included Address Ranges specifies a range of IP addresses to be provided to DHCP clients.

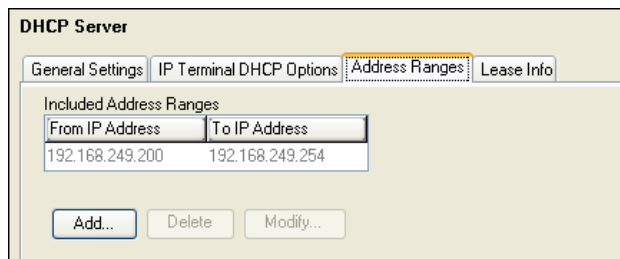

The screenshot shows the "DHCP Server" configuration window with the "Address Ranges" tab selected. Under the "Included Address Ranges" section, there is a table with two columns: "From IP Address" and "To IP Address". The values in the table are "192.168.249.200" and "192.168.249.254". Below the table are three buttons: "Add...", "Delete", and "Modify...".

Table 109 Included Address Ranges

| Attribute | Value | Description |
|-----------------|----------------------------------|---|
| From IP Address | <IP Address, format 10.10.10.10> | An IP address specifying the lowest IP address in a range. |
| To IP Address | <IP Address, format 10.10.10.10> | An IP address specifying the highest IP address in a range. |

DHCP subnets

By default, the DHCP server on the M50 will have to configure a range of IP addresses to supply the IP Sets. It defaults to use the top 20% of a subnet. For example, if an external DHCP server supplies the following IP address to the BCM50: 177.218.21.45/255.255.0, then the BCM50 DHCP server will configure itself to reserve the following range 177.218.21.200-177.218.21.254.

This default can be checked and changed using Element Manager. The Reserved Addresses table lists IP addresses that are reserved for specific clients. These IP addresses can fall within an Included Address Range, or they can be outside any Included Address Ranges.

| Reserved Addresses | | | |
|---|-------------|-------------|--------------------|
| IP Address | MAC Address | Client Name | Client Description |
| <input type="button" value="Add..."/> <input type="button" value="Delete"/> | | | |

Table 110 Reserved Addresses

| Attribute | Value | Description |
|--------------------|----------------------------------|--|
| IP Address | <IP Address, format 10.10.10.10> | The IP address to be supplied to the client. |
| MAC Address | <numeric string> | The MAC address of the client. |
| Client Name | <Alphanumeric Character String> | A name for the client. |
| Client Description | <Alphanumeric Character String> | A description of the client. |

To add a new Included Address Range

- 1 Click the **Add** button beneath the Included Address Ranges table.
- 2 Enter the appropriate **From** and **To** IP Address Ranges.
- 3 Click **OK**.

To delete an Included Address Range

- 1 Highlight the Address Range you want to delete.
- 2 Click **Delete**.

To add a Reserved Address

- 1 Click the **Add** button beneath the Reserved Address table.
- 2 Enter the appropriate information in the IP Address, MAC Address, Client Name and Client Description fields. The IP Address and MAC Address are required fields. The Client Name and Client Access are optional fields.
- 3 Click **OK**.

To delete a Reserved Address

- 1 Highlight the Reserved Address you want to delete.
- 2 Click **Delete**.



Note: You cannot exclude addresses in an address range. Instead, you can use multiple address ranges:

- 1 Create one address range for the IP addresses below the excluded addresses.
- 2 Create a second address range for the IP addresses above the excluded addresses.

For example, to create an address range from 10.10.10.10 to 10.10.10.49, but excluding addresses from 10.10.10.20 to 10.10.10.29, create one address range from 10.10.10.10 to 10.10.10.19 and one address range from 10.10.10.30 to 10.10.10.49.

Main panel tabs: Lease Info

The lease info panel is a read-only panel describing the current state of DHCP clients currently using the service. The Lease Info panel contains the Customer LAN Lease Info.

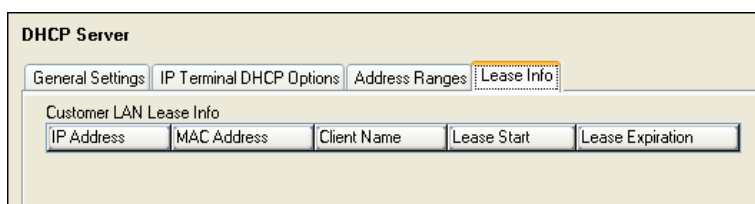


Table 111 Lease Info

| Attribute | Value | Description |
|--------------------|--|---|
| IP Address | <Read-only String> | The IP address currently supplied to the client. |
| MAC Address | <Read-only String> | The MAC address of the client. |
| Client Name | <Read-only String> | The client name, if the client has been given a name in the Reserved Addresses table. Otherwise, this field is blank. |
| Client Description | <Read-only String> | The client description, if the client has been given a description in the Reserved Addresses table. Otherwise, this field is blank. |
| Lease Start | <Read-only date format: yyyy-mm-dd hh:mm:ss> | The time that the lease began. |
| Lease Expiration | <Read-only date format: yyyy-mm-dd hh:mm:ss> | The time that the lease is set to expire. |

Chapter 64

DHCP configuration tasks

This module contains tasks for configuring DHCP on the BCM50.

DHCP configuration with router

If you have a BCM50 with an embedded router (BCM50a or BCM50e), the BCM50 will request its IP configuration from the router. By default the integrated router's IP address is 192.168.1.1. By default it will always reserve 192.168.1.2 for the BCM50 LAN. If the IP address of the router is changed, the IP address of the BCM50 LAN will also change.

Changing the default router DHCP configuration

The DHCP Server also supplies the Nortel specific information that are required by IP sets. This information includes TPS server information and VLAN ids. If the S1 and S2 IP addresses are left as their default, they'll automatically be updated when the router's IP address is changed. If the S1 and S2 addresses have been entered manually, they will not be automatically updated when the router's IP address is changed.

Configuring the BCM50 with a DHCP address

To configure the BCM50 with a DHCP address

- 1 Set up your DHCP server, if it is not already configured on your network. If you are using a BCM50 with a router, consult the router documentation for information on configuring the DHCP network.
- 2 Connect the BCM50 to the network. By default, the BCM50 will detect the presence of a DHCP server, and set itself up as a client of this DHCP server.

Configuring the BCM50 to act as a DHCP server

The BCM50 needs to act as a DHCP server only if there is no integrated router. By default, the BCM50 will attempt to detect the presence of another DHCP server, and determine whether it needs to offer DHCP services.

To configure the BCM50 DHCP component

- 1 Determine the status of the DHCP server. In most scenarios, you can leave it as automatic.
- 2 Configure the IP address range and DNS information.

- 3 Configure the proxy server settings.

Determining the status for the DHCP server

By default, the DHCP server on the BCM50 is set to **enabled-automatic**. This means that it will automatically detect whether there is already a DHCP server on the network. This feature covers all of the following scenarios:

- The network is already using DHCP from another server, but the network contains devices that require the BCM50 DHCP server, such as Nortel IP Phones.
- The network is already using DHCP from another server, and the network does not contain any devices that require the BCM50 DHCP server.
- The network does not have a DHCP server, and the BCM50 DHCP server is required to provide IP addresses to all DHCP clients.

If your network matches one of these configuration scenarios, ensure that the DHCP status is set to **enabled-automatic**.

If the network configuration does not match any of these scenarios, you can either disable the DHCP server, set the DHCP server to respond to requests from IP phones only, or set the DHCP server to respond to requests from all DHCP clients.

Using the BCM50 as a standalone DHCP server

If there is no DHCP server on the network, the BCM50 will use the following as a default IP configuration:

- IP Address: 192.168.1.2
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1

The DHCP server on the BCM50 will provide all necessary information to DHCP clients on the networks.

DHCP for IP sets

In addition to IP address information, IP sets require additional information if they are set to Full DHCP mode. This information includes the IP address, port number, action, and retry count for both the primary and secondary terminal proxy server.

Disabling the DHCP server

To disable the DHCP server

- 1 Set the DHCP setting to 'disabled'.

Chapter 65

Application Resources overview

Application Resources is a management tool for allocating system resources such as signalling channels, VDI channels, media channels, and DSP resources. While the BCM50 manages resources for different services by making resources available as they are needed, you can manage the resources by setting minimums and maximums for each service.

For information on configuring application resources, see [“Application resources panel” on page 479](#).

Types of resources

There are four types of resources managed by the Application Resources panel:

- Signalling channels
- VDI channels
- Media channels
- DSP resources

Different applications require different resources. For example, each media gateway requires one DSP Resource and one media channel, but does not require any signalling channels or VDI channels. Use the Application Resources Reservations table to see what resources are required by each application. Whenever an entry contains N/A, the application does not use that resource.

Total and Reserved Resources

The total and reserved resource options display the current levels of total and reserved resources. The total resource table displays the total resources on the system, while the reserved resource table displays what resources are currently allocated or in use.

The total number of resources for signalling channels, VDI channels, and media channels exceed the maximum capacity for the BCM50, so there is no need to manage the resources based on these channels. For example, IP Trunks are the only application that use VDI channels, and even if the BCM50 maximum of 12 IP trunks are in use, they will not exceed the total of 62 VDI channels. There is no need to modify the IP trunks minimum and maximum, since the necessary VDI resources will always be available.

The only resource you need to manage is DSP, which is used by media gateways, Voicemail and Call Centre, Fax, and Conferencing.

Setting values for application resources

For all applications, you can modify the minimum and maximum values. The minimum values reflect the number of resources that will always be reserved for a particular application, while the maximum reflects the maximum instances of an application the system will allow at once. If an application attempts to use system resources and the system is already supporting the maximum for that application, the service will be declined, regardless of whether there are sufficient resources available. A value of MAX is also acceptable, which sets the maximum number of applications allowed to the maximum number possible. For example, the System Maximum for Media Gateways is 48. If the Maximum value for Media Gateways is set to MAX, then the system will allow up to 48 Media Gateways at once, as long as there are sufficient resources available.

Changes pending

In some cases, a change you make to the application resources panel may not be able to take effect immediately. For example, if you change the number of conference calls allowed from 3 to 2, while there are 3 calls in progress, the resource allocations will not change until after one of the calls has been disconnected. In a situation where the changes cannot be made immediately, a checkmark appear in the Changes Pending box, and you can view details of these changes by clicking on the application and viewing the details below.

IP set resources

Because there is no circumstance where the number of IP sets on the system would exceed the available resources, there is generally no need to modify the resources for this application. However, if you want to limit the number of IP set connections, you can change the maximum value.

IP trunk resources

Because there is no circumstance where the number of IP trunks on the system would exceed the available resources, there is generally no need to modify the resources for this application. However, if you want to limit the number of IP trunk connections, you can change the maximum value.

Media gateway resources

Media gateways require DSP resources. Because there is often a slight delay in allocating the DSP resources, you may want to set the minimum to 2 or more. This will ensure that there is generally no delay in setting up the media gateway.

Voicemail and CC resources

These resources require DSP resources. Because there's often a slight delay in allocating DSP resources, you may want to set the minimum to 2 or more. This will ensure that there is generally no delay in setting up the application.

Fax

Fax has a maximum of 2. Each fax uses three DSP resources, so if you find that your system is always running low on resources, you may want to limit fax to 1.

Conference

The system by default limits the number of conference calls to 2. Each conference call can have 3 members.

Chapter 66

Application resources panel

The application resources panel allows you to modify resources allocated to applications on the BCM50. While the panel tracks four types of resources, DSP resources are generally the only type of resources that affect performance on the BCM50. For more information on planning your application resources, see [“Application Resources overview” on page 475](#).



Note: Do not change these settings unless you want to restrict resources.

The application resources panel consists of three tables and a panel:

- [“Total Resources” on page 479](#)
- [“Reserved Resources” on page 480](#)
- [“Application Resource Reservations” on page 480](#)
- [“Details for application” on page 482](#)

Total Resources

The total resources options show the maximum resources available for each type of resources.

The screenshot shows a panel titled "Application Resources" with a sub-section "Total Resources". It contains four input fields with the following values:


| Resource Type | Value |
|---------------------|-------|
| Signalling channels | 72 |
| VDI channels | 62 |
| Media channels | 160 |
| DSP resources | 60 |

Table 112 Total Resources

| Attribute | Value | Description |
|---------------------|-----------|--|
| Signalling channels | read-only | The total number of signalling channels on the system. |
| VDI channels | read-only | The total number of VDI channels on the system. |
| Media channels | read-only | The total number of media channels on the system. |
| DSP resources | read-only | The total number of DSP resources on the system. |

Reserved Resources

The Reserved Resources options show the resources currently reserved or in use.

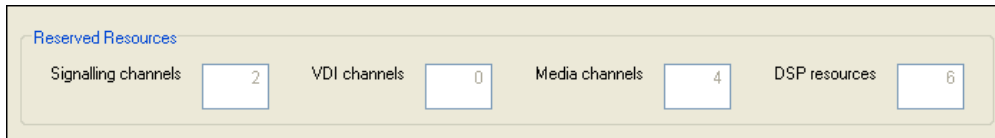

Reserved Resources


Signalling channels VDI channels Media channels DSP resources

Table 113 Reserved Resources

| Attribute | Value | Description |
|---------------------|-----------|--|
| Signalling channels | read-only | The number of signalling channels in use on the system. This number can change based on the values entered for applications, and on the those applications currently in use. |
| VDI channels | read-only | The number of VDI channels in use on the system. This number can change based on the values entered for applications, and on the those applications currently in use. |
| Media channels | read-only | The number of media channels in use on the system. This number can change based on the values entered for applications, and on the those applications currently in use. |
| DSP resources | read-only | The number of DSP resources in use on the system. This number can change based on the values entered for applications, and on the those applications currently in use. |

Application Resource Reservations

The Application Resource Reservations table allow you to set minimum and maximum values for each of six types of applications. The table contains 10 columns, eight of which are read-only. For information on determining the appropriate values for each type of application, see [“Setting values for application resources”](#) on page 476.

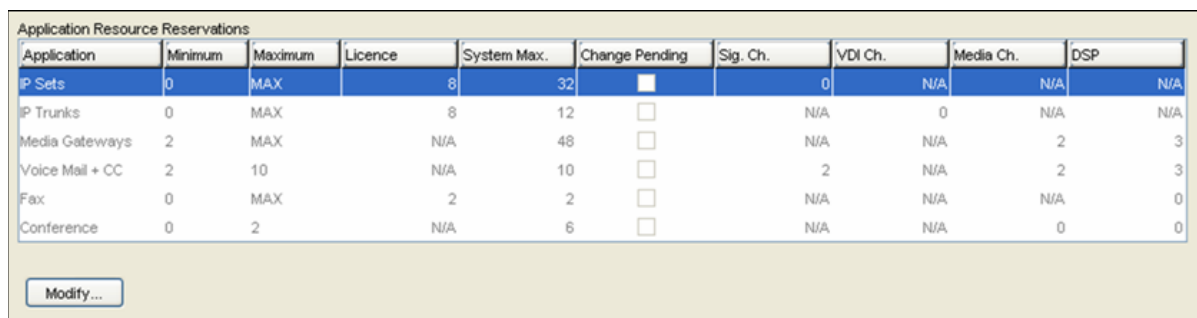

| Application | Minimum | Maximum | Licence | System Max. | Change Pending | Sig. Ch. | VDI Ch. | Media Ch. | DSP |
|-----------------|---------|---------|---------|-------------|-------------------------------------|----------|---------|-----------|-----|
| IP Sets | 0 | MAX | 8 | 32 | <input checked="" type="checkbox"/> | 0 | N/A | N/A | N/A |
| IP Trunks | 0 | MAX | 8 | 12 | <input type="checkbox"/> | N/A | 0 | N/A | N/A |
| Media Gateways | 2 | MAX | N/A | 48 | <input type="checkbox"/> | N/A | N/A | 2 | 3 |
| Voice Mail + CC | 2 | 10 | N/A | 10 | <input type="checkbox"/> | 2 | N/A | 2 | 3 |
| Fax | 0 | MAX | 2 | 2 | <input type="checkbox"/> | N/A | N/A | N/A | 0 |
| Conference | 0 | 2 | N/A | 6 | <input type="checkbox"/> | N/A | N/A | 0 | 0 |

Modify...

Table 114 Total Resources (Sheet 1 of 2)


| Attribute | Value | Description |
|-------------|-----------|------------------------------|
| Application | read-only | The name of the application. |

Table 114 Total Resources (Sheet 2 of 2)

| Attribute | Value | Description |
|----------------|----------------------------------|--|
| Minimum | Numeric value | The minimum number of resources reserved at all times for the application. If a value of 2 is entered, the system will always reserve enough resources for 2 instances of the application. |
| Maximum | Numeric value, or the string MAX | The maximum number of applications to allow. If the value is set to MAX, the system will allow up to the system maximum, as long as there are enough resources. |
| Licence | read-only | The number of licenses the system has activated for the application. If the value is N/A, the application does not require licenses. |
| System Max. | | The maximum instances of an application the BCM50 can support. |
| Change Pending | read only | If this box is checked, a change is pending to the system. Most changes take effect immediately, but in some instances, a change may wait until applications shut down. Details about changes pending can be seen in the details panel. |
| Sig. Ch. | read only | The number of signalling channels reserved by the application. This can be changed by modifying the minimum and maximum values for the application. If the field has a value of N/A, the application does not require this type of resource. |
| VDI Ch. | read only | The number of VDI channels reserved by the application. This can be changed by modifying the minimum and maximum values for the application. If the field has a value of N/A, the application does not require this type of resource. |
| Media Ch. | read only | The number of media channels reserved by the application. This can be changed by modifying the minimum and maximum values for the application. If the field has a value of N/A, the application does not require this type of resource. |
| DSP | read only | The number of DSP resources reserved by the application. This can be changed by modifying the minimum and maximum values for the application. If the field has a value of N/A, the application does not require this type of resource. |

Details for application

The Details for Application panel changes whenever a different row is selected from the Application Resource Reservations table. It reflects the current minimum and maximum limits, in instances where changes do not happen immediately.

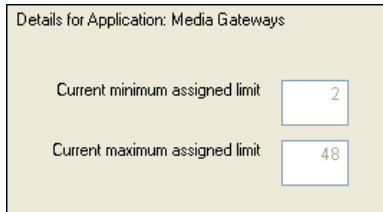

Details for Application: Media Gateways

Current minimum assigned limit

Current maximum assigned limit

Table 115 Total Resources

| Attribute | Value | Description |
|--------------------------------|-----------|--|
| Current minimum assigned limit | read-only | The current minimum assigned for an application. |
| Current maximum assigned limit | read-only | The current maximum assigned for an application. |

Chapter 67

Firewall configuration resources

Table 116 shows the port configurations that must be allowed on a firewall for the BCM50 to function properly.

Table 116 Firewall configuration

| Port | Type | Description |
|-------------|------|---|
| 5989 | TCP | Required for running Element Manager across a firewall |
| 25 | TCP | SMTP used for Unified Messaging |
| 143 | TCP | IMAP used for Unified Messaging |
| 161 | UDP | SNMP management |
| 162 | UDP | SNMP traps |
| 389 | TCP | LDAP used for Unified Messaging |
| 1222 | TCP | LAN CTE client traffic |
| 1718 | TCP | H.323 signaling traffic |
| 1719 | TCP | H.323 signaling traffic |
| 1720 | TCP | H.323 signaling traffic |
| 5000 | UDP | QoS monitor probe packets |
| 7000 | UDP | Unistim IP set signaling traffic |
| 20000-20255 | UDP | Voice Path for IP telephony which is used when 28000 range is unavailable |
| 28000-28255 | UDP | Voice Path for IP trunks |

Chapter 68

Modem overview

The modem on the BCM50 offers two key services:

- Remote Access allows users at a client station to connect to the BCM50 across a phone line using Point to Point Protocol (PPP). This allows a person working from home or from a remote location to connect to the BCM50 LAN through a modem and a phone line.
- Auto Dial Out automatically establish a PPP connection to a remote location through a phone line.

This module explains Remote Access Services and Automatic Dial Out Services. It contains the following sections:

- [“Remote Access Service” on page 485](#)
- [“Automatic Data Dial Out Service” on page 486](#)

To configure Dial-In, [“Main screen tabs: Dial-in panel” on page 489](#).

To configure Dial-Out, [“Main panel tabs: Dial-out panel” on page 493](#).

Remote Access Service

Remote Access Service (RAS) allows a client system to dial a telephone number and establish an IP link with a BCM50. This link is a connection across a telephone network, between the modem on the client system and the modem on the BCM50. Once this link is established, the client can run IP applications to access the BCM50 system’s OAM server, Web Page Server or BCM Monitor.

A user must provide credentials to establish the PPP connection. The credentials used must match the ones of a BCM50 account which has the PPPLogin privilege.

The modem must be enabled for a connection to take place. The Auto-Disable feature will automatically disable the modem if no connections are established for a configurable period of time. The Auto-Disable feature is turned on by default and can be turned off. The modem can be enabled through Element Manager, using Feature 9*8 or the Startup Profile. If the modem is enabled using the Startup Profile, the Auto-Disable capability is turned off.

The modem has a Directory Number (DN) associated with it. This DN can be used to redirect a call to the modem. A call can be redirected to the modem DN using the F70 (Transfer) feature from any sets attached to the BCM50, or it can be redirected to the modem DN using the Auto-Attendant feature. Any user on the BCM50 can redirect an active call at their set by using Feature 9*0 if they don’t know the modem DN. Feature 9*0 will also display the modem DN on any sets with at least 1 line display.

The modem can also be programmed to answer incoming lines directly after a configurable number of rings. Please be aware the most modems are programmed by default to give up on a connection after 60 seconds. If the number of rings and the amount of time it takes for the 2 modems to establish a connection take more than 60 seconds, the connection will fail. If an administrator wants a modem to answer after a longer period than this default timeout, the calling modem answer timeout should be changed accordingly.

Internal calls to the modem will always be answered immediately. External calls transferred to the modem will be answered after 10 seconds. This gives enough time to wait and collect caller ID information which will be captured and logged every time the modem connects.

The BCM50 can be configured with call-back users along with their call-back numbers. In this scenario, the user can ask BCM50 to call-back before establishing the PPP connection. The BCM50 will validate the username and use the callback number associated with the account where the username was found. The authentication will be made using the username and password associated with the account where the callback username was found. The modem will try to call a configurable amount of time with a configurable delay between attempts.

The BCM50 modem will automatically disconnect if there is no traffic on the IP link for a configurable amount of time.

The IP addresses assigned to the BCM50 and the remote client are configurable. By default the BCM50 will assign itself 10.10.14.1 and assign to the remote client 10.10.14.2. The settings can be changed to have the remote client assign itself an address or even assign the BCM50 an address.

Finally, an administrator has the capability to disconnect a modem call if they find that a modem call is in progress.

The RAS configurable options can be programmed using the Configuration>Administrator Access>Modem>Dial-In Parameters page.

Automatic Data Dial Out Service

Automatic Dial Out Service allows IP communications with a remote server through the modem.

The user can configure the BCM50 system to automatically set up a modem connection with a remote PPP server for establishing a PPP link when it needs to deliver IP data packets. Many services on the BCM have destination or source addresses which could be resolved by a route associated with the Auto Dial Out service. The SNMP Trap delivery service, Log download, Backup download, CDR records push, Software Updates pulls and the Key Codes file upload are just examples of such services. An administrator has to be aware that the use of scheduled services over the modem may not give the expected results as a modem connection could fail for many different reasons and besides the SNMP v3 trap delivery, those services have no retry capabilities.

The triggering IP data follows a configured IP route to access the PPP interface, which then activates a dialing script to cause the modem to dial a remote number, starts PPP negotiation, establishes PPP link, and delivers the data packets.

After a configurable period of inactivity over the PPP link, the modem link is disconnected. Any new IP data packets will then trigger the connection again. Please keep in mind the long distance charges when configuring the inactivity timeout. Sometimes it is cheaper to keep a link up a bit longer than to make 2 calls of shorter periods.

The number to dial has to be a number which can be dialed using a Destination Code (route). The modem cannot use a Line Pool access code to dial out.

The BCM50 will use the username and password associated with the configured account to authenticate itself with the remote server.

The IP addresses assigned to the BCM50 and the remote server are configurable. Both must be resolvable with the routes programmed for dialing out and the remote server address must match the address supplied when programming the service that will attempt to deliver the packets. More than 1 route can be programmed but all will use the same phone number to reach the remote server.

The Automatic Data Dial Out configurable options can be programmed using the Element Manager - Configuration>Administrator Access>Modem>Dial-Out Parameters page.

Modem compatibility

The internal modem is compatible with all V.34 modems, and has been tested with the following modems:

- U.S. Robotics Sportster 33.6 FaxModem (external modem)
- Microcom DeskPorte 28.8P (external modem)
- PCTEL 2304WT V.92 MDC (internal modem Dell Portable)
- U.S. Robotics Sportster 56K (external modem)

Chapter 69

Modem screen

The modem screen contains two tabs: one for configuring the dial-in modem settings and one for dial-out settings.

The Modem screen also has one field common to both tabs:

Table 117 Dial-In Panel

| Attribute | Value | Description |
|--------------|-------------|----------------------------|
| Enable modem | <check box> | Turns on or off the modem. |

Main screen tabs: Dial-in panel

The Dial-In panel controls incoming and outgoing requests to the modem for Remote Access. The Dial-in panel contains the following sets of options:

- [“PPP Interface options” on page 490](#)
- [“IP Address Specification options” on page 490](#)
- [“PPP Configuration Options” on page 491](#)
- [“Callback settings” on page 492](#)
- [“Static IP address pool options” on page 491](#)
- [“Dial-In settings” on page 492](#)

PPP Interface options

The PPP Interface allows you to view the interface status and disconnect the link.

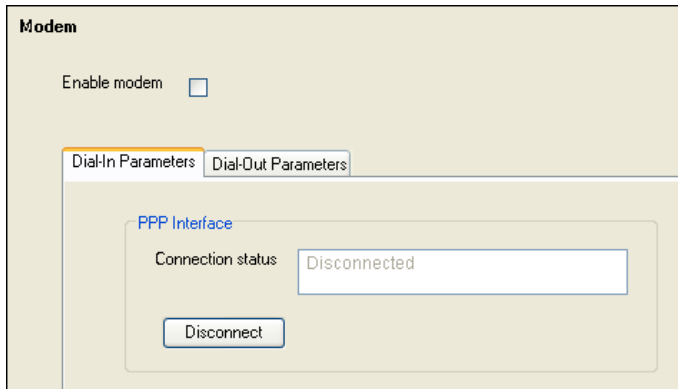


Table 118 PPP Interface

| Attribute | Value | Description |
|-------------------|----------------------------------|---|
| Connection status | <alphanumeric string, read only> | The interface status. Can be connected or disconnected. |

IP Address Specification options

The IP Address Specification options allows you to specify the IP Address for the modem or to specify that the modem will obtain an IP address from the remote client upon connecting.

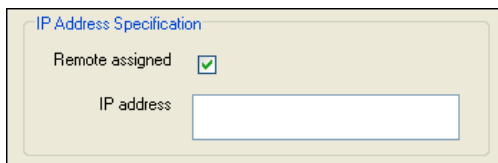


Table 119 IP address specification

| Attribute | Value | Description |
|-----------------|-----------------------|--|
| Remote Assigned | <check box> | Activating this check box sets the modem to obtain an IP address dynamically from the remote client upon connecting. |
| Address | <alphanumeric string> | The fixed IP Address the modem uses upon connecting. If the 'Obtain Address Dynamically' box is checked and the remote client provides an IP address, this field is ignored. |

PPP Configuration Options

PPP Configuration Options control details about PPP communications.

The screenshot shows a window titled "PPP Configuration" with three rows of configuration options, each with a text label and a numeric input field:

- Idle timeout (s): 3600
- Maximum Receive Unit: 500
- Maximum Transmission Unit: 500

Table 120 PPP Configuration options

| Attribute | Value | Description |
|---------------------------|------------------|--|
| Idle timeout (s) | <numeric string> | The link disconnects if the link is idle for this amount of time (in seconds). |
| Maximum Receive Unit | <numeric string> | The largest incoming packet size the modem will handle. |
| Maximum Transmission Unit | <numeric string> | Specifies the Authentication protocol the modem will accept. |

Static IP address pool options

The static IP address pool options allow you to set the IP address that the modem will allocate to the remote client.

The screenshot shows a window titled "Static IP Address Pool" with two rows of configuration options:

- Use static address pool:
- IP address: [Empty text input field]

Table 121 Static IP address pool

| Attribute | Value | Description |
|-------------------------|-----------------------|--|
| Use static address pool | <check box> | Sets whether the modem will allocate a static address to the remote client. |
| IP address | <alphanumeric string> | The IP address the system assigns when a remote client connects to the system. |

Dial-In settings

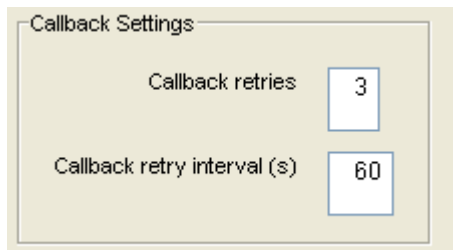
The dial-In settings control how the BCM50 handles incoming calls and directs them to the modem.

Table 122 Dial-in settings

| Attribute | Value | Description |
|---------------------------|-----------------------------|--|
| Line | <numeric string> | The line used by the BCM50 to handle incoming PPP requests. Calls to this line are directed to the modem. |
| Number of rings | <numeric string> | The number of rings to allow before the BCM50 redirects the call. Applies only when calls are coming on the line specified above. Otherwise, this value is ignored and the modem will answer 10 seconds after a call is presented. |
| Auto-disable | <check box> | Determines whether the modem uses auto-disable. The modem is auto-disabled when the auto-disable timer expires. The auto-disable timer is reset when the modem is enabled and after each call is disconnected. |
| Auto-disable timer (min.) | <numeric string> | Determines the amount of time to elapse before auto-disable is invoked. |
| Modem DN | <numeric string, read only> | The internal DN assigned to the modem. This DN can be used to transfer a call to the modem. The modem DN can be changed in the telephony settings. |

Callback settings

The callback settings control how the BCM50 modem attempts callbacks.

**Table 123** Callback settings

| Attribute | Value | Description |
|-----------------------------|------------------|--|
| Callback retries | <numeric string> | The number of callback attempts to be made, if the system cannot connect. |
| Callback retry interval (s) | <numeric string> | The amount of time in seconds before the modem reattempts a call. This interval is used before the modem attempts its first call back. |

Main panel tabs: Dial-out panel

The Dial-out panel contains parameters for controlling how the modem communicates with the remote location. The Dial-out tab contains six sets of options:

- [“PPP Interface options” on page 490](#)
- [“IP Address Specification options” on page 490](#)
- [“PPP Configuration Options” on page 491](#)
- [“Dial-out settings” on page 496](#)
- [“Static IP address pool options” on page 491](#)
- [“Dial-Out Routes options” on page 496](#)

PPP Interface options

The PPP Interface allows you to view the interface status and disconnect the link.

The screenshot shows a 'Modem' configuration window. At the top, there is an 'Enable modem' checkbox which is unchecked. Below this are two tabs: 'Dial-In Parameters' (selected) and 'Dial-Out Parameters'. Inside the 'Dial-In Parameters' tab, there is a sub-section titled 'PPP Interface'. Within this sub-section, the 'Connection status' is displayed as 'Disconnected' in a text box. Below the status box is a 'Disconnect' button.

Table 124 PPP Interface

| Attribute | Value | Description |
|-------------------|----------------------------------|---|
| Connection status | <alphanumeric string, read only> | The interface status. Can be connected or disconnected. |

IP Address Specification options

The IP Address Specification options allows you to specify the IP Address for the modem or to specify that the modem will obtain an IP address from the remote client upon connecting.

The screenshot shows an 'IP Address Specification' configuration window. It contains a 'Remote assigned' checkbox which is checked. Below this is an 'IP address' text input field which is currently empty.

Table 125 IP address specification

| Attribute | Value | Description |
|-----------------|-----------------------|--|
| Remote Assigned | <check box> | Activating this check box sets the modem to obtain an IP address dynamically from the remote client upon connecting. |
| Address | <alphanumeric string> | The fixed IP Address the modem uses upon connecting. If the 'Obtain Address Dynamically' box is checked and the remote client provides an IP address, this field is ignored. |

PPP Configuration Options

PPP Configuration Options control details about PPP communications.

PPP Configuration

Idle timeout (s) 3600

Maximum Receive Unit 500

Maximum Transmission Unit 500

Table 126 PPP Configuration options

| Attribute | Value | Description |
|---------------------------|------------------|--|
| Idle timeout (s) | <numeric string> | The link disconnects if the link is idle for this amount of time (in seconds). |
| Maximum Receive Unit | <numeric string> | The largest incoming packet size the modem will handle. |
| Maximum Transmission Unit | <numeric string> | Specifies the Authentication protocol the modem will accept. |

Static IP address pool options

The static IP address pool options allow you to set the IP address that the modem will allocate to the remote client.

Static IP Address Pool

Use static address pool

IP address

Table 127 Static IP address pool

| Attribute | Value | Description |
|-------------------------|-----------------------|--|
| Use static address pool | <check box> | Sets whether the modem will allocate a static address to the remote client. |
| IP address | <alphanumeric string> | The IP address the system assigns when a remote client connects to the system. |

Dial-out settings

The dial-out settings include fields for setting how the BCM50 handles requests to use the modem.

The screenshot shows a window titled "Dial-Out Settings". Inside the window, there are two text input fields. The first is labeled "Dial-Out number" and the second is labeled "User name".

Table 128 Dial-out settings

| Attribute | Value | Description |
|-----------------|-----------------------|--|
| Dial-out Number | <alphanumeric string> | The number that the modem dials to connect to the network. |
| User Name | <dropdown box> | The username provided to connect to the network. |

Dial-Out Routes options

The IP routes table consists of four fields:

The screenshot shows a window titled "Dial-Out Routes". Inside, there is a section labeled "IP Routes" containing a table with four columns: "Destination", "Subnet Mask", "Interface", and "Metric". Below the table are two buttons: "Add..." and "Delete".

Table 129 IP Routes

| Attribute | Value | Description |
|-------------|----------------------------------|--|
| Destination | <alphanumeric string, read-only> | Route associated with a dial-out application |
| Netmask | <alphanumeric string, read-only> | Netmask for this route |
| Gateway | <alphanumeric string, read-only> | PPP interface the route is assigned to |
| Metric | <numeric string> | Maximum number of hops to reach a destination using this route |

To add a new IP Route

- 1 Under IP Routes, click the **Add** button. The IP Routes dialog box appears.
- 2 Complete the **Destination**, **Netmask** and **Metric** fields.
- 3 Press **OK**. The new route appears in the list.

To delete an existing IP Route

- 1 In the IP Routes table, select the IP Route you want to delete.
- 2 Press **Delete**.

Chapter 70

Modem configuration tasks

This module contains tasks for configuring modems.

Configuring the modem to receive incoming calls

To configure the modem so that it receives incoming calls

- 1 Determine the line number that the modem will use, and establish the external number dialed to access this line.
- 2 Complete the Dial-in panels, including setting the line number determined in Step 1.

Configuring the modem for Automatic Dial-out Service

To configure the modem so can make deliveries to an external PPP server

- 1 Determine the number the modem must use to dial-in to the PPP server. Also determine the user-name and password. This information should be available from the administrator of the PPP server.
- 2 Complete the Dial-out panels, including the phone number, username, and password determined in Step 1.

Appendix A

VPN overview

A VPN (Virtual Private Network) is a group of systems connected across various data-transfer technologies that form a secure and private network.

BCM50 uses the Internet and tunneling protocols to create secure VPNs. These secure extranets require a protocol for safe transport from the BCM50 to another device through the Public Data Network (PDN). BCM50 uses the IPSec tunneling protocols.

Extranets can connect:

- mobile users to a fixed private network at their office over the PDN
- private networks in the two branch offices of the same corporation over PDN
- two divisions of the same corporation over the corporate intranet

When connecting two branch offices, the use of a VPN over the public data network is very efficient if the connection is required only intermittently or a dedicated point-to-point link is considered too expensive. Also, with the advent of business-to-business solutions, VPNs can be deployed to provide secure connections between corporations.

IPSec tunnels

In the IPSec Specification, there are two tunnel modes defined: tunnel mode and transport mode. BCM50 supports only tunnel mode. Tunnel mode describes a method of packetizing TCP/IP traffic to create a virtual tunnel.

Tunnels are created between servers, which are also known as gateways. This is called a Branch Office Connection. The end nodes connect to each other through gateways. These gateways set up the tunnel over the PDN on behalf of the end nodes. The establishment of the tunnel, and the PDN in between, is transparent to the end nodes which behave as if they are interacting through a router. Typically, the edge devices connecting the branches of a corporation to the ISP use VPN in this mode.

BCM50 is compatible with the Contivity Extranet Switch and the Shasta 5000.

The following sections describe configuring the tunnel portion of BCM50 using IPSec.

IPsec offers the following features:

- Branch Office support that allows you to configure an IPSec tunnel connection between two private networks.
- Support for IP address translation over encapsulation, packet-by-packet authentication.

Strong encryption and token codes.

IPSec

The IPSec tunneling protocol is supported by Nortel and other third-party vendors. IPSec is an emerging standard that offers a strong level of encryption (DES and Triple DES), integrity protection (MD5 and SHA), and the IETF-commended Internet Security Association & Key Management Protocol (ISAKMP) and Oakley Key Determination Protocols.

Encryption

All of the following encryption methods ensure that the packets have come from the original source at the secure end of the tunnel. Note that some of the encryption types will not appear on some non-US models that are restricted by US Domestic export laws.

Table 130 shows a comparison of the security provided by the available encryption and authentication methods.

Table 130 Comparing Encryption and Authentication Methods

| Method (strongest to weakest) | Encryption of IP Packet Payload | Authentication of IP Packet Payload | Authentication of Entire IP Packet |
|-------------------------------|---------------------------------|-------------------------------------|------------------------------------|
| ESP Triple DES SHA1 | Yes | Yes | No |
| ESP Triple DES MD5 | Yes | Yes | No |
| ESP 56-bit DES SHA1 | Yes | Yes | No |
| ESP 56-bit DES MD5 | Yes | Yes | No |
| ESP 40-bit DES SHA1 | Yes | Yes | No |
| ESP 40-bit DES MD5 | Yes | Yes | No |
| AH HMAC SHA1 | No | No | Yes |
| AH HMAC MD5 | No | No | Yes |



Note: Using higher-level encryption, such as Triple DES, requires more system resources and increases packet latency. You must consider this when designing your overall network.



Note: If two devices have different encryption settings, the two devices will negotiate downward until they agree on a compatible encryption capability. For example, if Switch A attempts to negotiate Triple DES encryption with Switch B that is using 56-bit DES, then the Switch B will reject Triple DES encryption in favor of the 56-bit DES.

Each of the systems must have at least one encryption setting in common. If they do not, a tunnel is not negotiated. In the example above, both systems must have 56-bit DES enabled.

The encryption level you choose is made of three components:

- the protocol
- the encryption method
- the authentication method

Protocol

The protocol can be ESP or AH.

- ESP
Encapsulating Security Payload (ESP) provides data integrity, source authentication and confidentiality for IP datagrams by encrypting the payload data to be protected. ESP uses the Data Encryption Standard (DES) and Triple DES algorithms.
- AH
Authentication Header (AH) provides data integrity and source authentication. The AH method does not encrypt data.



Note: The use of a NAT device in the IPsec tunnel path can sometimes cause the AH method to report a security violation. This occurs because the NAT device changes the IP Address of an AH authenticated packet causing the authentication of this packet to fail.

Encryption method

The encryption method can be Triple DES, 56-bit DES or 40-bit DES. Triple DES is the strongest encryption and 40-bit DES is the weakest encryption.

- Triple DES
Triple DES is an encryption block cipher algorithm that uses a 168-bit key. It uses the DES encryption algorithm three times. The first 56 bits of the key is used to encrypt the data, then the second 56 bits is used to decrypt the data. Finally, the data is encrypted once again with the third 56 bits. These three steps triple the complexity of the algorithm.
- 56-bit DES
56-bit DES is an encryption block cipher algorithm that uses a 56-bit key (with 8 bits of parity) over a 64-bit block. The 56 bits of the key are transformed and combined with a 64-bit message through a complex process of 16 steps.
- 40-bit DES
40-bit DES is an encryption block cipher algorithm that uses a 40-bit key (with 8 bits of parity) over a 64-bit block. The 40 bits of the key are transformed and combined with a 64-bit message through a complex process of 16 steps. Both 40- and 56-bit DES require the same processing demands, so you should use 56-bit DES unless local encryption laws prohibit doing so.

Appendix B

Silence compression

This section describes using silence compression on half-duplex and full-duplex links:

Silence compression reduces bandwidth requirements by as much as 50 per cent. This section explains how silence compression functions on a Business Communications Manager network.

G.711 and G.729, Annex B support Silence compression.

A key to VoIP Gateways in business applications is reducing WAN bandwidth use. Beyond speech compression, the best bandwidth-reducing technology is silence compression, also known as Voice Activity Detection (VAD). Silence compression technology identifies the periods of silence in a conversation, and stops sending IP speech packets during those periods. Telco studies show that in a typical telephone conversation, only about 36% to 40% of a full-duplex conversation is active. When one person talks, the other listens. This is half-duplex. There are important periods of silence during speaker pauses between words and phrases. By applying silence compression, average bandwidth use is reduced by the same amount. This reduction in average bandwidth requirements develops over a 20-to-30-second period as the conversation switches from one direction to another.


When a voice is being transmitted, it uses the full rate or continuous transmission rate.

The effects of silence compression on peak bandwidth requirements differ, depending on whether the link is half-duplex or full-duplex.

Silence compression on half-duplex links


The following figure shows the bandwidth requirement for one call on a half-duplex link without silence compression. Since the sender and receiver share the same channel, the peak bandwidth is double the full transmission rate. Because voice packets are transmitted even when a speaker is silent, the average bandwidth used is equal to the full transmission rate.

Figure 120 One call on a half-duplex link without silence compression

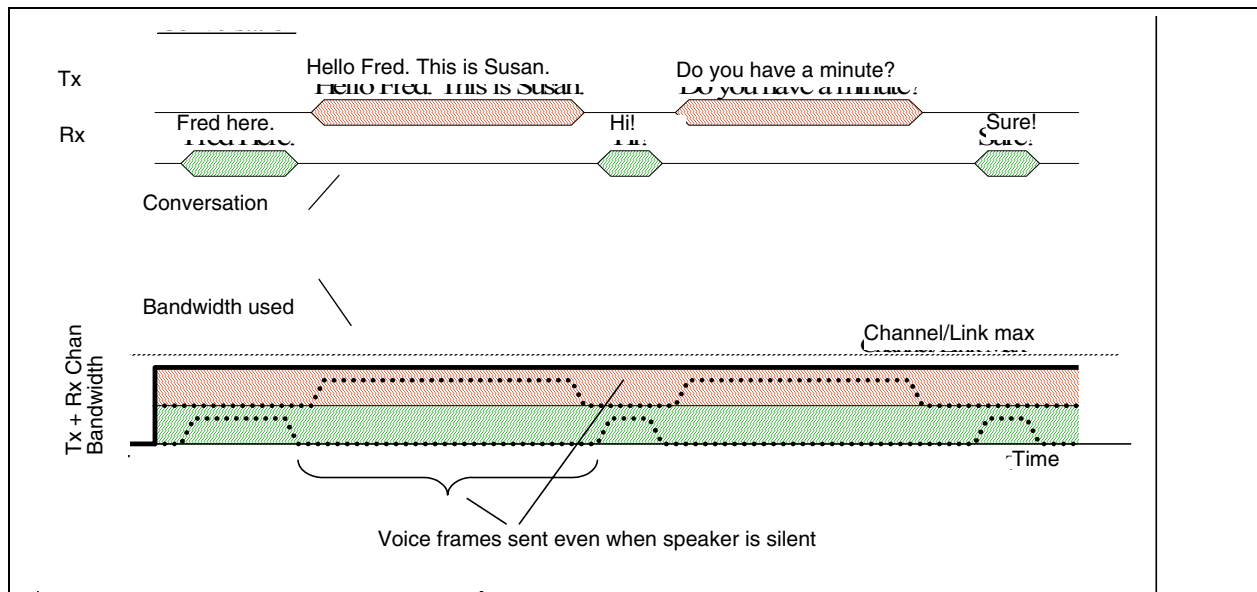


When silence compression is enabled, voice packets are only sent when a speaker is talking. In a typical voice conversation, while one speaker is talking, the other speaker is listening – a half-duplex conversation. The following figure shows the peak bandwidth requirements for one call on a half-duplex link with silence compression enabled. Because the sender and receiver alternate the use of the shared channel, the peak bandwidth requirement is equal to the full transmission rate. Only one media path is present on the channel at one time.

Figure 121 One call on a half-duplex link with silence compression

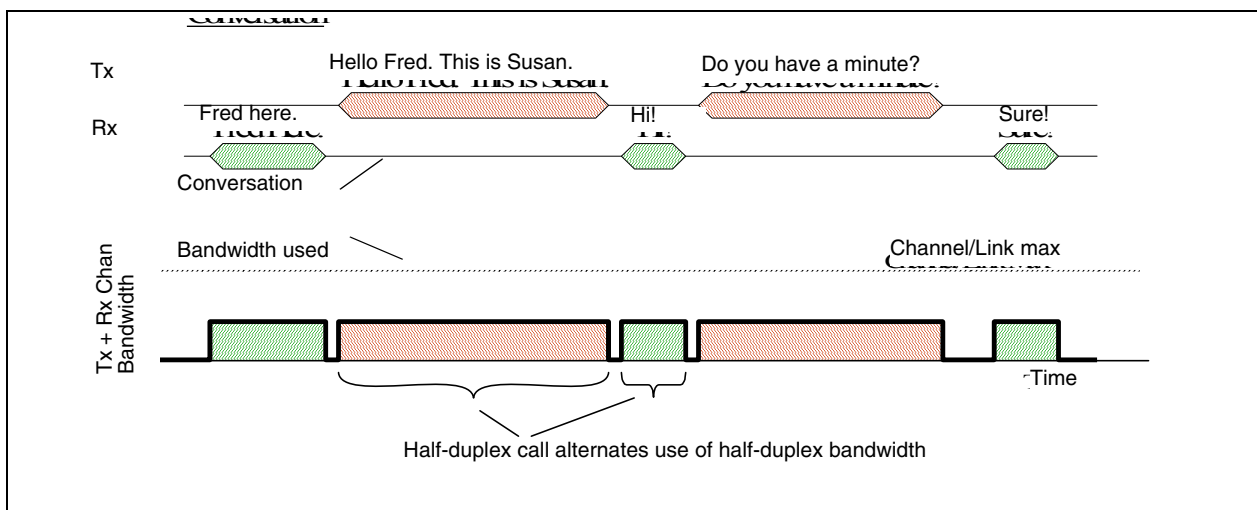

The effect of silence compression on half-duplex links is, therefore, to reduce the peak and average bandwidth requirements by approximately 50% of the full transmission rate. Because the sender and receiver are sharing the same bandwidth, this effect can be aggregated for a number of calls. The following figure shows the peak bandwidth requirements for two calls on a half-duplex link with silence compression enabled. The peak bandwidth for all calls is equal to the sum of the peak bandwidth for each individual call. In this case, that is twice the full transmission rate for the two calls.


Figure 122 Two calls on a half-duplex link with silence compression

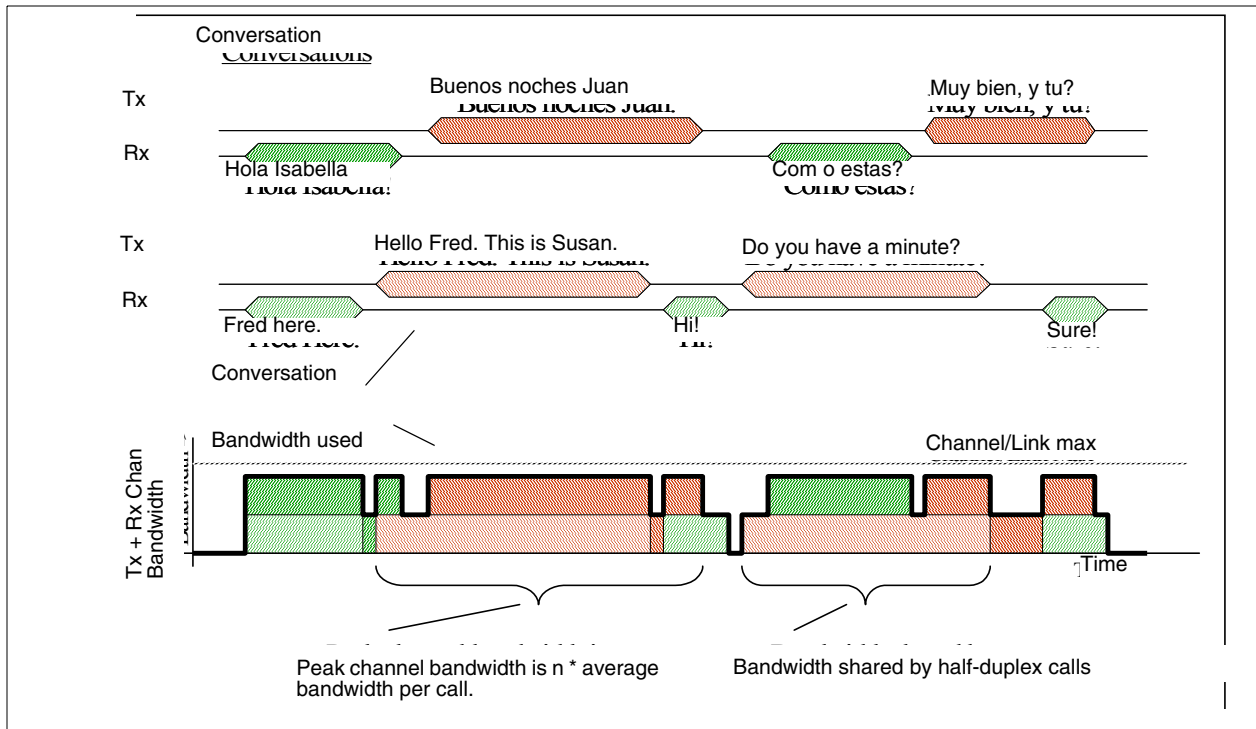

Silence compression on full-duplex links


On full-duplex links, the transmit path and the receive path are separate channels, with bandwidths usually quoted in terms of individual channels. The following figure shows the peak bandwidth requirements for one call on a full-duplex link without silence compression. Voice packets are transmitted, even when a speaker is silent. Therefore, the peak bandwidth and the average bandwidth used equals the full transmission rate for both the transmit and the receive channel.

Figure 123 One call on a full-duplex link without silence compression

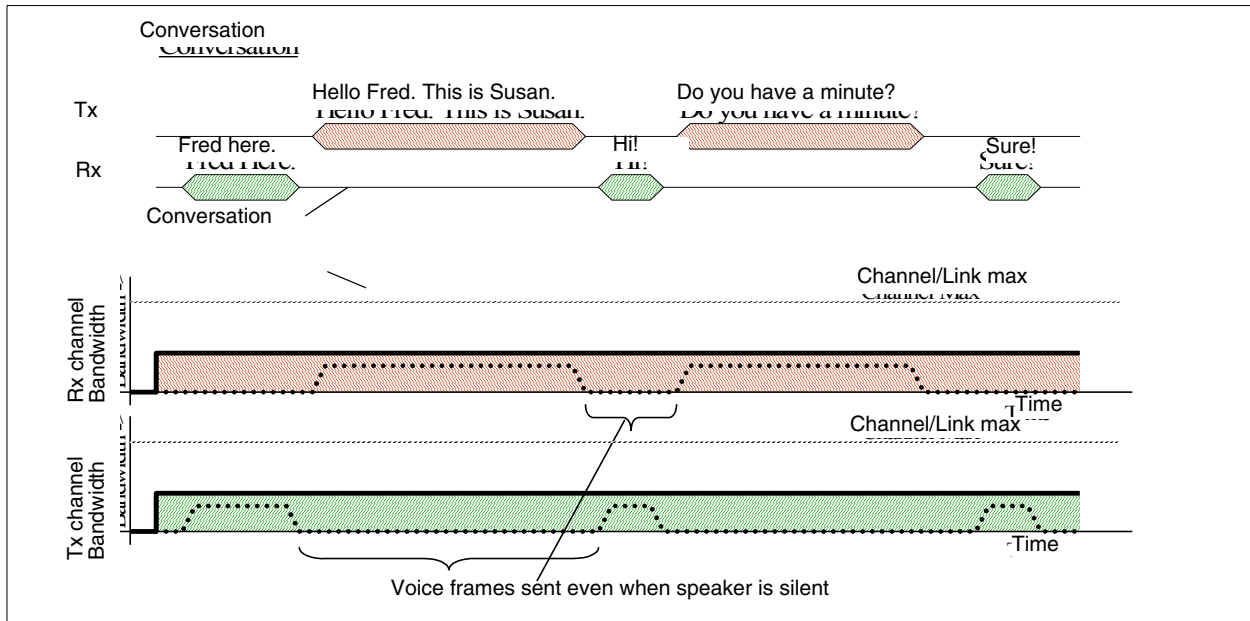

When silence compression is enabled, voice packets are only sent when a speaker is talking. When a voice is being transmitted, it uses the full-rate transmission rate. Since the sender and receiver do not share the same channel, the peak bandwidth requirement per channel is still equal to the full transmission rate. The following figure shows the peak bandwidth requirements for one call on a full-duplex link with silence compression enabled. The spare bandwidth made available by silence compression is used for lower-priority data applications that can tolerate increased delay and jitter.


Figure 124 One call on a full-duplex link with silence compression

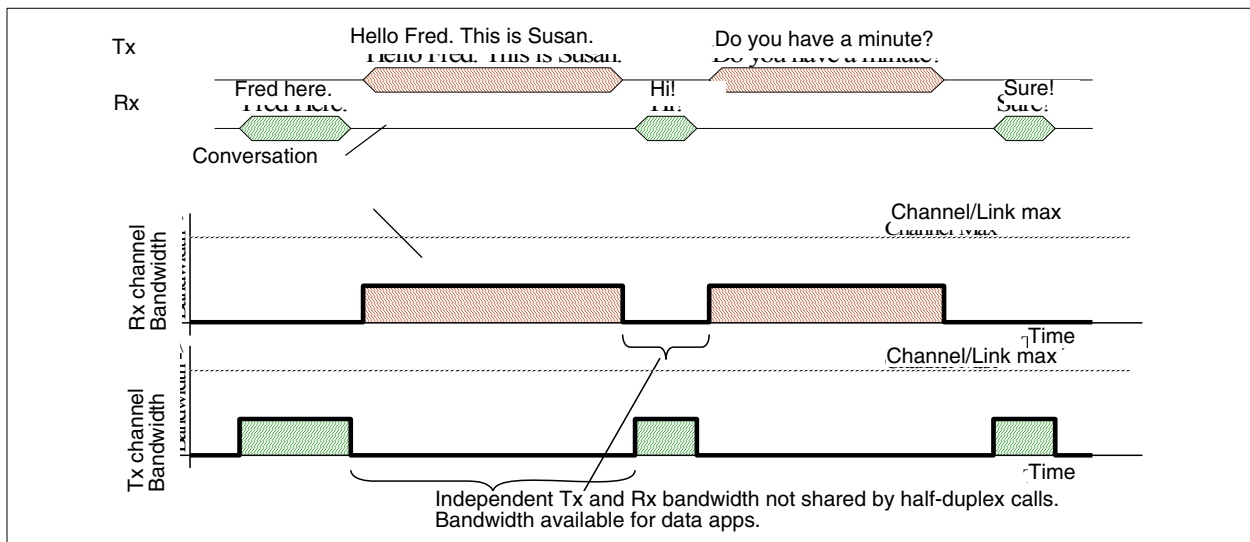

When several calls are made over a full-duplex link, all calls share the same transmit path and they share the same receive path. Since the calls are independent, the peak bandwidth must account for the possibility that all speakers at one end of the link may talk at the same time. Therefore, the peak bandwidth for n calls is $n * \text{the full transmission rate}$. The following figure shows the peak bandwidth requirements for two calls on a full-duplex link with silence compression. Note that the peak bandwidth is twice the full transmission rate, even though the average bandwidth is considerably less.

The spare bandwidth made available by silence compression is available for lower priority data applications that can tolerate increased delay and jitter.

Figure 125 Two calls on a full-duplex link with silence compression

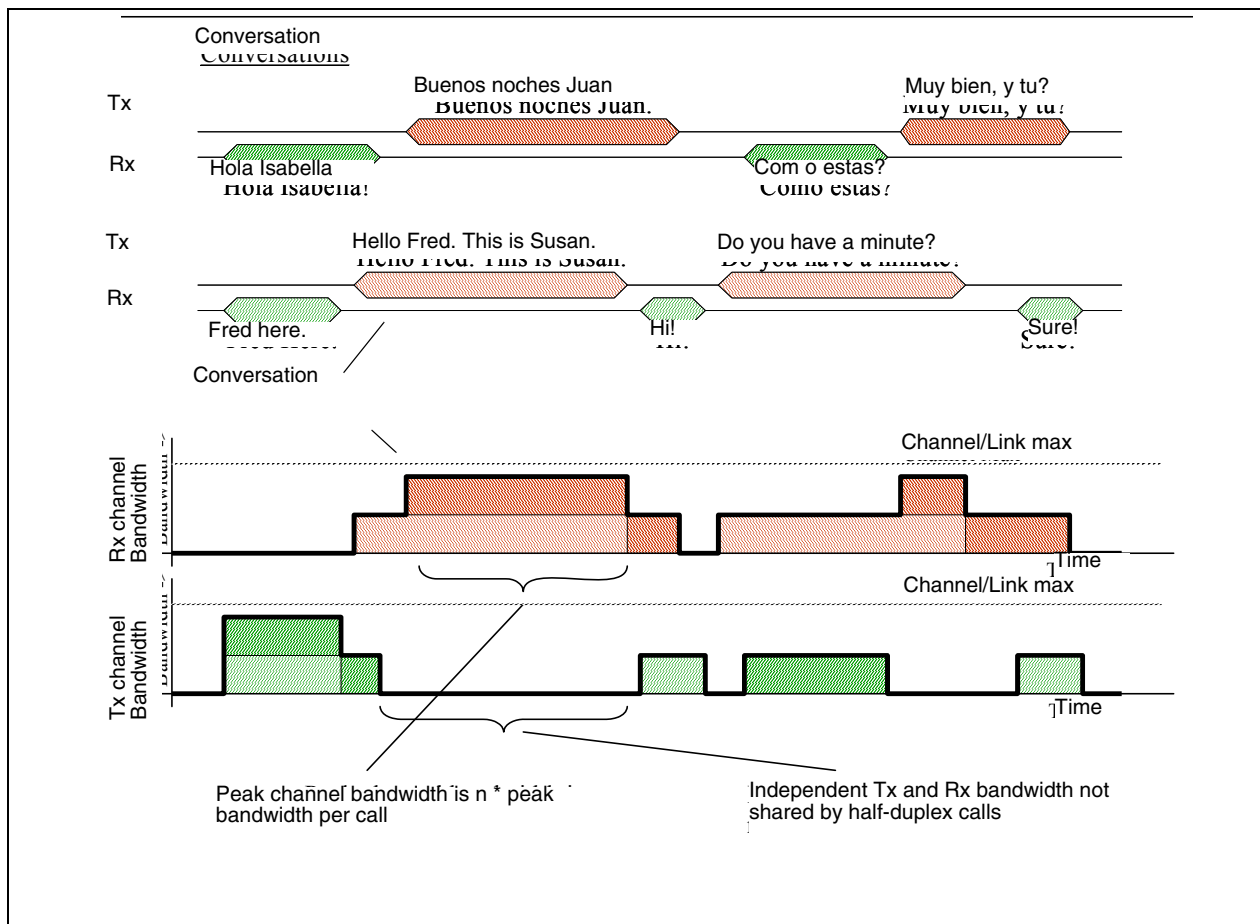

Comfort noise

To provide a more natural sound during periods of silence, comfort noise is added at the destination gateway when silence compression is active. The source gateway sends information packets to the destination gateway informing it that silence compression is active and describing what background comfort noise to insert. The source gateway only sends the information packets when it detects a significant change in background noise.

Appendix C

ISDN overview

This section provides some general information about using ISDN lines on your BCM50 system. Detailed information about ISDN is widely available through the internet. Your service provider can also provide you with specific information to help you understand what suits your requirements.

Information in this section includes:

- [“Welcome to ISDN” on page 511](#)
- [“Services and features for ISDN BRI and PRI” on page 513](#)
- [“ISDN hardware” on page 518](#)
- [“ISDN standards compatibility” on page 521](#)
- [“Planning your ISDN network” on page 521](#)
- [“Supported ISDN protocols” on page 522](#)

Welcome to ISDN

Integrated Services Digital Network (ISDN) technology provides a fast, accurate and reliable means of sending and receiving voice, data, images, text, and other information through the telecom network.

ISDN uses existing analog telephone wires and multiplex it into separate digital channels which increases bandwidth.

ISDN uses a single transport to carry multiple information types. What once required separate networks for voice, data, images, or video conferencing is now combined onto one common high-speed transport.

This section includes information about:

- [“Types of ISDN service” on page 512](#)
- [“ISDN layers” on page 512](#)
- [“ISDN bearer capability” on page 513](#)

Analog versus ISDN

ISDN offers significantly higher bandwidth and speed than analog transmission because of its end-to-end digital connectivity on all transmission circuits. Being digital allows ISDN lines to provide better quality signaling than analog POTS lines, and ISDN out-of-band data channel signaling offers faster call set up and tear down.

While an analog line carries only a single transmission at a time, an ISDN line can carry one or more voice, data, fax, and video transmissions simultaneously.

An analog modem operating at 14.4K takes about 4.5 minutes to transfer a 1MB data file and a 28.8K modem takes about half that time. Using one channel of an ISDN line, the transfer time is reduced to only 1 minute and if two ISDN channels are used, transfer time is just 30 seconds.

When transmitting data, the connect time for an average ISDN call is about three seconds per call, compared to about 21 seconds for the average analog modem call.

Types of ISDN service

Two types of ISDN services (lines) are available: Basic Rate Interface (BRI) and Primary Rate Interface (PRI). Each line is made up of separate channels known as B and D channels which transmit information simultaneously.

- BRI is known as 2B+D because it consists of two B-channels and one D-channel.
- PRI is known as 23B+D (in North America) or as 30B+D (in Europe). In North America, 23B+D consists of 23 B-channels and one D-channel (T1 carrier). In Europe, 30B+D consists of 30 B-channels and one D-channel (E1 carrier).

B channels: B channels are the bearer channel and are used to carry voice or data information and have speeds of 64 kbps. Since each ISDN link (BRI or PRI) has more than one B-channel, a user can perform more than one transmission at the same time, using a single ISDN link.

D channels: The standard signaling protocol is transmitted over a dedicated data channel called the D-channel. The D-channel carries call setup and feature activation information to the destination and has speeds of 16 kbps (BRI) and 64 kbps PRI. Data information consists of control and signal information and for BRI only, packet-switched data such as credit card verification.

ISDN layers

ISDN layers refer to the standards established to guide the manufacturers of ISDN equipment and are based on the OSI (Open Systems Interconnection) model. The layers include both physical connections, such as wiring, and logical connections, which are programmed in computer software.

When equipment is designed to the ISDN standard for one of the layers, it works with equipment for the layers above and below it. There are three layers at work in ISDN for BCM50. To support ISDN service, all three layers must be working properly.

- Layer 1: A physical connection that supports fundamental signaling passed between the ISDN network (your service provider) and the BCM50 system. When the LED on a BRI S/T Media Bay Module configured as BRI is lit, your layer 1 is functioning.
- Layer 2: A logical connection between the central office or the far end and the BCM50 system. BCM50 has one or two of these connections for each BRI link, and one for each PRI link. Without Layer 2, call processing is not possible.
- Layer 3: Also a logical connection between the ISDN network (your service provider) and the BCM50 system. For BRI lines, layer 3 is where call processing and service profile identifier (SPID) information is exchanged. This controls which central office services are available to the connection. For example, a network connection can be programmed to carry data calls.



Note: Throughout this chapter, references are made to Service profile identifiers (SPIDs). SPIDs are a part of the BRI National ISDN standard. SPIDs are not used in the ETSI BRI standard or on PRI.

The three layers mentioned above is important when you are installing, maintaining, and troubleshooting an ISDN system. For information about troubleshooting ISDN, see the *BCM50 Administration Guide* (N0016868).

ISDN bearer capability

Bearer capability describes the transmission standard used by the BRI or PRI line so that it can work within a larger ISDN hardware and software network.

The bearer capability for BRI and PRI is voice/speech, 3.1 kHz audio (fax), and data (unrestricted 64 kbps, restricted 64 kbps, or 56 kbps).

Services and features for ISDN BRI and PRI

As part of an ISDN digital network, your system supports enhanced capabilities and features, including:

- faster call set up and tear down
- high quality voice transmission
- dial-up Internet and local area network (LAN) access
- video transmission
- network name display
- name and number blocking (PRI, BRI and analog)
- access to public protocols

This section discusses features and services in the following sections:

- “Network name display” on page 515
- “Name and number blocking (ONN)” on page 516
- “Call by Call Service Selection for PRI” on page 516
- “Emergency 911 dialing” on page 517
- “2-way DID” on page 517
- “Dialing plan and PRI” on page 517

PRI services and features

The services and features provided over PRI lines include:

- Call-by-call service selection (NI protocol)
- Emergency 911 dialing, internal extension number transmission
- access to Meridian 1 private networking (SL-1 protocol)

BRI services and features

The services and features provided over BRI lines include:

- data transmission at speeds up to 128 kbps per loop (depending on the bandwidth supported by your service provider)
- shared digital lines for voice and data ISDN terminal equipment

BCM50 Basic Rate Interface (BRI) also support D-channel packet service between a network and terminal connection. This allows you to add applications such as point-of-sale terminals (POSTA) without additional network connections. Connecting a POSTA allows transaction terminals (devices where you swipe credit or debit cards) to transmit information using the D channel of the BRI line, while the B channels of the BRI line remain available for voice and data calls. A special adapter links transaction equipment, such as cash registers, credit card verification rigs, and point-of-sale terminals, to the X.25 network, which is a data communications network designed to transmit information in the form of small data packets.

To support the D-packet service, your ISDN network and financial institution must be equipped with a D-packet handler. To convert the protocol used by the transaction equipment to the X.25 protocol, your ISDN network must also be equipped with an integrated X.25 PAD which works with the following versions of X.25: Datapac 32011, CCITT, T3POS, ITT and API. The ISDN service package you order must include D-packet service (for example, Package P in the United States; Microlink™ with D-channel in Canada).

Your service provider supplies a Terminal Endpoint Identifier (TEI) and DN to support D-packet service. The TEI is a number between 00 and 63 (in Canada, the default range is 21-63). Your service provider may also supply you with a DN to program your D-packet device. The DN for D-packet service becomes part of the dialing string used by the D-packet to call the packet handler.

Service provider features

BCM50 supports the following ISDN services and features offered by ISDN service providers:

- D-channel packet service (BRI only) to support devices such as transaction terminals. Transaction terminals are used to swipe credit or debit cards and transmit the information to a financial institution in data packets.
- Calling number identification (appears on both BCM50 sets and ISDN terminal equipment with the capability to show the information).
- Multi-Line hunt or DN hunting which switches a call to another ISDN line if the line usually used by the Network DN is busy. (*BRI only*)
- Subaddressing of terminal equipment (TE) on the same BRI loop. However, terminal equipment which supports sub-addressing is not commonly available in North America. (*BRI only*)

Transmission of B-channel packet data using nailed up trunks is not supported by BCM50.

Contact your ISDN service provider for more information about these services and features. For more information about ordering ISDN service in North America, see [“Ordering ISDN PRI” on page 521](#) and [“Ordering ISDN BRI” on page 521](#).

The terminal equipment (TE) connected to the BCM50 system can use some feature codes supported by the ISDN service provider.

Network name display

This feature allows ISDN to deliver the Name information of the users to those who are involved in a call that is on a public or private network.

Your BCM50 system displays the name of an incoming call when it is available from the service provider. If the Calling Party Name has the status of *private* it may be displayed as `Private name` if that is how the service provider has indicated that it should be displayed. If the Calling Party Name is unavailable it may be displayed as `Unknown name`.

Your system might display the name of the called party on an outgoing call, if it is provided by your service provider. Your system sends the Business Name concatenated with the set name on an outgoing call but only after the Business Name has been programmed.

The available features include:

- Receiving Connected Name
- Receiving Calling Name

- Receiving Redirected Name
- Sending Connected Name
- Sending Calling Party Name

Consult your customer service representative to determine which of these features is compatible with your service provider.

Name and number blocking (ONN)

(North America only)

When activated **FEATURE 819** allows you to block the outgoing name and/or number on a per-call basis. Name and number blocking can be used with a BCM50 set.

Consult your customer service representative to determine whether or not this feature is compatible with your provider.

Call by Call Service Selection for PRI

(North America only)

PRI lines can be dynamically allocated to different service types with the Call by Call feature. PRI lines do not have to be pre-allocated to a given service type. Outgoing calls are routed through a dedicated PRI Pool and the calls can be routed based on various schedules.

The service types that may be available, depending on your service provider are described below:

- **Public:** Public service calls connect your BCM50 set with a Central Office (CO). DID and DOD calls are supported.
- **Private:** Private service calls connect your BCM50 set with a Virtual Private Network. DID and DOD calls are supported. A private dialing plan may be used.
- **TIE:** TIE services are private incoming and outgoing services that connect Private Branch Exchanges (PBX) such as BCM50.
- **FX (Foreign Exchange):** FX service calls logically connect your BCM50 telephone to a remote CO. It provides the equivalent of local service at the distant exchange.
- **OUTWATS:** OUTWATS is for outgoing calls. This allows you to originate calls to telephones in a specific geographical area called a zone or band. Typically a flat monthly fee is charged for this service.
- **Inwats:** Inwats is a type of long distance service which allows you to receive calls originating within specified areas without a charge to the caller. A toll-free number is assigned to allow for reversed billing.

Consult your customer service representative to determine whether or not this feature is compatible with your provider.

Emergency 911 dialing

(North America only)

The ISDN PRI feature is capable of transmitting the telephone number and internal extension number of a calling station dialing 911 to the Public Switched Telephone Network (PSTN). State and local requirements for support of Emergency 911 dialing service by Customer Premises Equipment vary. Consult your local telecommunications service provider regarding compliance with applicable laws and regulations. For most installations the following configuration rules should be followed, unless local regulations require a modification.

- All PSTN connections must be over PRI.
- In order for all sets to be reached from a Public Safety Answering Position (PSAP), the system must be configured for DID access to all sets. In order to reduce confusion, the dial digits for each set should be configured to correspond to the set extension number.
- The OLI digits for each set should be identical to the DID dialed digits for the set.
- The routing table should route 911 to a PRI line pool.
- If attendant notification is required, the routing table must be set up for all 911 calls to use a dedicated line which has an appearance on the attendant console.
- The actual digit string 911 is not hard-coded into the system. More than one emergency number can be supported.

If transmission of internal extension numbers is not required or desired, then it is recommended that the person in charge of the system maintain a site map or location directory that allows emergency personnel to rapidly locate a BCM50 set given its DID number. This list should be kept up to date and readily available.

IP telephony note: Ensure that you **do not** apply a 911 route to an IP telephone that is off the premises where the PSAP is connected to the system.

2-way DID

With PRI the same lines can be used for receiving direct inward dialing (DID) and for making direct outward dialing (DOD) calls.

The dialing plan configured by your customer service representative determines how calls are routed. Consult your customer service representative to determine whether or not this feature is compatible with your service provider.

Dialing plan and PRI

The Dialing Plan supports PRI connectivity to public and private networks. The dialing plan is a collection of features responsible for processing and routing incoming and outgoing calls. All PRI calls must go through a dialing plan.

Notes about the dialing plan:

- allows incoming calls to be routed to sets based on service type and digits received
- provides the ability to map user-dialed digits to a service type on a Call by Call basis
- allows long distance carrier selection through user-dialed Carrier Access Codes

Consult your customer service representative to determine how your dialing plan is configured.

ISDN hardware

To support connections to an ISDN network and ISDN terminal equipment, your BCM50 must be equipped with a BRI S/T Media Bay Module (BRIM) or a Digital Trunk Media Bay Module (DTM) card configured for PRI.

This section describes the hardware:

- [“PRI hardware” on page 518](#)
- [“BRI hardware” on page 518](#)

PRI hardware

The Digital Trunk Media Bay Module (DTM) is configured for PRI. In most PRI network configurations, you need one DTM configured as PRI to act as the primary clock reference. The only time when you may not have a DTM designated as the PRI primary clock reference is in a network where your BCM50 system is connected back-to-back with another switch using a PRI link. If the other switch is loop-timed to your BCM50 system, your DTM (PRI) can be designated as a timing master.

If your BCM50 has more than one DTM configured as PRI, you must assign the first DTM as the primary reference, the second DTM as the secondary reference.

If the system has a BRI module, it should be set as the timing master when a DTM in the same network is defined as the primary reference.

BRI hardware

The loops on the BRI module can be programmed to support either network or terminal connections. This allows you to customize your arrangement of lines, voice terminals, data terminals and other ISDN equipment. This section describes some basic hardware configurations for network and terminal connections for each loop type.

A BRI module provides four loops. Each loop can be individually programmed as:


- an S reference point connection (S loop) to ISDN terminal equipment (TE), or
- a T or S reference point connection (T loop or S loop) to an ISDN network using an external NT1

S Reference Point

The S reference point connection provides either a point-to-point or point-to-multipoint digital connection between BCM50 and ISDN terminal equipment (TE) that uses an S interface. Refer to [Figure 126](#).

S loops support up to seven ISDN DN, which identify TE to the BCM50 system.

Figure 126 S reference point

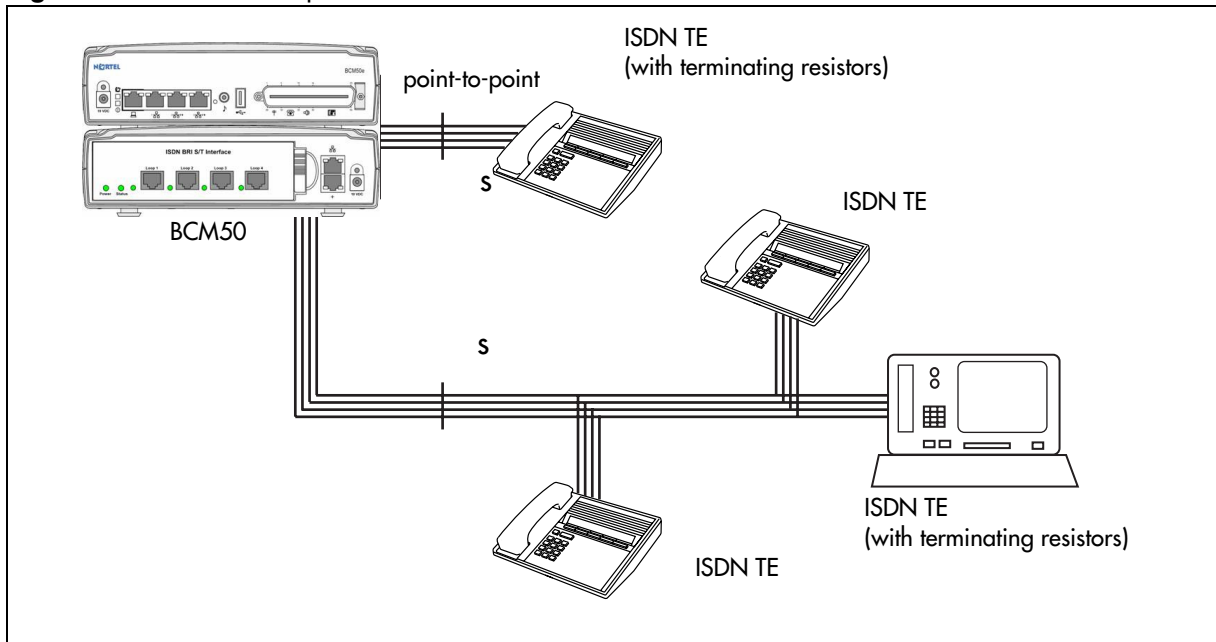


T Reference Points

The T reference point connections provide a point-to-point digital connection between the ISDN network and BCM50. Refer to [Figure 127](#).

A T loop provides lines that can be shared by all BCM50 telephones, peripherals and applications, and ISDN TE.

Figure 127 T reference point

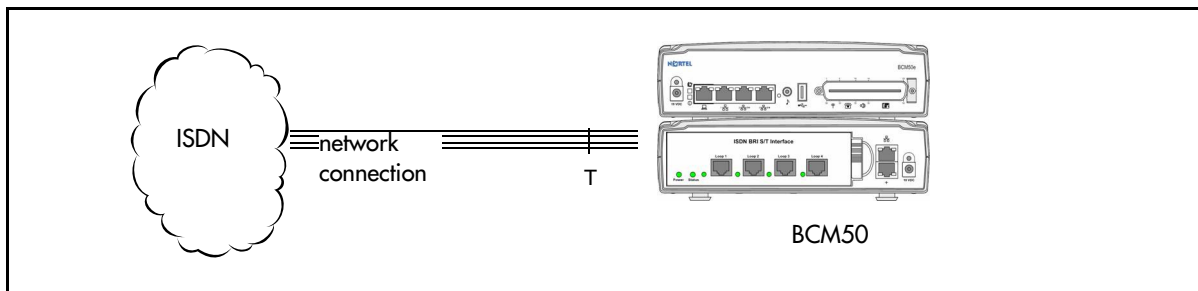

A T loop can be used in combination with an S loop to provide D-packet service for a point-of-sale terminal adapter (POSTA) or other D-packet device. D-packet service is a 16 kbps data transmission service that uses the D-channel of an ISDN line. The T and S loops must be on the same physical module.

Clock source for ISDN

Systems with ISDN interfaces need to synchronize clocking with the ISDN network and any ISDN terminal equipment connected to the network. Systems synchronize clocking to the first functionally available network connection. If there are excessive errors on the reference network connection, the next available network connection is used for clock synchronization. The clock synchronization process generates alarm codes and event messages. Clock synchronization is supported by the DTM, and BRI module

The BCM50 derives timing from the network using T reference points (loops). Terminal equipment on S reference points (loops) derive timing from the BCM50 system.

When you configure the network connections to the BCM50, you should take into account the system preferences for selecting loops for synchronization:

- lower numbered loops have preference over higher numbered loops
- the loop preference order is: 201, 202, 203, 204 etc.
- the system skips S and analog loops, when selecting a network connection for synchronization

Systems with only S loops act as timing masters for the attached terminal equipment (TE), and are not synchronized to the network. ISDN TE without access to a network connection (BRI lines) has limited or no functionality.

If your system has both a BRI S/T configured as BRI, and a DTM configured as PRI, it is recommended that you use PRI as the primary clock source. See [“PRI hardware” on page 518](#).

ISDN BRI NT1 equipment

The NT1 (network termination type 1) connects an S interface (four-wire) to a U interface (two-wire). In most cases, it connects loops from a BRI module to the network connection, which uses the U interface.

The NT1 converts and reformats data so it can be transmitted to and from the S or T connection. In addition, it manages the maintenance messages travelling between the network and the NT1, and between the NT1 and the BCM50 system.

The NT1 from Nortel is packaged two ways:

- a stand alone package which contains one NT1 card (NTBX80XX) and a power supply (NTBX81XX)
- a modular package which contains up to 12 NT1 cards (NTBX83XX) and a power supply (NTBX86AA)

ISDN standards compatibility

In North America, BCM50 ISDN equipment supports National ISDN standards for basic call and calling line identification services. BCM50 BRI is compliant with National ISDN-1 and PRI is compliant with National ISDN-2.

BCM50 does not support EKTS (Electronic Key Telephone System) on PRI.\

In Europe, BCM50 supports ETSI Euro and ETSI QSIG standards, and PRI SL-1 protocol.

Planning your ISDN network

Consult the *BCM50 Installation & Maintenance Guide* (N0027152) to determine a configuration of ISDN trunks and terminal equipment (TE) for the BCM50 system, then order the appropriate ISDN capability package from your ISDN service provider.

For ISDN BRI service, your service provider supplies service profile identifiers (SPIDs), network directory numbers (Network DNs), terminal endpoint identifiers (TEIs), and other information as required to program your BCM50, TE and other ISDN equipment.

BCM50 does not support any package with EKTS or CACH. EKTS is a package of features provided by the service provider and may include features such as Call Forwarding, Link, Three-Way Calling, and Calling Party Identification.

Ordering ISDN PRI

This section provides information about how to order ISDN PRI service for your BCM50.

Ordering ISDN PRI service in Canada

Ordering ISDN PRI service in the Canada/United States from your service provider. Set the BCM50 equipment to the PRI protocol indicated by your service provider.

Ordering ISDN PRI service outside of Canada and the United States

Outside of Canada and the United States order Euro ISDN PRI and/or BRI service from your service provider. Set the BCM50 equipment to the Euro ISDN protocol.

Ordering ISDN BRI

This section provides information about how to order ISDN BRI service for your BCM50.

Ordering ISDN BRI service in Canada

In Canada, order Microlink™ service, the trade name for standard BRI service. You can order either regular Microlink™ service, which includes the CLID feature, or Centrex Microlink™, which includes access to additional ISDN network features, including Call Forwarding.

When ordering Microlink™ service, it must be ordered with EKTS turned off. If you will be using a point-of-sale terminal adapter (POSTA), ask for D-packet service to be enabled.

Ordering ISDN BRI service in the United States

In the United States, regardless of the CO (Central Office) type, order National ISDN BRI-NI-1 with EKTS (Electronic Key Telephone System) turned off. Use the following packages as a guideline for ordering your National ISDN BRI-NI-1. However, we recommend using packages M or P with the BCM50 system. Contact your service provider for more information about the capability packages it offers. Bellcore/National ISDN Users Forum (NIUF ISDN packages supported by BCM50 (for ordering in U.S.).

| | Capability | Feature set | Optional features | Point-of-sale | Voice | Data |
|---|--|---|--|---------------|-------|------|
| M | Alternate voice/circuit-switched data on both B-channels | -- | CLID | -- | X | X |
| P | Alternate voice/circuit-switched data on both B-channels D-channel packet | flexible calling for voice (not supported by BCM50) Basic D-Channel Packet | additional call offering (not supported by BCM50) calling line identification | X | X | X |

If you want to transmit both voice and data, and support D-channel packet service, order package P. However, BCM50 does not support the flexible calling for voice and additional call offering features that are included in package P.

Multi-Line Hunt may be ordered with your package. When a telephone number (the Network DN) in the group of numbers assigned by your service providers is busy, the Multi-Line Hunt feature connects the call to another telephone number in the group. BCM50 supports the feature only on point-to-point, network connections (T loop). Check with your service provider for more information about Multi-Line Hunt.

Any of the ISDN packages will allow you to use sub-addressing, but your ISDN TE must be equipped to use sub-addressing for the feature to work.

Ordering ISDN BRI service outside Canada or the United States

Outside of Canada or the United States order Euro ISDN PRI and/or BRI service from your service provider. Set the BCM50 equipment to the Euro ISDN protocol.

Supported ISDN protocols

The switch used by your service provider must be running the appropriate protocol software and the correct version of that software to support ISDN PRI and BRI. Each protocol is different and supports different services. Contact your service provider to make sure that your ISDN connection has the protocol you require.

Index

Numerics

2-way DID, PRI 517

4ESS

- available services 88
- call by call services support 224
- PRI protocol 227, 238

71, link code 237

7100

- external code 257

78, 1.5-second pause 237

804, wait for dial tone code 237

808, long tones 237

A

absorbed length 230, 386, 387

access

- remote, public network 435

access codes

- default table 218
- line pool 221
- local access code 272
- national access code 272
- numbering plan overview 206
- private access code 271
- programming 264, 270
- special (international) access code 272

adaptive, sampling 186

Add Users Wizard

- target lines, manual entry 107

advice of charge - end of call (AOCE), ETSI QSIG networking 50, 309

AH

- encryption protocol 503
- NAT restriction 503

Alias Names, Local Gateway 97

alpha tagging 194

analog trunks

- module mode 83

ANI number, programming 124

answer backup, Prime set for lines 120

Answer mode 124

Answer timer 84

Answer with DISA, trunk mode 121

answering calls

- Call Display services 196
- Privacy 113

ANY character 248

ASM

- Call Park prefix 219, 261

ATA2

- Call Park prefix 219, 261
- external code 257

Authentication Header, see AH 503

Auto DN

- overview 206

auto privacy, lines 123

auto-answer trunk

- DISA 408, 415
- private auto DN 270
- public auto DN 264
- remote restrictions 110
- T1 408, 415

autodial

- networks 245

automatic route selection (also see call routing) 222

B

B channels 512

- selection sequence 84
- sequence, ETSI QSIG networking 49, 301

background noise 509

backup answering

- prime set for lines 120

bandwidth

- available for other data 509
- silence compression 505

BCM_CoreTelephony_Telephony.DialTimeout 256

BCM_CoreTelephony_Telephony.DNLength 256

BCM50

- MCDN private networking 285
- MCDN system requirements 299
- networking multiple systems 315
- networking, MCDN with M1 42
- numbering plans overview 206
- port settings 365
- signaling method 371

- system networking 282
 - tandem networking 36
 - using a gatekeeper 366
 - using firewalls 365
- break-in, MCDN 289
- BRI**
(see also ISDN) 518
- Answer with DISA 124
 - auto privacy 123
 - clock source 84, 520
 - full autohold 123
 - mapping to target lines 120
 - module function 518
 - overlap receiving 187
 - programming 108
 - services and features 513
 - use auxiliary ringer 123
- buffers, VoIP trunks 100
- Business Communications Manager**
network device prerequisites 450
- Overview 24
 - system configuration prerequisites 451
- busy
- tone, fast 413, 436
- busy tone
- line settings 125
- button programming
- system speed dials 335
- bypass call diversion 53, 319
- C**
- call by call services
- foreign exchange (FX) 224
 - International INWATS 224
 - INWATS 224
 - Nine hundred (900) 224
 - OUTWATS 224
 - private 224
 - public calls 224
 - routing table 226
 - service selection 87, 226
 - supporting protocols 136, 223
 - supporting switches 224
 - switched digital 224
 - Tie lines 224
- Call Center**
DN length change 212, 258
- call display
- services 196
- call diversion
- bypass 53, 319
 - DPNSS 1 53, 319
 - follow-me 53, 320
 - immediate 53, 319
 - on busy 53, 319
 - on no reply 53, 319
- Call Forward**
DPNSS Embark switch 51, 320
- call forward
- maximum transits 85
- call information
- displaying information 196
- Call Offer, DPNSS** 56, 322
- Call Park**
analog telephones 219, 261
- initiating (74) 218, 260
 - prefix 218, 260
- call routing
- also see Automatic Route Selection (ARS) 222
 - tandem networks 43
- Call Signaling, Local Gateway** 96
- call-by-call services
- PRI 516
- calling outside 68, 115
- calling party name display 194
- CallPilot**
DN length changes 212, 258
- CallPilot features**
Auto Attendant 24
- Fax Answering 24
 - Voicemail 24
- calls
- making 391
- calls originating in 314
- calls within the system 68, 115
- camp-on
- MCDN 288
- carrier access codes
- code prefix 268
 - ID length 268
- carrier access codes programming
- long distance access 230, 252
- carrier codes
- numbering plan overview 206
- Carrier identification Code (CIC)**, see carrier codes 222

CbC routing 226, 332
CbC, (also see call by call services) 332
CDP
 network dialing plan 390
 private network ID 271
 private network MCDN 299
CDP, dialing plan 271
central administrator direct dial 257
Channel Service Unit (see CSU) 86
channel, disable-enable a module port 77
Class of Service (see COS) 270
CLID
 alpha tagging 194
 outgoing name and number blocking 204
 overview 196
Clid match 194
CLID name display 194
CLIR 204
clock source
 ETSI QSIG networking 49, 301
 ISDN 520
 programming 84
code prefix, carrier access codes 268
comfort noise 509
computer, IP telephony prerequisites 452
conference
 DPNSS 1 feature 52
control set
 see also control telephone 119
control set, setting the schedule 391
Conventions, guide 26
 button options 26
 buttons 26
 command line 26
coordinated dialing plan
 see CDP and dialing plan 271
Coordinated Dialing Plan (see CDP) 390
copyright 2
COS
 auto DN 270
 calls answered with DISA 264, 270
 password, with DISA 408, 415
 passwords 411, 431
 programming 432
CSE
 MCDN for IPT 103

D

D channels 512
DASS2
 Clock Source 84
 if busy 125
 received # 120
 redirect to 125
 use auxiliary ringer 123
data
 encryption methods 502
data networking
 IPSec 502
default
 restriction filters 405, 424
delay
 dial, signaling programming 122
DES, encryption protocol 502
destination codes
 absorbed length 230
 ANY character 248
 call by call services network 333
 code constraints 228, 240
 constraints 231, 253
 dedicated long distance trunks 246
 dialout to network 245
 E and M networking 328
 for fallback 385
 least cost routing 231, 248
 local calls 245
 long distance access code routing 230, 252
 MCDN network 297
 numbering overview 208
 numbering plan overview 206
 overflow routing 249
 PSTN fallback 385
 remote gateway destination digits 386, 387
 schedule 386
 wild card character 247
destination digits
 destination code 386, 387
 network example 390
 remote gateway 373
destination gateway 509
destination IP
 network example 390
 remote gateway 373
DHCP
 IP telephone prerequisites 452
 network prerequisites 449

- dial
 - direct-dial telephones 219
 - mode, lines 121
 - mode, signaling 122
 - dial tone
 - stuttered 413, 435
 - system 413, 435
 - wait for (F804) 237
 - dialed digits, VoIP trunk routing 383
 - dialing
 - link code (F71) 237
 - long tones (F808) 237
 - pause (F78) 237
 - wait for dial tone (F804) 237
 - dialing plan
 - CDP 299, 390
 - destination code and destination digits 386, 387
 - destination codes 251
 - destination digits 103
 - line access diagram 216
 - location code, UDP 271
 - M1-IPT prerequisite 299
 - MCDN network checklist 290
 - outgoing calls 373
 - outgoing private calls 274
 - outgoing public calls 211, 267
 - PRI 517
 - PRI routing table 251
 - private DN length 271
 - private network ID 271
 - private types 209
 - PSTN fallback 233, 362
 - public DN lengths 210
 - public lines 250
 - public network 210
 - public network code 265
 - public network dialing plan 265
 - restriction filters 403, 421
 - system prerequisites 451
 - type 271
 - UDP 299
 - using T1 E and M lines 40
 - dialing restrictions
 - maximum length 404
 - overrides 404
 - remote restrictions 406
 - dialout
 - local calls 245
 - dialout digits, destination codes 245
 - DID
 - ANI number 124
 - auto privacy 123
 - dial mode 121
 - redirect to 125
 - remote access 409, 418
 - signaling programming 122
 - system diagram 34, 278
 - use auxiliary ringer 123
 - DID #, call by call service network 41, 331
 - Digital
 - redirect to 125
 - digital
 - Answer with DISA 124
 - auto privacy 123
 - dial mode 121
 - use auxiliary ringer 123
 - Digital Private Network Signaling System, see DPNSS 1 50
 - Digital Trunk Interface (see DTI and DTM) 39
 - direct dial
 - prime line 257
 - direct dial digit
 - facility 257
 - Internal/External # (DN) 257
 - numbering overview 208
 - programming 257
 - type 257
 - direct dial telephones 219
 - Direct Inward System Access, see DISA 270, 408, 415
 - DISA
 - DID, trunk 409, 418
 - DISA DN constraints 220, 260
 - lines in a network 326
 - PRI trunks 419
 - private DISA DN programming 270
 - Public DISA DN programming 264
 - remote access 408, 415
 - T1 DID trunks DISA DN 408, 415
 - T1 E&M trunks 410, 420
 - DISA DN
 - overview 206
 - DISA, VoIP trunks 355, 369
 - disable
 - a bus 77
 - media bay module port 77
 - disconnect supervision
 - disconnect timer 84
 - loop start trunks 409, 418
-

- Display 26
- display network name 515
- distinctive ring pattern (DRP) (see distinct ring) 120
- diversion
 - bypass call 53, 319
 - DPNSS 1 53, 319
 - follow-me 53, 320
 - immediate 53, 319
 - on busy 53, 319
 - on no reply 53, 319
- DMS
 - private outgoing calls 274
- DMS-100
 - available services 88
 - call by call services support 224
- DMS100
 - PRI protocol 227, 238
- DMS-250
 - available services 88
 - call by call services support 224
- DMS250
 - PRI protocol 227, 238
- DN
 - changing the length 213, 259
- DN hunting (see multi-line hunt) 515
- DN length
 - changing 212, 258
 - client application requirements 212, 258
 - numbering plan overview 206
 - overview 206
 - system startup 212, 258
 - voice mail/call center 258
 - voicemail/call center 212
- DN type
 - call by call services network 333
 - MCDN network 297
 - route programming 237
- DNIS number 124
- DNs
 - auto assign 451
 - disable-enable module port 77
 - increasing length 212, 258
 - records prerequisites 451
- DPNSS
 - call offer 56, 322
 - diversion feature 53, 319
 - Embark switch 51, 320
 - full autohold 123
 - home location code 58, 323
 - Host node 85
 - intrusion programming 55
 - networking 50
 - private access code 58, 323
 - protocol 37, 303
 - remote access 409, 419
 - remote paging 410, 419
 - three-party service 52
 - use auxiliary ringer 123
- DPNSS 1
 - call diversion 53, 319
 - features 51, 319
 - PBX link 50
 - terminating node 50
 - three party service 52
- DS/CLID, module mode 83
- DSM
 - Host node 85
- DSX1 build 86
- DTI trunk (also see DTM) 39
- DTM
 - clock source 520
 - ISDN hardware 518
- DTMF
 - dial mode 121
 - setting ANI/DNIS 124
- E**
- E and M
 - Answer timer 84
- E&M
 - ANI number 124
 - answer with DISA 124
 - auto privacy 123
 - dial mode 121
 - DNIS number 124
 - full autohold 123
 - redirect to 125
 - remote access issue 410, 420
 - signaling programming 122
 - use auxiliary ringer 123
- E.164 97
- Embark switch
 - DPNSS network 51, 320
 - Host node 85
- emergency
 - 911 dialing, PRI 517
- enable

- a bus 77
- media bay module port 77
- Encapsulating Security Payload, see ESP 503
- encryption
 - DES 502
 - IPSec 502
 - IPSec levels 502
 - methods 502
- Equal Access Identifier Code (CAC), see carrier codes 222
- ESF (Extended Superframe) framing format 85
- ESP
 - encryption protocol 503
- ETSI
 - name and number blocking 204
- ETSI Euro
 - PRI protocol 227, 238
- ETSI QSIG
 - advice of charge- end of call (AOCE) 50, 309
 - malicious call identification (MCID) 310
 - network diversion 310
 - network services 49, 309
 - networking 48, 300
 - private networking 37, 303
- ETSI-QSIG
 - PRI protocol 227, 238
 - private outgoing calls 274
- exception (see dialing restriction) 404
- extended superframe 85
- external # 386, 387
 - direct dial digit 257
 - E and M networking 328
 - route programming 237
- External code
 - numbering overview 208
- external code, access codes 257
- external lines, access code conflicts 220, 260
- external routing feature codes 237
- external voicemail
 - access programming 110
- F**
- facility
 - direct dial programming 257
- fallback
 - activating VoIP schedule 387
 - configuring for PSTN 232, 361
 - destination codes 385
 - MCDN 298
 - MCDN networking 299
 - scheduling 387
 - using PRI line 390
- Fallback to Circuit-Switched, Local Gateway 95
- fast busy tone 413, 436
- FAX over IP 367
- FEATURE
 - Call Information 811 196
 - Call park 74 218, 260
 - Class of Service (COS) 68 435
 - ONN, 819 516
- feature
 - Call Display 196
- FEM
 - clock source 520
- firewalls
 - configuring 365
 - network prerequisites 449
 - ports 365
- First display 194
- fixed, sampling 186
- follow-me diversion 53, 320
- foreign exchange
 - (FX), call by call services 224
 - service, protocols 88
- foreign exchange (FX) 516
- framing format 85
- full autohold 123
- full duplex link
 - silence compression examples 507
- G**
- gatekeeper
 - defined 352
 - network prerequisites 449
 - signaling method 371
- Gatekeeper IP, Local Gateway 97, 372
- GateKeeperResolved 96
- GateKeeperRouted 96
- gateway
 - destination digits 386, 387
 - network prerequisites 449
 - remote, configuring 373
- Gateway Protocol 373
- Gateway Protocol, Local Gateway 97, 372
- Gateway Type 373

- GATM
 - module mode 83
- General
 - alpha tagging 194
- Ground start
 - redirect to 125
- ground start
 - answer with DISA 124
 - auto privacy 123
 - dial mode 121
 - use auxiliary ringer 123
- GWProtocol 97, 372
- H**
- H.323
 - fallbacksetting 95
 - Trunks record
 - jitter buffers 100
- H.323 endpoints 366
- H.323 Trunks record
 - remote gateway 373
- H323Identifier 97
- half duplex links
 - silence compression example 505
- home location code, DPNSS 58, 323
- Host node, DPNSS 85
- I**
- ID length, carrier access codes 268
- idle line, search for 113
- IDPX, Host node 85
- if busy 125
- impedance, lines 113
- increasing DN length 212, 258
- Integrated Services Digital Network (see ISDN) 513
- intercom
 - calls within the system 68, 115
 - prime line and direct dial telephones 257
- interface levels 86
- internal
 - CSU 86
 - direct dial digit 257
 - target line calls 107
- Internal/External #, direct dial programming 257
- international (special) access code 272
- International INWATS, call by call services 224
- Internet Security Association and Key Management Protocol (ISAKMP), IPSec 502
- Intl-800 protocols 88
- intranet
 - networking multiple BCM50s 315
- intrusion
 - DPNSS networking 55
- Intrusion Capability Level, see ICL 55
- Intrusion Protection Levels, see IPL 55
- INWATS
 - (800), protocols 88
 - call by call services 224
- Inwats
 - PRI 516
- IP address
 - gatekeeper 371
 - network prerequisites 449
 - remote gateway 373
- IP speech packets 100
- IP telephones
 - prerequisites 452
 - VLAN service 452
- IP trunking
 - MWI remote capability 288
- IP trunks
 - network prerequisites 449
- IPSec
 - encryption protocols, ESP or AH 503
 - modes 501
 - NAT restriction 503
 - overview 502
- ISDN
 - 911 dialing 517
 - B and D channels 512
 - bearer capability 513
 - BRI card 518, 520
 - call-by-call services for PRI 516
 - capabilities 511
 - capability packages 521, 522
 - clock source 520
 - clocking 520
 - compared to analog 512
 - data transmission speed 514
 - dialing plan 517
 - digital access lines (DAL) settings 86
 - hardware 518
 - layers 512
 - loss plan setting 86
 - network name display 515

- network synchronization 520
 - ordering 521
 - ordering service 522
 - planning service order 512
 - PRI 2-way DID 517
 - programming sequence 108
 - S interface 519
 - S reference point 519
 - services and features 513, 515
 - standards 521
 - supported protocols 522
 - T reference point 519
 - terminal equipment configuration 519
 - type of services, BRI
 - ISDN 512
- ISDN call connection limitation (ICCL), MCDN 46, 308
- ITG, VoIP networking 286
- ## J
- Jitter buffer
 - VoIP trunks 100
- ## K
- keycodes
 - MCDN networking 38, 303
 - prerequisite list 451
 - VoIP trunks 356
- ## L
- LAN
 - Business Communications Manager function 451
- least cost routing 231, 248
- line
 - changing the name 195
- line access
 - call by call services network 332
 - call diagram 216
 - MCDN network 297
- line coding
 - T1 parameters 85
- Line filter, COS programming 432
- line pool
 - access code constraints 347
 - access code programming 221
 - network example 390
 - setting line type 119
 - VoIP trunk routing 383
- line pools
 - numbering overview 208
- numbering plan overview 206
- line programming
 - ANI number 124
 - answer mode 124
 - Answer with DISA 124
 - auto privacy 123
 - control set 119
 - dial mode 121
 - DNIS number 124
 - full autohold 123
 - If busy 125
 - line type 119
 - Link at CO 122
 - Loss packages 121
 - loss packages 113
 - name 119
 - Prime set 120
 - private line 119
 - public line 119
 - received # 120
 - redirect to 125
 - restrictions 109
 - signaling 122
 - telco features 110
 - trunk mode 121
 - Use auxiliary ringer 123
 - use remote package 126
- line type 119
- line/set restrictions
 - remote access, COS 432
- lines
 - identifying 106
 - numbering 39
 - programming overview 114
 - voice message center 125
- link
 - at CO, loop start analog lines 122
 - code (F71) 237
 - signal 122
- local
 - E164 outgoing calls 211, 267
- local access code 272
 - MCDN 272
- local calling routing 245
- local calls
 - destination codes 245
- local gateway
 - Alias Names 97
 - Call Signaling 96
 - Fallback to Circuit-Switched 95

- Gatekeeper IP 97, 372
 - Gateway Protocol 97, 372
 - Registration TTL 97, 372
 - Location code
 - numbering overview 207
 - location code, UDP dialing plan 271
 - long distance
 - dedicated trunks 246
 - long distance call
 - routes 246
 - using COS password 435
 - Long tones
 - dialing code (F808) 237
 - Loop
 - Disconnect timer 84
 - loop programming
 - ONN blocking state 186
 - overlap receiving 187
 - protocol 186
 - sampling 186
 - Loop start
 - redirect to 125
 - loop start analog
 - answer with DISA 124
 - auto privacy 123
 - dial mode 121
 - full autohold 123
 - link
 - at CO 122
 - loss packages 121
 - trunk mode 121
 - use auxiliary ringer 123
 - loop start digital
 - answer with DISA 124
 - auto privacy 123
 - dial mode 121
 - full autohold 123
 - trunk mode 121
 - use auxiliary ringer 123
 - loop start trunk
 - disconnect supervision, remote access 409, 418
 - remote access from public network 409, 418
 - loops
 - MWI PRI MCDN loops 84
 - loss packages, line programming 121
 - loss/gain settings 113
- M**
- M1
 - PRI loops for MWI 84
 - M1, Host node 85
 - M1-IPT
 - gateway type 298
 - maintaining security 412, 434
 - maintenance
 - enabling the module 77
 - making calls, VoIP trunks 391
 - malicious call identification
 - ETSI network 310
 - maximum CLI per line 194
 - maximum length, dialing restrictions 404
 - maximum transits, transits
 - maximum 85
 - MCDN
 - break-in 289
 - camp-on feature 288
 - CDP programming specifics 291
 - creating SL-1 or VoIP networks 344
 - DN types, routing 237
 - gateway type 298
 - ISDN call connection limitation (ICCL) 46, 308
 - local access code 272
 - M1-IPT requirements 299
 - media bay module settings 296
 - Meridian system requirements 285
 - message waiting indication (MWI) 287
 - national access code 272
 - network 45, 307
 - network call redirection information (NCRI) 45, 307
 - network checklist 290
 - network example 295
 - network features 287
 - outgoing call display 237
 - over VoIP 103, 298
 - PRI fallback 299
 - PRI M1 loops 84
 - PRI protocol 227
 - private access code 271
 - private network ID 271
 - private networking 285
 - private outgoing calls 274
 - protocol 37, 303
 - remote gateway 298
 - routing information 297
 - SL-1 networking 42
 - special (international) access code 272
 - special route codes 237
 - tandem calls 220, 253
 - trunk anti-tromboning (TAT) 47, 308

- trunk route optimization (TRO) 47, 308
- UDP programming specifics 291
- VoIP Meridian protocol 286
- Zone ID 273
- media bay modules
 - clock source support 520
 - disable a bus 77
 - disable-enable a port 77
 - enable a bus 77
 - MCDN network settings 296
 - task list 71
- menu
 - lines 106
- Meridian
 - MCDN network 45, 307
 - MCDN system requirements 285
 - SL-1 networking 42
- Meridian 1
 - M1-IPT 356
 - MCDN networking 298
 - MCDN special calls 220, 253
- message waiting indication
 - MCDN 287
- messages
 - network features 287
- module
 - networking 39
- module mode
 - module record 83
- multi-line hunt 515, 522
- MWI
 - M1 remote capability 84, 288
- MWI M1 84
- N**
- N1
 - call-by-call services 516
- name
 - blocking, ONN 516
 - changing, telephony 195
 - lines 119
 - network display 515
 - remote gateway 373
- name display
 - calling party 193
 - network 193
 - selective line redirection 194
- name display, alpha tagging 194
- NAT
 - IPSec restriction 503
- NAT, network prerequisites 449
- national
 - E164 outgoing calls 211, 267
- national access code 272
 - MCDN 272
- National ISDN standards 521
- Netmask
 - network prerequisites 449
- network
 - autodial access 245
 - devices, prerequisites 449
 - dialout digits 245
 - locations, prerequisites 449
 - port settings 365
 - private systems to BCM50 37, 283
 - public network to BCM50 37, 282
 - T1 E and M 40, 327
- network #
 - call by call service network 41, 331
 - ETSI QSIG 48, 300
 - MCDN 295
 - networking 40, 327
- network call redirection information (NCRI), MCDN 45, 307
- network diversion, ETSI network 310
- network name display 515
 - calling party name 194
 - General heading 193
 - selective line redirection (SLR) 194
- networking
 - advice of charge - end of call (AOCE) feature 50, 309
 - Business Communications Manager prerequisites 451
 - destination code 328
 - DPNSS 1 50
 - DPNSS 1 features 51
 - DPNSS 1 three party service 52
 - DPNSS connected to Embark 51, 320
 - E and M remote access 329
 - E and M routing destinations 328
 - E and M routing service 328
 - ETSI QSIG 48, 300
 - ETSI QSIG services 49, 309
 - external # 328
 - keycodes 38, 303
 - malicious call identification (MCID) 310

- MCDN check list 290
 - MCDN features 287
 - MCDN network example 295
 - MCDN over VoIP 103, 298
 - MCDN private networking 285
 - MCDN routing 297
 - MCDN Zone ID for SRG 273
 - MCDN, break-in 289
 - MCDN, camp-on feature 288
 - MCDN, ISDN call connection limitation (ICCL) 46, 308
 - MCDN, message waiting indication (MWI) 287
 - MCDN, network call redirection (NCRI) 45, 307
 - MCDN, trunk anti-tromboning (TAT) 47, 308
 - MCDN, trunk route optimization (TRO) 47, 308
 - media bay module settings 296
 - Meridian MCDN system requirements 285
 - multiple BCM50 315
 - network # 40, 327
 - network diversion 310
 - node 43, 311
 - programming MCDN 344
 - protocols 37, 303
 - PSTN fallback 232, 361
 - received # 40, 327
 - restriction filters 41, 330
 - signaling method 371
 - system callers 36, 282
 - tandem network 313
 - tandem network originating calls 314
 - tandem network routing 43
 - UDP and CDP programming 291
 - using T1 E and M lines 40
 - Virtual Private Network ID 273
 - VoIP and Meridian ITG 286
 - VoIP destination digits 103
- networks
- DPNSS 1 51
 - MCDN 45, 307
 - VLAN ports 452
- NI
- call by call services support 224
 - loop programming protocol 186
 - PRI protocol 227, 238
- NI-2, available services 88
- Nine hundred (900)
- call by call services 224
 - protocols 88
- node
- tandem network 43, 311
 - terminating, DPNSS 1 50
- NPI-TON 97
- NSF Extension 83
- NT1 (network termination type 1) 520
- numbering plans, overview 206
- ## O
- Oakley Key Determination Protocols 502
- OLI
- changing DN length 213, 259
- ONN blocking
- state 186
- ONN, (819) 516
- open switch interval (OSI) 121
- outgoing
- name and number blocking 204
 - private network calls 274
 - public network calls 211, 267
- Outgoing call configuration 373
- outgoing call display
- MCDN 237
- outgoing calls 373
- Outwats
- PRI 516
- OUTWATS, call by call services 224
- overflow routing 231, 249
- VoIP fallback routing 232, 250
- overflow setting 387
- overlap receiving 187
- overrides
- dialing restrictions 404
- ## P
- page
- remote 410, 419
- park prefix
- numbering overview 208
 - SWCA 257
- park prefix, access codes 257
- parked call
- retrieving 257
- password
- calls answered with DISA 264, 270
 - COS 411, 431
 - COS programming 432
 - using DISA 408, 415
- Pause
- insert into dialing sequence (F78) 237

- PBX
 - DPNSS 1 networking 50
 - system diagram 33, 277
- port
 - disable-enable 77
- port settings 365
- ports
 - firewalls 365
 - legacy networks 365
- preferred codec 99
- prerequisites
 - IP telephones 452
 - keycodes 451
 - M1-IPT MCDN 299
 - network devices 449
 - system configuration 451
- PRI 84
 - 911 dialing 517
 - available services, per protocol 88
 - B-channel selection sequence 84
 - call by call services 136, 223
 - call-by-call service selection 87
 - clock source 84
 - dialing plan routing table 251
 - ETSI QSIG hardware settings 49, 301
 - hardware 518
 - ISDN 512
 - MCDN network dialing 271
 - MWI remote capability, MCDN 288
 - NSF extension 83
 - private networking 37, 285, 303
 - Protocol 83
 - Protocol type 83
 - remote access 419
 - remote access, Auto DN or DISA DN 410, 420
 - services and features 513
 - SL-1 networking 45, 307
 - target line busy tone 125
- PRI, MCDN fallback 299
- prime line
 - direct dial telephone 257
- prime telephone
 - lines 120
- Privacy
 - changing status 113
- private access code 271
- Private Access Code, DPNSS 58, 323
- private auto DN 270
 - DN received number lengths 220, 260
- private DISA DN
 - received number lengths 220, 260
- Private DN length
 - numbering overview 207
- private DN length, UDP dialing plan 271
- private DN, route programming 237
- private IP address 450
- Private length
 - received # 264
- private line 119
- Private name 194
- private network
 - advice of charge - end of call (AOCE) feature 50, 309
 - callers 37, 283
 - calls originating in tandem network 314
 - dialing plan type 271
 - DPNSS 1 features 51
 - DPNSS 1 three party service 52
 - ETSI QSIG 48, 300
 - ETSI QSIG services 49, 309
 - MCDN 285
 - MCDN break-in 289
 - MCDN camp-on feature 288
 - MCDN ISDN call connection limitation (ICCL) 46, 308
 - MCDN message waiting indication (MWI) 287
 - MCDN network call redirection information (NCRI) 45, 307
 - MCDN routing information 297
 - MCDN trunk anti-tromboning (TAT) 47, 308
 - MCDN trunk route optimization (TRO) 47, 308
 - Meridian MCDN requirements 285
 - private DN length 271
 - private network ID 271
 - remote access 38, 304, 410, 420
 - UDP location code 271
- Private network ID
 - numbering overview 207
- private network ID, dialing plan 271
- private network, MCDN Zone ID 273
- private network, virtual ID 273
- private networking
 - MCDN private access code 271
 - MCDN special calls 220, 253
 - MCDN special route codes 237
 - outgoing calls 274
- private services call 516

- private, call by call services 224
- process map
 - access headings 415, 427
- programming
 - ISDN BRI 108
 - lines 106
- protocol
 - ISDN supported 522
 - loop programming 186
 - PRI lines 83
 - remote gateway 373
- PSTN
 - analog access lines (AAL) settings 86
- PSTN fallback 232, 361
 - activating VoIP schedule 387
 - configuring 232, 361
 - destination codes 385
 - dialed digits 383
 - MCDN networking 299
 - PRI line 390
 - scheduling 387
- public auto DN 264
 - DN received number lengths 220, 260
- public data network, see PDN 501
- public DISA DN
 - received number lengths 220, 260
- public DN length
 - setting 210
- Public DN lengths
 - numbering overview 207
- Public DN, route programming 237
- public IP address 450
- public length
 - received # 264
- public line 119
- public network
 - callers 37, 282
 - dialing plan 250
 - dialing plan programming 210
 - public DN lengths 210
 - Public Network code 265
 - Public Network Plan 265
 - to tandem network 313
- public network code 265
- public network dialing plan 265
- public networking
 - outgoing calls 211, 267

- public service calls 516
- Public, call by call services 224

Q

- QoS
 - MCDN networking 299
- QoS monitor
 - enabled 390
 - remote gateway 373
- QSIG
 - loop programming protocol 186
 - private networking 37, 303

R

- receive threshold 373, 390
- Received #
 - overview 206
- received #
 - call by call service network 41, 331
 - ETSI QSIG 48, 300
 - line configuration 120
 - MCDN 295
 - networking 40, 327
- received # length
 - programming 264
- received number lengths
 - auto DNs 220, 260
 - DISA DNs 220, 260
- redirect to, line programming 125
- Registration TTL, Local Gateway 97, 372
- regulatory information 2
- Related publications 27
- remote
 - system access 408
- remote access
 - COS passwords 411, 431
 - DPNSS 409, 419
 - E and M networking 329
 - from public network 409, 418
 - IP trunks, no tone 413, 436
 - loop start trunks 409, 418
 - numbering overview 206
 - package, COS programming 432
 - PRI 410, 420
 - PRI trunk 419
 - private auto DN 270
 - private DISA DN 270
 - private network 38, 304, 410, 420
 - programming 432

- public auto DN 264
 - public DISA DN 264
 - T1 DID trunk 409, 418
 - T1 E and M trunks 409, 418
 - using DISA 408, 415
 - VoIP trunks 410, 420
- remote access, VoIP trunks 359, 360
- remote capability, MWI 84, 288
- remote gateway
- configuring 373
 - destination digits 103
 - MCDN networking 298
 - network example 390
 - VoIP trunks 373
- Remote Paging 410, 419
- remote restrictions
- dialing restrictions 406
 - remote access, COS 432
 - VoIP trunks 410, 420
- remote system, VoIP trunks 355, 369
- restriction filters
- default filters 405, 424
 - lines 404
 - networking 41, 330
 - programming 403, 421
 - remote access 404
 - removing 404
 - services 403
 - telephones 404
- restrictions
- line filter, COS 432
 - lines 109
- retrieving
- Call Park 218, 260
- route programming
- DN type 237
 - external # 237
 - private DN 237
 - public DN 237
 - Use pool 237
- router
- port settings 365
- routing 230, 252
- call by call services network 332
 - CBC routing table 226
 - CbC services routing 332
 - dedicated trunks for long distance 246
 - defining multiple routes 231, 249
 - destination codes 251
 - destination wild card character 247
 - destinations, E and M networking 328
 - least cost routing 231, 248
 - local calling 245
 - long distance access code 230, 252
 - long distance calling 246
 - MCDN network 297
 - MCDN private network 297
 - network example 391
 - numbering plan overview 206
 - overflow programming 231, 249
 - PRI routing table 251
 - PSTN fallback 387
 - public network dialing 250
 - service, E and M networking 328
 - service, MCDN network 297
 - tandem networks 43
 - VoIP trunks 383

S

- S interface 519
- S loop, sampling programming 186
- S or T reference point 519
- S reference point 519
- schedule

 - activating VoIP schedule 387
 - control set 391
 - destination codes 386
 - PSTN fallback 387
 - service setting, manual 387

- SCNFallback 95, 97, 372
- security

 - dialing restriction 403, 421
 - IPSec 502
 - recommendations, remote access 412, 434
 - remote access on VoIP trunks 410, 420

- Selective Line Redirection, see SLR 194
- service code

 - North American ONN blocking 204

- service code, ONN blocking 186
- service selection 87
- service setting, manual 387
- service type

 - call by call network 332

- services

 - restriction filters 403
 - routing 332

- set restrictions

 - remote access, COS 432

- SF (Superframe), framing format 85
 - signaling
 - dial mode 121
 - line programming 122
 - signaling method 371
 - silence compression
 - about 505
 - comfort noise 509
 - full duplex 507
 - half duplex 505
 - SIP
 - fallback setting 95
 - SL-1
 - ETSI QSIG networking 48, 300
 - MCDN example 295
 - MCDN fallback 299
 - MCDN network 45, 307
 - MCDN over VoIP 103
 - PRI protocol 238
 - private networking 38, 303
 - SL1
 - Gateway Protocol 97, 372
 - SLR, calling and connected name display 194
 - source gateway 509
 - special
 - outgoing calls 211, 267
 - special (international) access code 272
 - speech packets, silence compression 505
 - speed dial
 - system codes 335
 - square system 33
 - SRG
 - MCDN Zone ID 273
 - Virtual Private Network ID 273
 - Start DN
 - overview 206
 - stuttered dial tone 413, 435
 - Succession
 - MCDN Zone ID 273
 - Virtual Private Network ID 273
 - superframe 85
 - supervised trunk mode 121
 - suppression bit 186, 204
 - SWCA
 - park prefix 257
 - switched digital
 - (SDS) protocols 88
 - call by call services 224
 - switches
 - call by call services support 224
 - Symbols 26
 - synchronize clock source 520
 - system
 - dial tone 413, 435
 - system access
 - remote 408
 - system configuration, Business Communications Manager prerequisites 451
 - system speed dial
 - alpha tagging 194
 - codes (01-70) 335
 - system startup
 - DN length 212, 258
 - system-wide dialing, direct-dial telephones 219
- T**
- T reference point 519
 - T.38 fax 367
 - T1
 - Answer timer 84
 - clock source 84
 - DID trunk, remote access 409, 418
 - DID trunks, DISA DN 408, 415
 - Disconnect timer 84
 - E and M network diagram 40
 - E and M private networking 37, 303
 - full autohold, E&M 123
 - Signaling tone setting 121
 - T1 parameters
 - DSX1 build 86
 - Framing 85
 - Internal CSU 85
 - internal CSU 86
 - Line coding 85
 - tandem calls
 - MCDN special labels 220, 253
 - tandem networking
 - call routing 43
 - from public network 313
 - Target lines
 - redirect to 125
 - target lines
 - Add Users Wizard 107
 - BRI auto-answer trunk mapping 120

- changing DN length, affecting received number 213, 259
 - changing the name 195
 - description 39
 - if busy 125
 - programming 107
 - received # 120
 - use auxiliary ringer 123
- TE (see ISDN terminal equipment) 519
- telco features
- programming lines 110
- telephone
- changing the name 195
- telephone programming
- direct dial 257
 - increasing DN length 212, 258
 - received # length 264
 - system speed dial 335
- telephony services
- DID system 34, 278
 - PBX, system diagram 33, 277
 - square system 33
- terminating node, DPNSS 1 50
- three party service, DPNSS 1 52
- Tie lines
- call by call services 224
 - DN type 237
- Tie services 516
- TimeToLive 97, 372
- tone
- IP trunks, remote access 413, 436
 - remote access tones 413, 435
- trademarks 2
- Transmit Threshold 373, 390
- transport mode, IPSec 501
- trunk
- DTM 39
 - mode 121
 - numbering 39
 - types 39
- trunk antitromboning (TAT), MCDN 47, 308
- trunk modules
- line type 73
- trunk route optimization (TRO), MCDN 47, 308
- trunk/line data
- call by call services network 332
 - MCDN network 297
- tunnel mode, IPSec 501
- tunneling
- encryption methods 502
 - IPSec 502
- type
- direct dial 257
- ## U
- UDP
- dialing plan 271
 - dialing plan location code 271
 - port ranges 365
 - private DN lengths 271
 - private network ID 271
 - private network, MCDN 299
- Unified Manager
- destination codes 385
 - H.323 Trunks record 373
- Unified Messaging 315
- universal dialing plan, see UDP and dialing plan 271
- Unknown name 194
- unsupervised trunk mode 121
- Use pool, routing 237
- use remote package 126
- user filter
- restrictions 432
- using your system remotely 435V

VAD

 - silence suppression 505

Vertical Service Code (VSC) 204

Virtual Private Network ID 273

virtual private networks, see VPN 501

VLAN

 - i-series telephones 452

Voice Activity Detection (VAD) 505

Voice Activity Detection, see VAD 505

voice jitter buffer 100

voice message center

 - line setting 125
 - programming 110

voicemail

 - DN length change 212, 258
 - setting remote access for lines 125

VoIP

 - auto privacy 123

- DISA 355, 369
 - fallback routing 232, 250
 - full autohold 123
 - gateway, prerequisites 449
 - MCDN network 103
 - networking with Meridian ITG 286
 - private networking 37, 303
 - schedule, activating 387
 - schedule, setting up 387
 - trunks, configuring 355, 369
 - use auxiliary ringer 123
- VoIP trunks
- activating VoIP schedule 387
 - configuration 369
 - destination codes 385
 - destination digits 103
 - example configuration 388
 - jitter buffers 100
 - keycodes 356
 - making calls 391
 - MCDN private outgoing calls 274
 - networking multiple systems 315
 - Outgoing call configuration 373
 - outgoing calls 373
 - overview 114
 - port ranges, legacy systems 365
 - port settings 365
 - PSTN fallback 232, 361
 - PSTN fallback schedule 387
 - remote access issues 410, 420
 - remote access warning 359, 360
 - remote gateway 373
 - routing 383
 - signaling method 371
 - silence compression 100
 - using firewalls 365
- VoIP trunks, T.38 fax protocol 367
- VSC 204
- ## W
- Wait for dial tone (804) 237
- WAN
- Business Communications Manager function 451
- wild card character
- Destination codes ANY character 248
- WinkStart 122
- workstation prerequisites 452
- ## Z
- zone ID

